

# DCR-VX2000/VX2000E

RMT-811

## SERVICE MANUAL

*Self Diagnosis*  
Supported model

Digital Handycam

InfoLITHIUM<sup>TM</sup> L  
SERIES

C/M Cassette  
Memory



MEMORY STICK



Photo : DCR-VX2000

US Model  
Canadian Model  
Korea Model  
DCR-VX2000

AEP Model  
UK Model  
Australian Model  
Chinese Model  
DCR-VX2000E

E Model  
Hong Kong Model  
Tourist Model  
DCR-VX2000/VX2000E

C MECHANISM

### On the VC-242 board

This service manual provides the information that is premised the circuit board replacement service and not intended repair inside the VC-242 board.

Therefore, schematic diagram, printed wiring board and electrical parts list of the VC-242 board are not shown.

The following pages are not shown.

Schematic diagram ..... Pages 4-13 to 4-50  
Printed wiring board ..... Pages 4-51 to 4-54  
Electrical parts list ..... Pages 6-27 to 6-36

For MECHANISM ADJUSTMENTS, refer to the  
"DV MECHANICAL ADJUSTMENT MANUAL IV  
C MECHANISM" (9-974-050-11).

DCR-VX2000 : NTSC model  
DCR-VX2000E : PAL model

## SPECIFICATIONS

### Video camera recorder

#### System

##### Video recording system

2 rotary heads  
Helical scanning system

##### Audio recording system

Rotary heads, PCM system  
Quantization: 12 bits (Fs 32 kHz,  
stereo 1, stereo 2), 16 bits  
(Fs 48 kHz, stereo)

##### Video signal

VX2000: NTSC color, standards  
VX2000E: PAL colour, standards

##### Usable cassette

Mini DV cassette with the <sup>mini</sup>DV  
mark printed

##### Tape speed

SP: Approx. 18.81 mm/s

LP: Approx. 12.56 mm/s

##### Recording/playback time (using cassette DVM60)

SP: 1 h

LP: 1.5 h

##### Fast-forward/rewind time (using cassette DVM60)

Approx. 2 min and 30 s

#### Viewfinder

Electric viewfinder (colour)

#### Image device

1/3 type CCD (3 Charge Coupled Device)

VX2000:

Approx. 380 000 pixels

(Effective: Approx. 340 000 pixels)

VX2000E:

Approx. 450 000 pixels

(Effective: Approx. 400 000 pixels)

#### Lens

Combined power zoom lens

Filter diameter 58 mm (2 3/8 in)

12x (Optical), 48x (Digital)

F1.6 - 2.4

#### Focal length

6 - 72 mm (1/4 - 2 7/8 in)

When converted to a 35 mm still camera

43.2 - 518.4 mm (1 3/4 - 20 1/2 in)

#### Colour temperature

Auto,  $\odot$  Indoor (3200K),

$\odot$  Outdoor (5800K),  $\odot$

Minimum illumination

2 lux (F 1.6)

#### Input/output connectors

##### 5 video input/output

Input/output auto switch

4-pin mini DIN

Luminance signal: 1 Vp-p,

75 ohms, unbalanced

Chrominance signal:

0.286 Vp-p (VX2000)

0.3 Vp-p (VX2000E),

75 ohms, unbalanced

##### Video input/output

Input/output auto switch

RCA pin-jack, 1 Vp-p, 75 ohms,

unbalanced, sync negative

##### Audio input/output

Input/output auto switch

RCA pin-jack, 327 mV, (at output

impedance more than 47 kilohms)

Output impedance with less than

2.2 kilohms

Input impedance more than

47 kilohms

##### Headphones jack

Stereo minijack ( $\phi$  3.5 mm)

$\odot$  LANC control jack

Stereo mini-minijack ( $\phi$  2.5 mm)

#### MIC jack

Minijack, 0.388 mV low imped-

ance with 2.5 to 3.0 V DC, output

impedance 6.8 kilohms ( $\phi$  3.5 mm)

#### Stereo type

$\odot$  DV input/output

4-pin connector

#### Speaker

Dynamic speaker ( $\phi$  20 mm)

#### LCD screen

##### Picture

2.5 type measured diagonally

49.9x37.3 mm (2 x 1 1/2 in)

##### Total dot number

200 640 (880 x 228)

#### General

##### Power requirements

7.2 V (battery pack)

8.4 V (AC power adaptor)

— Continued on next page —

Mini DV Digital  
Video Cassette

DIGITAL VIDEO CAMERA RECORDER

SONY<sup>®</sup>

#### Average power consumption

(when using the battery pack)

During camera recording using LCD

4.7 W

Viewfinder

4.0 W (VX2000)

4.1 W (VX2000E)

#### Operating temperature

0 °C to 40 °C (32 °F to 104 °F)

#### Storage temperature

-20 °C to +60 °C (-4 °F to +140 °F)

#### Dimensions (approx.)

115 × 146 × 342 mm (4 5/8 × 5 3/4 × 13 1/2 in) (w/h/d)

#### Mass (approx.)

1.4 kg (3 lb 1 oz)

main unit only

1.6 kg (3 lb 8 oz)

including the battery pack,  
NP-F330, cassette DVM60 and  
hood cap

#### Supplied accessories

See page 2.

### AC power adaptor

#### Power requirements

100 - 240 V AC, 50/60 Hz

#### Power consumption

23 W

#### Output voltage

DC OUT: 8.4 V, 1.5 A in the  
operating mode

#### Operating temperature

0 °C to 40 °C (32 °F to 104 °F)

#### Storage temperature

-20 °C to +60 °C (-4 °F to +140 °F)

#### Dimensions (approx.)

125 × 39 × 62 mm

(5 × 1 9/16 × 2 1/2 in) (w/h/d)

excluding projecting parts

#### Mass (approx.)

280 g (9.8 oz)

excluding power cord

#### Cord length (approx.)

Mains lead: 2 m (6.6 feet)

Connecting cord: 1.6 m (5.2 feet)

### Battery pack

#### Output voltage

DC 7.2 V

#### Capacity

5.0 Wh

#### Dimensions (approx.)

38.4 × 20.6 × 70.8 mm (1 9/16 ×

13/16 × 2 7/8 in) (w/h/d)

#### Mass (approx.)

70 g (2.5 oz)

#### Type

Lithium ion

### "Memory Stick"

#### Memory

Flash memory

4 MB: MSA-4A

#### Operating voltage

2.7 V -3.6 V

#### Power consumption

Approx. 45 mA in the operating  
mode

Approx. 130 µA in the standby  
mode

#### Dimensions (approx.)

50 × 2.8 × 21.5 mm

(2 × 1/8 × 7/8 in) (w/h/d)


#### Mass (approx.)

4 g (0.14 oz)

Design and specifications are  
subject to change without notice.

### • SUPPLIED ACCESSORIES

Check that the following accessories are supplied with your camcorder.

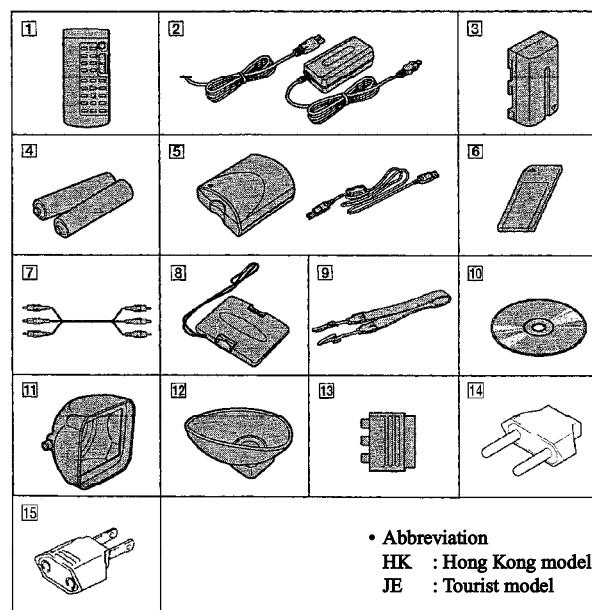

#### • Abbreviation

HK : Hong Kong model

JE : Tourist model

- |   |   |
|---|---|
| 1 RMT-811 Wireless Remote Commander (1)   | 8 Hood cap (1)  |
| 2 AC-L10A/L10B/L10C AC power adaptor (1), Power cord (1)(DCR-VX2000), Mains lead (1)(DCR-VX2000E) | 9 Shoulder strap (1)  |
| 3 NP-F330 battery pack (1)  | 10 Application software: PictureGear 4.1 Lite (CD ROM) (1)                  |
| 4 Size AA (R6) battery for Remote Commander (2)   | 11 Lens hood (1)  |
| 5 Memory Stick Reader/Writer (1), USB cable (1)   | 12 Eyecup (large) (1)   |
| 6 "Memory Stick" (1)  | 13 21-pin adaptor (1)<br>DCR-VX2000E: AEP, UK                               |
| 7 A/V connecting cable (1)  | 14 2-pin conversion adaptor (1)<br>DCR-VX2000: JE/DCR-VX2000E: JE           |
|   | 15 2-pin conversion adaptor (1)<br>DCR-VX2000: E, HK/<br>DCR-VX2000E: E, HK |

### SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK  $\triangle$  OR DOTTED LINE WITH MARK  $\triangle$  ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SAFE PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

### ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE  $\triangle$  SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

## SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer.

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
3. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
4. Look for parts which, through functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
5. Check the B+ voltage to see it is at the values specified.
6. Flexible Circuit Board Repairing
  - Keep the temperature of the soldering iron around 270°C during repairing.
  - Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
  - Be careful not to apply force on the conductor when soldering or unsoldering.

## TABLE OF CONTENTS

### SERVICE NOTE

1. POWER SUPPLY DURING REPAIRS .....	6
2. TO TAKE OUT A CASSETTE WHEN NOT EJECT (FORCE EJECT) .....	6

### SELF-DIAGNOSIS FUNCTION

1. SELF-DIAGNOSIS FUNCTION .....	7
2. SELF-DIAGNOSIS DISPLAY .....	7
3. SERVICE MODE DISPLAY .....	7
3-1. Display Method .....	7
3-2. Switching of Backup No. ....	7
3-3. End of Display .....	7
4. SELF-DIAGNOSIS CODE TABLE .....	8

### 1. GENERAL

Checking supplied accessories .....	1-1
Quick Start Guide .....	1-1
Getting started .....	1-2
Using this manual .....	1-2
Step 1 Preparing the power supply .....	1-2
Step 2 Inserting a cassette .....	1-4
Recording –Basics .....	1-5
Recording a picture .....	1-5
Shooting backlit subjects (BACK LIGHT) .....	1-7
Using the spot light function .....	1-7
Self-timer recording .....	1-8
Checking the recording – END SEARCH/ EDIT SEARCH/Rec Review .....	1-8
Playback –Basics .....	1-9
Playing back a tape .....	1-9
Viewing the recording on TV .....	1-10
Advanced Recording Operations .....	1-11
Recording a still image on a tape –Tape Photo recording ..	1-11
Shooting with all the pixels –PROG. SCAN .....	1-12
Using the guide frame .....	1-12
Using the wide mode .....	1-12
Using the fader function .....	1-13
Using special effects –Picture effect .....	1-13
Using special effects –Digital effect .....	1-14
Shooting with manual adjustment .....	1-14
Adjusting the white balance .....	1-17
Adjusting recording level manually –Sound recording level ..	1-17
Presetting the adjustment for picture quality –Custom preset ..	1-18
Using the PROGRAM AE function .....	1-18
Focusing manually .....	1-19
Interval recording .....	1-20
Frame by frame recording –Cut recording .....	1-21
Marking an Index .....	1-21
Advanced Playback Operations .....	1-22
Quickly locating a scene using the zero set memory function	1-22
Searching for a recording by index –Index search .....	1-22
Searching the boundaries of recorded tape by title	
–Title search .....	1-23
Searching a recording by date –Date search .....	1-23
Searching for a photo –Photo search/Photo scan .....	1-24
Playing back a tape with picture effects .....	1-25
Playing back a tape with digital effects .....	1-25
Editing .....	1-25
Dubbing a tape .....	1-25
Dubbing only desired scenes –Digital program editing .....	1-26
Using with analog video unit and a PC	
– Signal convert function .....	1-31
Recording video or TV programs .....	1-31
Inserting a scene from a VCR –Insert editing .....	1-32
Audio dubbing .....	1-33
Superimposing a title .....	1-34
Making your own titles .....	1-36
Labeling a cassette .....	1-36

Erasing the cassette memory data .....	1-37
Customizing Your Camcorder .....	1-38
Changing the menu settings .....	1-38
Resetting the date and time .....	1-40
“Memory Stick” Operations .....	1-40
Using a “Memory Stick” –introduction .....	1-40
Recording still images on a “Memory Stick”s	
–Memory Photo recording .....	1-42
Superimposing a still picture in a “Memory Stick”	
on a moving picture –MEMORY MIX .....	1-43
Recording an image from a mini DV tape as a still image ..	1-44
Copying still images from a mini DV tape –Photo save .....	1-45
Viewing a still picture –Memory photo playback .....	1-46
Copying an image recorded on a “Memory Stick”s to	
mini DV tapes .....	1-47
Playing back images continuously –SLIDE SHOW .....	1-48
Preventing accidental erasure –Image protection .....	1-48
Deleting images .....	1-49
Writing a print mark –Print mark .....	1-50
Additional Information .....	1-50
Usable cassettes .....	1-50
About i.LINK .....	1-51
Troubleshooting .....	1-52
Self-diagnosis display .....	1-53
Warning indicators and messages .....	1-53
Using your camcorder abroad .....	1-54
Maintenance information and precautions .....	1-54
Quick Reference .....	1-56
Identifying the parts and controls .....	1-56
Quick Function Guide .....	1-59

### 2. DISASSEMBLY

2-1. LCD SECTION (HL-011, PD-126 BOARDS, INVERTER TRANSFORMER UNIT) .....	2-2
2-2. EVF SECTION (LB-065 BOARD) .....	2-3
2-3. (UPPER) HANDLE BLOCK ASSEMBLY .....	2-3
2-4. FK-076, MA-386, MI-038, FT-090 BOARDS .....	2-4
2-5. CABINET (L) BLOCK ASSEMBLY, MECHANISM DECK, VC-242, DD-138, JK-190 BOARDS (FOR FORCE EJECT OF CASSETTE AND VTR SECTION CHECK) .....	2-5
2-6. CABINET (R) BLOCK ASSEMBLY .....	2-7
2-7. CABINET BOTTOM (D) ASSEMBLY .....	2-7
2-8. BATTERY PANEL BLOCK ASSEMBLY (MK-014, KP-010, MS-049 BOARDS) .....	2-8
2-9. EVF BLOCK ASSEMBLY .....	2-8
2-10. LA-026, DD-138, VC-242, JK-190 BOARDS, MECHANISM DECK .....	2-9
2-11. LENS BLOCK ASSEMBLY, CENTER FRAME ASSEMBLY .....	2-10
2-12. CD-254, SE-108 BOARDS, ZOOM LENS ASSEMBLY ..	2-11
2-13. CONTROL SWITCH BLOCK (PS-4980), CONTROL SWITCH BLOCK (CF-4980) .....	2-11
2-14. CK-093 BOARD .....	2-12
2-15. CONTROL SWITCH BLOCK (ED-4980), HINGE ASSEMBLY .....	2-13
2-16. CIRCUIT BOARDS LOCATION .....	2-14
2-17. FLEXIBLE BOARDS LOCATION .....	2-15

### 3. BLOCK DIAGRAMS

3-1. OVERALL BLOCK DIAGRAM (1/4) .....	3-1
3-2. OVERALL BLOCK DIAGRAM (2/4) .....	3-3
3-3. OVERALL BLOCK DIAGRAM (3/4) .....	3-5
3-4. OVERALL BLOCK DIAGRAM (4/4) .....	3-7
3-5. POWER BLOCK DIAGRAM (1/3) .....	3-9
3-6. POWER BLOCK DIAGRAM (2/3) .....	3-11
3-7. POWER BLOCK DIAGRAM (3/3) .....	3-13

#### 4. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

4-1. FRAME SCHEMATIC DIAGRAM (1/3)	4-1
FRAME SCHEMATIC DIAGRAM (2/3)	4-3
FRAME SCHEMATIC DIAGRAM (3/3)	4-5
4-2. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS	4-8
• CD-254 (CCD IMAGER)	
SCHEMATIC DIAGRAM	4-9
• CD-254 (CCD IMAGER)	
PRINTED WIRING BOARD	4-11

Schematic diagram and printed wiring board of the VC-242 board are not shown.

Pages from 4-13 to 4-54 are not shown.

• JK-190 (JACK BOARD)	
PRINTED WIRING BOARD	4-55
• JK-190 (JACK BOARD)	
SCHEMATIC DIAGRAM	4-57
• CK-093 (KEY IN)	
PRINTED WIRING BOARD	4-59
• CK-093 (KEY IN)	
SCHEMATIC DIAGRAM	4-61
• PD-126 (RGB DRIVE, TG)	
PRINTED WIRING BOARD	4-63
• PD-126 (RGB DRIVE, TG)	
SCHEMATIC DIAGRAM	4-65
• LA-026 (ZOOM/FOCUS DRIVE, VAP DRIVE, KEY IN/CONNECTOR)	
PRINTED WIRING BOARD	4-67
• LA-026 (ZOOM/FOCUS DRIVE)(1/3)	
SCHEMATIC DIAGRAM	4-69
• LA-026 (VAP DRIVE)(2/3)	
SCHEMATIC DIAGRAM	4-71
• LA-026 (KEY IN/CONNECTOR)(3/3)	
SCHEMATIC DIAGRAM	4-73
• SE-108 (VAP SENSOR)	
PRINTED WIRING BOARD	4-75
• MS-049 (MS CONNECTOR)	
PRINTED WIRING BOARD	4-77
• KP-010 (SELECT DIAL)	
PRINTED WIRING BOARD	4-79
• MK-014 (CONTROL KEY)	
PRINTED WIRING BOARD	4-79
• KP-010 (LCD DRIVE), MK-014 (CONTROL KEY), MS-049 (MS CONNECTOR)	
SCHEMATIC DIAGRAM	4-81
• FK-076 (CONTROL SWITCH)	
PRINTED WIRING BOARD	4-83
• FK-076 (CONTROL SWITCH)	
SCHEMATIC DIAGRAM	4-85
• MI-038 (MIC IN)	
PRINTED WIRING BOARD	4-87
• FT-090 (REMOTE)	
PRINTED WIRING BOARD	4-87
• MI-038 (MIC IN), FT-090 (REMOTE)	
SCHEMATIC DIAGRAM	4-89
• LB-065 (BACK LIGHT)	
PRINTED WIRING BOARD	4-92
• LB-065 (BACK LIGHT)	
SCHEMATIC DIAGRAM	4-93
• HL-011 (LCD DRIVE)	
PRINTED WIRING BOARD	4-95
• HL-011 (LCD DRIVE)	
SCHEMATIC DIAGRAM	4-97

• MA-386 (AUDIO AMP)	
PRINTED WIRING BOARD	4-99
• MA-386 (AUDIO AMP)	
SCHEMATIC DIAGRAM	4-101
• DD-138 (DC/DC CONVERTER, DC REGULATOR)	
PRINTED WIRING BOARD	4-103
• DD-138 (DC/DC CONVERTER)(1/2)	
SCHEMATIC DIAGRAM	4-105
• DD-138 (DC REGULATOR)(2/2)	
PRINTED WIRING BOARD	4-107
4-3. WAVEFORMS	4-109
4-4. MOUNTED LOCATION	4-116

#### 5 ADJUSTMENTS

1-1. Adjusting items when replacing main parts and boards.	5-2
5-1. CAMERA SECTION ADJUSTMENT	5-4
1-1. PREPARATIONS BEFORE ADJUSTMENT (CAMERA SECTION)	5-4
1-1-1. List of Service Tools	5-4
1-1-2. Preparations	5-5
1-1-3. Precaution	5-7
1. Setting the Switch	5-7
2. Order of Adjustments	5-7
3. Subjects	5-7
1-2. INITIALIZATION OF B, C, D, E, F, 8 PAGE DATA	5-8
1-2-1. INITIALIZATION OF C, D, 8 PAGE DATA	5-8
1. Initializing the C, D, 8 Page Data	5-8
2. Modification of C, D, 8 Page Data	5-8
3. C Page Table	5-8
4. D Page Table	5-10
5. 8 Page Table	5-11
1-2-2. INITIALIZATION OF B PAGE DATA	5-12
1. Initializing the B Page Data	5-12
2. Modification of B Page Data	5-12
5. B Page Table	5-12
1-2-3. INITIALIZATION OF E, F PAGE DATA	5-13
1. Initializing the E, F Page Data	5-13
2. Modification of E, F Page Data	5-13
3. Modification of E Page Data	5-13
4. F Page Table	5-14
5. E Page Table	5-15
1-3. CAMERA SYSTEM ADJUSTMENTS	5-16
1. 27MHz Origin Oscillation Adjustment (VC-242 board)	5-16
2. Zoom Key Center Adjustment	5-16
3. HALL Adjustment	5-17
4. Offset Adjustment	5-17
5. Flange Back Adjustment (Using Minipattern Box)	5-18
6. Flange Back Adjustment (Using Flange Back Adjustment Chart and Subject More Than 500m Away)	5-19
6-1. Flange Back Adjustment (1)	5-19
6-2. Flange Back Adjustment (2)	5-19
7. Flange Back Check	5-20
8. Picture Frame Setting	5-20
9. Pre White Balance Data Input	5-21
10. Auto White Balance Standard Data Input	5-21
11. MAX GAIN Adjustment	5-22
12. LV Standard Data Input	5-22
13. White Balance ND Filter 1 Compensation	5-23
14. White Balance ND Filter 2 Compensation	5-23
15. Auto White Balance Adjustment	5-24
16. Color Reproduction Adjustment (ND Filter OFF)	5-24
17. Color Reproduction Adjustment (ND Filter 1)	5-25
18. Color Reproduction Adjustment (ND Filter 2)	5-25
19. White Balance Check	5-26
20. Steady Shot Adjustment	5-27



20-1. Steady Shot Adjustment (1) .....	5-28	2-1. Preparations for recording .....	5-54
20-2. Steady Shot Adjustment (2) .....	5-29	2-2. IC301 TRX (RF) REC BIST Check .....	5-54
1-4. COLOR ELECTRONIC VIEWFINDER SYSTEM		2-3. Processing after Completing Recording System Check ..	5-54
ADJUSTMENT .....	5-30	3-5. AUDIO SYSTEM ADJUSTMENTS .....	5-55
1. VCO Adjustment (VC-242 board) .....	5-30	1. Playback Level Check .....	5-56
2. Bright Adjustment (VC-242 board) .....	5-31	2. Overall Level Characteristics Check .....	5-56
3. Contrast Adjustment (VC-242 board) .....	5-31	3. Overall Distortion Check .....	5-56
4. Backlight Consumption Current Adjustment		4. Overall Noise Level Check .....	5-56
(VC-242 board) .....	5-32	5. Overall Separation Check .....	5-56
5. White Balance Adjustment (VC-242 board) .....	5-32	5-4. SERVICE MODE .....	5-57
1-5. LCD SYSTEM ADJUSTMENT .....	5-33	4-1. ADJUSTMENT REMOTE COMMANDER .....	5-57
1. VCO Adjustment (PD-126 board) .....	5-33	1. Using the adjustment remote commander .....	5-57
2. Bright Adjustment (PD-126 board) .....	5-34	2. Precautions upon using the adjustment remote	
3. Black Limit Adjustment (PD-126 board) .....	5-34	commander .....	5-57
4. Contrast Adjustment (PD-126 board) .....	5-35	4-2. DATA PROCESS .....	5-58
5. Center Level Adjustment (PD-126 board) .....	5-35	4-3. SERVICE MODE .....	5-59
6. V-COM Adjustment (PD-126 board) .....	5-36	1. Setting the Test Mode .....	5-59
7. White Balance Adjustment (PD-126 board) .....	5-36	2. Emergence Memory Address .....	5-59
5-2. MECHANISM SECTION ADJUSTMENT .....	5-37	2-1. EMG Code (Emergency Code) .....	5-59
2-1. HOW TO ENTER RECORD MODE WITHOUT		2-2. MSW Code .....	5-60
CASSETTE .....	5-37	3. Bit value discrimination .....	5-61
2-2. HOW TO ENTER PLAYBACK MODE WITHOUT		4. Switch check (1) .....	5-61
CASSETTE .....	5-37	5. Switch check (2) .....	5-62
2-3. TAPE PATH ADJUSTMENT .....	5-37	6. Record of Use check .....	5-62
1. Preparation for Adjustment .....	5-37	7. Record of Self-diagnosis check .....	5-63
2. Procedure after operations .....	5-37		
5-3. VIDEO SECTION ADJUSTMENTS .....	5-38	<b>6. REPAIR PARTS LIST</b>	
3-1. PREPARATIONS BEFORE ADJUSTMENTS .....	5-38	6-1. EXPLODED VIEWS .....	6-1
3-1-1. Equipment Required .....	5-38	6-1-1. OVERALL SECTION-1 .....	6-1
3-1-2. Precautions on Adjusting .....	5-39	6-1-2. OVERALL SECTION-2 .....	6-2
3-1-3. Adjusting Connectors .....	5-40	6-1-3. CABINET (L) SECTION .....	6-3
3-1-4. Connecting the Equipment .....	5-40	6-1-4. CABINET (R) SECTION-1 .....	6-4
3-1-5. Alignment Tapes .....	5-41	6-1-5. CABINET (R) SECTION-2 .....	6-5
3-1-6. Input/Output Level and Impedance .....	5-41	6-1-6. UPPER HANDLE SECTION .....	6-6
3-2. SYSTEM CONTROL SYSTEM ADJUSTMENT .....	5-42	6-1-7. BATTERY PANEL SECTION .....	6-7
1. Initialization of B, C, D, E, F, 8 Page Data .....	5-42	6-1-8. EVF SECTION .....	6-8
2. Serial No. Input .....	5-42	6-1-9. CENTER FRAME SECTION .....	6-9
2-1. Company ID Input .....	5-42	6-1-10. LENS BLOCK SECTION .....	6-10
2-2. Serial No. Input .....	5-42	6-1-11. CASSETTE COMPARTMENT, DRUM AND	
3. Battery End Adjustment .....	5-44	REEL TABLE ASSEMBLY .....	6-11
3-3. SERVO AND RF SYSTEM ADJUSTMENT .....	5-45	6-1-12. TAPE GUIDE, PINCH SLIDER ASSEMBLY AND	
1. Cap FG Duty Adjustment (VC-242 Board) .....	5-45	BRAKE SLIDER ASSEMBLY .....	6-12
2. T reel FG Duty Adjustment (VC-242 Board) .....	5-45	6-1-13. EACH GEARS AND LOADING/CAPSTAN MOTOR	
3. PLL $f_0$ & LPF $f_0$ Adjustment (VC-242 Board) .....	5-45	ASSEMBLY .....	6-13
4. Switching Position Adjustment (VC-242 Board) .....	5-46	6-2. ELECTRICAL PARTS LIST .....	6-14
5. AGC Center Level and APC & AEQ Adjustment .....	5-46		
5-1. Preparations before adjustments .....	5-46		
5-2. AGC Center Level Adjustment (VC-242 Board) .....	5-46		
5-3. APC & AEQ Adjustment (VC-242 Board) .....	5-47		
5-4. Processing after Completing Adjustments .....	5-47		
6. PLL $f_0$ & LPF $f_0$ Final Adjustment (VC-242 Board) .....	5-47		
3-4. VIDEO SYSTEM ADJUSTMENTS .....	5-48		
3-4-1. Base Band Block Adjustments .....	5-48		
1. Chroma BPF $f_0$ Adjustment (VC-242 Board) .....	5-48		
2. S VIDEO OUT Y Level Adjustment (VC-242 Board) ..	5-48		
3. S VIDEO OUT Chroma Level Adjustment			
(VC-242 Board) .....	5-49		
4. VIDEO OUT Y, Chroma Level Check (VC-242 Board) ..	5-49		
3-4-2. BIST Check .....	5-50		
1. Playback System Check .....	5-50		
1-1. Preparations for Playback .....	5-50		
1-2. IC301 TRX (RF) PB BIST Check .....	5-50		
1-3. IC301 AUD (ABUS) PB BIST Check .....	5-50		
1-4. IC301 VFD PB BIST Check .....	5-50		
1-5. IC301 ENCODER BIST Check .....	5-52		
1-6. Processing after Completing Playback System Check ..	5-53		
2. Recording System Check .....	5-54		

Parts list of the VC-242 board are not shown.  
Pages from 6-27 to 6-36 are not shown.

\* Color reproduction frame are shown on page 269.

## SERVICE NOTE

### 1. POWER SUPPLY DURING REPAIRS

In this unit, about 10 seconds after power is supplied to the battery terminal using the regulated power supply (8.4V), the power is shut off so that the unit cannot operate.

These following two methods are available to prevent this. Take note of which to use during repairs.

#### Method 1.


Connect the servicing remote commander RM-95 (J-6082-053-B) to the LANC jack, and set the commander switch to the "ADJ" side.

#### Method 2.

Use the DC IN terminal. (Use the AC power adaptor. (AC-L10, AC-VQ800 etc. ))

### 2. TO TAKE OUT A CASSETTE WHEN NOT EJECT (FORCE EJECT)

- ① Refer to 2-3. to remove the upper handle block assembly.
- ② Refer to 2-5. to remove the cabinet (L) assembly.
- ③ Refer to 2-5. to remove the mechanism deck (Including VC-242 board and DD-138 board).
- ④ Remove DD-138 board from the mechanism deck (Including VC-242 board).
- ⑤ Remove the CN022 (27P 0.3 mm) of VC-242 board.
- ⑥ Supply +4.5V from the DC power supply to the loading motor and unload with a pressing the cassette compartment.

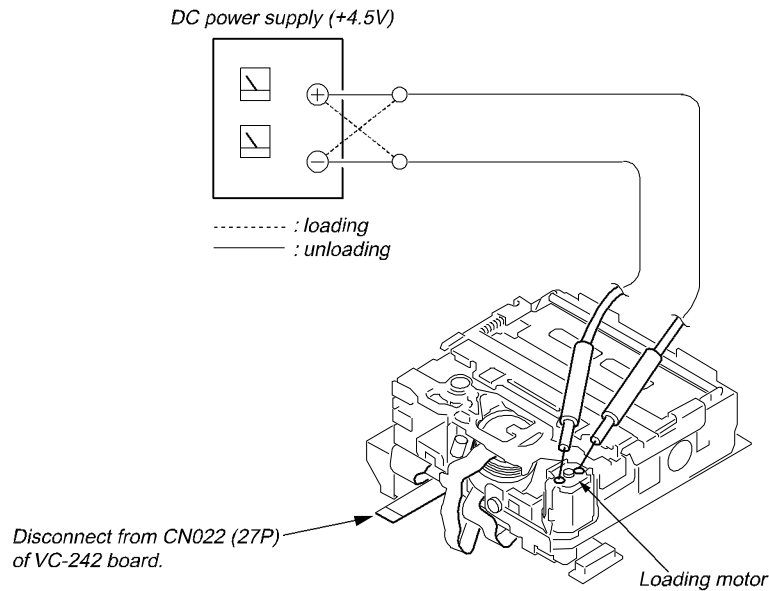

# SELF-DIAGNOSIS FUNCTION


## 1. SELF-DIAGNOSIS FUNCTION

When problems occur while the unit is operating, the self-diagnosis function starts working, and displays on the viewfinder, LCD screen or LCD window what to do. This function consists of two display; self-diagnosis display and service mode display.

Details of the self-diagnosis functions are provided in the Instruction manual.

## 2. SELF-DIAGNOSIS DISPLAY

When problems occur while the unit is operating, the counter of the viewfinder, LCD screen or LCD window consists of an alphabet and 4-digit numbers, which blinks at 3.2 Hz. This 5-character display indicates the “repaired by:”, “block” in which the problem occurred, and “detailed code” of the problem.

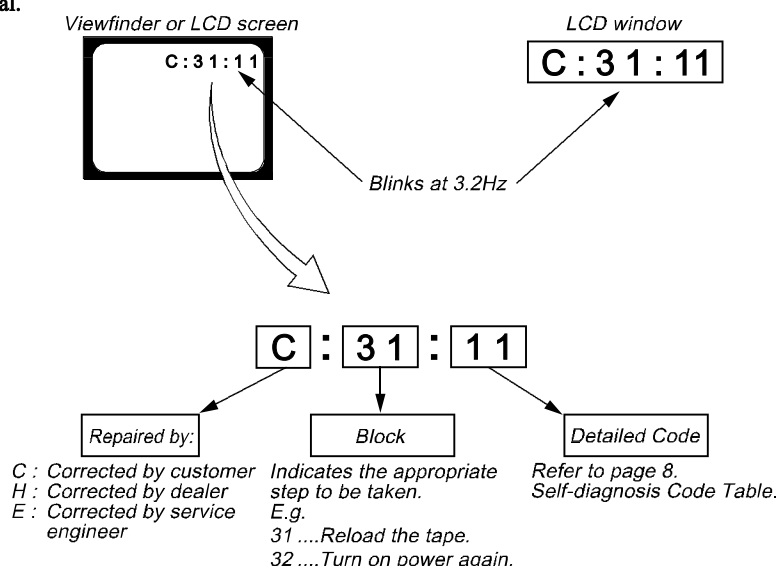


## 3. SERVICE MODE DISPLAY

The service mode display shows up to six self-diagnosis codes shown in the past.

### 3-1. Display Method

While pressing the “STOP” key, set the switch from OFF to “VCR or PLAYER”, and continue pressing the “STOP” key for 5 seconds continuously. The service mode will be displayed, and the counter will show the backup No. and the 5-character self-diagnosis codes.

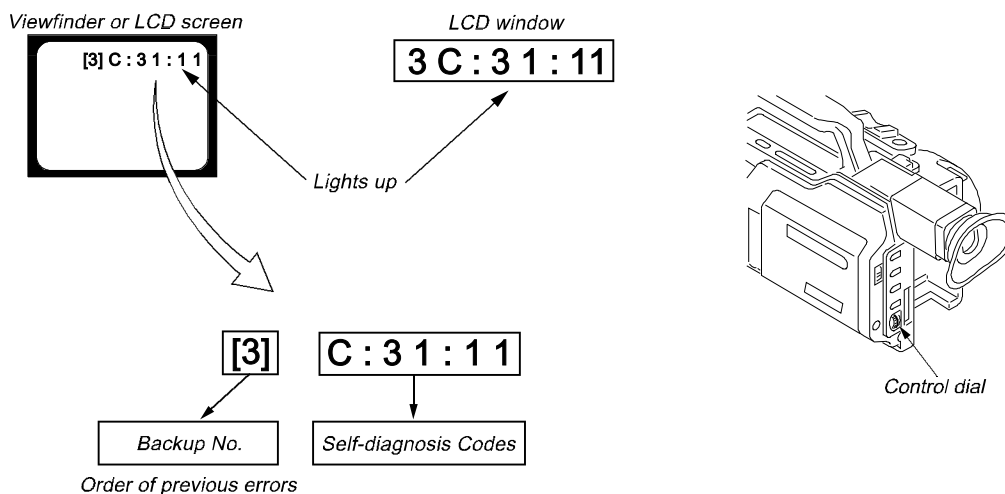

### 3-2. Switching of Backup No.

By rotating the control dial, past self-diagnosis codes will be shown in order. The backup No. in the [ ] indicates the order in which the problem occurred. (If the number of problems which occurred is less than 6, only the number of problems which occurred will be shown.)

- |                            |                              |
|----------------------------|------------------------------|
| [1] : Occurred first time  | [4] : Occurred fourth time   |
| [2] : Occurred second time | [5] : Occurred fifth time    |
| [3] : Occurred third time  | [6] : Occurred the last time |

### 3-3. End of Display

Turning OFF the power supply will end the service mode display.

**Note:** The “self-diagnosis display” data will be backed up by the coin-type lithium battery of CK-093 board BT250. When CK-093 board is removed, the “self-diagnosis display” data will be lost by initialization.

#### 4. SELF-DIAGNOSIS CODE TABLE

Repaired by:	Self-diagnosis Code		Symptom/State	Correction
	Block Function	Detailed Code		
C	0 4	0 0	Non-standard battery is used.	Use the info LITHIUM battery.
C	2 1	0 0	Condensation.	Remove the cassette, and insert it again after one hour.
C	2 2	0 0	Video head is dirty.	Clean with the optional cleaning cassette.
C	3 1	1 0	LOAD direction. Loading does not complete within specified time	Load the tape again, and perform operations from the beginning.
C	3 1	1 1	UNLOAD direction. Loading does not complete within specified time	Load the tape again, and perform operations from the beginning.
C	3 1	2 0	T reel side tape slacking when unloading.	Load the tape again, and perform operations from the beginning.
C	3 1	2 1	Winding S reel fault when counting the rest of tape.	Load the tape again, and perform operations from the beginning.
C	3 1	2 2	T reel fault.	Load the tape again, and perform operations from the beginning.
C	3 1	2 3	S reel fault.	Load the tape again, and perform operations from the beginning.
C	3 1	2 4	T reel fault.	Load the tape again, and perform operations from the beginning.
C	3 1	3 0	FG fault when starting capstan.	Load the tape again, and perform operations from the beginning.
C	3 1	4 0	FG fault when starting drum.	Load the tape again, and perform operations from the beginning.
C	3 1	4 2	FG fault during normal drum operations.	Load the tape again, and perform operations from the beginning.
C	3 1	1 0	LOAD direction loading motor time-out.	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3 1	1 1	UNLOAD direction loading motor time-out.	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3 2	2 0	T reel side tape slacking when unloading.	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3 2	2 1	Winding S reel fault when counting the rest of tape.	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3 2	2 2	T reel fault.	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3 2	2 3	S reel fault.	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3 2	2 4	T reel fault.	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3 2	3 0	FG fault when starting capstan.	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3 2	4 0	FG fault when starting drum	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3 2	4 2	FG fault during normal drum operations	Remove the battery or power cable, connect, and perform operations from the beginning.
E	6 1	0 0	Difficult to adjust focus (Cannot initialize focus.)	Inspect the lens block focus reset sensor (Pin ②⑤ of LA-026 board) when focusing is performed when the control dial is rotated in the focus manual mode, and the focus motor drive circuit (IC140 of LA-026 board) when the focusing is not performed.
E	6 1	1 0	Zoom operations fault (Cannot initialize zoom lens.)	Inspect the lens block zoom reset sensor (Pin ②⑥ of LA-026 board) when zooming is performed when the zoom lens is operated and the zoom motor drive circuit (IC140 of LA-026 board) when zooming is not performed.
E	6 2	0 0	Steadyshot function does not work well. (With pitch angular velocity sensor output stopped.)	Inspect pitch angular velocity sensor (SE601 or SE602 of SE-108 board) peripheral circuits.
E	6 2	0 1	Steadyshot function does not work well. (With yaw angular velocity sensor output stopped.)	Inspect yaw angular velocity sensor (SE600 or SE603 of SE-108 board) peripheral circuits.

## SECTION 1 GENERAL

DCR-VX2000/VX2000E


This section is extracted from instruction manual. (DCR-VX2000E model)

### Checking supplied accessories

Make sure that the following accessories are supplied with your camcorder.

### Проверка прилагаемых принадлежностей

Убедитесь, что в комплект поставки видеокамеры входят следующие принадлежности.

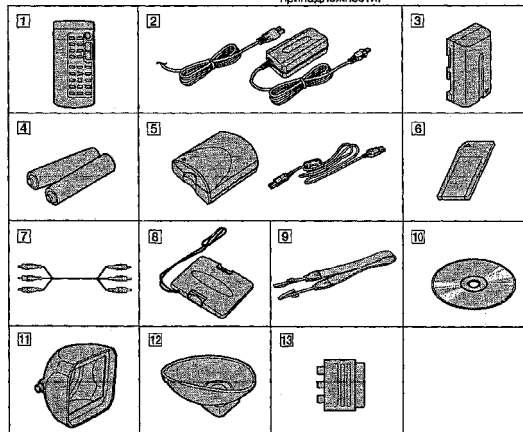

- 1 Wireless Remote Commander (1) (p. 252)
- 2 AC-L10A/L10B/L10C AC power adaptor (1), Mains lead (1) (p. 14)
- 3 NP-F330 battery pack (1) (p. 13, 14)
- 4 R6 (size AA) battery for Remote Commander (2) (p. 253)
- 5 Memory Stick Reader/Writer (1), USB cable (1)
- 6 "Memory Stick" (1) (p. 170)
- 7 A/V connecting cable (1) (p. 44, 105)
- 8 Hood cap (1) (p. 22)
- 9 Shoulder strap (1) (p. 249)
- 10 Application software: PictureGear 4.1 Lite (CD ROM) (1) (p. 197)
- 11 Lens hood (1) (p. 247)
- 12 Eyecup (large) (1) (p. 28)
- 13 21-pin adaptor (1) (p. 45)

- 1 Беспроводной пульт дистанционного управления (1) (стр. 252)
- 2 Сетевой адаптер переменного тока AC-L10A/L10B/L10C AC (1), провод электропитания (1) (стр. 14)
- 3 Батарейный блок NP-F330 (1) (стр. 13, 14)
- 4 Батарейка R6 (размера AA) для пульта дистанционного управления (2) (стр. 253)
- 5 Устройство чтения/записи "Memory Stick" (1), кабель USB (1)
- 6 "Memory Stick" (1) (стр. 170)
- 7 Соединительный кабель аудио/видео (1) (стр. 44, 105)
- 8 Крышка (1) (стр. 22)
- 9 Плечевой ремень (1) (стр. 249)
- 10 Прикладное программное обеспечение: PictureGear 4.1 Lite (CD ROM) (1) (стр. 197)
- 11 Бленда объектива (1) (стр. 247)
- 12 Окуляр (большой) (1) (стр. 28)
- 13 21-штырьковый адаптер (1) (стр. 45)

5

English


### Quick Start Guide




This guide introduces you to the basic way of recording/playback. See the pages in parentheses "( )" for more information.

#### 1 Connecting the mains lead (p. 18)


Use the battery pack when using your camcorder outdoors (p. 13).

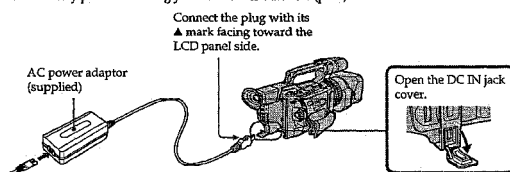


#### 2 Inserting a cassette (p. 20)

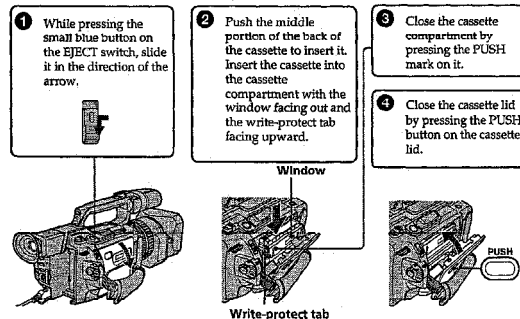

#### 3 Recording a picture (p. 22)

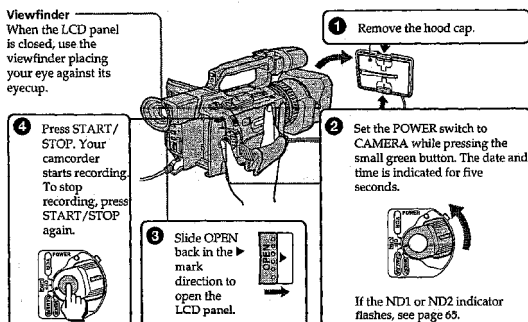

#### 4 Monitoring the playback picture on the LCD screen (p. 38)

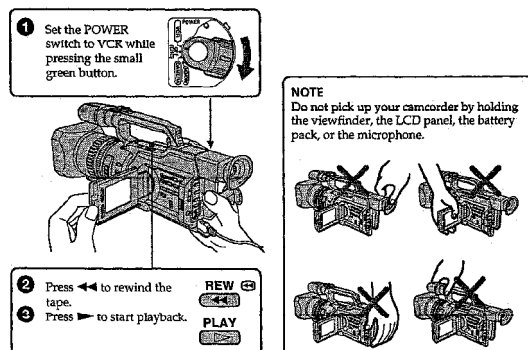

## — Getting started — Using this manual

As you read through this manual, buttons and settings on your camcorder are shown in capital letters.

e.g. Set the POWER switch to CAMERA.

When you carry out an operation, you can hear a beep or a melody sound to indicate that the operation is being carried out.

### Note on cassette memory

Your camcorder is based on the DV format. You can only use mini DV cassettes with your camcorder. We recommend that you use a tape with cassette memory CM.

The functions which require different operations depending on whether or not the tape has cassette memory are:

- Searching the end point of the recording – end search (p. 36, 43)
- Searching a recording by index – index search (p. 93)
- Searching a recording by date – date search (p. 97)
- Searching for a photo – photo search (p. 99). The functions you can operate only with cassette memory are:
- Searching the boundaries of recorded tape by title – title search (p. 95)
- Superimposing a title (p. 141)
- Making your own titles (p. 147)
- Labeling a cassette (p. 149).

For details, see page 210.

You see this mark in the introduction of the features that are operated only with cassette memory.  
Tapes with cassette memory are marked with CM (Cassette Memory).



## — Подготовка к эксплуатации — Использование данного руководства

При чтении данного руководства учитывайте, что кнопки и установки на видеокамере показаны заглавными буквами.

Например: Установите выключатель POWER в положение CAMERA.

При выполнении операции на видеокамере можно услышать звуковой сигнал или мелодию, подтверждающие выполнение операции.

### Примечание по кассетной памяти

Ваша видеокамера работает в формате DV. Вы можете использовать для видеокамеры только кассеты мини DV. Рекомендуется использовать ленту с кассетной памятью CM.

Ниже перечислены функции, которые требуют выполнения различных операций, в зависимости от того, имеется на ленте кассетная память или нет:

- Поиск места окончания записи – поиск конца (стр. 36, 43)
- Поиск записи по индексу – поиск по индексу (стр. 93)
- Поиск записи по дате – поиск даты (стр. 97)
- Поиск фото – фотопоиск (стр. 99). Функции, которыми Вы можете управлять только с помощью кассетной памяти, следующие:
- Поиск границ записи на ленте по титру – поиск титра (стр. 95)
- Наложение титра (стр. 141)
- Создание Ваших собственных титров (стр. 147)
- Маркировка кассеты (стр. 149). Подробные сведения приведены на стр. 210.

Этот знак можно увидеть при описании функций, которые управляются только с помощью кассетной памяти.  
Ленты с кассетной памятью маркируются с помощью знака CM (кассетная память).



## Using this manual

### Note on TV colour systems

TV colour systems differ from country to country. To view your recordings on a TV, you need a PAL system-based TV.

### Copyright precautions

Television programs, films, video tapes, and other materials may be copyrighted. Unauthorized recording of such materials may be contrary to the provision of the copyright laws.

### Precautions on camcorder care

- The LCD screen and the viewfinder are manufactured using high-precision technology. However, there may be some tiny black points and/or bright points (red, blue, green or white) that constantly appear on the LCD screen and in the viewfinder. These points occur normally in the manufacturing process and do not affect the recorded picture in any way. Effective ratio of pixels and/or screen is 99.99% or more.

## Использование данного руководства

### Системы цветного телевидения

Системы цветного телевидения отличаются в зависимости от страны. Для просмотра Ваших записей на экране телевизора необходимо использовать телевизор на базе системы PAL.

### Предостережение об авторском праве

Телевизионные программы, кинофильмы, видеоленты и другие материалы могут быть защищены авторским правом. Нелегализованная запись таких материалов может противоречить положениям закона об авторском праве.

### Меры предосторожности при уходе за видеокамерой

- Экран ЖКД и видискатель изготовлены с помощью высокоточной технологии. Однако на экране ЖКД и в цветном видискателе могут появляться черные или яркие точки (красные, синие, зеленые или белые). Появление этих точек обычно связано с производственным процессом, и они абсолютно не влияют на записываемое изображение. Свыше 99,99% экрана предназначено для эффективного использования.

Getting started / Подготовка к эксплуатации

10


## Using this manual

- Do not let your camcorder get wet. Keep your camcorder away from rain and sea water. Letting your camcorder get wet may cause your camcorder to malfunction. Sometimes this malfunction cannot be repaired [a].
- Never leave your camcorder exposed to temperatures above 60 °C (140 °F), such as in a car parked in the sun or under direct sunlight [b].
- Do not place your camcorder so as to point the viewfinder or the LCD screen or lens toward the sun. The inside of the viewfinder, LCD screen, or lens may be damaged [c].


[a]



[b]

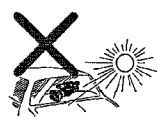

[c]

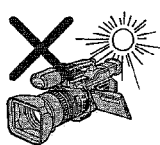

Contents of the recording cannot be compensated if recording or playback is not made due to a malfunction of the camcorder, video tape, etc.

Содержимое записанного материала невозможно восстановить, если запись или воспроизведение не получились по причине неисправности видеокамеры, видеоленты и т.п.

## Использование данного руководства

- Не допускайте появления влаги снаружи и внутри видеокамеры. Предохраняйте видеокамеру от дождя и морской воды. Влага может привести к неполадкам в работе видеокамеры. Иногда неисправность устранить невозможно [a].
- Никогда не оставляйте видеокамеру в местах, где температура поднимается выше 60 °C, например, в автомобиле, припаркованном в солнечном месте, или под прямым солнечным светом [b].
- Не допускайте попадания прямых солнечных лучей на видискатель или экран ЖКД или объектив. Иначе могут возникнуть повреждения внутреннего устройства видискателя, экрана ЖКД или объектива [c].


## Step 1 Preparing the power supply

### Installing the battery pack


Install the battery pack to use your camcorder outdoors.

- (1) Lift up the viewfinder.
- (2) Insert the battery pack in the direction of the  $\nabla$  mark on the battery pack. Slide the battery pack until it is locked.

1

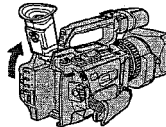

2

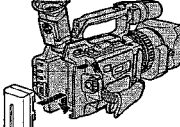


### To remove the battery pack

Lift up the viewfinder.  
Slide the battery pack out in the direction of the arrow while pressing BATT RELEASE down.

### Для снятия батарейного блока

Поднимите видискатель.  
Передавите батарейный блок в направлении стрелки  $\nabla$ , расположенной на нем. Задавите батарейный блок, пока он не будет зафиксирован.

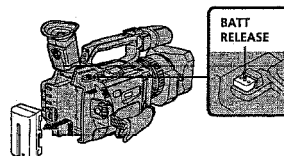

Getting started / Подготовка к эксплуатации

12

11

13

## Step 1 Preparing the power supply

### Charging the battery pack

Use the battery pack after charging it. Your camcorder operates only with the "InfoLITHIUM" battery pack (L series).


(1) Open the DC IN jack cover and connect the AC power adaptor supplied with your camcorder to the DC IN jack with the plug's ▲ mark facing toward the LCD panel side.


(2) Connect the mains lead to the AC power adaptor.

(3) Connect the mains lead to the mains.

(4) Set the POWER switch to OFF (CHG). Charging begins.

The remaining battery time is indicated in minutes on the display window.

When the remaining battery indicator changes to , normal charge is completed. To fully charge the battery (full charge), leave the battery pack attached for about one hour after normal charge is completed until FULL appears on the display window. Fully charging the battery allows you to use the battery longer than usual.

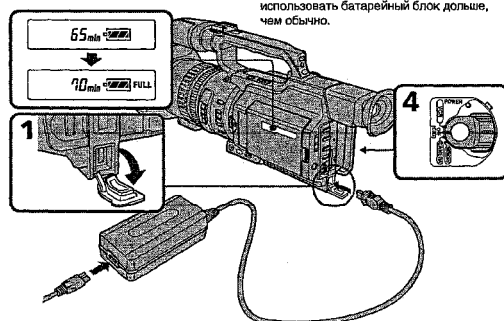

14

## Пункт 1 Подготовка источника питания

### Зарядка батарейного блока

Используйте батарейный блок после его зарядки.


Ваша видеокамера работает только с батарейным блоком "InfoLITHIUM" (серии L).

(1) Откройте крышку гнезда DC IN и подсоедините сетевой адаптер переменного тока, прилагаемый к видеокамере, к гнезду DC IN, так чтобы знак ▲ на штекере был обращен в сторону панели ЖКД.

(2) Подсоедините провод электропитания к сетевому адаптеру переменного тока.

(3) Подсоедините провод электропитания к сетевой розетке.

(4) Установите переключатель POWER в положение OFF (CHG). Начнется зарядка.

В окошке дисплея будет отображаться время оставшегося заряда в минутах. Если индикатор оставшегося заряда изменится на , это значит, что нормальная зарядка завершена. Для полной зарядки батарейного блока (полная зарядка) оставьте батарейный блок подсоединенным приблизительно на один час после завершения нормальной зарядки до тех пор, пока в окошке дисплея не появится индикация FULL. Полная зарядка батарейного блока позволяет Вам использовать батарейный блок дольше, чем обычно.

## Step 1 Preparing the power supply

After charging the battery pack  
Disconnect the AC power adaptor from the DC IN jack on your camcorder.

### Note on the remaining battery time indicator

The remaining battery time indicator on the LCD screen/display window or in the viewfinder indicates the recording time using the viewfinder. The indicator may not be correct, depending on the conditions in which you are recording. When you close the LCD panel and open it again, it takes about one minute for the correct remaining battery time to be displayed.

### Notes

- Prevent metallic objects from coming into contact with the metal parts of the DC plug of the AC power adaptor. This may cause a short-circuit, damaging the AC power adaptor.
- Keep the battery pack dry.
- When the battery pack is not to be used for a long time, charge the battery pack once fully, and then use it until it fully discharges again. Keep the battery pack in a cool place.

Until your camcorder calculates the actual remaining battery time  
"---- min" appears in the display window.

While charging the battery pack, no indicator appears or the indicator flashes in the display window in the following cases:

- The battery pack is not installed correctly.
- The AC power adaptor is disconnected.
- Something is wrong with the battery pack.

## Пункт 1 Подготовка источника питания

После зарядки батарейного блока  
Отсоедините сетевой адаптер переменного тока от гнезда DC IN на Вашей видеокамере.

### Индикатор оставшегося времени работы батареи

Индикатор оставшегося времени работы батареи на экране ЖКД/в окне дисплея или в видоискателе показывает время записи с помощью видискателя. Индикация может быть не совсем точной, в зависимости от условий, в которых производится запись. Если закрыть панель ЖКД и открыть ее снова, то приблизительно через минуту появится индикация, отображающая точное оставшееся время работы батареи.

### Примечания

- Не допускайте контакта металлических предметов с металлическими частями адаптера. Это может привести к короткому замыканию и повреждению Вашей видеокамеры.
- Держите батарейный блок в сухом состоянии.
- Когда батарейный блок не используется в течение длительного промежутка времени, полностью зарядите его, а затем используйте, пока он не разрядится окончательно. Храните батарейный блок в прохладном месте.

До тех пор, пока Ваша видеокамера не определит действительное время оставшегося заряда батарейного блока В окошке дисплея будет отображаться индикация "---- min".

Во время зарядки батарейного блока в окошке дисплея не будет отображаться индикатор или он будет мигать в следующих случаях:

- Батарейный блок установлен неправильно.
- Отсоединен сетевой адаптер переменного тока.
- Неисправность батарейного блока.

## Step 1 Preparing the power supply

### Charging time/Время зарядки

Battery pack/ Батарейный блок	Full charge (Normal charge)/ Полная зарядка (нормальная зарядка)
NP-F330 (supplied/ входит в комплект)	130 (90)
NP-F530 / F550	210 (150)
NP-F730 / F750	300 (240)
NP-F930 / F950	390 (330)
NP-F960	420 (360)

Approximate minutes to charge an empty battery pack

## Пункт 1 Подготовка источника питания

### Recording time/Время записи

Battery pack/ Батарейный блок	Recording with the viewfinder/ Запись с помощью видоискателя		Recording with the LCD screen/ Запись с помощью экрана ЖКД	
	Continuous*/ Непрерывная*	Typical**/ Типичная**	Continuous*/ Непрерывная*	Typical**/ Типичная**
NP-F330 (supplied/ входит в комплект)	70 (65)	35 (35)	60 (55)	30 (30)
NP-F530	115 (105)	60 (55)	100 (90)	55 (50)
NP-F550	145 (130)	80 (70)	130 (115)	70 (60)
NP-F730	260 (235)	145 (130)	230 (205)	125 (110)
NP-F750	305 (265)	170 (145)	265 (235)	145 (130)
NP-F930	400 (355)	220 (195)	355 (320)	195 (175)
NP-F950	465 (420)	260 (235)	405 (360)	225 (200)
NP-F960	560 (500)	310 (280)	480 (430)	265 (240)

Approximate minutes of recording time when you use a fully charged battery

Numbers in parentheses "( )" indicate the time using a normally charged battery. You cannot use the NP-500/510/710 battery pack on your camcorder.

Приблизительное время записи в минутах при использовании полностью заряженного батарейного блока

Цифры в скобках "( )" указывают время при использовании батарейного блока с нормальной зарядкой. В этой видеокамере нельзя использовать батарейный блок NP-500/510/710.

## Step 1 Preparing the power supply

- Approximate continuous recording time at 25 °C (77 °F). The battery life will be shorter if you use your camcorder in a cold environment.
- Approximate minutes when recording while you repeat recording start/stop, zooming and turning the power on/off. The actual battery life may be shorter.

### Playing time/Время воспроизведения

Battery pack/ Батарейный блок	Playing time on LCD screen/ Время воспроизведения на экране ЖКД	Playing time with LCD closed/ Время воспроизведения с закрытым ЖКД
NP-F330 (supplied/ входит в комплект)	90 (80)	110 (95)
NP-F530	150 (135)	190 (165)
NP-F550	185 (165)	225 (195)
NP-F730	305 (275)	385 (345)
NP-F750	375 (335)	460 (415)
NP-F930	475 (430)	605 (540)
NP-F950	570 (510)	705 (630)
NP-F960	680 (610)	830 (745)

Approximate minutes of playing time when you use a fully charged battery

Numbers in parentheses "( )" indicate the time using a normally charged battery. The battery life will be shorter if you use your camcorder in a cold environment. You cannot use the NP-500/510/710 battery pack on your camcorder.

### Notes

- The supplied battery pack is charged a little.
- Some types of the battery packs may not be sold in your region or country.

## Пункт 1 Подготовка источника питания

- Приблизительное время непрерывной записи при температуре 25 °C. При использовании видеокамеры в холодных условиях срок службы батарейного блока сокращается.
- Приблизительное время в минутах при записи с неоднократным пуском/остановкой, увеличением изображения и включением/выключением питания. Фактический срок службы батарейного блока может быть короче.

Приблизительное время воспроизведения в минутах при использовании полностью заряженного батарейного блока

Цифры в скобках "( )" указывают время при использовании батарейного блока с нормальной зарядкой. При использовании видеокамеры в холодных условиях срок службы батарейного блока сокращается. В этой видеокамере нельзя использовать батарейный блок NP-500/510/710.


### Примечания

- Прилагаемый батарейный блок частично заряжен.
- Возможно, в вашей области или стране в продаже нет некоторых типов батарейных блоков.



## Step 1 Preparing the power supply


### What is "InfoLITHIUM"?

The "InfoLITHIUM" is a lithium ion battery pack which can exchange data such as battery consumption with compatible video equipment. This unit is compatible with the "InfoLITHIUM" battery pack (L series). Your camcorder operates only with the "InfoLITHIUM" battery. "InfoLITHIUM" battery packs (L series) have the  mark. "InfoLITHIUM" is a trademark of Sony Corporation.

**If the camcorder is immediately turned off**  
Even if the remaining battery time is enough to operate, charge the battery pack fully again. The correct remaining time is displayed.


### Connecting to the mains

When you use your camcorder for a long time, we recommend that you power it from the mains using the AC power adaptor.

- (1) Open the DC IN jack cover and connect the AC power adaptor to the DC IN jack on your camcorder with the plug's  mark facing toward the LCD panel side.
- (2) Connect the mains lead to the AC power adaptor.
- (3) Connect the mains lead to the mains.

## Пункт 1 Подготовка источника питания


### Что такое "InfoLITHIUM"?


"InfoLITHIUM" представляет собой литиево-ионный батарейный блок, который может обмениваться данными, такими как потребление энергии батарейного блока, с совместимой видеоаппаратурой. Это устройство совместимо с батарейным блоком "InfoLITHIUM" (серии L). Батарея видеокамеры работает только с батарейным блоком "InfoLITHIUM". На батарейных блоках "InfoLITHIUM" (серии L) имеется метка . "InfoLITHIUM" является торговой маркой корпорации Sony.

**Камера сразу отключается**  
Даже если оставшегося времени заряда батареи достаточно для нормальной работы, снова полностью зарядите батарейный блок. Появится точное оставшееся время работы батареи.

### Подсоединение к сетевой розетке

Если Вы собираетесь использовать видеокамеру длительное время, рекомендуется использовать питание от электрической сети с помощью сетевого адаптера переменного тока.


- (1) Откройте крышку гнезда DC IN и подсоедините сетевой адаптер переменного тока к гнезду DC IN, так чтобы знак  на штекере был обращен в сторону панели ЖКД.
- (2) Подсоедините провод электропитания к сетевому адаптеру переменного тока.
- (3) Подсоедините провод электропитания к сетевой розетке.

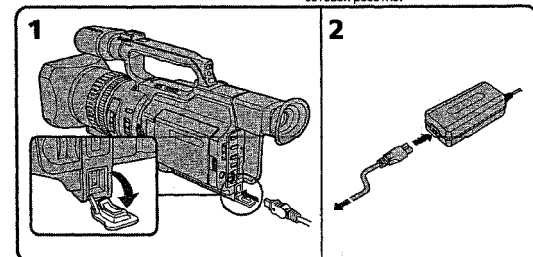

18

## Step 2 Inserting a cassette

- (1) Install the power source.
- (2) While pressing the small blue button on the EJECT switch, slide it in the direction of the arrow. After the cassette lid is opened, the cassette compartment automatically opens.
- (3) Push the middle portion of the back of the cassette to insert it.  
Insert the cassette in a straight line deeply into the cassette compartment with the window facing out and the write-protect tab facing upward.
- (4) Close the cassette compartment by pressing the PUSH mark on it.
- (5) Close the cassette lid until it clicks by pressing the PUSH button on the lid.

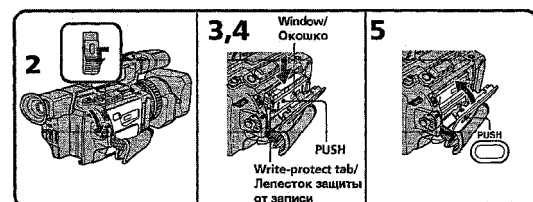

### To eject a cassette

Follow the procedure above, and take out the cassette in step 3.

### Notes

- The cassette lid will not be closed when you press any part of the lid other than the PUSH button.
- Do not catch your finger in the cassette lid.

## Пункт 2 Установка кассеты

- (1) Установите источник питания.
- (2) Нажав небольшую синюю кнопку на переключателе EJECT, передвиньте его в направлении стрелки. После открытия крышки кассетного отсека кассетный отсек откроется автоматически.
- (3) Нажмите посередине задней стороны кассеты для ее установки.  
Вставьте кассету по прямой в кассетный отсек до упора, так чтобы окошко было обращено наружу, а лепесток защиты от записи - вверх.
- (4) Закройте кассетный отсек, нажав на нем метку PUSH.
- (5) Закройте до щелчка крышку кассетного отсека, нажав на ней кнопку PUSH.

### Для извлечения кассеты

Выполните указанную выше процедуру и выньте кассету в пункте 3.

### Примечания

- Крышка кассетного отсека не закроется, если нажать на какую-либо другую часть на крышке, а не на PUSH.
- Не прижимайте пальцы крышкой кассетного отсека.

## Step 1 Preparing the power supply

### Precaution

The set is not disconnected from the AC power source (mains) as long as it is connected to the mains, even if the set itself has been turned off.

### Notes

- The mains lead must only be changed at an authorized service shop.
- AC power adaptor can supply power even if the battery pack is attached to your camcorder.
- The DC IN jack has source priority. This means that the mains lead is connected to the DC IN jack, even when the mains lead is not plugged into the mains.

### Using a car battery

Use the Sony DC Adaptor/Charger (not supplied).

## Пункт 1 Подготовка источника питания

### Меры предосторожности

Аппарат не отключается от источника переменного тока до тех пор, пока он подсоединен к электрической сети, даже если сам аппарат выключен.

### Примечания

- Провод электропитания следует заменять только в той мастерской, у которой имеется разрешение.
- Питание от сетевого адаптера переменного тока может подаваться даже в том случае, когда батарейный блок присоединен к видеокамере.
- Гнездо DC IN обладает приоритетом источника. Это означает, что питание от батарейного блока не подается, пока провод электропитания подсоединен к гнезду DC IN, даже если провод электропитания не включен в сетевую розетку.

### Использование автомобильного аккумулятора

Используйте адаптер/зарядное устройство постоянного тока Sony (не входит в комплект).

Getting started / Подготовка к эксплуатации

## Step 2 Inserting a cassette

When you use mini DV cassettes with cassette memory  
Read the instruction about cassette memory to use this function properly (p. 210).

### To prevent accidental erasure

Slide the write-protect tab on the cassette to the protect position.

## Пункт 2 Установка кассеты


При использовании кассет мини DV с кассетной памятью  
Прочтите инструкцию о кассетной памяти для правильного использования этой функции (стр. 210).

### Для предотвращения случайного стирания


Передвиньте лепесток защиты от записи на кассете в защитное положение.



If the grip strap prevents the cassette lid from opening fully  
Adjust the length of the grip strap (p. 249).

If  flashes even if the cassette has been inserted  
Press the PUSH button again to close the cover firmly.

Если ремень для захвата не позволяет полностью открыть крышку кассетного отсека  
Отрегулируйте длину ремня для захвата (стр. 249).

Когда мигает индикация , даже если вставлена кассета  
Нажмите кнопку PUSH еще раз, чтобы плотно закрыть крышку.


Getting started / Подготовка к эксплуатации

## Recording a picture

Your camcorder automatically focuses for you.

- (1) Remove the hood cap and pull the hood cap string to fix it.
- (2) Install the power source and insert a cassette. See "Step 1" and "Step 2" for more information (p. 13 to 21).
- (3) Set the POWER switch to CAMERA while pressing the small green button. Your camcorder is set to the standby mode.
- (4) Slide OPEN in the direction of the ► mark to open the LCD panel.
- (5) Press START/STOP. Your camcorder starts recording. The "REC" indicator appears. The camera recording lamps located on the front and rear of your camcorder light up. To stop recording, press START/STOP again.

You can use REC START/STOP located on the front instead of START/STOP on the rear.

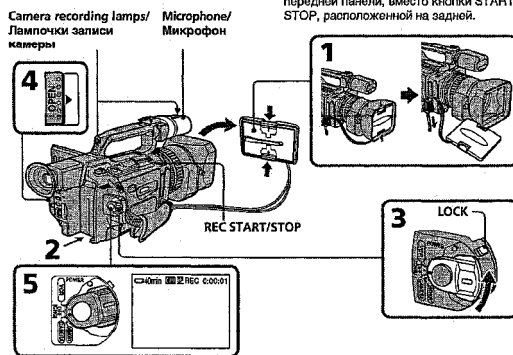

22

## Запись изображения

Данная видеокамера автоматически выполняет фокусировку.

- (1) Снимите крышку и потяните за шнур крышки для закрепления.
- (2) Установите источник питания и вставьте кассету. См. "Пункт 1" и "Пункт 2" для получения подробных сведений (стр. 13 - 21).
- (3) Нажав маленькую зеленую кнопку, установите переключатель POWER в положение CAMERA. Ваша видеокамера будет установлена в режим ожидания.
- (4) Передвиньте кнопку OPEN в направлении знака ►, чтобы открыть панель ЖКД.
- (5) Нажмите кнопку START/STOP. Видеокамера начнет запись. Появится индикатор "REC". Загорятся лампочки записи, расположенные на передней и задней панели видеокамеры. Для остановки записи нажмите кнопку START/STOP еще раз.

Можно использовать кнопку REC START/STOP, расположенную на передней панели, вместо кнопки START/STOP, расположенной на задней.

## Recording a picture

If the ND1 or ND2 indicator flashes on the LCD screen or in the viewfinder

The ND filter is necessary. Set the ND FILTER selector to 1 or 2. However, if you change the position during recording, the brightness of the picture may change or audio noise may occur. This is not a malfunction. We recommend that you check the position of the ND FILTER selector before shooting. See "Using the ND filter" on page 65.

### Notes

- Fasten the grip strap firmly.
- Do not touch the microphone during recording.

### Note on the recording mode

Your camcorder records and plays back in SP (standard play) mode and in LP (long play) mode. Select SP or LP in the menu settings. In LP mode, you can record 1.5 times as long as in SP mode.

When you record a tape on your camcorder in LP mode, we recommend playing the tape on your camcorder.

### Note on the LOCK switch

When you slide the LOCK switch to the left, the LOCK switch can no longer be set to MEMORY accidentally. The LOCK switch is set to the right as a default setting. We recommend that you set the LOCK switch to the left when you record on a mini DV cassette.

### Note on the progressive mode

If you intend to use the images on your PC or play the images back as still images, we recommend that you set PROG. SCAN to ON in the menu settings before shooting (p. 50). The picture quality may improve in this mode, but if you shoot a moving subject, the image may shake when it is played back.

## Запись изображения

Когда на экране ЖКД или в видоискателе мигает индикатор ND1 или ND2

Требуется фильтр ND. Установите переключатель ND FILTER в положение 1 или 2. При изменении положения во время записи может измениться яркость изображения или появиться шум. Однако это не является неисправностью. Положение переключателя ND FILTER рекомендуется проверять перед съемкой. См. "Использование фильтра ND" на стр. 65.

### Примечания

- Надежно прикрепите ремешок для захвата.
- Во время записи не прикасайтесь к микрофону.

**Примечание по режиму записи**  
Ваша видеокамера выполняет запись и воспроизведение в режиме SP (стандартное воспроизведение) и в режиме LP (длгоиграющее воспроизведение). Выберите режим SP или LP в установках меню. В режиме LP Вы можете выполнять запись в 1,5 раза дольше по времени, чем в режиме SP.

Если лента была записана на этой видеокамере в режиме LP, ее рекомендуется воспроизводить на этой же видеокамере.

### Переключатель LOCK

Если передвинуть переключатель LOCK влево, переключатель POWER уже невозможно случайно установить в положение MEMORY. Переключатель LOCK на протяжении изготовления устанавливается в правое положение (установка по умолчанию). При записи на кассету мини DV рекомендуется установить переключатель LOCK в левое положение.

**Примечание по прогрессивному режиму**  
Если требуется использовать изображения на ПК или воспроизводить их как неподвижные изображения, рекомендуется установить PROG. SCAN в положение ON в установках меню перед началом съемки (стр. 50). В этом режиме может улучшиться качество изображения, однако, если снимался движущийся объект, при воспроизведении изображение может дрожать.

Recording - Basics / Запись - Основные положения

23

## Recording a picture

To enable smooth transition  
Transition between the last scene you recorded and the next scene is smooth as long as you do not eject the cassette even if you turn off your camcorder. When you use a tape with cassette memory, however, you can make the transition smooth even after ejecting the cassette if you use the end search function (p. 36).

However, check the following:

- When you change the battery pack, set the POWER switch to OFF (CHG).
- Do not mix recordings in the SP mode and ones in the LP mode on one tape.

### Note on tape transition

The playback picture may be distorted or the time code may not be written properly between scenes when:

- You change the recording mode (SP/LP).
- You record in LP mode.

If you leave your camcorder in standby mode for five minutes while the cassette is inserted

Your camcorder automatically turns off. This is to prevent tape wear and save battery power. To resume the standby mode, set the POWER switch to OFF (CHG), and to CAMERA again. When a cassette is not inserted, your camcorder does not turn off.

## Запись изображения

Для обеспечения плавного перехода  
Переход между последним записанным эпизодом и следующим эпизодом будет плавным, пока не будет извлечена кассета, даже при отключении видеокамеры.

Однако при использовании ленты с кассетной памятью можно создавать плавный переход, даже после извлечения кассеты, если используется функция "Поиск конца" (стр. 36).

Однако необходимо отметить следующее:

- При замене батарейного блока установите переключатель POWER в положение OFF (CHG).
- Не следует на одной ленте делать записи в режиме SP и LP.

### Примечание по переходу

Воспроизводимое изображение может быть искажено, или же код времени может быть записан неправильно между сценами, если:

- Изменился режим записи (SP/LP).
- Идет запись в режиме LP.


### Если видеокамера со вставленной кассетой оставляется в режиме ожидания на пять минут

Ваша видеокамера выключится автоматически. Это предотвращает износ ленты и расход заряда батареи. Для возврата в режим ожидания установите переключатель POWER в положение OFF (CHG), а затем снова в положение CAMERA. Если кассета не вставлена, видеокамера не отключится.

## Recording a picture

### Adjusting the LCD screen

The LCD panel is opened up to 90 degrees and it rotates about 90 degrees to the viewfinder side and about 180 degrees to the lens side. If you turn the LCD panel over so that it faces the other way in standby or recording mode, the ◉ indicator appears on the LCD screen and in the viewfinder (Mirror mode).

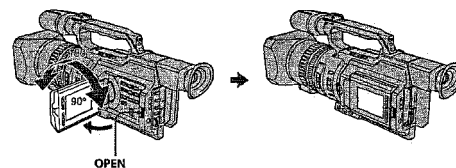

To close the LCD panel, set it vertically and swing it into the camcorder body until it clicks.

### Note

When opening the LCD panel, the viewfinder is automatically turned off, however, it is not turned off when the LCD panel is turned over or the camcorder is in mirror mode.

When you use the LCD screen outdoors in direct sunlight

The LCD screen may be difficult to see. If this happens, we recommend that you use the viewfinder.

When you adjust the angle of the LCD panel Make sure that the LCD panel is opened up to 90 degrees.

## Запись изображения

### Регулировка экрана ЖКД

Панель ЖКД раскрывается на 90 градусов и вращается приблизительно на 90 градусов в сторону видоискателя и приблизительно на 180 градусов в сторону объектива.

Если Вы повернете панель ЖКД так, что она будет направлена в другую сторону в режиме ожидания или записи, на экране ЖКД и в видоискателе появится индикатор ◉ (Зеркальный режим).

Чтобы закрыть панель ЖКД, установите ее вертикально, а затем присоедините ее к корпусу видеокамеры до щелчка.

### Примечание

При открытии панели ЖКД видоискатель автоматически отключается, однако он не отключается, если панель ЖКД перевернута или видеокамера находится в зеркальном режиме.

Если Вы используете экран ЖКД вне помещения под прямым солнечным светом  
Возможно, будет трудно разглядеть что-либо на экране ЖКД. В этом случае рекомендуется использовать видоискатель.

При регулировке угла панели ЖКД Убедитесь, что панель ЖКД открыта на 90 градусов.

Recording - Basics / Запись - Основные положения

24

25

## Recording a picture

When using both the LCD screen and the viewfinder during shooting  
The usable time of the battery pack when using both the LCD screen and the viewfinder will be shorter a little than when using the viewfinder only.

### Pictures in the mirror mode

The picture on the LCD screen is a mirror-image. However, the recording picture will be normal.


During recording in mirror mode  
ZERO SET MEMORY on the Remote Commander does not work.

### Indicators in the mirror mode

The STBY indicator appears as **●II** and REC as **●**. Some of the other indicators appear mirror-reversed and others are not displayed. However, if you close the LCD panel with the LCD screen turned over, indicators appear normally.

### Adjusting the brightness of the LCD screen

To adjust the brightness of the LCD screen, press LCD BRIGHT + or -. The battery life is longer when the LCD panel is closed. Use the viewfinder instead of the LCD screen to save the battery power.

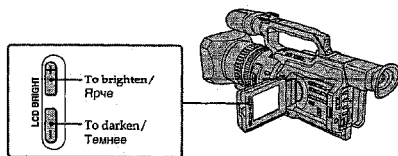

## Запись изображения

При использовании экрана ЖКД и видоискателя во время съемки  
Время работы батарейного блока при использовании экрана ЖКД и видоискателя будет немного меньше, чем при использовании одного видоискателя.

### Изображения в зеркальном режиме

Изображение на экране ЖКД будет отображаться зеркально. Однако записываемое изображение будет нормальным.

Во время записи в зеркальном режиме  
Кнопка ZERO SET MEMORY на пульте дистанционного управления не работает.

### Индикаторы в зеркальном режиме

Индикатор STBY появится в виде **●II**, а индикатор REC в виде **●**. Некоторые другие индикаторы появятся в зеркально отображенном виде, а некоторые из них не будут отображаться совсем. Однако, если закрыть панель ЖКД с перевернутым экраном ЖКД, индикаторы будут отображаться в обычном виде.

### Регулировка яркости экрана ЖКД

Для регулировки яркости экрана ЖКД нажмите LCD BRIGHT + или -. При открытой панели ЖКД продолжительность работы батареи дольше. Для экономии энергии пользуйтесь видоискателем, а не экраном ЖКД.

## Recording a picture


### On the LCD screen backlight

You can change the brightness of the backlight. Select LCD B.L. in the menu settings (p. 154).

Even if you do the LCD screen adjustment using the LCD BRIGHT +/- buttons, or using LCD B.L. and LCD COLOUR items in the menu settings  
The recorded picture will not be affected.

### Recording in a low position

You can record in a low position to get an interesting recording angle. Lift up the viewfinder or rotate the LCD panel with the screen facing up to record from a low position. In this case, it is useful to use the REC START/STOP button located on the front or the camcorder.

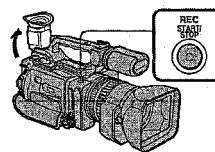

### After recording

- (1) Set the POWER switch to OFF (CHG).
- (2) Close the LCD panel.
- (3) Eject the cassette.
- (4) Remove the battery pack.

## Запись изображения

### Задняя подсветка экрана ЖКД

Вы можете изменить яркость задней подсветки. Выберите команду LCD B.L. в установках меню (стр. 154).

Даже в случае регулировки экрана ЖКД с помощью кнопок LCD BRIGHT +/- или параметров LCD B.L. и LCD COLOUR в установках меню  
Это не повлияет на записанное изображение.

### Запись из низкого положения

Можно выполнять запись из низкого положения, чтобы получить интересный ракурс. Поднимите видоискатель или поверните панель ЖКД вверх для записи из низкого положения. В этом случае удобно использовать кнопку REC START/STOP, расположенную на передней панели видеокамеры.


Recording - Basic / Запись - Основные положения

## Recording a picture

### Adjusting the viewfinder

If you record pictures with the LCD panel closed, check the picture with the viewfinder. Adjust the viewfinder lens to your eyesight so that the indicators in the viewfinder come into sharp focus.

Lift up the viewfinder and move the viewfinder adjustment lever.

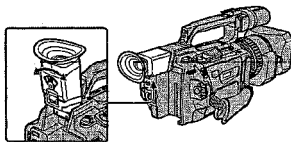


To adjust the brightness of the viewfinder screen, use the VF B.L. item in the menu settings (p. 154).

Even if you adjust the viewfinder screen backlight  
The recorded picture will not be affected.

### When the shooting conditions are too bright

Use the supplied large eyecup. Fit it onto the camcorder by stretching the corners a little. You can attach it with the large part of it located on both left and right.



## Запись изображения

### Регулировка видоискателя

Если Вы будете записывать изображения при закрытой панели ЖКД, контролируйте изображение с помощью видоискателя. Отрегулируйте объектив видоискателя в соответствии со своим зрением, чтобы индикаторы в видоискателе были четко сфокусированы.

Поднимите видоискатель и рычаг регулировки видоискателя.

Для регулировки яркости в видоискателе с помощью параметра VF B.L. в установках меню (стр. 154).

Если Вы регулируете заднюю подсветку видоискателя  
Это не повлияет на записанное изображение.


При слишком ярком освещении во время съемки  
Используйте прилагаемый большой окуляр. Наденьте его на камеру, слегка растянув за углы. Окуляр можно подосединить таким образом, чтобы его широкая часть располагалась как справа, так и слева.

## Recording a picture

### Using the zoom feature

#### To zoom using the zoom lever

Press the power zoom lever a little for a slower zoom. Press it deeper for a faster zoom. Using the zoom function sparingly results in better-looking recordings.  
"T" side: for telephoto (subject appears closer)  
"W" side: for wide-angle (subject appears farther away)

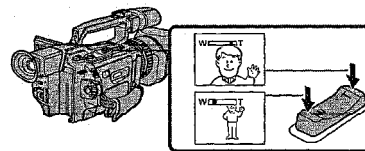

#### When you shoot close to a subject

If you cannot get a sharp focus, press the "W" side of the power zoom lever until the focus is sharp. You can shoot a subject that is at least about 80 cm (about 2 feet 5/8 inch) away from the lens surface in the telephoto position, or about 1 cm (about 1/2 inch) away in the wide-angle position.

## Запись изображения

### Использование функции трансфокации

Для трансфокации с помощью рычага трансфокатора  
Слегка нажмите на рычаг привода трансфокатора для медленной трансфокации. Нажмите на него сильнее для ускоренной трансфокации. Умеренное использование функции трансфокации обеспечивает наилучшие результаты.  
Сторона "T": для телефото (объект приближается)  
Сторона "W": для положения "широкоугольный" (объект удаляется)

#### При съемке объекта с близкого положения


Если Вы не можете получить четкую фокусировку, нажмите на сторону "W" рычага привода трансфокатора до получения четкой фокусировки. В положении "телефото" можно выполнять съемку объекта, который находится на расстоянии не менее 80 см от объектива или около 1 см в положении "широкоугольный".

Recording - Basic / Запись - Основные положения

## Recording a picture

### To zoom using the zoom ring

Using the zoom ring, you can control the zoom by your desired speed and you can make fine adjustments. During recording, turn the zoom ring to the desired speed.

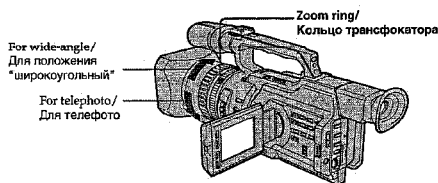

### Note

If you turn the zoom ring quickly, the zoom may not respond to the zoom ring. Rotate the zoom ring with appropriate speed.

### Using the digital zoom - Zoom greater than 12x

Zoom greater than 12x is performed digitally, if you set D ZOOM to 24x or 48x in the menu settings. The digital zoom function is set to OFF as a default setting (p. 154). If you use the digital zoom function, the picture quality deteriorates.

The right-ended portion of the bar shows the digital zooming zone. The digital zooming zone appears when you set D ZOOM to 24x or 48x. Правая сторона полосы на экране показывает зону цифровой трансфокации. Зона цифровой трансфокации появляется, когда в параметре D ZOOM устанавливается значение 24x или 48x.

## Запись изображения

### Для трансфокации с помощью кольца трансфокатора


С помощью кольца трансфокатора можно задавать требуемую скорость трансфокации и осуществлять ее точную регулировку. Во время записи поверните кольцо трансфокатора до получения нужной скорости.

### Примечание

При быстром повороте кольца трансфокатора, скорость трансфокации может не меняться. Вращайте кольцо трансфокатора с соответствующей скоростью.

### Использование функции цифровой трансфокации - трансфокации более 12x

Трансфокация более 12x выполняется цифровым методом при установке для параметра D ZOOM значения 24x или 48x в установках меню. Функция цифровой трансфокации на предприятии-изготовителе устанавливается в положение OFF (выкл), являющееся установкой по умолчанию (стр. 154). При использовании функции цифровой трансфокации ухудшается качество изображения.




## Recording a picture

### You cannot use the digital zoom:

- When you set PROG. SCAN to ON in the menu settings (p. 154).
- When the POWER switch is set to MEMORY.

### Indicators displayed during recording

The indicators are not recorded on the tapes.

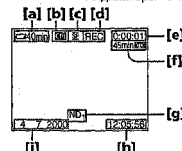

### [a] Remaining battery time indicator

This appears after you turn on the power and wait for a while.

### [b] Cassette memory indicator

This appears when using a tape with cassette memory.

### [c] Recording mode indicator

### [d] STBY/REC indicator

### [e] Time code indicator/Tape counter

### [f] Remaining tape indicator

This appears after you insert a cassette.

### [g] ND filter indicator

This flashes when the ND FILTER selector should be set. After you have set the ND FILTER selector, the ND FILTER position selected is indicated. (When the ND OFF position is selected, the indication disappears.)

### [h] Time indicator

The time is displayed about five seconds after the POWER switch is set to CAMERA or MEMORY.

### [i] Date indicator

The date is displayed about five seconds after the POWER switch is set to CAMERA or MEMORY.

## Запись изображения

### Цифровая трансфокация не будет работать:

- Если параметр PROG. SCAN установлен в положение ON в установках меню (стр. 154).
- Если переключатель POWER установлен в положение MEMORY.

### Индикаторы, отображаемые во время записи

Индикаторы не записываются на кассеты.

### [a] Индикатор оставшегося заряда батарейного блока

Этот индикатор появляется после включения питания по прошествии некоторого времени.

### [b] Индикатор кассетной памяти

Этот индикатор появляется при использовании кассетной памяти.

### [c] Индикатор режима записи

### [d] Индикатор STBY/REC

### [e] Индикатор кода времени/Счетчик ленты

### [f] Индикатор оставшейся ленты

### [g] Индикатор фильтра ND

Он мигает, когда необходимо установить переключатель ND FILTER. После установки переключателя ND FILTER в положение ND FILTER отображается соответствующая индикация. (При установке ND OFF индикация исчезает.)

### [h] Индикатор времени

После установки переключателя POWER в положение CAMERA или MEMORY в течение пяти секунд отображается индикация времени.

### [i] Индикатор даты

После установки переключателя POWER в положение CAMERA или MEMORY в течение пяти секунд отображается индикация даты.

## Recording a picture

### Time code

The time code indicates the recording or playback time, "00:00:00" (hours : minutes : seconds) in CAMERA mode and "0:00:00:00" (hours : minutes : seconds : frames) in VCR mode. You cannot rewrite only the time code.

### Remaining tape indicator

The indicator may not be displayed accurately depending on the tape.

### Note on recording date/time

Recording date/time is not displayed during shooting, however, it is automatically recorded on the tape. You can check the recording date/time during playback by pressing DATA CODE.


### Shooting backlight subjects (BACK LIGHT)

When you shoot a subject with the light source behind the subject or a subject with a light background, use the backlight function.

Press BACK LIGHT in standby, recording, or memory mode.

The [B] indicator appears on the LCD screen or in the viewfinder.

To cancel, press BACK LIGHT again.

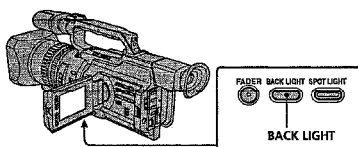

## Запись изображения

### Код времени

Код времени указывает время записи или воспроизведения, "00:00:00" (часы : минуты : секунды) в режиме CAMERA и "0:00:00:00" (часы : минуты : секунды : кадры) в режиме VCR. Вы не можете перезаписать только код времени.

Индикатор оставшейся ленты. Показания индикатора могут быть неточными в зависимости от ленты.

### Примечания по дате/времени записи

Дата/время записи не отображаются во время съемки, однако они автоматически записываются на ленту. Датум/время записи можно проверить в режиме воспроизведения, нажав кнопку DATA CODE.

### Съемка объектов с задней подсветкой (BACK LIGHT)

Если Вы выполняете съемку объекта с источником света позади него или же объекта со светлым фоном, используйте функцию задней подсветки.

В режиме ожидания, записи или памяти нажмите кнопку BACK LIGHT.

Индикатор [B] появится на экране ЖКД или в видоискателе.

Для отмены нажмите кнопку BACK LIGHT еще раз.

## Recording a picture

### If you press one of the following buttons when using the backlight function

The backlight function will be cancelled.

### - SPOT LIGHT

### - EXPOSURE

### When you manually adjust the exposure

You cannot use the backlight function.


### Using the spot light function

This function prevents people's faces, for example, from appearing excessively white when shooting subjects lit by strong light, such as in the theater.

Press SPOT LIGHT in standby, recording, or memory mode.

The [S] indicator appears on the LCD screen or in the viewfinder.

To cancel, press SPOT LIGHT again.

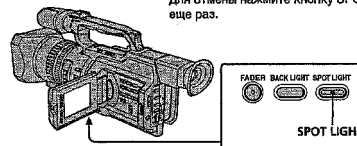

### If you press one of the following buttons when using the spot light function

The spot light function will be cancelled.

### - BACK LIGHT

### - EXPOSURE

### When you manually adjust the exposure

You cannot use the spot light function.

You cannot use the spot light mode while in the following settings:

- Shutter speed value of 1/25 or smaller
- Old movie
- Low lux mode of the PROGRAM AE function

## Запись изображения

### Если нажать одну из следующих кнопок при использовании функции задней подсветки

Функция задней подсветки будет отключена.

### - SPOT LIGHT

### - EXPOSURE

### При ручной регулировке экспозиции

Нельзя использовать функцию задней подсветки.

### Использование режима прожекторного освещения

Данная функция позволяет выполнять съемку таким образом, чтобы лица людей не выглядели слишком бледными, например, при съемке объектов в театре, где часто применяется яркий освещение.

В режиме ожидания, записи или памяти нажмите кнопку SPOT LIGHT.

На экране ЖКД или в видоискателе появится индикатор [S].

Для отмены нажмите кнопку SPOT LIGHT еще раз.

Для отмены нажмите кнопку SPOT LIGHT еще раз.

Для отмены нажмите кнопку SPOT LIGHT еще раз.

Для отмены нажмите кнопку SPOT LIGHT еще раз.

Для отмены нажмите кнопку SPOT LIGHT еще раз.

Для отмены нажмите кнопку SPOT LIGHT еще раз.

Для отмены нажмите кнопку SPOT LIGHT еще раз.

Для отмены нажмите кнопку SPOT LIGHT еще раз.

Для отмены нажмите кнопку SPOT LIGHT еще раз.

Для отмены нажмите кнопку SPOT LIGHT еще раз.

Для отмены нажмите кнопку SPOT LIGHT еще раз.

Для отмены нажмите кнопку SPOT LIGHT еще раз.

Для отмены нажмите кнопку SPOT LIGHT еще раз.

Для отмены нажмите кнопку SPOT LIGHT еще раз.

Для отмены нажмите кнопку SPOT LIGHT еще раз.

Для отмены нажмите кнопку SPOT LIGHT еще раз.

Для отмены нажмите кнопку SPOT LIGHT еще раз.

Для отмены нажмите кнопку SPOT LIGHT еще раз.

Для отмены нажмите кнопку SPOT LIGHT еще раз.

Для отмены нажмите кнопку SPOT LIGHT еще раз.

Для отмены нажмите кнопку SPOT LIGHT еще раз.

Для отмены нажмите кнопку SPOT LIGHT еще раз.

Для отмены нажмите кнопку SPOT LIGHT еще раз.

Для отмены нажмите кнопку SPOT LIGHT еще раз.

Для отмены нажмите кнопку SPOT LIGHT еще раз.

Для отмены нажмите кнопку SPOT LIGHT еще раз.

Для отмены нажмите кнопку SPOT LIGHT еще раз.

Для отмены нажмите кнопку SPOT LIGHT еще раз.

Для отмены нажмите кнопку SPOT LIGHT еще раз.

Для отмены нажмите кнопку SPOT LIGHT еще раз.

Для отмены нажмите кнопку SPOT LIGHT еще раз.

Для отмены нажмите кнопку SPOT LIGHT еще раз.


Для отмены нажмите кнопку SPOT LIGHT еще раз.

## Recording a picture

### Self-timer recording

You can make a recording with the self-timer. This recording is useful when you want to record yourself. You can also use the Remote Commander.

- (1) Press  $\odot$  (self-timer) in standby mode. The  $\odot$  (self-timer) indicator appears on the LCD screen or in the viewfinder.
- (2) Press START/STOP. Self-timer starts counting down from 10 seconds with a beep sound. In the last two seconds of the countdown, the beep sound gets faster, then recording starts automatically.

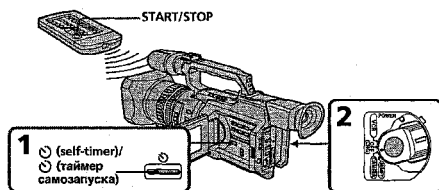

### To stop the self-timer before recording

Press START/STOP again. Use the Remote Commander for convenience.

### To record still pictures on tapes using the self-timer

Press PHOTO in step 2 (p. 48).

## Запись изображения

### Запись по таймеру самозапуска

Вы можете выполнить запись по таймеру самозапуска. Эта запись может пригодиться в том случае, когда необходимо записать себя. Для этого можно также использовать пульт дистанционного управления.

- (1) В режиме ожидания нажмите кнопку  $\odot$  (таймер самозапуска). На экране ЖКД или в видоискателе появится индикатор  $\odot$  (таймер самозапуска).
- (2) Нажмите кнопку START/STOP. Таймер самозапуска начнет обратный отсчет с 10 секунд с зуммерным сигналом. В последние две секунды обратного отсчета зуммерный сигнал будет звучать чаще, а затем автоматически начнется запись.

Для остановки таймера самозапуска перед записью нажмите кнопку START/STOP еще раз. Для удобства используйте пульт дистанционного управления.

Для записи неподвижных изображений на ленту с помощью таймера самозапуска нажмите кнопку PHOTO в пункте 2 (стр. 48).

## Recording a picture

### To record still pictures on a "Memory Stick" using the self-timer

Press  $\odot$  (self-timer), then press PHOTO in memory mode (p. 181).

### To cancel self-timer recording

Press  $\odot$  (self-timer) so that the  $\odot$  indicator disappears from the LCD or viewfinder screen while your camcorder is in standby mode.

#### Note

The self-timer recording is automatically cancelled when:  
 - Self-timer recording is finished.  
 - The POWER switch is set to OFF (CHG) or VCR.

## Запись изображения

Для записи неподвижных изображений на "Memory Stick" с помощью таймера самозапуска нажмите кнопку  $\odot$  (таймер самозапуска), затем нажмите PHOTO в режиме памяти (стр. 181).

### Для отмены записи по таймеру самозапуска

Нажмите кнопку  $\odot$  (таймер самозапуска) так, чтобы индикатор  $\odot$  исчез с экрана ЖКД или видоискателя, когда видеосъемка находится в режиме ожидания.

#### Примечание


Запись по таймеру самозапуска будет автоматически отменена, если:  
 - Окончена запись по таймеру самозапуска.  
 - Выключатель POWER установлен в положение OFF (CHG) или VCR.

Recording - Вайтс / Запись - Основные положения

34

## Checking the recording - END SEARCH / EDITSEARCH / Rec Review

You can use these buttons to check recorded pictures or shoot so that the transition between the last recorded scene and the next scene you will record is smooth.

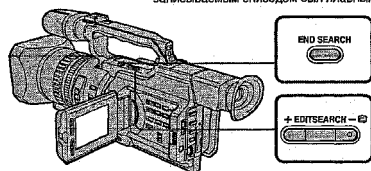

### Searching the end point of the recording - END SEARCH

You can easily go to the end of the last recorded portion.

Press END SEARCH in standby mode. The camcorder rewinds or fast-forwards the tape and the last five-second recorded picture is played back. After playback the camcorder turns to standby mode. You can monitor the sound from the speaker or headphones.

### Changing the next recording start point - EDITSEARCH

You can change the next recording start point in standby mode.

Hold down the +/- side of EDITSEARCH in standby mode. The recorded picture is played back.  
 + : to go forward  
 - : to go backward  
 Release EDITSEARCH to stop playback. If you press START/STOP, re-recording begins from the point you released EDITSEARCH. You cannot monitor the sound.

## Проверка записи - END SEARCH / EDITSEARCH / Просмотр записи

Вы можете использовать эти кнопки для проверки записанных изображений или съемки, чтобы переход между последним записанным эпизодом и следующим записываемым эпизодом был плавным.

### Поиск места окончания записи - END SEARCH

Можно легко пойти до конца записанной части ленты.

Нажмите кнопку END SEARCH в режиме ожидания. Видеосъемка выполнит ускоренную перемотку ленты вперед или назад и воспроизведет последний фрагмент записанного изображения продолжительностью пять секунд. После воспроизведения камера возвращается в режим ожидания. Вы можете контролировать звук через акустическую систему или головные телефоны.

### Изменение места начала следующей записи - EDITSEARCH

Можно изменить место начала следующей записи в режиме ожидания.

Держите нажатой сторону +/- кнопки EDITSEARCH в режиме ожидания. Записанное изображение воспроизводится.  
 + : для продвижения вперед  
 - : для продвижения назад  
 Отпустите кнопку EDITSEARCH для остановки воспроизведения. Если Вы нажмете кнопку START/STOP, начнется перезапись с того места, где была отпущена кнопка EDITSEARCH. Вы не можете контролировать звук.

## Checking the recording - END SEARCH / EDITSEARCH / Rec Review

### Checking the last recorded picture - Rec Review

You can check the last recorded portion.

Press the -@ side of EDITSEARCH momentarily in standby mode.

The last few-seconds of picture is played back and the camcorder returns to standby. You can monitor the sound from the speaker or headphones.

#### End search function

When you use a tape without cassette memory, the end search function does not work once you eject the cassette after you have recorded on the tape. If you use a tape with cassette memory, the end search function works even once you eject the cassette.  
 If there is a blank portion at the beginning or between the recorded portions, the end search function may not work correctly (p. 210).

## Проверка записи - END SEARCH / EDITSEARCH / Просмотр записи

### Проверка последнего записанного изображения - Просмотр записи

Можно проверить последнюю записанную часть.

В режиме ожидания ненадолго нажмите на сторону -@ кнопки EDITSEARCH в режиме ожидания.

Будут воспроизведены последние несколько секунд изображения и видеосъемка вернется в режим ожидания. Вы можете контролировать звук через акустическую систему или головные телефоны.

#### Функция поиска конца

Если используется лента без кассетной памяти, функция поиска конца не будет работать после извлечения кассеты, на которую была выполнена запись. Если используется лента с кассетной памятью, функция поиска конца будет работать даже после извлечения кассеты. Если в начале записанной части или между записанными частями существует незаписанный участок, функция поиска конца может работать неправильно (стр. 210).

Recording - Вайтс / Запись - Основные положения

36

35

37

## Playing back a tape

You can monitor the playback picture on the LCD screen. If you close the LCD panel, you can monitor the playback picture in the viewfinder. You can also control playback using the Remote Commander supplied with your camcorder.


- (1) Install the power source and insert the recorded tape.
- (2) Set the POWER switch to VCR while pressing the small green button. The video control buttons light up.
- (3) Slide OPEN in the direction of the ► mark to open the LCD panel.
- (4) Press ◀ to rewind the tape.
- (5) Press ► to start playback.
- (6) To adjust the volume, press either of the VOLUME +/- buttons.

**To stop playback**  
Press ■.

## Воспроизведение — Основные положения — Воспроизведение ленты

Можно просматривать воспроизводимое изображение на экране ЖКД. Если панель ЖКД закрыта, воспроизводимое изображение можно просматривать в видоискателе. Можно также контролировать воспроизведение с помощью пульта дистанционного управления, прилагаемого к видеокамере.

- (1) Установите источник питания и вставьте записанную ленту.
- (2) Установите переключатель POWER в положение VCR, нажав маленькую зеленую кнопку. Появится индикация кнопки управления видеовоспроизведением.
- (3) Переведите кнопку OPEN в направлении знака ►, чтобы открыть панель ЖКД.
- (4) Нажмите кнопку ◀ для перемотки ленты назад.
- (5) Нажмите кнопку ► для начала воспроизведения.
- (6) Для регулировки громкости нажимайте одну из кнопок VOLUME +/-.

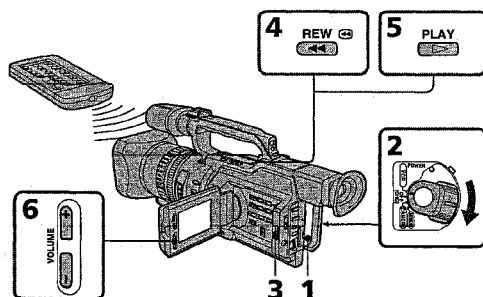


**Для остановки воспроизведения**  
Нажмите кнопку ■.

## Playing back a tape

### When monitoring on the LCD screen

You can turn the LCD panel over and move it back to the camcorder body with the LCD screen facing out.

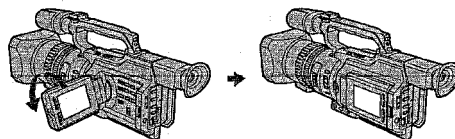

### When you close the LCD panel

You cannot monitor the sound from the speaker. However, when the LCD panel is turned over to view on the LCD screen, you can monitor the sound from the speaker.

### To control the display of the screen indicators

Press DISPLAY on the camcorder or on the Remote Commander supplied with your camcorder. The indicators appear on the LCD screen. To make the indicators disappear, press DISPLAY again.


## Воспроизведение ленты

Во время просмотра на экране ЖКД можно перевернуть панель управления и сложить ее с корпусом видеокамеры, так что экран ЖКД будет обращен наружу.

Если закрыть панель ЖКД нельзя будет прослушивать звук через громкоговоритель. Однако, если экран ЖКД обращен наружу, звук можно будет прослушивать через громкоговоритель.

### Для контроля отображения экранных индикаторов

Нажмите кнопку DISPLAY на видеокамере или на пульте дистанционного управления, прилагаемого к видеокамере. На экране ЖКД появятся индикаторы. Для того, чтобы индикаторы исчезли, нажмите еще раз кнопку DISPLAY.

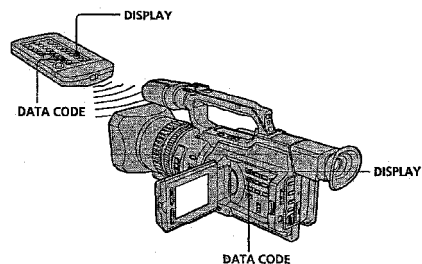

## Playing back a tape

### Using the data code function

Your camcorder automatically records not only images on the tape but also the recording data (date/time or various settings when recorded) (Data code).

Press DATA CODE on the camcorder or on the Remote Commander supplied with your camcorder in playback mode.

The display changes as follows:  
date/time → various settings (SteadyShot, white balance, gain, shutter speed, aperture value, exposure mode) → no indicator

Date/time/  
Дата/время



- [a] SteadyShot OFF indicator
- [b] Exposure mode / PROGRAM AE mode indicator
- [c] White balance indicator
- [d] Gain indicator
- [e] Shutter speed indicator
- [f] Aperture value

**To not display the various settings**  
Set DATA CODE to DATE in the menu settings (p. 154).  
The display changes as follows:  
date/time → no indicator

## Воспроизведение ленты


### Использование функции кода данных

Видеокамера автоматически записывает на ленту не только изображения, но и данные о записи (дату/время или различные установки при записи) (Код данных).

В режиме воспроизведения нажмите кнопку DATA CODE на видеокамере или на пульте дистанционного управления, прилагаемого к видеокамере.

Индикация будет изменяться следующим образом:  
дата/время → различные установки (устойчивая съемка, баланс белого, усиление, скорость затвора, величина диафрагмы, режим экспозиции) → без индикации

Various settings/  
Разные установки



- [a] Индикатор выключенной устойчивой съемки
- [b] Индикатор режима экспозиции/режима PROGRAM AE
- [c] Индикатор баланса белого
- [d] Индикатор усиления
- [e] Индикатор скорости затвора
- [f] Величина диафрагмы

**Для отмены отображения разных установок**  
Установите параметр DATA CODE в положение DATE в установках меню (стр. 154).  
Индикация будет изменяться следующим образом:  
дата/время → без индикации

## Playing back a tape

### Recording data

Recording data is your camcorder's information when you have recorded something. In CAMERA mode, the recording data will not be displayed.

- When you use the data code function, "—" (date) or "—" (time) appears if:  
— A blank portion of the tape is being played back.
- The tape is unreadable due to tape damage or noise.
- The tape was recorded by the camcorder without the date and time set.

### Data code

When you connect your camcorder to the TV, the data code also appears on the TV screen (p. 44).

### Note on the date/time indicator

Recording date/time is not displayed during shooting, however, it is automatically recorded on the tape. You can check the recording date/time during playback by pressing DATA CODE.

If the exposure adjustment is set to minimum "CLOSE" is displayed at the location of the aperture value.

## Воспроизведение ленты

### Записанные данные

Записанные данные содержат информацию о записи, выполненной видеокамерой. В режиме CAMERA данные отображаться не будут.

- При использовании функции кода данных появятся символы "—" (дата) или "—" (время), если:  
— Воспроизводится незаписанный участок ленты.
- Лента не поддается считыванию из-за повреждений или помех.
- Запись на ленту была выполнена видеокамерой без установки даты и времени.

### Код данных

Если видеокамеру подсоединить к телевизору, код данных также будет отображаться на экране телевизора (стр. 44).

### Индикатор даты/времени

Дата/время записи не отображаются во время съемки, однако они автоматически записываются на ленту. Дата/время записи можно проверить в режиме воспроизведения, нажав кнопку DATA CODE.

Если установлено минимальное значение экспокоррекции. Вместо значения диафрагмы отображается надпись "CLOSE".

## Playing back a tape

### Various playback modes

To operate video control buttons, set the POWER switch to VCR.

### To view a still picture (playback pause)

Press **II** during playback. To resume normal playback, press **▶** or **II**.

### To advance the tape

Press **▶▶** in stop mode. To resume normal playback, press **▶**.

### To rewind the tape

Press **◀◀** in stop mode. To resume normal playback, press **▶**.

### To change the playback direction

Press **<** on the Remote Commander during playback to reverse the playback direction. To resume normal playback, press **▶**.

### To locate a scene monitoring the picture (picture search)

Keep pressing **◀◀** or **▶▶** during playback. To resume normal playback, release the button.

### To monitor the picture at high-speed while advancing or rewinding the tape (skip scan)

Keep pressing **◀◀** while rewinding or **▶▶** while advancing the tape. To resume rewinding or advancing, release the button.

### To view the picture at slow speed (slow playback)

Press **▶** during playback. For slow playback in the reverse direction, press **<** on the Remote Commander, then press **▶**. To resume normal playback, press **▶**.

## Воспроизведение ленты

### Различные режимы воспроизведения

Для использования кнопок управления видеосигналом установите переключатель POWER в положение VCR.

### Для просмотра неподвижного изображения (пауза воспроизведения)

Нажмите во время воспроизведения кнопку **II**. Для возобновления обычного воспроизведения нажмите кнопку **▶** или **II**.

### Для ускоренной перемотки ленты вперед

Нажмите в режиме остановки кнопку **▶▶**. Для возобновления обычного воспроизведения нажмите кнопку **▶**.

### Для ускоренной перемотки ленты назад

Нажмите в режиме остановки кнопку **◀◀**. Для возобновления обычного воспроизведения нажмите кнопку **▶**.

### Для изменения направления воспроизведения

Нажмите кнопку **<** на пульте дистанционного управления во время воспроизведения для изменения направления воспроизведения. Для возобновления обычного воспроизведения нажмите кнопку **▶**.

### Для поиска эпизода во время просмотра изображения (поиск изображения)

Нажмите и не отпускайте кнопку **◀◀** или **▶▶** во время воспроизведения. Для перехода к обычной воспроизведению отпустите кнопку.

### Для просмотра изображения на высокой скорости во время ускоренной перемотки ленты вперед или назад (поиск методом прогона)

Нажмите и не отпускайте кнопку **◀◀** во время ускоренной перемотки ленты вперед или кнопку **▶▶** во время ускоренной перемотки ленты назад. Для возобновления обычной перемотки ленты вперед или назад отпустите кнопку.

### Для просмотра изображения на замедленной скорости (замедленное воспроизведение)

Нажмите во время воспроизведения кнопку **▶**. Для замедленного воспроизведения в обратном направлении нажмите кнопку **<** на пульте дистанционного управления, а затем нажмите кнопку **▶**. Для возобновления обычного воспроизведения нажмите кнопку **▶**.

## Playing back a tape

### To view the picture at double speed

Press **x2** on the Remote Commander during playback. For double speed playback in the reverse direction, press **<**, then press **x2** on the Remote Commander. To resume normal playback, press **▶**.

### To view the picture frame-by-frame

Press **III** on the Remote Commander in playback pause mode. For frame-by-frame playback in the reverse direction, press **III**. To resume normal playback, press **▶**.

### To search the last scene recorded (END SEARCH)

Press **END SEARCH** in stop mode. The last five seconds of the recorded portion plays back and stops.

### In various playback modes

- Sound is muted.
- The previous picture may remain as a mosaic image during playback.

### When the playback pause mode lasts for five minutes

Your camcorder automatically enters the stop mode. To resume playback, press **▶**.

### Slow playback

Slow playback can be performed smoothly on your camcorder, however, this function does not work for a signal output through the **1 DV IN/OUT** jack.

When you play back a tape in reverse horizontal noise may appear at the center, or the top and bottom of the screen. This is not a malfunction.

## Воспроизведение ленты

### Для просмотра изображения на удвоенной скорости

Нажмите во время воспроизведения кнопку **x2** на пульте дистанционного управления. Для воспроизведения на удвоенной скорости в обратном направлении нажмите кнопку **<**, а затем кнопку **x2** на пульте дистанционного управления. Для возобновления обычного воспроизведения нажмите кнопку **▶**.

### Для покадрового просмотра изображения

Нажмите кнопку **III** на пульте дистанционного управления в режиме паузы воспроизведения. Для покадрового воспроизведения в обратном направлении нажмите кнопку **III**. Для возобновления обычного воспроизведения нажмите кнопку **▶**.

### Для поиска последнего записанного эпизода (END SEARCH)

В режиме остановки нажмите кнопку **END SEARCH**. Будут воспроизведены последние пять секунд записанного участка на ленте, и воспроизведение остановится.

### В различных режимах воспроизведения

- Звук будет приглушен.
- Во время воспроизведения предыдущее изображение может остаться мозаичным.

Если режим паузы при воспроизведении длится пять минут

Видеокамера автоматически переключится в режим остановки. Для возобновления воспроизведения нажмите кнопку **▶**.

### Замедленное воспроизведение

Замедленное воспроизведение выполняется на видеокамере плавню, без помех; однако эта функция не работает при выходном сигнале через гнездо **1 DV IN/OUT**.

При воспроизведении ленты в обратном направлении


В центре или сверху и снизу экрана могут появляться горизонтальные помехи. Однако это не является неисправностью.

42

## Viewing the recording on TV

Connect your camcorder to your TV or VCR with the A/V connecting cable supplied with your camcorder to watch the playback picture on the TV screen. You can operate the video control buttons in the same way as when you monitor playback pictures on the LCD screen. When monitoring the playback picture on the TV screen, we recommend that you power your camcorder from the mains using the AC power adaptor (p. 18). Refer to the operating instructions of your TV or VCR.

Open the jack cover. Connect your camcorder to the TV using the A/V connecting cable supplied with your camcorder. Then, set the TV/VCR selector on the TV to VCR.

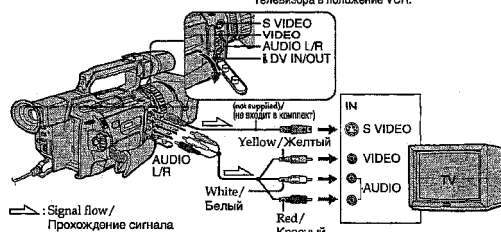

### If your TV is connected to a VCR

Connect your camcorder to the line input on the VCR by using the A/V connecting cable supplied with your camcorder. Set the input selector on the VCR to LINE.


### If your TV or VCR is a monaural type

Connect the yellow plug of the A/V connecting cable to the video input jack and only the white plug to the audio input jack on the VCR or the TV. The red plugs are not used.

## Просмотр записи на экране телевизора

Для просмотра воспроизводимого изображения на экране телевизора подсоедините видеокамеру к телевизору или видеомонитору с помощью соединительного кабеля аудио/видео, который входит в комплект поставки видеокамеры. Кнопками управления изображением можно оперировать таким же образом, как и при управлении воспроизводимым изображением на экране ЖКД. При просмотре изображения на экране телевизора рекомендуется подключить видеокамеру к электрической сети с помощью сетевого адаптера переменного тока (стр. 18). См. также инструкции по эксплуатации телевизора или видеомонитора.

Откройте крышку гнезда. Подключите видеокамеру к телевизору с помощью соединительного кабеля аудио/видео, который входит в комплект поставки видеокамеры. Затем установите переключатель TV/VCR телевизора в положение VCR.

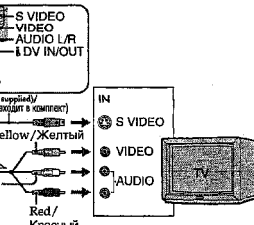

### Если телевизор подключен к видеомонитору

Подсоедините видеокамеру к входному гнезду видеомонитора с помощью соединительного кабеля аудио/видео, который прилагается к видеокамере. Установите селектор входного сигнала на видеомониторе в положение LINE.


### Если телевизор или видеомонитор монофонического типа

Подсоедините желтый штекер соединительного кабеля аудио/видео к входному гнезду видеосигнала и только белый штекер - к входному гнезду аудиосигнала на видеомониторе или телевизоре. Красные штекеры не используются.

## Viewing the recording on TV

### If your TV/VCR has a 21-pin connector (EUROCONNECTOR)

Use the 21-pin adaptor supplied with your camcorder.



### If your TV or VCR has an S video jack

Connect using an S video cable (not supplied) to obtain high-quality pictures. With this connection, you do not need to connect the yellow (video) plug of the A/V connecting cable. Connect the S video cable (not supplied) to the S video jacks on both your camcorder and the TV or the VCR. This connection produces higher quality DV format pictures.

### When you adjust the TV screen

If you monitor the shooting picture, not the playback picture, set COLOUR BAR to ON in the menu settings (p. 154). The colour bar is displayed on the TV screen.

## Просмотр записи на экране телевизора

### Если в телевизоре/видеомониторе имеется 21-штырьковый разъем (EUROCONNECTOR)

Используйте 21-штырьковый адаптер, прилагаемый к видеокамере.

### Если в телевизоре или видеомониторе имеется видеогнездо S

Выполните соединение с помощью видеосигнала S (не входит в комплект) для получения высококачественного изображения. При таком соединении не нужно подключать желтый (видео) штекер соединительного кабеля аудио/видео. Подсоедините видеосигнал S (не входит в комплект) к видеогнездам S на видеокамере и телевизоре или видеомониторе. Это соединение позволяет получить высококачественное изображение формата DV.

### Настройка изображения на экране телевизора

Для контроля качества изображения при съемке, а не воспроизведении, в установках меню для параметра COLOUR BAR установите значение ON (стр. 154). На экране телевизора будет отображаться цветовая полоса.

44

43

Playback - Basic / Воспроизведение - Основные положения

45



## — Advanced Recording Operations — Recording a still image on a tape — Tape Photo recording

You can record still images on mini DV tapes with all the pixels in the progressive mode. See page 50 for details. This mode is useful when you print images using a video printer (not supplied).

Besides the operation described here, your camcorder can record still images on a "Memory Stick" (p. 177).

- (1) In standby mode, keep pressing PHOTO lightly until a picture freezes. The CAPTURE indicator appears. Recording does not start yet.  
To change the image, release PHOTO, select an image again, and then press and hold PHOTO lightly.
- (2) Press PHOTO deeper.

The still image on the LCD screen or in the viewfinder is recorded for about seven seconds. The sound during those seven seconds is also recorded.

The still image is displayed on the LCD screen or in the viewfinder until recording is completed.

## — Усовершенствованные операции съемки — Запись неподвижного изображения на ленту — Запись фотографий на ленту

На кассеты мини DV можно записывать неподвижные изображения в прогрессивном режиме. Подробные сведения приведены на стр. 50. Данный режим полезен, если нужно распечатать изображения с помощью видеопринера (не входит в комплект).


Кроме вышеописанной операции, видеокамера может выполнять запись неподвижных изображений на "Memory Stick" (стр. 177).

- (1) В режиме ожидания держите слегка нажатой кнопку PHOTO до тех пор, пока не появится неподвижное изображение. Появится индикатор CAPTURE. Запись еще не начинается.  
Для изменения изображения отпустите кнопку PHOTO, выберите изображение снова, а затем нажмите и держите слегка нажатой кнопку PHOTO.
- (2) Нажмите кнопку PHOTO сильнее.

Для изменения изображения отпустите кнопку PHOTO, выберите изображение снова, а затем нажмите и держите слегка нажатой кнопку PHOTO.

Неподвижное изображение будет записываться около семи секунд. В течение этих семи секунд будет записываться и звук.

Неподвижное изображение отображается на экране ЖКД или в видискателе до тех пор, пока не закончится запись.

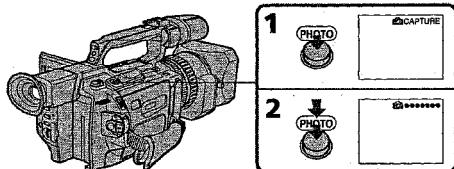

The number of still images recordable on a mini DV cassette  
You can record about 510 images in SP mode and about 765 images in LP mode on a 60-minute cassette.

Максимальное количество неподвижных изображений, которое может быть записано на кассету мини DV.  
На 60-минутной кассете можно записать примерно 510 изображений в режиме SP и около 765 изображений в режиме LP.

46


## Recording a still image on a tape — Tape Photo recording

### Self-timer tape photo recording

You can make a tape photo recording with the self-timer. This mode is useful when you want to record yourself. You can also use the Remote Commander.

- (1) Press (self-timer) in standby mode. The (self-timer) indicator appears on the LCD screen or in the viewfinder.
- (2) Press PHOTO deeply.

Self-timer starts counting down from 10 with a beep sound. In the last two seconds of the countdown, the beep sound gets faster, then recording starts automatically.

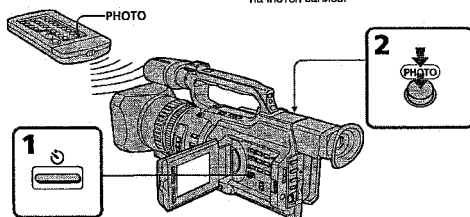

To cancel self-timer recording  
Press (self-timer) so that the (self-timer) indicator disappears from the LCD or viewfinder screen while your camcorder is in standby mode. You cannot cancel the self-timer recording using the Remote Commander.

**Note**  
The self-timer recording mode is automatically cancelled when:  
— Self-timer tape photo recording is finished.  
— The POWER switch is set to OFF (CHG) or VCR.

## Запись неподвижного изображения на ленту — Запись фотографий на ленту

### Фотосъемка на ленту по таймеру самозапуска

Можно выполнять фотосъемку на ленту по таймеру самозапуска. Этот режим полезен в том случае, если Вы хотите снять себя. Для этого можно также использовать пульт дистанционного управления.

- (1) В режиме ожидания нажмите кнопку (таймер самозапуска). На экране ЖКД или в видискателе появится индикатор (таймер самозапуска).
- (2) Нажмите кнопку PHOTO сильнее.

Таймер самозапуска начнет обратный отсчет с 10 с зуммерным сигналом. В последние две секунды обратного отсчета зуммерный сигнал будет звучать чаще, а затем автоматически начнется запись.

Для отмены записи по таймеру самозапуска  
Нажмите кнопку (таймер самозапуска) так, чтобы индикатор исчез с экрана ЖКД или видискателя, когда видеокамера находится в режиме ожидания. Запись по таймеру самозапуска невозможно отменить с помощью пульта дистанционного управления.

**Примечание**  
Режим записи по таймеру самозапуска будет автоматически отменен, если:  
— Фотосъемка на ленту по таймеру самозапуска закончена.  
— Выключатель POWER установлен в положение OFF (CHG) или VCR.

## Recording a still image on a tape — Tape Photo recording

### Notes

- During tape photo recording, you cannot change the mode or setting.
- The PHOTO button does not work:  
— While the fader function is set or in use.  
— While the digital effect function is set or in use.
- Do not shake the camcorder during tape photo recording. The recorded image may be blurred.

### To do tape photo recording using the Remote Commander

Press PHOTO on the Remote Commander. Your camcorder immediately records an image on the LCD screen or in the viewfinder.

### When you do tape photo recording during normal CAMERA recording

You cannot check an image on the LCD screen or in the viewfinder by pressing PHOTO lightly. Press PHOTO deeper. The still image is then recorded for about seven seconds and your camcorder returns to standby mode.

## Запись неподвижного изображения на ленту — Запись фотографий на ленту

### Примечания

- Во время фотосъемки на ленту невозможно изменить режим или установку.
- Кнопка PHOTO не работает:  
— если установлена или используется функция фейдера  
— если установлена или используется функция цифровых эффектов.
- Не делайте резких движений видеокамерой во время фотосъемки на ленту. Записываемое изображение может быть нечетким.

### Для выполнения фотосъемки на ленту с помощью пульта дистанционного управления

Нажмите кнопку PHOTO на пульте дистанционного управления. Видеокамера сразу же выполнит запись изображения, отображаемого на экране ЖКД или в видискателе.

### Для использования функции фотосъемки на ленту во время обычной записи CAMERA

Изображение на экране ЖКД или в видискателе невозможно проверить с помощью легкого нажатия кнопки PHOTO. Нажмите кнопку PHOTO сильнее. Неподвижное изображение будет записываться около семи секунд, а затем видеокамера опять переключится в режим ожидания.

Advanced Recording Operations / Усовершенствованные операции съемки

47

## Recording a still image on a tape — Tape Photo recording

### Printing the still image


You can print a still image by using a video printer (not supplied). Connect with the video printer using the A/V connecting cable supplied with your camcorder.  
Connect the yellow plugs of the cable to the video input of the video printer and the VIDEO jack on your camcorder. Refer to the operating instructions of the video printer as well.

## Запись неподвижного изображения на ленту — Запись фотографий на ленту

### Печать неподвижного изображения

Неподвижное изображение можно распечатать с помощью видеопринера (не входит в комплект). Подключите видеопринер с помощью соединительного кабеля аудио/видео, поставляемого с видеокамерой.

Подсоедините желтые штекеры соединительного кабеля аудио/видео к входному гнезду видеосигнала видеопринера и разъему VIDEO видеокамеры. См. также инструкцию по эксплуатации видеопринера.

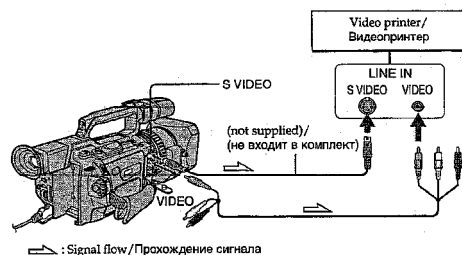

If the video printer is equipped with an S video input  
Use an S video connecting cable (not supplied). Connect it to the S VIDEO jack on your camcorder and the S video input of the video printer.

Если в видеопритере имеется входное видеогнездо S  
Используйте соединительный видеокابل S (не входит в комплект). Подсоедините его к гнезду S VIDEO видеокамеры и ко входному видеогнезду S на видеопритере.

Advanced Recording Operations / Усовершенствованные операции съемки

48

49

## Shooting with all the pixels – PROG. SCAN

When you handle the digital images on your PC, set PROG. SCAN to ON before shooting. You can record the images on a mini DV tape with higher resolution.

Since the image taken in progressive mode would be stabilized even in pause mode, it is especially useful when you analyze high-speed actions such as sports scenes.




- (1) Press MENU to display the menu in standby mode.
- (2) Turn the SEL/PUSH EXEC dial to select **PROG. SCAN**, then press the dial.
- (3) Turn the SEL/PUSH EXEC dial to select **PROG. SCAN**, then press the dial.
- (4) Turn the SEL/PUSH EXEC dial to select **ON**, then press the dial.
- (5) Press MENU to erase the menu display. The PROG. SCAN indicator lights up.

## Съемка с использованием всех пикселей – PROG. SCAN

Если цифровые изображения обрабатываются на ПК, перед съемкой установите для режима PROG. SCAN значение ON. На касетку мини DV можно записывать изображения с более высоким разрешением.

Изображения, снятые в прогрессивном режиме, будут стабилизированы даже в режиме паузы, что особенно полезно при анализе быстрых процессов, например, спортивных состязаний.

- (1) Нажмите кнопку MENU для отображения меню в режиме ожидания.
- (2) Поверните диск SEL/PUSH EXEC для выбора установки **PROG. SCAN**, а затем нажмите на диск.
- (3) Поверните диск SEL/PUSH EXEC для выбора установки PROG. SCAN, а затем нажмите на диск.
- (4) Поверните диск SEL/PUSH EXEC для выбора установки ON, а затем нажмите на диск.
- (5) Нажмите кнопку MENU для удаления индикации меню. Загорится индикатор PROG. SCAN.

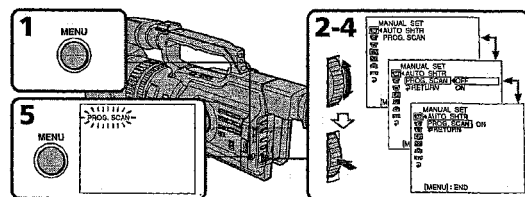

### To return to normal mode

Select OFF in step 4, then press the SEL/PUSH EXEC dial.

### Для возврата в обычный режим

Выберите установку OFF в пункте 4, затем нажмите на диск SEL/PUSH EXEC.

## Shooting with all the pixels – PROG. SCAN

### Note on the progressive mode

A normal TV broadcast divides the screen into two finer fields and displays them in turns every 1/50 of a second (Interlace format). Thus, the actual image displayed in an instant covers only half of the apparent image area. Displaying the whole image simultaneously on a full screen is called displaying with all the pixels. In this mode, the resolution of the still picture is clearer than in the normal mode. This camcorder takes in an image every 2/25 of a second, which may cause the image of a moving object to go out of focus. This camcorder is originally programmed to record in the normal TV format.

**When shooting under fluorescent light**  
When shooting in progressive mode under fluorescent light or light bulbs, a rare phenomenon may happen in which the screen lights up brightly (Flicker phenomenon). This is not a malfunction. If you want to stop this phenomenon, set PROG. SCAN to OFF in the menu settings.

### On digital zooming

You cannot use digital zooming in this mode.

## Съемка с использованием всех пикселей – PROG. SCAN

**Примечания по прогрессивному режиму**  
При передаче обычного телевизионного изображения происходит разделение экрана на две части, которые поочередно отображаются каждую 1/50 с (чересстрочная развертка). Таким образом, реальные размеры отображаемого изображения составляют лишь половину видимого размера изображения. Одновременное отображение всего изображения на экране называется отображением с помощью всех пикселей. В этом режиме разрешение неподвижного изображения лучше, чем в обычном режиме. Видеокамера производит обновление изображения каждые 2/25 с, что может вызвать потерю фокусировки движущегося объекта. Первоначально видеокамера запрограммирована на запись в телевизионном формате.

**Съемка при люминесцентном освещении**  
Во время съемки в прогрессивном режиме при освещении лампами дневного света или лампами накаливания, может возникнуть редкое явление, при котором экран ярко светится (мерцание). Однако это не является неисправностью. Если необходимо избавиться от этого явления, установите для режима PROG. SCAN значение OFF в установках меню.


**О цифровой трансфокации**  
В этом режиме невозможно использование цифровой трансфокации.

Admitted Recording Operations / Усовершенствованные операции съемки

## Using the guide frame

You can easily make the picture be on a horizontal line using the guide frame. The guide frame is not recorded.

- (1) Press MENU to display the menu in standby mode.
- (2) Turn the SEL/PUSH EXEC dial to select **GUIDEFAME**, then press the dial.
- (3) Turn the SEL/PUSH EXEC dial to select **GUIDEFAME**, then press the dial.
- (4) Turn the SEL/PUSH EXEC dial to select **ON**, then press the dial.
- (5) Press MENU to erase the menu display. The guide frame is displayed on the LCD screen or in the viewfinder.

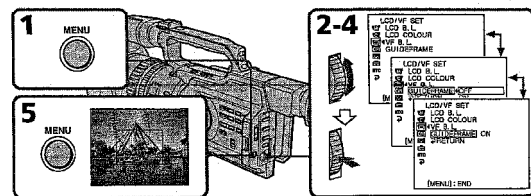

### To clear the guide frame

Select OFF in step 4, then press the SEL/PUSH EXEC dial or simply press DISPLAY.

### Note

The guide frame indicates only a rough level. The size and position of the guide frame do not affect the setting of the camcorder.

**If you set GUIDEFAME to ON**  
The other screen indicators are also displayed on the LCD screen.

## Использование контрольной рамки

Можно легко выровнять изображение по горизонтали с помощью контрольной рамки. Запись контрольной рамки на ленту не производится.

- (1) Нажмите кнопку MENU для отображения меню в режиме ожидания.
- (2) Поверните диск SEL/PUSH EXEC для выбора установки **GUIDEFAME**, а затем нажмите на диск.
- (3) Поверните диск SEL/PUSH EXEC для выбора установки GUIDEFAME, затем нажмите на диск.
- (4) Поверните диск SEL/PUSH EXEC для выбора установки ON, а затем нажмите на диск.
- (5) Нажмите кнопку MENU для удаления индикации меню. Контрольная рамка отображается на экране ЖКД или в видоискателе.

### Для отмены отображения контрольной рамки

Выберите установку OFF в пункте 4, а затем нажмите диск SEL/PUSH EXEC или кнопку DISPLAY.


### Примечание

Контрольная рамка показывает только примерный уровень. Размеры и положение контрольной рамки не влияют на установки видеокамеры.

**Если для параметра GUIDEFAME установлено значение ON**  
Другие индикаторы будут также отображаться на экране ЖКД.

## Using the wide mode

You can record a 16:9 wide picture to watch on a 16:9 wide-screen TV (16:9WIDE). Black bands appear on the LCD screen or in the viewfinder during recording in 16:9WIDE mode [a]. The picture during playback on a normal TV [b] or on a wide-screen TV [c] is compressed in the widthwise direction. If you set the screen mode of the wide-screen TV to the full mode, you can watch pictures of normal images [d].



In standby mode, set 16:9WIDE to ON in the menu settings (p. 154).

### To cancel the wide mode

Set 16:9WIDE to OFF in the menu settings (p. 154).

### In wide mode, you cannot select the following modes:

- Old movie
- Progressive mode

### During recording

You cannot operate the wide mode function. When you cancel the wide mode, set your camcorder to the standby mode and then set 16:9WIDE to OFF in the menu settings.

## Использование широкоэкранный режима

Вы можете записывать широкоформатное изображение 16:9 для просмотра на широкоэкранном телевизоре формата 16:9 (16:9WIDE). Во время записи в режиме 16:9WIDE [a] на экране ЖКД или в видоискателе появляются черные полосы. Изображение во время воспроизведения на обычном телевизоре [b] или широкоэкранном телевизоре [c] будет сжато по ширине. При установке экранного режима широкоэкранный телевизора в полноэкранный режим можно наблюдать изображения нормального размера [d].

В режиме ожидания установите параметр 16:9WIDE в положение ON в установках меню (стр. 154).

### Для отмены широкоэкранный режима

Установите параметр 16:9WIDE в положение OFF в установках меню (стр. 154).

В широкоэкранный режим нельзя выбрать следующие режимы:

- Старинное кино
- Прогрессивный режим

### Во время записи

Не работает широкоэкранный режим. Если нужно отменить широкоэкранный режим, установите видеокамеру в режим ожидания, а затем установите режим 16:9WIDE в положение OFF в установках меню.


Admitted Recording Operations / Усовершенствованные операции съемки

## Using the fader function

You can fade the picture in or out to give your recording a professional appearance.

## Использование функции фейдера

Можно регулировать постепенное появление или исчезновение изображения, чтобы придать съемке профессиональный вид.

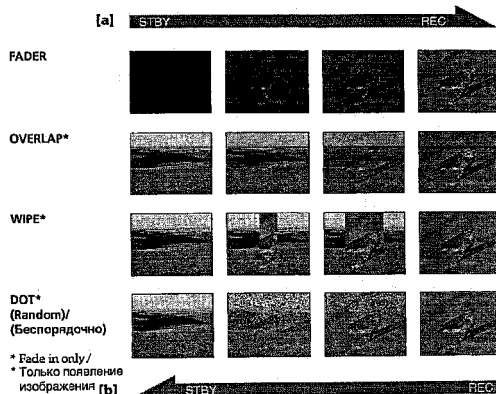

### MONOTONE

When fading in, the picture gradually changes from black-and-white to colour.  
When fading out the picture gradually changes from colour to black-and-white.

### MONOTONE

При появлении изображения будет постепенно изменяться от черно-белого до цветного.  
При плавном исчезновении изображение будет постепенно изменяться от цветного до черно-белого.

54

## Using special effects – Picture effect

You can digitally process images to obtain special effects like those in films or on TV.

**NEG. ART [a]:** The colour and brightness of the picture is reversed.

**SEPIA:** The picture gets sepia-toned.  
**B&W:** The picture appears in monochrome (black-and-white).

**SOLARIZE [b]:** The light intensity is emphatic, and the picture looks like an illustration.

**SLIM [c]:** The picture expands vertically.  
**STRETCH [d]:** The picture expands horizontally.

## Использование специальных эффектов – Эффект изображения

Обработку изображений цифровым методом можно выполнять для получения специальных эффектов, как в кинофильмах или на телевидении.

**NEG. ART [a]:** Цвет и яркость изображения будут негативными. Изображение будет в цвете.

**SEPIA:** Изображение будет монохромным (черно-белым).

**SOLARIZE [b]:** Яркость света будет усиленной, а изображение будет выглядеть как рисунок.

**SLIM [c]:** Изображение растянется по вертикали.


**STRETCH [d]:** Изображение растянется по горизонтали.



(1) In standby or recording mode, press PICTURE EFFECT.  
(2) Turn the SEL/PUSH EXEC dial to select the desired picture effect mode.

The picture effect indicator changes as follows:  
NEG. ART ↔ SEPIA ↔ B&W ↔ SOLARIZE ↔ SLIM ↔ STRETCH

(1) В режиме ожидания или записи нажмите кнопку PICTURE EFFECT.  
(2) Поверните диск SEL/PUSH EXEC для выбора режима нужного эффекта изображения.  
Индикатор эффекта изображения будет изменяться следующим образом:  
NEG. ART ↔ SEPIA ↔ B&W ↔ SOLARIZE ↔ SLIM ↔ STRETCH

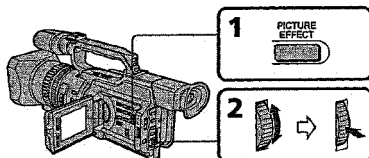

56


## Using the fader function

(1) When fading in [a]

In standby mode, press FADER until the desired fader indicator flashes.

**When fading out [b]**  
In recording mode, press FADER until the desired fader indicator flashes.  
The indicator changes as follows:  
FADER → MONOTONE → OVERLAP → WIPE → DOT → no indicator  
The last selected fader mode is indicated first.

(2) Press START/STOP. After the fade in/out is carried out, your camcorder automatically returns to the normal mode.

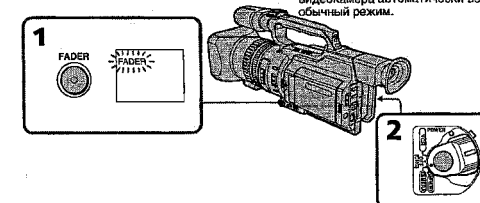

### To cancel the fader function

Press FADER until the indicator disappears.

### Note

You cannot use the following functions while using the fader function, and vice versa:

- Digital effect
- Low lux mode of PROGRAM AE (Only in OVERLAP, WIPE, or DOT mode)
- Tape Photo recording
- Interval recording
- Cut recording

When the OVERLAP, WIPE, or DOT indicator appears

Your camcorder automatically stores the image recorded on a tape. As the image is being stored, the fader indicator flashes fast, and the playback picture appears.

## Использование функции фейдера

(1) При плавном появлении изображения

В режиме ожидания нажимайте кнопку FADER до тех пор, пока не начнет мигать нужный индикатор фейдера.

При плавном исчезновении изображения [b]  
В режиме записи нажимайте кнопку FADER до тех пор, пока не начнет мигать нужный индикатор фейдера. Индикатор изменится следующим образом:

FADER → MONOTONE → OVERLAP → WIPE → DOT → нет индикации

Последний из выбранных режимов фейдера отображается первым.

(2) Нажмите кнопку START/STOP. После выполнения операции появления/исчезновения изображения видеосъемка автоматически вернется в обычный режим.

### Для отмены функции фейдера

Нажимайте кнопку FADER до тех пор, пока не исчезнет индикатор.

### Примечание

При использовании функции фейдера невозможно использовать следующие функции (и наоборот):

- Цифровой эффект
- Режим низкой освещенности PROGRAM AE (только режимы OVERLAP, WIPE или DOT)
- Фотосъемка на ленту
- Запись с интервалами
- Покладовая съемка

### Если появился индикатор OVERLAP, WIPE или DOT

Видеокамера автоматически сохранит изображение на ленте. Во время сохранения изображения индикатор фейдера будет часто мигать, и появится воспроизводимое изображение.

Advanced Recording Options / Усовершенствованные операции съемки

55

## Using special effects – Picture effect

To cancel the picture effect function

Press PICTURE EFFECT so that the indicator disappears.

### While using the picture effect function

You cannot select the old movie mode.

### When you turn the power off

The picture effect function will be automatically cancelled.

### When PROG. SCAN is set to ON in the menu settings

You cannot select SLIM and STRETCH.

## Использование специальных эффектов – Эффект изображения

Для отмены функции эффектов изображения

Нажмите кнопку PICTURE EFFECT, чтобы индикатор исчез.

### При использовании функции эффекта изображения

Нельзя выбрать режим старинного кино.

### При выключении питания

Функция эффектов изображения будет автоматически отменена.

### Если параметр PROG. SCAN установлен в положение ON в установках меню

Нельзя выбрать режимы SLIM и STRETCH.

Advanced Recording Options / Усовершенствованные операции съемки

57

## Using special effects – Digital effect

You can add special effects to recorded pictures using the various digital functions. The sound is recorded normally.

### STILL

You can record a still image so that it is superimposed on a moving picture.

### FLASH (FLASH MOTION)

You can record still images successively at constant intervals.

### LUMI. (LUMINANCEKEY)

You can swap a brighter area in a still image with a moving picture.

### TRAIL

You can record the picture so that an incidental image like a trail is left.

### OLD MOVIE

You can add an old movie type atmosphere to pictures. The black bands appear on the upper and lower of the screen to change the virtual screen size to the cinema scope size, and the picture effect is set to SEPIA.

## Использование специальных эффектов – Цифровой эффект

Вы можете добавлять специальные эффекты на записываемое изображение с помощью различных цифровых функций. Записываемый звук будет обычным.

### STILL

Вы можете записывать неподвижное изображение для наложения его на подвижное изображение.

### FLASH (FLASH MOTION)

Вы можете записывать неподвижные изображения последовательно через определенные интервалы.

### LUMI. (LUMINANCEKEY)


Вы можете изменять яркие места на неподвижном изображении на подвижные изображения.

### TRAIL

Вы можете записывать изображение с эффектом запаздывания.

### OLD MOVIE

Вы можете выполнить съемку с эффектом старинного кино. В верхней и нижней части экрана появляются черные полосы так, чтобы придать виртуальному экрану пропорции кинотеатра, при этом эффект изображения установлен в положение SEPIA.

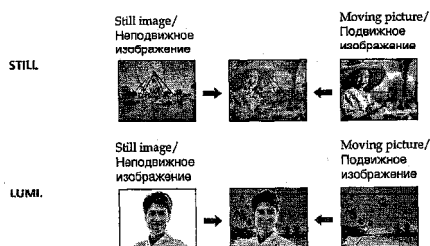

## Using special effects – Digital effect

- (1) In standby or recording mode, press DIGITAL EFFECT. The digital effect indicator appears.
- (2) Turn the SEL/PUSH EXEC dial to select the desired digital effect mode. The digital effect indicator changes as follows:  
STILL ↔ FLASH ↔ LUMI ↔ TRAIL ↔ OLD MOVIE
- (3) Press the SEL/PUSH EXEC dial. The indicator lights up and the bar appears. In STILL and LUMI modes, the still image is stored in memory.
- (4) Turn the SEL/PUSH EXEC dial to adjust the effect.

### Items to be adjusted

STILL	The rate of the still image you want to superimpose on the moving picture
FLASH	The interval of flash motion
LUMI.	The colour scheme of the area in the still image which is to be swapped with a moving picture
TRAIL	The time until the incidental image vanishes
OLD MOVIE	No adjustment necessary

The longer the bar on the screen, the stronger the digital effect. The bar appears in the following modes: STILL, FLASH, LUMI and TRAIL.


## Использование специальных эффектов – Цифровой эффект

- (1) В режиме ожидания или записи нажмите кнопку DIGITAL EFFECT. Появится индикатор цифрового эффекта.
- (2) Поверните диск SEL/PUSH EXEC для выбора режима нужного цифрового эффекта. Индикатор цифрового эффекта будет изменяться следующим образом: STILL ↔ FLASH ↔ LUMI ↔ TRAIL ↔ OLD MOVIE
- (3) Нажмите на диск SEL/PUSH EXEC. Загорается индикатор, и появляется полоса. В режимах STILL и LUMI, неподвижное изображение сохраняется в памяти.
- (4) Поверните диск SEL/PUSH EXEC для регулировки эффекта.

### Элементы для регулировки

STILL	Интенсивность неподвижного изображения, которое нужно наложить на подвижное изображение
FLASH	Интервал прерывистого движения
LUMI.	Цветовая гамма области неподвижного изображения, которую нужно заменить подвижным изображением
TRAIL	Время исчезновения побочного изображения
OLD MOVIE	Регулировка не требуется

Чем дольше остается полоса на экране, тем сильнее цифровой эффект. Полоса появляется в следующих режимах: STILL, FLASH, LUMI и TRAIL.

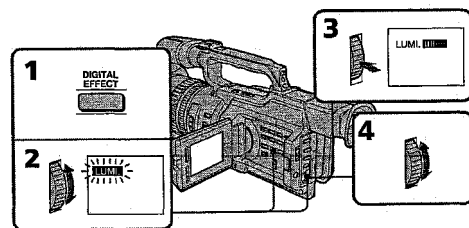

58

## Using special effects – Digital effect

### To cancel the digital effect

Press DIGITAL EFFECT. The digital effect indicator disappears.

### Notes

- The following functions do not work in digital effect mode:
  - Fader
  - Low lux mode of PROGRAM AE
  - Tape Photo recording
  - Shutter speed (1/25 or smaller) adjustment
- The following functions do not work in old movie mode:
  - Wide mode
  - Picture effect
  - PROGRAM AE
  - Spot light mode
  - Shutter speed adjustment

When you turn the power off  
The digital effect function will be automatically cancelled.

## Использование специальных эффектов – Цифровой эффект

Для отмены цифрового эффекта  
Нажмите кнопку DIGITAL EFFECT.  
Индикатор цифрового эффекта исчезнет.

### Примечания

- В режиме цифрового эффекта не работают следующие функции:
  - Фейдер
  - Режим низкой освещенности PROGRAM AE
  - Фотоустановка на ленту
  - Регулировка скорости затвора (1/25 и ниже)
- В режиме старинного кино не работают следующие функции:
  - Широкоэкранный режим
  - Эффект изображения
  - PROGRAM AE
  - Режим прожекторного освещения
  - Регулировка скорости затвора

При выключении питания  
Функция цифровых эффектов  
автоматически отменяется.

## Shooting with manual adjustment

Under normal conditions, this unit automatically makes various adjustments as it shoots. However, you can adjust the following functions manually to suit your preference.

Functions you can adjust by setting the AUTO LOCK selector to the center (auto lock release) position  
Brightness (exposure), shutter speed, white balance, and PROGRAM AE

Functions you can adjust in menu settings  
Deactivating the SteadyShot

Functions you can adjust by using other selectors/rings  
ND filter, zebra pattern, focus, and zoom

The following describes how to adjust all the functions mentioned above except white balance (p. 70), PROGRAM AE (p. 77), focus (p. 81), and zoom (p. 29).

### AUTO LOCK selector

Set the selector as shown below to maintain or release the settings of the functions.

## Съемка с использованием ручной регулировки

В нормальных условиях данное устройство автоматически производит различные настройки в процессе съемки. Однако, исходя из собственных предпочтений, можно регулировать вручную следующие функции.

Функции, которые можно регулировать, установив переключатель AUTO LOCK в центральное положение (отключение автоматической регулировки)  
Яркость (экспозиция), скорость затвора, баланс белого и PROGRAM AE


Функции, которые можно регулировать в установках меню  
Отключение функции устойчивой съемки

Функции, которые можно регулировать, используя другие переключатели/диски  
Фильтр ND, полосатый шаблон, фокус и трансфокация

Далее описывается, как можно настроить все вышеперечисленные функции, кроме баланса белого (стр. 70), PROGRAM AE (стр. 77), фокуса (стр. 81) и трансфокации (стр. 29).

### Переключатель AUTO LOCK

Установите переключатель в положение, как показано ниже, чтобы сохранить или отменить настройки функций.



### AUTO LOCK [a]

Select this position to let the unit adjust all the functions automatically.

### HOLD [b]

Select this position after setting the functions manually to maintain the settings.

### AUTO LOCK [a]

Выберите это положение, чтобы устройство само автоматически производило настройки всех функций.

### HOLD [b]

После ручной настройки выберите это положение, чтобы сохранить выполненные установки.

60

59

Advanced Recording Operations / Усовершенствованные операции съемки

Advanced Recording Operations / Усовершенствованные операции съемки

## Shooting with manual adjustment

**Manual position (AUTO LOCK release) [c]**  
Select this position to adjust the functions listed above manually.

**If you use the video flash light (not supplied)**  
We recommend that you set the AUTO LOCK selector to AUTO LOCK.

**Note**  
When you manually adjust the exposure during backlight or spot light mode, the backlight or spot light function will be automatically cancelled.

### Adjusting exposure

Adjust the exposure manually under the following cases.

[a]



- The background is too bright (back lighting)
- Insufficient light: most of the picture is dark

[b]

- Bright subject and dark background
- To record the darkness faithfully

## Съемка с использованием ручной регулировки

**Ручная настройка (отключение AUTO LOCK) [c]**  
Выберите это положение, чтобы вручную регулировать функции, перечисленные выше.

**При использовании видеовспышки (не входит в комплект)**  
Рекомендуется устанавливать переключатель AUTO LOCK в положение AUTO LOCK.

**Примечание**  
При настройке экспозиции вручную в режиме задней подсветки или прожекторного освещения функции задней подсветки или прожекторного освещения будут автоматически отключены.

### Регулировка экспозиции

Выполняйте ручную регулировку экспозиции в следующих случаях.

[a]




- Фон слишком светлый (подсветка сзади)
- Недостаточно света: значительная часть изображения темная

[b]

- Яркий объект на темном фоне
- Необходимость снимать именно темное изображение

## Shooting with manual adjustment

- (1) Set the AUTO LOCK selector to the center (auto lock release) position while the camcorder is in standby, recording, or memory mode.
- (2) Press EXPOSURE. The exposure indicator appears on the LCD screen or in the viewfinder.
- (3) Turn the EXPOSURE dial to adjust the exposure.  
As you turn the dial, the iris value changes between OPEN and CLOSE and the gain value changes between 0 dB and 18dB. To brighten the picture, adjust the level to the + side.

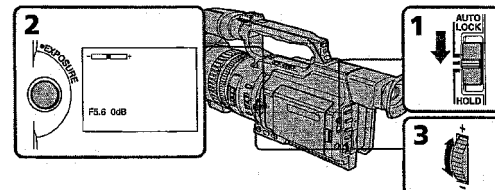

### To return to automatic exposure mode

Set the AUTO LOCK selector to AUTO LOCK or press EXPOSURE. The exposure indicator disappears from the LCD or viewfinder screen.

**If you press PROGRAM AE when adjusting the exposure manually**  
The exposure comes back to automatic adjustment again.

**When you focus in telephoto**  
You cannot choose F1.6 and F2.

## Съемка с использованием ручной регулировки

- (1) Когда камера находится в режиме ожидания, записи или памяти, установите переключатель AUTO LOCK в центральное положение (отключение автоматической регулировки).
- (2) Нажмите кнопку EXPOSURE. На экране ЖКД или в видоискателе появится индикатор экспозиции.
- (3) Поверните диск EXPOSURE для регулировки экспозиции.  
При повороте диска значение ирисовой диафрагмы меняется от OPEN (открыта) до CLOSE (закрыта), а величина усиления - от 0 дБ до 18 дБ. Чтобы сделать изображение более ярким, сместите уровень в сторону +.

**Для возврата в режим автоматической экспозиции**  
Установите переключатель AUTO LOCK в положение AUTO LOCK или нажмите кнопку EXPOSURE. Индикатор экспозиции исчезнет с экрана ЖКД или видоискателя.

**Если во время ручной регулировки экспозиции нажать кнопку PROGRAM AE**  
Экспозиция снова переключается в режим автоматической регулировки.

**При фокусировке объективом в положении "телефото"**  
Значения F1.6 и F2 становятся недоступными.

62

## Shooting with manual adjustment


### Adjusting the shutter speed

- (1) Set the AUTO LOCK selector to the center (auto lock release) position while the camcorder is in standby, recording, or memory mode.
- (2) If the PROGRAM AE indicator is lit, press PROGRAM AE repeatedly until the indicator disappears from the LCD or viewfinder screen.
- (3) Press SHUTTER SPEED. The shutter speed indicator appears on the LCD screen or in the viewfinder.
- (4) Turn the SEL/PUSH EXEC dial to select the desired speed. The available shutter speed ranges from 1/3 to 1/10000. As you turn the dial, the shutter speed changes as follows:  
1/3 ↔ 1/6 ↔ 1/12 ↔ 1/25 ↔ ... ↔ 1/3500 ↔ 1/6000 ↔ 1/10000  
To increase the shutter speed, select a smaller setting (large value indicator on the LCD screen or in the viewfinder).

## Съемка с использованием ручной регулировки

### Регулировка скорости затвора

- (1) Когда камера находится в режиме ожидания, записи или памяти, установите переключатель AUTO LOCK в центральное положение (отключение автоматической регулировки).
- (2) Если горит индикатор PROGRAM AE, нажмите кнопку PROGRAM AE несколько раз, пока индикатор не исчезнет с экрана ЖКД или видоискателя.
- (3) Нажмите SHUTTER SPEED. На экране ЖКД или в видоискателе появится индикатор скорости затвора.
- (4) Поверните диск SEL/PUSH EXEC для выбора нужной скорости. Скорость затвора может быть установлена в пределах от 1/3 до 1/10000. При повороте диска скорость затвора изменяется следующим образом:  
1/3 ↔ 1/6 ↔ 1/12 ↔ 1/25 ↔ ... ↔ 1/3500 ↔ 1/6000 ↔ 1/10000  
Для увеличения скорости затвора выберите меньшее значение (индикатор большой величины на экране ЖКД или в видоискателе).

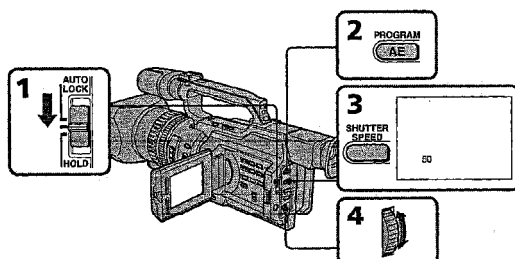

**To return to automatic shutter speed mode**  
Set the AUTO LOCK selector to AUTO LOCK or press SHUTTER SPEED. The shutter speed indicator disappears from the LCD or viewfinder screen.

**Для возврата в режим автоматической регулировки скорости затвора**  
Установите переключатель AUTO LOCK в положение AUTO LOCK или нажмите SHUTTER SPEED. Индикатор скорости затвора исчезнет с экрана ЖКД или видоискателя.

## Shooting with manual adjustment

**When shooting at slow shutter speed**  
At slow shutter speed, automatic focus may be lost. Use a tripod and adjust the focus manually.

### When shooting under fluorescent light or light bulbs

When shooting under fluorescent light or light bulbs, a rare phenomenon may happen in which the screen lights up brightly depending on the shutter speed (Flicker phenomenon).

**If you set the shutter speed value to 1/25 or smaller**  
You cannot use the spot light (p. 33) and digital effect (p. 58) functions.

### Using the ND filter

Using the ND filter (the ND filter 1 setting corresponds to 1/4 of the quantity of light and the ND filter 2 setting corresponds to 1/32 of the quantity of light), you can record a picture clearly by adjusting light amounts, even if you shoot under too bright conditions.

## Съемка с использованием ручной регулировки

**При съемке с низкой скоростью затвора**  
При съемке с низкой скоростью затвора может не работать автоматическая фокусировка. Используйте штатив и установите фокус вручную.

**Съемка при освещении лампами дневного света или лампами накаливания**  
Во время съемки при освещении лампами дневного света или лампами накаливания может возникнуть редкое явление, при котором экран ярко вспыхивает в зависимости от скорости затвора (мерцание).

**Если установлена величина скорости затвора, равная 1/25 или ниже**  
Нельзя будет использовать функции прожекторного освещения (стр. 33) и цифрового эффекта (стр. 58).

### Использование фильтра ND

Используя фильтр ND (позиция 1 фильтра ND соответствует 1/4 количества света, а позиция 2 фильтра ND соответствует 1/32 количества света), можно отснять картинку, которая при этом не выйдет из фокуса, будучи ярко освещенной.

64

Advanced Recording Operations / Усовершенствованные операции съемки

Advanced Recording Operations / Усовершенствованные операции съемки

65


## Shooting with manual adjustment

### When the ND1 or ND2 indicator flashes on the LCD screen or in the viewfinder

The ND filter is necessary. When ND 1 flashes, set the ND FILTER selector to 1 so that the ND 1 indicator lights up on the LCD screen or in the viewfinder. When ND 2 flashes, set the ND FILTER selector to 2 so that the ND 2 indicator lights up on the LCD screen or in the viewfinder.

### When ND OFF flashes on the LCD screen or in the viewfinder

The ND filter is not necessary. Set the ND FILTER selector to OFF so that the indicator disappears from the LCD or viewfinder screen. The ND filter is now deactivated.

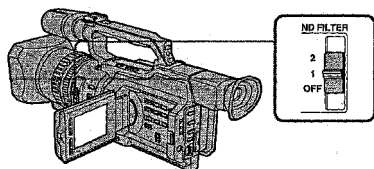

#### Note

If you set the ND FILTER selector to another position during recording, the picture may be blurred or audio noise may occur. We recommend that you check the position of the ND FILTER selector before shooting.

If you use the video flash light (not supplied) Set the ND FILTER selector to OFF when you use the flash.

## Съемка с использованием ручной регулировки

### Когда на экране ЖКД или в видоискателе мигает индикатор ND1 или ND2

Требуется фильтр ND. Когда мигает индикатор ND 1, установите переключатель ND FILTER в положение 1, чтобы на экране ЖКД или в видоискателе загорелся индикатор ND 1. Когда мигает индикатор ND 2, установите переключатель ND FILTER в положение 2, чтобы на экране ЖКД или в видоискателе загорелся индикатор ND 2.

### Когда мигает индикатор ND OFF на экране ЖКД или в видоискателе

Фильтр ND не нужен. Установите переключатель ND FILTER в положение OFF, чтобы исчез индикатор на экране ЖКД или в видоискателе. Фильтр ND теперь отключен.

#### Примечание

Если во время записи переключить переключатель ND FILTER в другое положение, изображение может стать нерезким или может появиться шум. Положение переключателя ND FILTER рекомендуется проверять перед съемкой.

При использовании видеовспышки (не входит в комплект) Если используется вспышка, установите переключатель ND FILTER в положение OFF.

## Shooting with manual adjustment

### Shooting with the zebra pattern

You can set the camcorder to display a zebra pattern (diagonal stripes) in the portion of the picture on the LCD screen or in the viewfinder with a subject whose brightness exceeds a certain level. The portion of the picture where zebra pattern appears is an area of high brightness and overexposure. You can check the picture level of a subject by displaying the zebra pattern. Use the zebra pattern as a guide for adjusting the exposure and shutter speed so that you can get the desired picture.

Set the ZEBRA selector to 70 or 100 in standby or memory mode.



Setting	Meaning
70	The zebra pattern appears in the portion of the picture on the LCD screen or in the viewfinder with a subject whose brightness is about 70%.
100	The zebra pattern appears in the portion of the picture on the LCD screen or in the viewfinder with a subject whose brightness exceeds more than 100%.
OFF	The zebra pattern does not appear on the LCD screen or in the viewfinder.

### To erase the zebra pattern

Set the ZEBRA selector to OFF.

Note on shooting with the zebra pattern Even though you see the zebra pattern on the LCD screen or in the viewfinder, the zebra pattern is not recorded.

## Съемка с использованием ручной регулировки

### Съемка с использованием полосатого шаблона

Можно настроить видеокамеру на отображение полосатого шаблона (диагональных полос) в той части изображения на экране ЖКД или в видоискателе, где яркость превышает определенный уровень. Полосатый шаблон отображается в областях с высокой яркостью и перадакцией. Можно проверить уровень яркости объекта, отображение полосатый шаблон. Полосатый шаблон используется в качестве ориентира для настройки необходимой экспозиции и скорости затвора для получения желаемого изображения.

Установите переключатель ZEBRA в положение 70 или 100 в режиме ожидания или памяти.

Установка	Назначение
70	Полосатый шаблон появляется на экране ЖКД или в видоискателе в тех областях изображения, где яркость объекта составляет около 70%.
100	Полосатый шаблон появляется на экране ЖКД или в видоискателе в тех областях изображения, где яркость объекта превышает 100%.
OFF	Полосатый шаблон не отображается на экране ЖКД или в видоискателе.

### Чтобы удалить полосатый шаблон

Установите переключатель ZEBRA в положение OFF.

Замечания относительно съемки с использованием полосатого шаблона Даже если полосатый шаблон отображается на экране ЖКД или в видоискателе, он не записывается.

66

## Shooting with manual adjustment

### Releasing the SteadyShot function

When the SteadyShot function is working, the camcorder compensates for camera-shake. You can release the SteadyShot function when you do not need to use it. The indicator appears on the LCD screen or in the viewfinder. Do not use the SteadyShot function when shooting a stationary object with a tripod.


- (1) Press MENU to display the menu in standby or memory mode.
- (2) Turn the SEL/PUSH EXEC dial to select , then press the dial.
- (3) Turn the SEL/PUSH EXEC dial to select STEADYSHOT, then press the dial.
- (4) Turn the SEL/PUSH EXEC dial to select OFF, then press the dial.
- (5) Press MENU to erase the menu display.

## Съемка с использованием ручной регулировки

### Отключение функции устойчивой съемки (SteadyShot)

Когда включена функция устойчивой съемки, видеокамера компенсирует подрагивания. Когда эта функция не требуется, ее можно отключить. На экране ЖКД или в видоискателе появится индикатор . Не используйте функцию устойчивой съемки при съемке неподвижного объекта с помощью штатива.

- (1) Нажмите кнопку MENU для отображения меню в режиме ожидания или памяти.
- (2) Поверните диск SEL/PUSH EXEC для выбора установки , а затем нажмите диск.
- (3) Поверните диск SEL/PUSH EXEC для выбора установки STEADYSHOT, затем нажмите диск.
- (4) Поверните диск SEL/PUSH EXEC для выбора OFF, затем нажмите диск.
- (5) Нажмите кнопку MENU для удаления индикации меню.

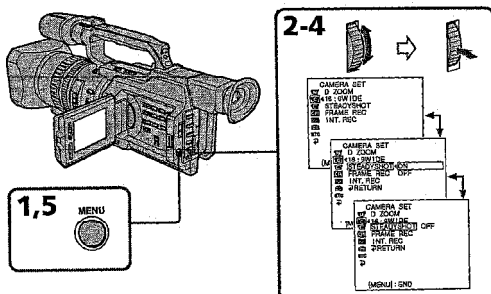

## Shooting with manual adjustment

### To activate the SteadyShot function again

Select ON in step 4, then press the SEL/PUSH EXEC dial.

#### Notes on the SteadyShot function

- The SteadyShot function will not correct excessive camera-shake.
- If you use a tele conversion lens (not supplied) or a wide conversion lens (not supplied), these lens may influence the SteadyShot function.

## Съемка с использованием ручной регулировки

Чтобы снова активизировать функцию устойчивой съемки Выберите ON в пункте 4, затем нажмите диск SEL/PUSH EXEC.

#### Примечания по функции устойчивой съемки

- Функция устойчивой съемки не в состоянии компенсировать чрезмерное подрагивание видеокамеры.
- Использование «теле»- или широкоугольного объективов (не входят в комплект) может влиять на работу функции устойчивой съемки.

68

67

69

## Adjusting the white balance

White balance adjustment makes white subjects look white and allows more natural colour balance for camera recording. Normally, white balance is automatically adjusted. You can obtain better results by adjusting the white balance manually when lighting conditions change quickly or when recording outdoors: e.g., neon signs, fireworks.

- (1) Set the AUTO LOCK selector to the center (auto lock release) position while the camcorder is in standby, recording, or memory mode.
- (2) Press **WHT BAL**. The white balance indicator appears on the LCD screen or in the viewfinder.
- (3) Turn the SEL/PUSH EXEC dial to select the appropriate white balance mode under the following conditions. As you turn the dial, the display changes as follows:


☼ (One-push white balance) ↔ ☼ (Outdoor) ↔ ☼ (Indoor)

## Регулировка баланса белого цвета

Регулировка баланса белого цвета позволяет придать белым объектам истинно белый цвет и добиться более естественного цветового баланса при съемке. Обычно регулировка баланса белого цвета выполняется автоматически. Регулировка баланса белого цвета вручную позволяет получить лучшие результаты в тех случаях, когда условия освещения быстро изменяются или при съемке на улице: например, неоновых вывесок, фейерверков.

- (1) Когда камера находится в режиме ожидания, записи или памяти, установите переключатель AUTO LOCK в центральное положение (отключение автоматической регулировки).
- (2) Нажмите кнопку **WHT BAL**. На экране ЖКД или в видоискателе появится индикатор баланса белого цвета.
- (3) Поверните диск SEL/PUSH EXEC для выбора необходимого режима баланса белого в следующих условиях. При повороте диска индикация изменяется следующим образом:

☼ (баланс белого одним нажатием) ↔ ☼ (на улице) ↔ ☼ (помещение)

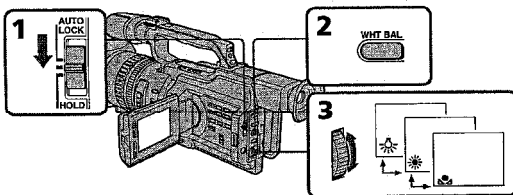

70

## Adjusting the white balance

### Notes on white balance

- When you shoot with studio lighting or video lighting, use the ☼ (indoor) mode.
- When you shoot with fluorescent lighting, readjust the white balance using the ☼ (one-push white balance) mode, or use the automatic white balance mode. If you use the ☼ (indoor) mode, white balance may not be adjusted appropriately.

### Shooting when lighting conditions have changed

- When lighting conditions have changed, readjust the white balance while the camcorder is in standby mode.
- In automatic white balance mode, point your camcorder at a white subject for about 10 seconds after setting the POWER switch to CAMERA to get a better adjustment when:
  - You detach the battery for replacement.
  - You bring your camcorder outdoors from the interior of a house, or vice versa.

If the ☼ indicator does not stop flashing after you press the SEL/PUSH EXEC dial The white balance cannot be set. Use the automatic white balance mode.

## Регулировка баланса белого цвета

### Замечания относительно баланса белого

- При съемке со студийным освещением или с помощью видеосветов используйте режим ☼ (в помещении).
- При съемке с освещением лампами дневного света отрегулируйте баланс белого, используя режим ☼ (регулировка баланса белого одним нажатием) или автоматической регулировки. В случае использования режима ☼ (в помещении), регулировка баланса белого может выполняться неверно.

### Съемка при изменении условий освещения

- Если условия освещения изменились, переключите видеокamerу в режим ожидания и заново отрегулируйте баланс белого.
- В режиме автоматической регулировки баланса белого направьте видеокamerу на белый предмет приблизительно на 10 секунд после установки переключателя POWER в положение CAMERA для получения улучшенной подстройки регулировки, когда:
  - Вы отсоединяете батарейный блок для замены.
  - Вы выходите с камерой из помещения на улицу или наоборот.

Если индикатор ☼ продолжает мигать после нажатия на диск SEL/PUSH EXEC Баланс белого невозможно установить. Используйте режим автоматической регулировки баланса.

## Adjusting the white balance

Indicator	Shooting conditions
☼	<ul style="list-style-type: none"> <li>• Adjusting the white balance according to the light source. This operation is not available during recording. Follow the procedure described below to adjust the setting again.</li> </ul>
☼ (Outdoor)	<ul style="list-style-type: none"> <li>• Recording a sunset/sunrise, just after sunset, just before sunrise, neon signs, or fireworks</li> <li>• Under a colour matching fluorescent lamp</li> </ul>
☼ (Indoor)	<ul style="list-style-type: none"> <li>• Lighting condition changes quickly</li> <li>• Too bright a place such as a photography studio</li> <li>• Under sodium lamps or mercury lamps</li> </ul>

### If you have selected ☼ in step 3

When you set the white balance to one-push white balance mode, the setting is locked and maintained even if lighting conditions change. You can achieve recording with natural colours without the image being affected by ambient light.  
(With the ☼ indicator on the screen)  
(1) Shoot a white object such as paper fully.  
(2) Press the SEL/PUSH EXEC dial.  
The ☼ indicator flashes quickly. When the white balance has been adjusted and stored in the memory, the indicator stops flashing. The setting will be maintained even if the battery is detached.

### To return to automatic adjustment

Set the AUTO LOCK selector to AUTO LOCK or press WHT BAL. The white balance indicator disappears from the LCD or viewfinder screen.

## Регулировка баланса белого цвета

Индикатор	Условия съемки
☼	<ul style="list-style-type: none"> <li>• Регулировка баланса белого цвета в соответствии с источником света. Эта операция невозможна во время записи. Следуйте нижеописанной процедуре для повторного выполнения настройки.</li> </ul>
☼ (на улице)	<ul style="list-style-type: none"> <li>• При записи заката/восхода солнца, вечерней или утренней зари, неоновых реклам или фейерверков</li> <li>• При освещении лампами дневного света или аналогичными им</li> </ul>
☼ (в помещении)	<ul style="list-style-type: none"> <li>• При быстрой смене условий освещения</li> <li>• В очень хорошо освещенном месте, например, фотостудии</li> <li>• При освещении объекта натриевой или ртутной лампой</li> </ul>

### Если в пункте 3 выбрана установка ☼

Если установлен режим регулировки баланса белого одним нажатием, то выбранная установка фиксируется и сохраняется до тех пор, пока не изменятся условия освещения. В результате получается запись с естественными цветами, и на изображение не влияет окружающий свет.  
(Когда на экране горит индикатор ☼)  
(1) Съемка только белого объекта, например, белой бумагой.  
(2) Нажмите на диск SEL/PUSH EXEC. Индикатор ☼ часто мигает. После настройки баланса белого и сохранения его в памяти индикатор перестанет мигать. Настройка сохранится даже после отключения батарей.

### Чтобы снова включить режим автоматической настройки

Установите переключатель AUTO LOCK в положение AUTO LOCK или нажмите кнопку WHT BAL. Индикатор баланса белого исчезнет с экрана ЖКД или в видоискателе.

## Adjusting recording level manually – Sound recording level

You can adjust the recording sound level. Use headphones to monitor the sound when you adjust it.

### Setting up the menu

- (1) Set the POWER switch to CAMERA or VCR.
- (2) Press MENU to display the menu.
- (3) Turn the SEL/PUSH EXEC dial to select **2.6**, then press the dial.
- (4) Turn the SEL/PUSH EXEC dial to select **MIC LEVEL**, then press the dial.
- (5) Turn the SEL/PUSH EXEC dial to select **MANUAL**, then press the dial.
- (6) Press MENU to erase the menu display.

### Adjusting the recording level

- (7) Press AUDIO LEVEL to display the recording level adjustment display in standby or recording mode.
- (8) Turn the SEL/PUSH EXEC dial to adjust the recording level.

## Регулировка уровня записи вручную – Уровень записи звука


Можно настраивать уровень записи звука. Для прослушивания звука во время регулировки используйте наушники.

### Настройка меню

- (1) Установите переключатель POWER в положение CAMERA или VCR.
- (2) Нажмите кнопку MENU для отображения меню.
- (3) Поверните диск SEL/PUSH EXEC для выбора установки **2.6**, а затем нажмите на диск.
- (4) Поверните диск SEL/PUSH EXEC для выбора установки **MIC LEVEL**, затем нажмите на диск.
- (5) Поверните диск SEL/PUSH EXEC для выбора установки **MANUAL**, затем нажмите на диск.
- (6) Нажмите кнопку MENU для удаления индикации меню.

### Регулировка уровня записи

- (7) Нажмите кнопку AUDIO LEVEL для отображения экрана регулировки уровня записи в режиме ожидания или записи.
- (8) Поверните диск SEL/PUSH EXEC для регулировки уровня записи.

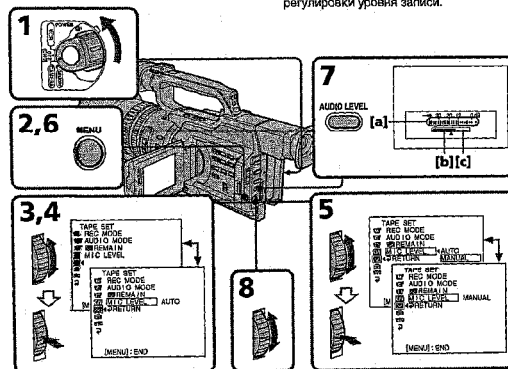

72

71

73



## Adjusting recording level manually – Sound recording level

- [a] Recording level meter  
[b] Decreases the recording level  
[c] Increases the recording level

### To clear the recording level adjustment display

Press AUDIO LEVEL again.

### To adjust the recording level automatically

Select AUTO in step 5, then press the SEL/PUSH EXEC dial.

#### Notes on the manual adjustment

- The recording level setting is retained for about five minutes after removing the battery.
- The recording level indicator appears at the lower-right on the LCD screen or in the viewfinder.

The sound input through the AUDIO L/R jacks or DV IN/OUT jack. You cannot adjust the recording level.

#### When MIC LEVEL is set to AUTO

You cannot adjust the recording level, however, the recording level adjustment display is displayed.

## Регулировка уровня записи вручную – Уровень записи звука

- [a] Индикатор уровня записи  
[b] Уменьшает уровень записи  
[c] Увеличивает уровень записи

### Для отмены отображения экрана регулировки уровня записи

Нажмите кнопку AUDIO LEVEL еще раз.

### Для автоматической настройки уровня записи

Выберите установку AUTO в пункте 5, затем нажмите диск SEL/PUSH EXEC.

#### Замечания относительно ручной регулировки


- Настройка уровня записи сохраняется в течение примерно пяти минут после отключения батареи.
- Индикатор уровня записи отображается в правом нижнем углу на экране ЖКД или в видоискателе.

Входной звуковой сигнал через гнезда AUDIO L/R или DV IN/OUT. Уровень записи не регулируется.

Когда команда MIC LEVEL установлена в положение AUTO. Регулировка уровня записи невозможна, но экран регулировки уровня записи отображается.


## Presetting the adjustment for picture quality – Custom preset


You can preset the camcorder to record the picture with the desired picture quality. When presetting, adjust the picture by shooting a subject and checking the picture displayed on a TV using the menu settings.

- Press CUSTOM PRESET to display the CUSTOM PRESET menu in standby or memory mode.
- Press the SEL/PUSH EXEC dial.
- Turn the SEL/PUSH EXEC dial to select SET, then press the dial.
- Turn the SEL/PUSH EXEC dial to select ON, then press the dial.
- Turn the SEL/PUSH EXEC dial to select the desired item, then press the dial.
- Turn the SEL/PUSH EXEC dial to adjust the selected item, then press the dial.
- Press CUSTOM PRESET. The CUSTOM PRESET menu disappears and the indicator  appears on the LCD screen or in the viewfinder.

## Предварительная настройка качества изображения – Индивидуальная настройка

Можно предварительно настроить видеоканал для записи изображения с требуемым качеством. Для этого снимите объект и настройте изображение с помощью параметров меню, просматривая изображение на экране телевизора.

- Нажмите кнопку CUSTOM PRESET для отображения меню CUSTOM PRESET в режиме ожидания или памяти.
- Нажмите на диск SEL/PUSH EXEC.
- Поверните диск SEL/PUSH EXEC для выбора установки SET, затем нажмите на диск.
- Поверните диск SEL/PUSH EXEC для выбора установки ON, а затем нажмите на диск.
- Поверните диск SEL/PUSH EXEC для выбора нужного элемента, а затем нажмите на диск.
- Поверните диск SEL/PUSH EXEC для настройки выбранного элемента, а затем нажмите на диск.
- Нажмите кнопку CUSTOM PRESET. Меню CUSTOM PRESET исчезнет, и на экране ЖКД или в видоискателе появится индикатор .

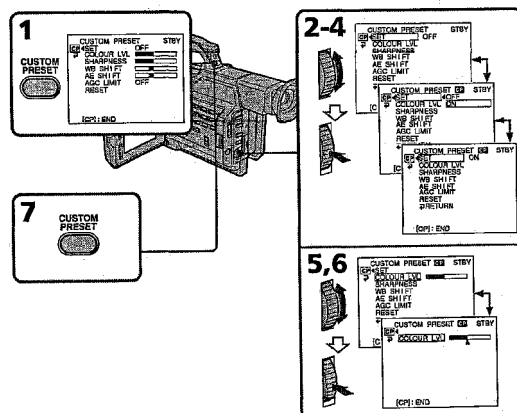

## Presetting the adjustment for picture quality – Custom preset

### Items to be adjusted/Элементы для регулировки

Item/Элемент	Meaning/Назначение	Adjustment value/Величина регулировки
COLOUR LVL	Colour intensity/ Интенсивность цветов	Decreases colour intensity ↔ Increases colour intensity/ Уменьшения интенсивности цвета ↔ Увеличения интенсивности цвета
SHARPNESS	Sharpness/ Резкость	Softer ↔ Sharper/ Сглаженное ↔ Резкое
WB SHIFT	White balance/ Баланс белого	Bluish ↔ Reddish/ Синий ↔ Красный
AE SHIFT	Brightness/ Яркость	-4 ↔ +4
AGC LIMIT	Auto Gain Limit/ Автоматическое ограничение усиления	6 dB/12 dB/OFF/ 6 дБ/12 дБ/ОФ
RESET	Sets items above to the default settings/ Установка для вышеуказанных элементов значений по умолчанию.	

### To cancel using the custom preset

Select OFF in step 4, then press the SEL/PUSH EXEC dial.



### To return to the standard setting

Select OK from the RESET item in step 5, then press the SEL/PUSH EXEC dial. To cancel, select CANCEL, then press the SEL/PUSH EXEC dial.

### To check the custom preset setting

Press CUSTOM PRESET while the camcorder is in standby, recording or memory mode. The custom preset setting appears on the LCD screen or in the viewfinder.

#### Once you adjust AE shift

The  -4 to  +4 indicator is displayed on the LCD screen or in the viewfinder. The number varies corresponding to the AE shift level.

#### About the AGC Limit

When adjusting the exposure manually, the level of the gain is up to 18 dB (OFF).

#### When you preset the desired picture quality in CAMERA or memory mode

The preset is only available in each mode you preset. If you want to use a preset both in CAMERA and memory modes, you have to preset in each mode.

## Предварительная настройка качества изображения – Индивидуальная настройка

### Для отмены индивидуальной настройки

Выберите установку OFF в пункте 4, затем нажмите на диск SEL/PUSH EXEC.

### Для восстановления стандартных настроек



Выберите установку OK для элемента RESET в пункте 5, затем нажмите на диск SEL/PUSH EXEC. Для отмены выберите CANCEL, затем нажмите на диск SEL/PUSH EXEC.

### Для проверки индивидуальной настройки

Когда видеоканал находится в режиме ожидания, записи или памяти, нажмите кнопку CUSTOM PRESET.

На экране ЖКД или в видоискателе появится индикация индивидуальной настройки.

#### После регулировки сдвига AE

На экране ЖКД или в видоискателе отображается индикатор от  -4 до  +4. Это число изменяется в соответствии с уровнем сдвига AE.

#### Об ограничении усиления AGC

При настройке экспозиции вручную уровень усиления составляет не более 18 дБ (ОФ).

Если предварительная настройка требуемого качества изображения выполняется в режиме CAMERA или памяти. Предварительная настройка доступна только в тех режимах, где она производится. Если предварительную настройку требуется использовать как в режиме CAMERA, так и в режиме памяти, ее необходимо сделать в каждом режиме.

## Using the PROGRAM AE function

You can select from five PROGRAM AE (Auto Exposure) modes to suit your shooting situation, referring to the following.

### Selecting the best mode

Select a proper PROGRAM AE mode referring to the following description.



#### Ⓐ: Aperture priority mode

Selecting the aperture to determine the desired depth of field. Gain and shutter speed are automatically set in combination with the aperture value to maintain appropriate exposure.

#### Ⓐ: Shutter speed priority mode

Selecting the shutter speed manually. The exposure value changes in accordance with the selected shutter speed.

#### Ⓐ: Sports lesson mode

Capturing high-speed action in sports such as golf or tennis.

#### Ⓐ: Sunset & Moon mode

Recording sunset, night views, fireworks or neon signs.

#### Ⓐ: Low flux mode

For recording a subject in insufficient light. Subject becomes bright.

## Использование функции PROGRAM AE

Можно выбрать один из пяти режимов PROGRAM AE (автоматическая экспозиция) в соответствии с условиями съемки, руководствуясь следующим.

### Выбор наиболее подходящего режима

Выберите необходимый режим PROGRAM AE на основе следующего описания.

#### Ⓐ: Режим приоритета диафрагмы

Выбор диафрагмы для определения необходимой глубины резкости. Усиление и скорость затвора настраиваются автоматически в соответствии с установленными значениями диафрагмы для получения необходимой экспозиции.

#### Ⓐ: Режим приоритета скорости затвора

Выбор скорости затвора вручную. Значения экспозиции изменяются в соответствии с выбранной скоростью затвора.

#### Ⓐ: Режим спортивных состязаний

Съемка быстро движущихся объектов, например, во время игры в гольф или теннис.

#### Ⓐ: Режим заката солнца и лунного освещения

Съемка закатов солнца, ночных видов, фейерверков и неоновых реклам.

#### Ⓐ: Режим низкой освещенности

Для съемки объектов при недостаточном освещении. Объект становится ярким.

## Using the PROGRAM AE function

### Использование функции PROGRAM AE


- (1) Set the AUTO LOCK selector to the center (auto lock release) position while the camcorder is in standby, recording, or memory mode.
- (2) Press PROGRAM AE. The PROGRAM AE indicator appears on the LCD screen or in the viewfinder.
- (3) Turn the SEL/PUSH EXEC dial to select the desired PROGRAM AE mode. The PROGRAM AE mode changes as follows:  
Aperture priority mode  $\leftrightarrow$  Shutter speed priority mode  $\leftrightarrow$  Sports lesson mode  $\leftrightarrow$  Sunset & Moon mode  $\leftrightarrow$  Low lux mode  
When you select the aperture priority mode or the shutter speed priority mode, press the SEL/PUSH EXEC dial.
- (4) In aperture priority mode (A) or shutter speed priority mode (S), turn the SEL/PUSH EXEC dial to select the desired aperture value (F value) or shutter speed. The gain and aperture values change in accordance with the selected aperture value.  
**Aperture priority mode:**  
Turn the SEL/PUSH EXEC dial to select the desired aperture value. As you turn the dial, the F value changes between F1.6 and F11.  
For a smaller aperture, select a higher value. The gain and shutter speed change in accordance with the selected aperture value.  
**Shutter speed priority mode:**  
Turn the SEL/PUSH EXEC dial to select the desired shutter speed. As you turn the dial, shutter speed changes between 1/50 and 1/10000.  
For a faster shutter speed, select a smaller value indicator on the LCD screen or in the viewfinder. The gain and aperture values change in accordance with the selected shutter speed.

## Использование функции PROGRAM AE

### Использование функции PROGRAM AE

- (1) Когда камера находится в режиме ожидания, записи или памяти, установите переключатель AUTO LOCK в центральное положение (отключение автоматической регулировки).
- (2) Нажмите кнопку PROGRAM AE. На экране ЖКД или в видоискателе появится индикатор PROGRAM AE.
- (3) Поверните диск SEL/PUSH EXEC для выбора нужного режима PROGRAM AE. Режим PROGRAM AE изменяется следующим образом:  
Режим приоритета диафрагмы  $\leftrightarrow$  Режим приоритета скорости затвора  $\leftrightarrow$  Режим спортивных состязаний  $\leftrightarrow$  Режим заката солнца и лунного освещения  $\leftrightarrow$  Режим низкой освещенности  
При выборе режима приоритета диафрагмы или режима приоритета скорости затвора нажмите на диск SEL/PUSH EXEC.
- (4) В режиме приоритета диафрагмы (A) или режима приоритета скорости затвора (S) поверните диск SEL/PUSH EXEC для выбора требуемой величины диафрагмы (значения F) или скорости затвора.  
**Режим приоритета диафрагмы:**  
Поверните диск SEL/PUSH EXEC для выбора требуемой величины диафрагмы. При повороте диска значение F изменяется от F1.6 до F11. Для малой диафрагмы выберите большее значение. Усиления и скорость затвора изменятся в соответствии с выбранной величиной диафрагмы.  
**Режим приоритета скорости затвора:**  
Поверните диск SEL/PUSH EXEC для выбора требуемой скорости затвора. При повороте диска скорость затвора изменится от 1/50 до 1/10000. Для более высокой скорости затвора выберите индикатор с меньшим значением на экране ЖКД или в видоискателе. Значения усиления и диафрагмы изменятся в соответствии с выбранной скоростью затвора.

## Using the PROGRAM AE function

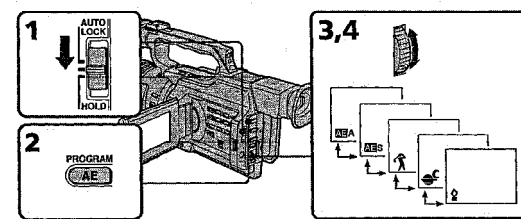

**To cancel using the PROGRAM AE function**  
Set the AUTO LOCK selector to AUTO LOCK or press PROGRAM AE. The PROGRAM AE indicator disappears from the LCD or viewfinder screen.

### Notes

- In sports lesson mode, you cannot take close-ups. This is because your camcorder is set to focus only on subjects in the middle to far distance.
- In sunset & moon mode, your camcorder is set to focus only on distant subjects.
- The old movie mode and the shutter speed adjustment do not work in PROGRAM AE mode.
- The following functions do not work in low lux mode:  
- Digital effect  
- Overlap  
- Wipe  
- Dot  
- Spot light mode
- While shooting in memory mode, the low lux and sports lesson modes do not work. (The indicator flashes.)

## Использование функции PROGRAM AE

**Для выключения функции PROGRAM AE**  
Установите переключатель AUTO LOCK в положение AUTO LOCK или нажмите кнопку PROGRAM AE. Индикатор PROGRAM AE исчезнет на экране ЖКД или в видоискателе.

### Примечания

- В режиме спортивных состязаний съемка крупным планом невозможна. Это объясняется тем, что видеокамера настроена для фокусировки только на объекты, находящиеся на среднем и дальнем расстояниях.
- В режиме заката солнца и лунного освещения видеокамера может фокусироваться только на удаленные объекты.
- Режим старинного кино и регулировка скорости затвора не работают в режиме PROGRAM AE.
- Следующие функции не работают в режиме низкой освещенности:  
- Цифровой эффект  
- Наложение изображения  
- Удаление изображения  
- Dot  
- Режим проекторного освещения
- При съемке в режиме MEMORY режимы низкой освещенности и спортивных состязаний не работают. (Индикатор мигает.)

78

## Using the PROGRAM AE function

If you are recording under a discharge tube such as a fluorescent lamp, sodium lamp or mercury lamp  
Flickering or changes in colour may occur in sports lesson mode. If this happens, turn the PROGRAM AE function off.

Even if the PROGRAM AE function is selected  
You can adjust the exposure.

When you focus in telephoto  
You cannot choose F1.6 and F2.

### About the depth of field

The depth of field is the in-focus range, measured from the distance behind a subject to the distance in front. The depth of field can vary with the iris (F value) and the focal length. Lowering the F value (large iris) reduces the depth of field. Raising the F value (small iris) provides a larger depth of field. Zooming in telephoto position offers a smaller depth of field while the depth of field in the wide-angle position is greater.

The depth of field	Shallow	Deep
Iris	Near open (Low F value)	Near close (High F value)
Zoom	Telephoto (T)	Wide (W)

## Использование функции PROGRAM AE

Если съемка производится при использовании газоразрядных ламп, например, ламп дневного света, натриевых или ртутных ламп  
В режиме спортивных состязаний может возникнуть мерцание или изменения цветности. Если это произойдет, выключите функцию PROGRAM AE.

Если выбрана функция PROGRAM AE  
Возможна настройка экспозиции.

При фокусировке объективом в положении "телефото"  
Значения F1.6 и F2 становятся недоступными.

### О глубине резкости

Глубина резкости - это область резко изображаемого пространства, определяемая расстоянием между плоскостями перед объектом фокусировки и зади него. Глубину резкости можно изменить с помощью ирисовой диафрагмы (величина F) и фокусного расстояния. При уменьшении значения F (большая величина диафрагмы) глубина резкости уменьшается. При увеличении значения F (малая величина диафрагмы) глубина резкости увеличивается. Съемка в положении "телефото" обеспечивает меньшую глубину резкости, глубина резкости в положении "широкоугольный" - больше.

Глубина резкости	Меньше	Больше
Диафрагма	Почти открыта (малое значение F)	Почти закрыта (большое значение F)
Трансфокация	Телефото (T)	Широкоугольный (W)

## Focusing manually

You can gain better results by manually adjusting the focus in the following cases:

- The autofocus mode is not effective when shooting  
- subjects through glass coated with water droplets  
- horizontal stripes  
- subjects with little contrast with backgrounds such as walls and sky
- When you want to change the focus from a subject in the foreground to a subject in the background
- Shooting a stationary subject when using a tripod




- (1) Slide FOCUS down to MANUAL in standby, recording, or memory mode. The  $\infty$  indicator appears on the LCD screen or in the viewfinder in recording, standby, or memory mode.
- (2) Turn the focus ring to sharpen the focus.

## Ручная фокусировка

Лучшие результаты с помощью ручной фокусировки можно получить в следующих случаях:

- Режим автоматической фокусировки является неэффективным при выполнении съемки  
- объектов через стекло, покрытое каплями  
- горизонтальных полос  
- объектов с малой контрастностью на таком фоне, как стена или небо
- Если нужно выполнить изменение фокусировки с объекта на переднем плане на объект на заднем плане
- При съемке неподвижного объекта с помощью штатива

- (1) Передвиньте регулятор FOCUS вниз в положение MANUAL, когда камера находится в режиме ожидания, записи или памяти на экране ЖКД или в видоискателе появится индикатор  $\infty$ .
- (2) Поверните кольцо фокусировки для получения четкой фокусировки.

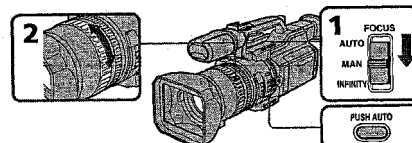

80

81

## Focusing manually

**To return to the autofocus mode**  
Slide FOCUS up to AUTO to turn off the indicator.

**To focus in infinity**  
Slide FOCUS to INFINITY. The indicator appears on the LCD screen or in the viewfinder. This function is useful when the nearer subject is focused automatically, even though you want to focus on a faraway subject.

**To shoot with auto focusing momentarily**  
Press PUSH AUTO.

The auto focus functions while you are pressing PUSH AUTO. Use this button to focus on one subject and then another with smooth focusing. When you release PUSH AUTO, manual focusing resumes.

**To obtain the correct focus**

First, focus on a subject manually with the zoom set toward the "T" (telephoto) side, then adjust the zoom by pressing the "W" side of the lever gradually.

**When you shoot close to the subject**  
Focus at the end of the "W" (wide-angle) position.

changes as follows:

- when recording a distant subject.
- when the subject is too close to focus on.

## Ручная фокусировка

**Для возврата в режим автоматической фокусировки**  
Передвиньте переключатель FOCUS вверх в положение AUTO, чтобы отключить индикатор или .

**Чтобы установить фокус на бесконечность**  
Передвиньте переключатель FOCUS в положение INFINITY. На экране ЖКД или в видоискателе появится индикатор . Эта функция полезна в том случае, когда фокусировка автоматически настраивается на ближний объект, а фокус требуется навести на удаленный объект.

**Для съемки с мгновенной автоматической фокусировкой**  
Нажмите кнопку PUSH AUTO. Автофокусировка выполняется во время нажатия кнопки PUSH AUTO. Используйте эту кнопку для фокусировки на один объект, а затем на другой с плавной фокусировкой. Когда отпускается кнопка PUSH AUTO, видеокамера возвращается в режим ручной фокусировки.

**Для получения правильной фокусировки**  
Сначала наведите фокус на объект вручную, передвинув рычажок трансформатора в направлении "T" (телефото), затем постепенно отрегулируйте трансфокацию, нажимая на сторону "W" рычажка.

**Если выполняется съемка вблизи объекта**  
Выполните фокусировку в конце положения "W" (широкоугольный).

**Индикатор будет изменяться следующим образом:**  
 при съемке удаленных объектов.  
 если объект находится слишком близко, чтобы выполнить фокусировку на него.

## Interval recording

You can make a time-lapse recording by setting the camcorder to automatically record and standby sequentially. You can achieve an excellent recording for flowering, emergence, etc. with this function.

## Запись с интервалами

Можно выполнить съемку с эффектом ускоренного движения, настроив видеокамеру таким образом, чтобы она последовательно выполняла запись и переходила в режим ожидания. С помощью этой функции можно получить уникальную съемку раскрытия цветка, появления всходов и т.д.

Example/Пример	
1 s/1 сек	9 min 59 s/9
[a] мин. 59 сек.	[a] мин. 59 сек.
[b]	[b]
10 min/10 мин.	10 min/10 мин.

[a] Recording time  
[b] Waiting time


[a] Время записи  
[b] Время ожидания

Advanced Recording Operations / Усовершенствованные операции с записью

82

## Interval recording

- Press MENU to display the menu in standby mode.
- Turn the SEL/PUSH EXEC dial to select , then press the dial.
- Turn the SEL/PUSH EXEC dial to select INT. REC, then press the dial.
- Turn the SEL/PUSH EXEC dial to select SET, then press the dial.
- Set INTERVAL and REC TIME.
  - Turn the SEL/PUSH EXEC dial to select INTERVAL, then press the dial. The time: 30SEC  $\leftrightarrow$  1MIN  $\leftrightarrow$  5MIN  $\leftrightarrow$  10MIN
  - Turn the SEL/PUSH EXEC dial to select REC TIME, then press the dial. The time: 0.5SEC  $\leftrightarrow$  1SEC  $\leftrightarrow$  1.5SEC  $\leftrightarrow$  2SEC
  - Turn the SEL/PUSH EXEC dial to select , then press the dial twice.

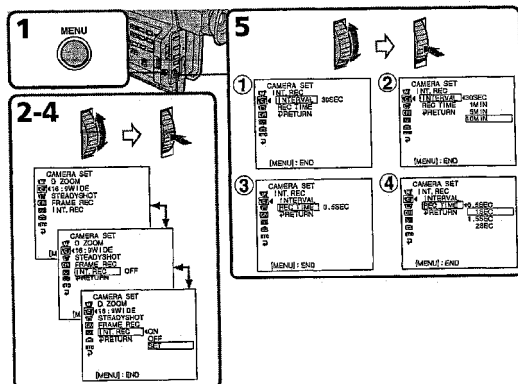


## Запись с интервалами

- Нажмите кнопку MENU для отображения меню в режиме ожидания.
- Поверните диск SEL/PUSH EXEC для выбора установки , а затем нажмите на диск.
- Поверните диск SEL/PUSH EXEC для выбора установки INT. REC, затем нажмите на диск.
- Поверните диск SEL/PUSH EXEC для выбора установки SET, затем нажмите на диск.
- Установите параметры INTERVAL и REC TIME.
  - Поверните диск SEL/PUSH EXEC для выбора установки INTERVAL, затем нажмите на диск. Время: 30сек  $\leftrightarrow$  1мин  $\leftrightarrow$  5мин  $\leftrightarrow$  10мин
  - Поверните диск SEL/PUSH EXEC для выбора продолжительности интервала, затем нажмите на диск. Время: 0.5сек  $\leftrightarrow$  1сек  $\leftrightarrow$  1.5сек  $\leftrightarrow$  2сек
  - Поверните диск SEL/PUSH EXEC для выбора необходимого времени записи, затем нажмите на диск. Время: 0.5сек  $\leftrightarrow$  1сек  $\leftrightarrow$  1.5сек  $\leftrightarrow$  2сек
  - Поверните диск SEL/PUSH EXEC для выбора , затем дважды нажмите на диск.

## Interval recording

- Turn the SEL/PUSH EXEC dial to select ON, then press the dial.
- Press MENU to erase the menu display. The interval recording indicator flashes.
- Press START/STOP to start interval recording. The interval recording indicator lights up.

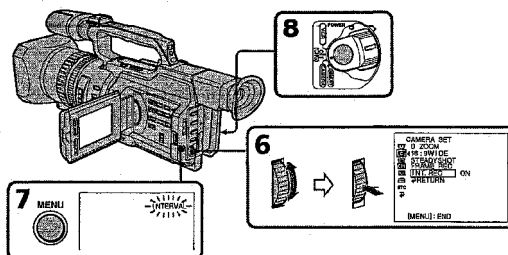

**To cancel the interval recording**  
• Set INT. REC to OFF in the menu settings.  
• Set the POWER switch to OFF (CHG), VCR or MEMORY.

**To stop the interval recording momentarily and perform normal recording**  
Press START/STOP. You can perform normal recording only once. To cancel the normal recording, press START/STOP again.

## Запись с интервалами

- Поверните диск SEL/PUSH EXEC для выбора установки ON, а затем нажмите на диск.
- Нажмите кнопку MENU для удаления индикации меню. Замигает индикатор записи с интервалами.
- Нажмите кнопку START/STOP, чтобы начать запись с интервалами. Загорится индикатор записи с интервалами.

**Для отмены записи с интервалами**  
• Установите команду INT. REC в положение OFF в установках меню.  
• Установите переключатель POWER в положение OFF (CHG), VCR или MEMORY.

**Чтобы мгновенно остановить запись с интервалами и выполнить обычную запись**  
Нажмите кнопку START/STOP. Обычную запись можно сделать только один раз. Для отмены обычной записи нажмите кнопку START/STOP еще раз.

Advanced Recording Operations / Усовершенствованные операции с записью

84

85

## Interval recording

### Note on interval recording

You cannot do interval recording in memory mode.

### On recording time

There may be a discrepancy in recording time of up to +/-6 frames from the selected time.

### Even if you press INDEX MARK during interval recording

You cannot mark an index.

## Запись с интервалами

### Замечания относительно записи с интервалами

Запись с интервалами невозможна в режиме памяти.

### О времени записи

Реальное время записи может отличаться от выбранного на +/- 6 кадров.

### Даже если нажать кнопку INDEX MARK во время записи с интервалами

Запись индексной метки невозможна.

## Frame by frame recording – Cut recording


You can make a recording with a stop-motion animated effect using cut recording. To create this effect, alternately move the subject a little and make a cut recording. We recommend that you use a tripod, and operate the camcorder using the Remote Commander after step 6.

- (1) Press MENU to display the menu in standby mode.
- (2) Turn the SEL/PUSH EXEC dial to select **6**, then press the dial.
- (3) Turn the SEL/PUSH EXEC dial to select FRAME REC, then press the dial.
- (4) Turn the SEL/PUSH EXEC dial to select ON, then press the dial.
- (5) Press MENU to erase the menu display. The FRAME REC indicator lights up.
- (6) Press START/STOP to start cut recording. The camcorder makes a recording for about six frames, and returns to recording standby.
- (7) Move the subject, and repeat step 6.

## Покадровая запись – Запись с монтажными кадрами

Можно выполнять съемку с эффектом замедленного анимационного изображения, используя запись с монтажными кадрами. Для создания такого эффекта перемещайте понемногу объект и выполняйте съемку с монтажными кадрами. Рекомендуется использовать штатив и управлять видеокamerой с помощью пульта дистанционного управления после пункта 8.

- (1) Нажмите кнопку MENU для отображения меню в режиме ожидания.
- (2) Поверните диск SEL/PUSH EXEC для выбора установки FRAME REC, затем нажмите на диск.
- (3) Поверните диск SEL/PUSH EXEC для выбора установки FRAME REC, затем нажмите на диск.
- (4) Поверните диск SEL/PUSH EXEC для выбора установки ON, а затем нажмите на диск.
- (5) Нажмите кнопку MENU для удаления индикации меню.
- (6) Нажмите кнопку START/STOP, чтобы начать запись с монтажными кадрами. Видеокamera сделает запись около шести кадров и возвратится в режим ожидания.
- (7) Переместите объект и повторите действия пункта 6.

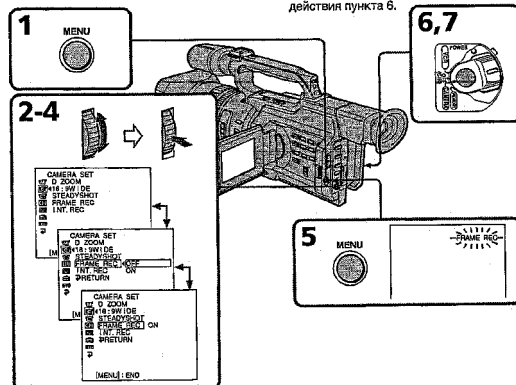

86

## Frame by frame recording – Cut recording

### To cancel the cut recording

- Set FRAME REC to OFF in the menu settings.
- Set the POWER switch to OFF (CHG), VCR, or MEMORY.

### Notes on cut recording

- The last recorded cut is longer than other cuts.
- The proper remaining tape time is not indicated if you use this function continuously.
- You cannot mark an index during cut recording.

## Покадровая запись – Запись с монтажными кадрами

### Для отмены записи с монтажными кадрами

- Установите команду FRAME REC в положение OFF в установках меню.
- Установите переключатель POWER в положение OFF (CHG), VCR или MEMORY.

### Замечания относительно записи с монтажными кадрами

- Последний записанный кадр дольше остальных.
- Оставшееся время записи на кассете отображается неверно, если эта функция используется часто.
- Во время записи с монтажными кадрами невозможно записать индексные метки.

## Marking an Index

If you mark an index at the scene you want to search for, you can easily search for the scene later (p. 93).

### In recording mode [a]:

Press INDEX MARK.

The "INDEX MARK" indicator appears on the LCD screen or in the viewfinder for seven seconds and the index is marked after the indicator disappears.

### In standby mode [b]:

Press INDEX MARK.

The "INDEX STBY" indicator appears on the LCD screen or in the viewfinder. And when you press START/STOP to start recording, the "INDEX MARK" indicator appears on the LCD screen or in the viewfinder for seven seconds. The index is marked after the indicator disappears.

The index signal is marked on the 11th frame from the recording start point (about 0.3 sec). You can mark an index in VCR mode (p. 129).

## Запись индексной метки

Если для определенного эпизода записать индексную метку, то в дальнейшем можно без труда его найти (стр. 93).

### В режиме записи [a]:


Нажмите кнопку INDEX MARK.

На экране ЖКД или в видоискателе в течение семи секунд загорится индикатор "INDEX MARK". Индексная метка будет записана после того, как исчезнет индикатор.

### В режиме ожидания [b]:

Нажмите кнопку INDEX MARK.

На экране ЖКД или в видоискателе появится индикатор "INDEX STBY". Когда нажимается кнопка START/STOP для начала записи, на экране ЖКД или в видоискателе в течение семи секунд загорится индикатор "INDEX MARK". Индексная метка записывается после того, как погаснет индикатор. Индексный сигнал записывается на 11-ом кадре с точки начала записи (приблизительно через 0,3 с). Индексную метку можно записать в режиме VCR (стр. 129).

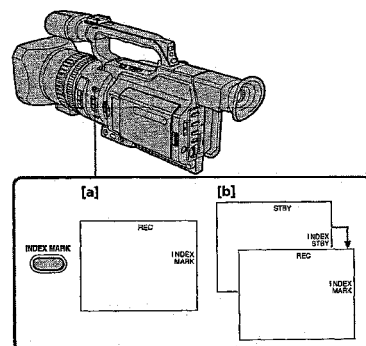

88

89

## Marking an Index

### To cancel index marking

Press INDEX again in standby mode.

### Note on the index

You cannot mark an index after recording.

## Запись индексной метки

### Для отмены записи индексной метки

Нажмите кнопку INDEX еще раз, когда камера находится в режиме ожидания.

**Замечание относительно индексной метки**  
Запись индексной метки после съемки невозможна.

## — Advanced Playback Operations — Quickly locating a scene using the zero set memory function


Using the zero set memory function, your camcorder rewinds or advances the tape to locate the desired scene, and the searching automatically stops at the scene having a tape counter value of "00:00:00." You can do this with the Remote Commander.

- (1) In playback mode, press DISPLAY if the counter is not on the LCD screen or in the viewfinder.
- (2) Press ZERO SET MEMORY at the point you want to locate later. The tape counter shows "00:00:00" and the ZERO SET MEMORY indicator flashes.
- (3) Press ■ when you want to stop playback.
- (4) Press ◀ to rewind the tape to the tape counter's zero point. The tape stops automatically when the tape counter reaches approximately zero. The ZERO SET MEMORY indicator disappears and the time code appears.
- (5) Press ▶. Playback starts.

## — Усовершенствованные операции воспроизведения — Быстрый поиск эпизода с помощью функции памяти нулевой отметки

С помощью функции памяти нулевой отметки видеокамера перематывает ленту назад или вперед для отыскания нужного эпизода с автоматической остановкой поиска на эпизоде, где показание счетчика ленты - "00:00:00". Это можно сделать с помощью пульта дистанционного управления.

- (1) В режиме воспроизведения нажмите кнопку DISPLAY, если на экране ЖКД или в видоискателе не отображается счетчик.
- (2) Нажмите кнопку ZERO SET MEMORY в месте, которое потребуется найти позже. Показание счетчика станет равным "00:00:00", и начнет мигать индикатор ZERO SET MEMORY.
- (3) Нажмите кнопку ■, когда необходимо остановить воспроизведение.
- (4) Нажмите кнопку ◀ для ускоренной перемотки ленты назад к нулевой точке счетчика ленты. Лента остановится автоматически, когда счетчик достигнет нулевой отметки. Индикатор ZERO SET MEMORY исчезнет, и появится код времени.
- (5) Нажмите кнопку ▶. Начнется воспроизведение.

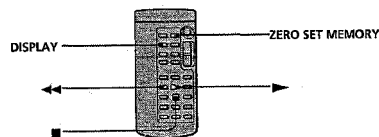

### Notes

- When you press ZERO SET MEMORY again before rewinding the tape, the zero set memory function will be cancelled.
- There may be a discrepancy of several seconds from the time code.

### Примечания

- Если еще раз нажать кнопку ZERO SET MEMORY до начала обратной перемотки ленты, то функция памяти нулевой отметки будет отменена.
- Между кодом времени и действительным временем может быть расхождение в несколько секунд.

90

## Quickly locating a scene using the zero set memory function

When there is a blank portion between pictures on a tape  
The zero set memory function may not work.

### ZERO SET MEMORY functions also in standby mode

When you insert a scene in the middle of a recorded tape, press ZERO SET MEMORY at the point you want to end the insertion. Rewind the tape to the insert start point, and start recording. Recording stops automatically at the tape counter zero point. Your camcorder returns to standby mode.

## Быстрый поиск эпизода с помощью функции памяти нулевой отметки

Если между записанными на ленте изображениями имеется незаписанный участок  
Функция памяти нулевой отметки может не работать.

**Функция ZERO SET MEMORY работает также в режиме готовности к записи**  
При вставке эпизода в середину записанной ленты, нажмите кнопку ZERO SET MEMORY в том месте, где нужно закончить вставку эпизода. Перемотайте ленту к началу вставки эпизода и начните запись. Запись остановится автоматически в месте нулевой отметки счетчика. Видеокамера вернется в режим ожидания.

## Searching for a recording by index - Index search

You can automatically search for the point where an index is marked and start playback from that point (Index search). Use a tape with cassette memory for convenience. Use the Remote Commander for this operation. Use this function to check where indexes are marked or to edit the tape at each sequence where the index is marked.

### Searching for the index point using cassette memory

You can use this function only when playing back a tape with cassette memory (p. 210).

- (1) Set the POWER switch to VCR.
- (2) Set CM SEARCH in [CM] to ON in the menu settings (p. 154). The default setting is ON.
- (3) Press SEARCH MODE on the Remote Commander repeatedly, until the index search indicator appears.  
The indicator changes as follows:  
INDEX SEARCH → TITLE SEARCH → DATE SEARCH → PHOTO SEARCH → PHOTO SCAN → no indicator
- (4) Press ◀ or ▶ on the Remote Commander to select the index point for playback.  
Your camcorder automatically starts playing back at the selected index point.


## Поиск записи по индексу - Поиск по индексу

Можно автоматически найти место, где записана метка, и начать воспроизведение с этого момента (поиск по индексу). Желательно использовать ленту с кассетной памятью. Для этой операции используйте пульт дистанционного управления. Используйте эту функцию для проверки того, где записаны индексные метки, или для редактирования ленты в каждом таком месте.

### Поиск точки индексной метки с помощью кассетной памяти

Эту функцию можно использовать только при воспроизведении ленты с кассетной памятью (стр. 210).

- (1) Установите переключатель POWER в положение VCR.
- (2) Установите команду CM SEARCH в [CM] в положение ON в установках меню (стр. 154). Установка по умолчанию - ON.
- (3) Нажимайте кнопку SEARCH MODE на пульте дистанционного управления до тех пор, пока не появится индикатор поиска по индексной метке. Индикатор изменяется следующим образом:  
INDEX SEARCH → TITLE SEARCH → DATE SEARCH → PHOTO SEARCH → PHOTO SCAN → без индикатора
- (4) Нажмите ◀ или ▶ на пульте дистанционного управления, чтобы выбрать индексную метку, с которой необходимо начать воспроизведение. Видеокамера автоматически начнет воспроизведение с выбранной индексной метки.

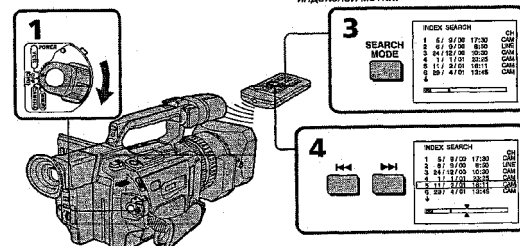


92




91

93

## Searching for a recording by index – Index search

### To stop searching






In the  mark

- The bar in the  mark indicates the present point on the tape.
- The  mark in the  indicates the actual point you are trying to search for.

If a tape has a blank portion between recorded portions  
The index search function may not work correctly.

If you mark an index onto an external input signal  
"LINE" appears in the CH1 column.

### Searching for the index point without using cassette memory


- (1) Set the POWER switch to VCR.
- (2) Set CM SEARCH in  to OFF in the menu settings (p. 154). If using a tape without cassette memory, skip this step.
- (3) Press SEARCH MODE on the Remote Commander repeatedly, until the index search indicator appears.  
The indicator changes as follows:  
INDEX SEARCH → DATE SEARCH → PHOTO SEARCH → PHOTO SCAN → no indicator
- (4) Press  on the Remote Commander to search for the previous index point or press  on the Remote Commander to search for the next index point. Your camcorder automatically starts playback at the selected index point. Each time you press  or , your camcorder searches for the previous or next index point.




### To stop searching

Press .

## Поиск записи по индексу – Поиск по индексу

### Для остановки поиска






В индикаторе 

- Полоса в индикаторе  указывает текущее место на ленте.
- Метка  в индикаторе  указывает текущее место поиска.

Если на ленте имеется незаписанный участок между записанными частями  
Функция поиска по индексу может работать неправильно.

Если индексная метка записывается на внешний входной сигнал  
В столбце CH1 появится индикация "LINE".

### Поиск индексной метки без использования кассетной памяти

- (1) Установите переключатель POWER в положение VCR.
- (2) Установите команду CM SEARCH в  в положение OFF в установках меню (стр. 154). Если используется лента без кассетной памяти, пропустите этот пункт.
- (3) Нажимайте кнопку SEARCH MODE на пульте дистанционного управления до тех пор, пока не появится индикатор поиска по индексной метке.  
Индикатор изменяется следующим образом:  
INDEX SEARCH → DATE SEARCH → PHOTO SEARCH → PHOTO SCAN → без индикатора
- (4) Нажмите  на пульте дистанционного управления для поиска предыдущей индексной метки или кнопку  на пульте дистанционного управления для поиска следующей индексной метки. Видеокамера автоматически начнет воспроизведение с выбранной индексной метки. Каждый раз при нажатии кнопки  или  видеокамера выполняет поиск предыдущей или следующей индексной метки.

### Для остановки поиска

Нажмите кнопку .


94




## Searching the boundaries of recorded tape by title – Title search

### To stop searching

Press .

If you use a tape without cassette memory  
You cannot superimpose or search for a title.

In the  mark

- The bar in the  mark indicates the present point on the tape.
- The  mark in the  indicates the actual point you are trying to search for.


If a tape has a blank portion between recorded portions  
The title search function may not work correctly.




## Поиск границ записи на ленте по титру – Поиск титра

### Для остановки поиска

Нажмите кнопку .

При использовании ленты без кассетной памяти  
Невозможно выполнять наложение или поиск титра.




В индикаторе 


- Полоса в индикаторе  указывает текущее место на ленте.
- Метка  в индикаторе  указывает текущее место поиска.

Если на ленте имеется незаписанный участок между записанными частями  
Функция поиска титра может работать неправильно.

## Searching the boundaries of recorded tape by title – Title search




If you use a tape with cassette memory, you can search for the boundaries of recorded tape by title (Title search) (p. 210). Use the Remote Commander for this operation.

- (1) Set the POWER switch to VCR.
- (2) Set CM SEARCH in  to ON in the menu settings (p. 154). The default setting is ON.
- (3) Press SEARCH MODE on the Remote Commander repeatedly, until the title search indicator appears.  
The indicator changes as follows:  
INDEX SEARCH → TITLE SEARCH → DATE SEARCH → PHOTO SEARCH → PHOTO SCAN → no indicator
- (4) Press  or  on the Remote Commander to select the title for playback. Your camcorder automatically starts playback of the scene having the title that you selected.

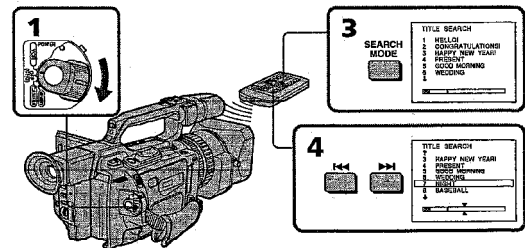

## Поиск границ записи на ленте по титру – Поиск титра

При использовании ленты с кассетной памятью можно выполнять поиск границ записи на ленте по титру (поиск титра) (стр. 210). Для этой операции используйте пульт дистанционного управления.

- (1) Установите переключатель POWER в положение VCR.
- (2) Установите команду CM SEARCH в  в положение ON в установках меню (стр. 154). Установка по умолчанию - ON.
- (3) Нажимайте кнопку SEARCH MODE на пульте дистанционного управления неоднократно до тех пор, пока не появится индикатор поиска титра. Индикатор изменяется следующим образом:  
INDEX SEARCH → TITLE SEARCH → DATE SEARCH → PHOTO SEARCH → PHOTO SCAN → без индикатора
- (4) Нажмите  или  на пульте дистанционного управления, чтобы выбрать титр для воспроизведения. Видеокамера автоматически начнет воспроизведение эпизода с выбранного титра.

Advanced Playback Operations / Усовершенствованные операции воспроизведения




95


## Searching a recording by date – Date search

You can automatically search for the point where the recording date changes and start playback from that point (Date search). Use a tape with cassette memory for convenience. Use the Remote Commander for this operation.  
Use this function to check where recording dates change or to edit the tape at each recording date.

### Searching for the date using cassette memory

You can use this function only when playing back a tape with cassette memory (p. 210).

- (1) Set the POWER switch to VCR.
- (2) Set CM SEARCH in  to ON in the menu settings (p. 154). The default setting is ON.
- (3) Press SEARCH MODE on the Remote Commander repeatedly, until the date search indicator appears.  
The indicator changes as follows:  
INDEX SEARCH → TITLE SEARCH → DATE SEARCH → PHOTO SEARCH → PHOTO SCAN → no indicator
- (4) Press  or  on the Remote Commander to select the date for playback. Your camcorder automatically starts playback at the beginning of the selected date.

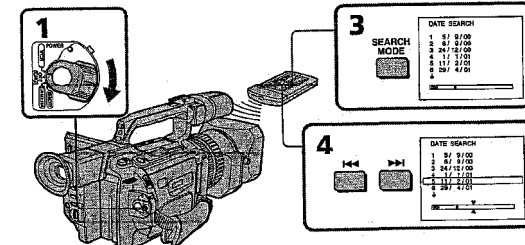




## Поиск записи по дате – Поиск даты

Можно автоматически выполнять поиск места, где изменится дата записи, и начинать воспроизведение с этого места (поиск даты). Желательно использовать ленту с кассетной памятью. Для этой операции используйте пульт дистанционного управления. Используйте эту функцию для поиска мест изменения даты записи или для выполнения монтажа во всех этих местах.

### Поиск даты с использованием кассетной памяти

Эту функцию можно использовать только при воспроизведении ленты с кассетной памятью (стр. 210).

- (1) Установите переключатель POWER в положение VCR.
- (2) Установите команду CM SEARCH в  в положение ON в установках меню (стр. 154). Установка по умолчанию - ON.
- (3) Нажимайте кнопку SEARCH MODE на пульте дистанционного управления до тех пор, пока не появится индикатор поиска даты. Индикатор изменяется следующим образом:  
INDEX SEARCH → TITLE SEARCH → DATE SEARCH → PHOTO SEARCH → PHOTO SCAN → без индикатора
- (4) Нажмите  или  на пульте дистанционного управления, чтобы выбрать дату для воспроизведения. Видеокамера автоматически начнет воспроизведение с выбранной даты.

Advanced Playback Operations / Усовершенствованные операции воспроизведения

96

97

## Searching a recording by date – Date search




### To stop searching

Press ■.

#### Note







If one day's recording is less than two minutes, your camcorder may not accurately find the point where the recording date changes.

#### In the mark

- The bar in the  mark indicates the present point on the tape.
- The  mark in the  indicates the actual point you are trying to search.

If a tape has a blank portion between recorded portions  
The date search function may not work correctly.

### Searching for the date without using cassette memory

- (1) Set the POWER switch to VCR.
- (2) Set CM SEARCH in  to OFF in the menu settings (p. 154). If using a tape without cassette memory, skip this step.
- (3) Press SEARCH MODE on the Remote Commander repeatedly, until the date search indicator appears.  
The indicator changes as follows:  
INDEX SEARCH → DATE SEARCH → PHOTO SEARCH → PHOTO SCAN → no indicator
- (4) Press  or  on the Remote Commander to search for the previous date or press  on the next date. Your camcorder automatically starts playback at the point where the date changes. Each time you press  or , your camcorder searches for the previous or next date.

### To stop searching




Press ■.

## Searching for a photo – Photo search/Photo scan

### To stop searching






Press ■.

#### In the mark

- The bar in the  mark indicates the present point on the tape.
- The  mark in the  indicates the actual point you are trying to search for.

If a tape has a blank portion between recorded portions  
The photo search function may not work correctly.

### Searching for a photo without using cassette memory

- (1) Set the POWER switch to VCR.
- (2) Set CM SEARCH in  to OFF in the menu settings (p. 154).
- (3) Press SEARCH MODE on the Remote Commander repeatedly, until the photo scan indicator appears.  
The indicator changes as follows:  
INDEX SEARCH → DATE SEARCH → PHOTO SEARCH → PHOTO SCAN → no indicator
- (4) Press  or  on the Remote Commander to select a photo for playback. Each time you press  or , your camcorder searches for the previous or next photo. Your camcorder automatically starts playback of the photo.

### To stop searching

Press ■.

## Поиск записи по дате – Поиск даты




### Для остановки поиска

Нажмите кнопку ■.

#### Примечание







Если продолжительность записи в течение одного дня менее двух минут, видеокамера может не точно найти место, где изменяется дата записи.

#### В индикаторе

- Полоса в индикаторе  указывает текущее место на ленте.
- Метка  в индикаторе  указывает текущее место поиска.

Если на ленте имеется незаписанный участок между записанными частями  
Функция поиска даты может работать неправильно.

### Поиск записи по дате без использования кассетной памяти

- (1) Установите переключатель POWER в положение VCR.
- (2) Установите команду CM SEARCH в  в положение OFF в установках меню (стр. 154). Если используется лента без кассетной памяти, пропустите этот пункт.
- (3) Нажимайте кнопку SEARCH MODE на пульте дистанционного управления до тех пор, пока не появится индикатор поиска даты. Индикатор изменится следующим образом:  
INDEX SEARCH → DATE SEARCH → PHOTO SEARCH → PHOTO SCAN → без индикатора
- (4) Нажмите  или  на пульте дистанционного управления для поиска предыдущей даты или нажмите кнопку  на пульте дистанционного управления для поиска следующей даты. Видеокамера автоматически начнет воспроизведение в том месте, где изменяется дата. Каждый раз при нажатии кнопки  или , видеокамера выполняет поиск предыдущей или следующей даты.

### Для остановки поиска




Нажмите кнопку ■.


## Searching for a photo – Photo search/Photo scan

You can search for a still picture you have recorded on a mini DV tape (photo search). You can also search for still pictures one after another and display each picture for five seconds automatically regardless of cassette memory (photo scan). Use the Remote Commander for these operations. Use this function to check or edit still pictures.

### Searching for a photo using cassette memory

You can use this function only when playing back a tape with cassette memory (p. 210).

- (1) Set the POWER switch to VCR.
- (2) Set CM SEARCH in  to ON in the menu settings (p. 154). Default setting is ON.
- (3) Press SEARCH MODE on the Remote Commander repeatedly, until the photo search indicator appears.  
The indicator changes as follows:  
INDEX SEARCH → TITLE SEARCH → DATE SEARCH → PHOTO SEARCH → PHOTO SCAN → no indicator
- (4) Press  or  on the Remote Commander to select the date for playback. Your camcorder automatically starts playback of the photo having the date that you selected.

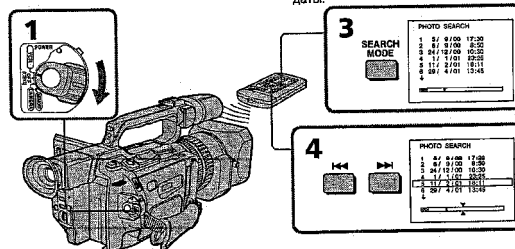




## Поиск фото – Фотопоиск/Фотосканирование

Можно выполнить поиск неподвижного изображения, записанного на ленте мини DV (фотопоиск). Можно также выполнять поиск неподвижных изображений поочередно и отображать каждое из них в течение пяти секунд, независимо от кассетной памяти (фотосканирование). Для этих операций используйте пульт дистанционного управления. Используйте эту функцию для проверки или монтажа неподвижных изображений.



### Поиск фото с использованием кассетной памяти


Эту функцию можно использовать только при воспроизведении ленты с кассетной памятью (стр. 210).

- (1) Установите переключатель POWER в положение VCR.
- (2) Установите команду CM SEARCH в  в положение ON в установках меню (стр. 154). Установкой по умолчанию является ON.
- (3) Нажимайте кнопку SEARCH MODE на пульте дистанционного управления до тех пор, пока не появится индикатор поиска фото. Индикатор изменится следующим образом:  
INDEX SEARCH → TITLE SEARCH → DATE SEARCH → PHOTO SEARCH → PHOTO SCAN → без индикатора
- (4) Нажмите  или  на пульте дистанционного управления, чтобы выбрать дату для воспроизведения. Видеокамера автоматически начнет воспроизведение фото с выбранной даты.

## Searching for a photo – Photo search/Photo scan

### Scanning photo

- (1) Set the POWER switch to VCR.
- (2) Press SEARCH MODE on the Remote Commander repeatedly, until the photo scan indicator appears.  
The indicator changes as follows:  
INDEX SEARCH → TITLE SEARCH → DATE SEARCH → PHOTO SEARCH → PHOTO SCAN → no indicator
- (3) Press  or  on the Remote Commander.  
Each photo is played back for about five seconds automatically.


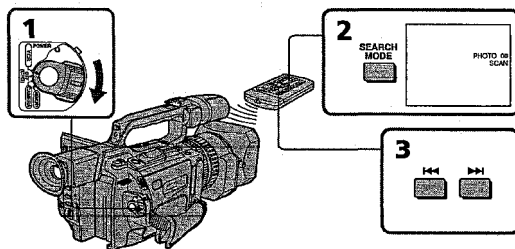


### To stop scanning

Press ■.

## Поиск фото – Фотопоиск/Фотосканирование

### Сканирование фото

- (1) Установите переключатель POWER в положение VCR.
- (2) Нажимайте кнопку SEARCH MODE на пульте дистанционного управления до тех пор, пока не появится индикатор поиска фотосканирования. Индикатор изменится следующим образом:  
INDEX SEARCH → TITLE SEARCH → DATE SEARCH → PHOTO SEARCH → PHOTO SCAN → без индикатора
- (3) Нажмите  или  на пульте дистанционного управления. Каждое фото будет автоматически отображаться в течение приблизительно пяти секунд.

### Для остановки сканирования

Нажмите кнопку ■.




## Playing back a tape with picture effects

During playback, you can process a scene using the picture effect functions: NEG. ART, SEPIA, B&W and SOLARIZE.

In playback or playback pause mode, press PICTURE EFFECT and turn the SEL/PUSH EXEC dial until the desired picture effect indicator (NEG. ART, SEPIA, B&W or SOLARIZE) appears.

For details of each picture effect function, see page 56.

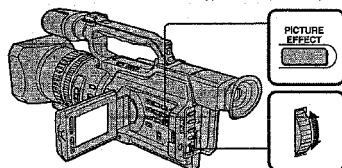

### To cancel the picture effect function

Press PICTURE EFFECT so that the indicator disappears.

#### Notes

- You cannot process a picture using the picture effect function that is input from other equipment.
- To record pictures that you have processed using the picture effect function, record the pictures on the VCR, using your camcorder as a player.

#### Pictures processed by the picture effect function

Pictures processed by the picture effect function are not output through the DV IN/OUT jack.

When you set the POWER switch to OFF (CHG) or stop playing back The picture effect function will be automatically cancelled.

## Воспроизведение ленты с эффектами изображения

Во время воспроизведения можно видоизменять изображение с помощью функций эффектов изображения: NEG. ART, SEPIA, B&W и SOLARIZE.

В режиме воспроизведения или паузы воспроизведения нажмите кнопку PICTURE EFFECT и поворачивайте диск SEL/PUSH EXEC до тех пор, пока не появится индикатор нужного цифрового эффекта (NEG. ART, SEPIA, B&W или SOLARIZE).

Подробные сведения по каждой функции цифровых эффектов приведены на стр. 56.

### Для отмены функции эффектов изображения

Нажмите кнопку PICTURE EFFECT, чтобы индикатор исчез.

#### Примечания

- Изображения, введенные с другой аппаратуры, невозможно изменить с помощью функции эффектов изображения.
- Для записи изображений, которые были видоизменены с помощью функции эффектов изображения, запишите изображения на видеомagnetofон, используя видеокamerу в качестве плейера.

Изображения, видоизмененные с помощью функции эффектов изображения, видоизмененные с помощью функции эффектов изображения, не передаются через гнездо входа/выхода DV IN/OUT.

При установке переключателя POWER в положение OFF (CHG) или остановке воспроизведения Функция эффектов изображения будет автоматически отменена.

## Playing back a tape with digital effects


During playback, you can process a scene using the digital effect functions: STILL, FLASH, LUMI. and TRAIL.

- In playback or playback pause mode, press DIGITAL EFFECT and turn the SEL/PUSH EXEC dial until the desired digital effect indicator (STILL, FLASH, LUMI. or TRAIL) flashes.
- Press the SEL/PUSH EXEC dial. The digital effect indicator lights up and the bars appear. In STILL or LUMI. mode, the picture is captured and is stored in memory as a still picture at the time you press the SEL/PUSH EXEC dial.
- Turn the SEL/PUSH EXEC dial to adjust the effect. For details of each digital effect function, see page 58.

## Воспроизведение ленты с цифровыми эффектами

Во время воспроизведения можно видоизменять изображение с помощью функций цифровых эффектов: STILL, FLASH, LUMI. и TRAIL.

- В режиме воспроизведения или паузы воспроизведения нажмите кнопку DIGITAL EFFECT и поворачивайте диск SEL/PUSH EXEC до тех пор, пока не начнет мигать индикатор нужного цифрового эффекта (STILL, FLASH, LUMI. или TRAIL).
- Нажмите на диск SEL/PUSH EXEC. Загорится индикатор цифрового эффекта и появятся полосы. В режиме STILL или LUMI. во время нажатия диска SEL/PUSH EXEC изображение снимается и сохраняется в память как неподвижное изображение.
- Поворачивайте диск SEL/PUSH EXEC для регулировки эффекта. Подробные сведения по каждой функции цифровых эффектов приведены на стр. 58.

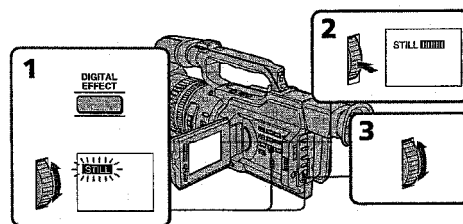

### To cancel the digital effect function

Press DIGITAL EFFECT so that the indicator disappears.

### Для отмены функции цифровых эффектов

Нажмите кнопку DIGITAL EFFECT, чтобы индикатор исчез.

102

## Playing back a tape with digital effects

#### Notes

- You cannot process a picture using the digital effect function that is input from other equipment.
- To record pictures that you have processed using the digital effect function, record the pictures on the VCR, using your camcorder as a player.

#### Pictures processed by the digital effect function

Pictures processed by the digital effect function are not output through the DV IN/OUT jack.

When you set the POWER switch to OFF (CHG) or stop playing back The digital effect function will be automatically cancelled.

## Воспроизведение ленты с цифровыми эффектами

#### Примечания

- Изображения, введенные с другой аппаратуры, невозможно изменить с помощью функции цифровых эффектов.
- Для записи изображений, которые были видоизменены с помощью функции цифровых эффектов, запишите изображения на видеомagnetofон, используя видеокamerу в качестве плейера.

Изображения, видоизмененные с помощью функции цифровых эффектов, видоизмененные с помощью функции цифровых эффектов, не передаются через гнездо входа/выхода DV IN/OUT.

При установке переключателя POWER в положение OFF (CHG) или остановке воспроизведения Функция цифровых эффектов автоматически отменяется.

## — Editing — Dubbing a tape

Using the A/V connecting cable  
Connect your camcorder to the VCR using the A/V connecting cable supplied with your camcorder.

#### Before a dubbing

Set DISPLAY to LCD in the menu settings. (Default setting is LCD.)

Set the input selector on the VCR to LINE, if available.

- Insert a blank tape (or a tape you want to record over) into the VCR, and insert the recorded tape into your camcorder.
- Set the input selector on the VCR to LINE. For details, refer to the operating instructions of the VCR.
- Set the POWER switch to VCR.
- Play back the recorded tape on your camcorder.
- Start recording on the VCR. For details, refer to the operating instructions of the VCR.

## — Монтаж — Перезапись ленты

Использование соединительного кабеля аудио/видео


Подсоедините видеокamerу к видеомagnetofону с помощью соединительного кабеля аудио/видео, который прилагается к видеокamerу.

#### Перед перезаписью

Установите параметр DISPLAY в положение LCD в установках меню. (Установкой по умолчанию является LCD.)

Установите селекторный переключатель входного сигнала на видеомagnetofоне в положение LINE, если таковое имеется.

- Вставьте незаписанную ленту (или ленту, на которую необходимо выполнить запись) в видеомagnetofон и вставьте записанную ленту в видеокamerу.
- Установите селектор входного сигнала на видеомagnetofоне в положение LINE. Подробные сведения см. в инструкции по эксплуатации видеомagnetofона.
- Установите переключатель POWER в положение VCR.
- Начните воспроизведение записанной ленты на видеокamerу.
- Начните запись на видеомagnetofоне. Подробные сведения см. в инструкции по эксплуатации видеомagnetofона.

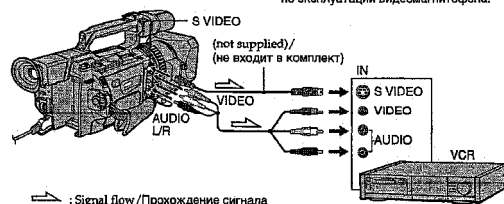

When you have finished dubbing the tape  
Press ■ on both your camcorder and the VCR.

Когда перезапись ленты закончена  
Нажмите кнопку ■ на видеокamerу и на видеомagnetofоне.

104

103



## Dubbing only desired scenes - Digital program editing

### Preparation 2: Setting the VCR to operate by infrared rays emitter

To edit using the VCR, send the control signal by infrared ray to the remote sensor on the VCR. When you connect using the A/V cable, this procedure is required.

- (1) Set the POWER switch to VCR on your camcorder.
- (2) Turn the power of the connected VCR on, then set the input selector to LINE. When you connect a video camera recorder, set its POWER switch to VCR.
- (3) Press MENU to display the menu.
- (4) Turn the SEL/PUSH EXEC dial to select EDIT, then press the dial.
- (5) Turn the SEL/PUSH EXEC dial to select EDIT SET, then press the dial.
- (6) Turn the SEL/PUSH EXEC dial to select CONTROL, then press the dial.
- (7) Turn the SEL/PUSH EXEC dial to select IR, then press the dial.

### Set the IR SETUP code

- (8) Turn the SEL/PUSH EXEC dial to select IR SETUP, then press the dial.
- (9) Turn the SEL/PUSH EXEC dial to select the IR SETUP code of your VCR, then press the dial. See "About the IR SETUP code" on page 112.

## Перезапись только нужных эпизодов - Цифровой видеомонтаж по программе

### Подготовка 2: Настройка управления видеоманитора от инфракрасного излучателя

Для выполнения монтажа с использованием видеоманитора можно посылать на его ИК-датчик ИК-сигналы управления. При подключении с помощью соединительного кабеля аудио/видео эта процедура обязательна.


- (1) Установите на видеокамере переключатель POWER в положение VCR.
- (2) Включите питание подключенного видеоманитора и установите селектор входного сигнала в положение LINE. При подсоединении видеокамеры установите ее переключатель POWER в положение VCR.
- (3) Нажмите кнопку MENU для отображения меню.
- (4) Поверните диск SEL/PUSH EXEC для выбора установки EDIT, а затем нажмите на диск.
- (5) Поверните диск SEL/PUSH EXEC для выбора EDIT SET, а затем нажмите на диск.
- (6) Поверните диск SEL/PUSH EXEC для выбора CONTROL, а затем нажмите на диск.
- (7) Поверните диск SEL/PUSH EXEC для выбора IR, а затем нажмите на диск.

### Установка кода IR SETUP

- (8) Поверните диск SEL/PUSH EXEC для выбора IR SETUP, а затем нажмите на диск.
- (9) Поверните диск SEL/PUSH EXEC для выбора кода IR SETUP на видеоманиторе, а затем нажмите на диск. См. раздел "Информация о коде IR SETUP" на стр. 112.

## Dubbing only desired scenes - Digital program editing

## Перезапись только нужных эпизодов - Цифровой видеомонтаж по программе

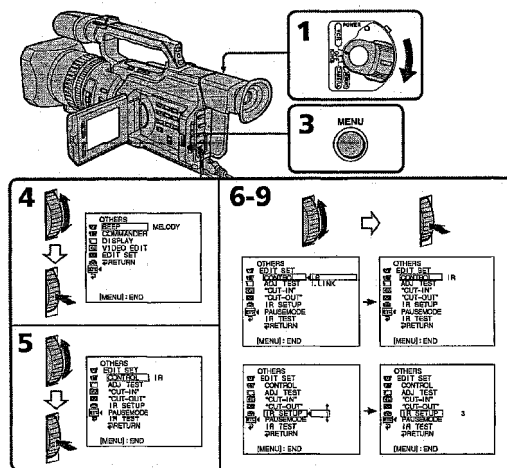

110

## Dubbing only desired scenes - Digital program editing

### About the IR SETUP code

The IR SETUP code is stored in the memory of your camcorder. Be sure to set the correct code, depending on your VCR. Code number 1 is the default setting.

Brand	Remote control code
Sony	1, 2, 3, 4, 5, 6
Aliva	53
Akai	62, 50, 74
Aliba	73
Baird	36, 30
Blaupunkt	83, 78
Bush	74
Canon	97
CGM	47, 83, 35
Ciatronic	73
Daewoo	26
Ferguson	76
Fisher	73
Funai	80
Goldstar	47
Goodmans	26, 84
Grundig	83, 09
Hitachi	42, 56
ITT/Nikka	36
Instant	12, 21, 15, 11
JVC	47
Kendo	16, 47, 84
Loewe	89
Luxor	26*
Mark	47, 60, 58*
Matsui	28, 29
Mitsubishi	89, 36
Nokia	89
Nokia Oceanic	76, 100
Nordmende	

## Перезапись только нужных эпизодов - Цифровой видеомонтаж по программе

### Информация о коде IR SETUP

Код IR SETUP содержится в памяти видеокамеры. Установите правильный код, соответствующий используемому видеоманитору. По умолчанию устанавливается код номер 1.

Фирма-изготовитель	Код пульта дистанционного управления
Sony	1, 2, 3, 4, 5, 6
Aliva	53
Akai	62, 50, 74
Aliba	73
Baird	36, 30
Blaupunkt	83, 78
Bush	74
Canon	97
CGM	47, 83, 35
Ciatronic	73
Daewoo	26
Ferguson	76
Fisher	73
Funai	80
Goldstar	47
Goodmans	26, 84
Grundig	83, 09
Hitachi	42, 56
ITT/Nikka	36
Instant	12, 21, 15, 11
JVC	47
Kendo	16, 47, 84
Loewe	89
Luxor	26*
Mark	47, 60, 58*
Matsui	28, 29
Mitsubishi	89, 36
Nokia	89
Nokia Oceanic	76, 100
Nordmende	

## Dubbing only desired scenes - Digital program editing

Brand	Remote control code
Okano	60, 62, 63
Orion	70, 58*
Panasonic	16, 78, 96
Philips	83, 84, 86
Phonola	83, 84
Roadstar	47
SABA	76, 21
Samsung	93, 94, 52, 22
Sanyo	36
Schneider	84, 10
SEC	73
Seleco	47, 74
Sharp	89
Siemens	10, 36
Tandberg	26
Telefunken	91, 92
Thomson	76
Thorn	36, 47
Toshiba	40
Universum	92, 70, 47
W. W. House	47
Watson	83, 58

\* TV/VCR component

### Note on remote control code

You cannot do assemble editing with some VCRs (for recording) if the remote control code does not correspond to this camcorder (for playback).

## Перезапись только нужных эпизодов - Цифровой видеомонтаж по программе

Фирма-изготовитель	Код пульта дистанционного управления
Okano	60, 62, 63
Orion	70, 58*
Panasonic	16, 78, 96
Philips	83, 84, 86
Phonola	83, 84
Roadstar	47
SABA	76, 21
Samsung	93, 94, 52, 22
Sanyo	36
Schneider	84, 10
SEC	73
Seleco	47, 74
Sharp	89
Siemens	10, 36
Tandberg	26
Telefunken	91, 92
Thomson	76
Thorn	36, 47
Toshiba	40
Universum	92, 70, 47
W. W. House	47
Watson	83, 58

\* ТВ/видеоманитор

Замечания относительно кода пульта дистанционного управления  
С некоторыми видеоманиторами нельзя выполнять монтаж (для записи), если код пульта дистанционного управления не соответствует этой видеокамере (для воспроизведения).

112

111


Editing / Монтаж

## Dubbing only desired scenes - Digital program editing

### Setting the buttons to cancel the recording pause on the VCR

- (1) Turn the SEL/PUSH EXEC dial to select PAUSEMODE, then press the dial.
- (2) Turn the SEL/PUSH EXEC dial to select the button to cancel recording pause on the VCR, then press the dial.

The correct button depends on your VCR. Refer to the operating instructions of your VCR.

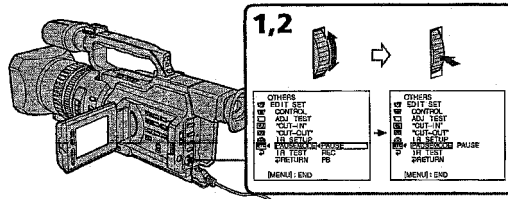

### The buttons to cancel recording pause on the VCR

- The buttons vary depending on your VCR. To cancel recording pause:
- Select PAUSE if the button to cancel recording pause is II.
  - Select REC if the button to cancel recording pause is ●.
  - Select PB if the button to cancel recording pause is ►.

## Перезапись только нужных эпизодов - Цифровой видеомонтаж по программе

### Настройка кнопок для отмены паузы при записи на видеомэгнитофоне


- (1) Поверните диск SEL/PUSH EXEC для выбора PAUSEMODE, а затем нажмите на диск.
- (2) Поверните диск SEL/PUSH EXEC, чтобы выбрать кнопку для отмены паузы при записи на видеомэгнитофоне, а затем нажмите на диск.

Выбор правильной кнопки зависит от видеомэгнитофона. Обратитесь к инструкции по эксплуатации видеомэгнитофона.

## Dubbing only desired scenes - Digital program editing

### Setting your camcorder and the VCR to face each other

Locate the infrared ray emitter of your camcorder and face it towards the remote sensor of the VCR. Set the devices about 30 cm (about 11 7/8 in) apart, and remove any obstacles between the devices.

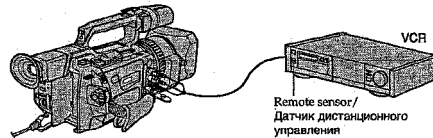

### Confirming the VCR operation

- (1) Insert a recordable tape into the VCR, then set it to recording pause.
- (2) Turn the SEL/PUSH EXEC dial to select IR TEST, then press the dial.
- (3) Turn the SEL/PUSH EXEC dial to select EXECUTE, then press the dial.

If the VCR starts recording, the setting is correct. When finished, the indicator changes to COMPLETE.

## Перезапись только нужных эпизодов - Цифровой видеомонтаж по программе


### Установка видеокамеры и видеомэгнитофона друг против друга

Инфракрасный излучатель видеокамеры необходимо направить на датчик дистанционного управления видеомэгнитофона. Установите устройства на расстоянии примерно 30 см и устраните любые препятствия между ними.

### Подтверждение работы видеомэгнитофона

- (1) Вставьте кассету для записи в видеомэгнитофон, затем установите режим паузы записи.
- (2) Поверните диск SEL/PUSH EXEC для выбора IR TEST, а затем нажмите на диск.
- (3) Поверните диск SEL/PUSH EXEC для выбора установки EXECUTE, а затем нажмите на диск.

Если видеомэгнитофон производит запись, это означает правильную настройку. По окончании индикатор изменится на COMPLETE.

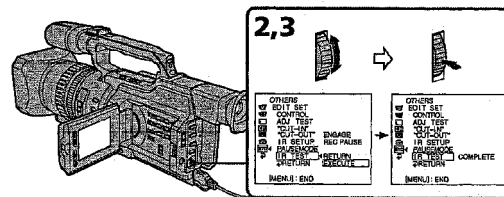

114

115

## Dubbing only desired scenes - Digital program editing

### When the VCR does not operate correctly

Set the IR SETUP code, or select the button to cancel the recording pause on the VCR.

### Preparation 2: Setting the VCR to operate with an i.LINK cable (DV connecting cable)

When you connect using an i.LINK cable (DV connecting cable) (not supplied), follow the procedures below.

- (1) Set the POWER switch to VCR on your camcorder.
- (2) Turn the power of the connected VCR on, then set the input selector to DV input.
- (3) Press MENU to display the menu.
- (4) Turn the SEL/PUSH EXEC dial to select EDIT SET, then press the dial.
- (5) Turn the SEL/PUSH EXEC dial to select EDIT SET, then press the dial.
- (6) Turn the SEL/PUSH EXEC dial to select CONTROL, then press the dial.
- (7) Turn the SEL/PUSH EXEC dial to select i.LINK, then press the dial.

## Перезапись только нужных эпизодов - Цифровой видеомонтаж по программе



Если видеомэгнитофон работает неправильно. Установите код IR SETUP или выберите кнопку для отмены паузы при записи на видеомэгнитофоне.

### Подготовка 2: Настройка видеомэгнитофона для работы с кабелем i.LINK (соединительным кабелем DV)

При соединении с помощью кабеля i.LINK (соединительного кабеля DV) (не входит в комплект) выполняйте процедуры, указанные ниже.

- (1) Установите на видеокамере переключатель POWER в положение VCR.
- (2) Включите питание на подсоединенном видеомэгнитофоне, затем установите селектор входного сигнала в положение входного сигнала DV.
- (3) При подсоединении видеокамеры установите ее переключатель POWER в положение VCR.
- (4) Нажмите кнопку MENU для отображения меню.
- (5) Поверните диск SEL/PUSH EXEC для выбора установки EDIT SET, а затем нажмите на диск.
- (6) Поверните диск SEL/PUSH EXEC для выбора CONTROL, а затем нажмите на диск.
- (7) Поверните диск SEL/PUSH EXEC для выбора i.LINK, а затем нажмите на диск.



## Dubbing only desired scenes - Digital program editing

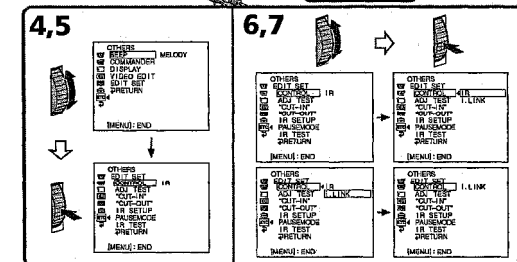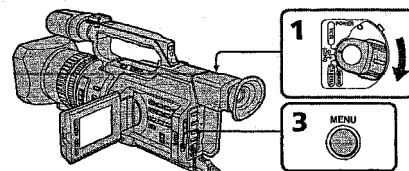

### Preparation 3: Adjusting the synchronization of the VCR

You can adjust the synchronization of your camcorder and the VCR. Remove the cassette from the camcorder beforehand. We recommend that you prepare a pen and paper for notes. When you connect to a Sony VCR using an i.LINK cable (DV connecting cable), and have set CONTROL to i.LINK, the setup below is not necessary.

## Перезапись только нужных эпизодов - Цифровой видеомонтаж по программе

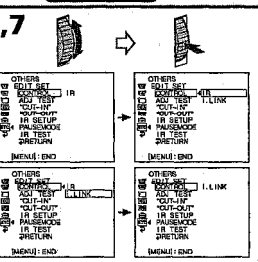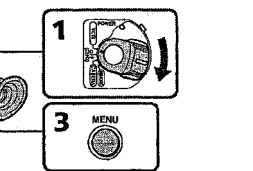

### Подготовка 3: Настройка синхронизации видеомэгнитофона


Можно настроить синхронизацию видеокамеры и видеомэгнитофона. Предварительно извлеките кассету из видеокамеры. Рекомендуется приготовить ручку и бумагу для записей. Если подключен видеомэгнитофон Sony с помощью кабеля i.LINK (соединительного кабеля DV), и команда CONTROL установлена в положение i.LINK, описанную ниже процедуру настройки выполнять не нужно.

116

117

### Dubbing only desired scenes – Digital program editing

- (1) Insert a recordable tape into the VCR, then set it to recording pause.  
When you connect using an i.LINK cable (DV connecting cable) and have set CONTROL to i.LINK, you do not have to turn the recording VCR to recording pause mode.
- (2) Set the POWER switch to VCR.
- (3) Press MENU to display the menu.
- (4) Turn the SEL/PUSH EXEC dial to select **EDIT**, then press the dial.
- (5) Turn the SEL/PUSH EXEC dial to select **EDIT SET**, then press the dial.
- (6) Turn the SEL/PUSH EXEC dial to select **ADJ TEST**, then press the dial.
- (7) Turn the SEL/PUSH EXEC dial to select **EXECUTE**, then press the dial.  
CUT-IN and CUT-OUT are recorded on an image for five times each to calculate the numerical values for adjusting the synchronization.  
The EXECUTING indicator flashes on the LCD screen or in the viewfinder. When finished, the indicator changes to **COMPLETE**.

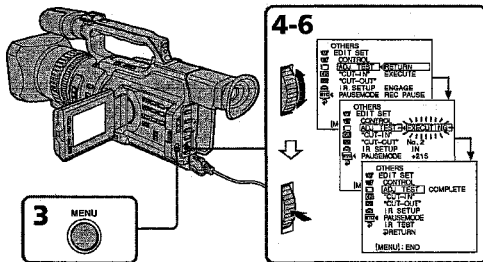



118

### Перезапись только нужных эпизодов – Цифровой видеомонтаж по программе

- (1) Вставьте кассету для записи в видеоманитон, затем установите режим паузы записи.  
Если подключение выполнено с помощью кабеля i.LINK (соединительного кабеля DV) и команда CONTROL установлена в положение i.LINK, записывающий видеоманитон не нужно переводить в режим паузы записи.
- (2) Установите переключатель POWER в положение VCR.
- (3) Нажмите кнопку MENU для отображения меню.
- (4) Поверните диск SEL/PUSH EXEC для выбора установки **EDIT**, а затем нажмите на диск.
- (5) Поверните диск SEL/PUSH EXEC для выбора **EDIT SET**, а затем нажмите на диск.
- (6) Поверните диск SEL/PUSH EXEC для выбора **ADJ TEST**, а затем нажмите на диск.
- (7) Поверните диск SEL/PUSH EXEC для выбора установки **EXECUTE**, а затем нажмите на диск.  
На изображение запишутся по пять меток CUT-IN и CUT-OUT, позволяющие рассчитать числовые значения для настройки синхронизации.  
На экране ЖКД или в видоскопике мигает индикатор EXECUTING. По окончании индикатор изменится на **COMPLETE**.

### Dubbing only desired scenes – Digital program editing

- (8) Rewind the tape in the VCR, then start slow playback.  
Take a note of the opening numerical value of each CUT-IN and the closing numerical value of each CUT-OUT.
- (9) Calculate the average of all the opening numerical values of each CUT-IN, and the average of all the closing numerical values of each CUT-OUT.
- (10) Turn the SEL/PUSH EXEC dial to select "CUT-IN," then press the dial.
- (11) Turn the SEL/PUSH EXEC dial to select the average numerical value of CUT-IN, then press the dial.  
The calculated start position for recording is set.
- (12) Turn the SEL/PUSH EXEC dial to select "CUT-OUT," then press the dial.
- (13) Turn the SEL/PUSH EXEC dial to select the average numerical value of CUT-OUT, then press the dial.  
The calculated stop position for recording is set.
- (14) Turn the SEL/PUSH EXEC dial to select **RETURN**, then press the dial.

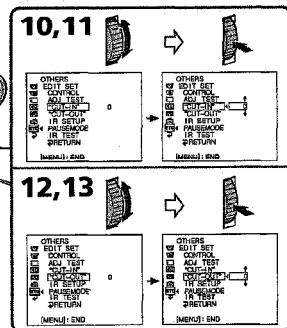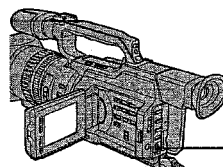

Editing / Монтаж

119

### Dubbing only desired scenes – Digital program editing

#### Errors in editing

If you connect your camcorder to Sony equipment with the DV jack, the range of errors is within +/- 5 frames.  
The range may become wider in the following conditions:  
• The interval between CUT-IN and CUT-OUT is less than five seconds (p. 121).  
• CUT-IN or CUT-OUT is set at the beginning of the tape.

When "ENGAGE REC PAUSE" appears on the LCD screen or in the viewfinder  
Turn the recording VCR to recording pause mode.

#### Note

If you start recording from the very beginning of the tape, the first few seconds of the tape may not record properly. Be sure to allow about 10 seconds' lead before starting the recording.

If the VCR does not operate correctly  
Make sure the IR SETUP code is correct; reset if necessary.

When the operations of the VCR do not work with an i.LINK cable  
Keep the i.LINK connection, and carry out Preparation 2 (p. 116) again. The audio and video signals are sent as digital signals.

### Перезапись только нужных эпизодов – Цифровой видеомонтаж по программе

#### Ошибки при монтаже

При подсоединении видеоканалов к аппаратуре Sony с гнездом DV диапазон ошибок будет в пределах +/- 5 кадров.  
Диапазон может быть шире при следующих условиях:  
• Интервал между метками CUT-IN и CUT-OUT меньше пяти секунд (стр. 121).  
• Метка CUT-IN или CUT-OUT установлена в начале ленты.

Если на экране ЖКД или в видоскопике появится индикация "ENGAGE REC PAUSE"  
Переведите записывающий видеоманитон в режим паузы записи.

#### Примечание

Если запись начинается с самого начала кассеты, то первые несколько секунд изображения на ленту могут записываться неправильно. Прежде чем начать запись, необходимо пропустить приблизительно 10 секунд на ленте.


Если видеоманитон работает неправильно  
Убедитесь в правильности кода IR SETUP; при необходимости переустановите его.

Если управление видеоманитоном с кабелем i.LINK не работает  
Не отключая кабель i.LINK, выполните Подготовку 2 (стр. 116) еще раз. Аудио- и видеосигналы передаются в цифровом виде.

### Dubbing only desired scenes – Digital program editing

#### Operation 1: Making Programs


- (1) Insert the tape for playback into your camcorder, and insert a tape for recording into the VCR.
- (2) Press MENU to display the menu.
- (3) Turn the SEL/PUSH EXEC dial to select **EDIT**, then press the dial.
- (4) Turn the SEL/PUSH EXEC dial to select **VIDEO EDIT**, then press the dial.
- (5) Search for the beginning of the first scene you want to insert using the video control buttons, then pause playback (p. 42).

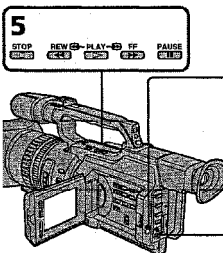

### Перезапись только нужных эпизодов – Цифровой видеомонтаж по программе

#### Действие 1: Составление программ

- (1) Вставьте кассету, с которой необходимо сделать запись, в видеоканал, а кассету для записи – в видеоманитон.
- (2) Нажмите кнопку MENU для отображения меню.
- (3) Поверните диск SEL/PUSH EXEC для выбора установки **EDIT**, а затем нажмите на диск.
- (4) Поверните диск SEL/PUSH EXEC для выбора **VIDEO EDIT**, а затем нажмите на диск.
- (5) Найдите начало первого эпизода, который требуется вставить, с помощью кнопок видеоконтроля, затем включите режим паузы воспроизведения (стр. 42).

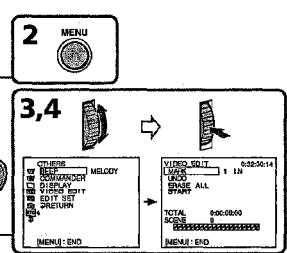


Editing / Монтаж

120

121

## Dubbing only desired scenes – Digital program editing

- (6) Press the SEL/PUSH EXEC dial, or MARK on the Remote Commander.  
The CUT-IN point of the first program is set, and the top part of the program mark changes to light blue.
- (7) Search for the end of the first scene you want to insert using the video operating buttons, then pause playback (p. 42).
- (8) Press the SEL/PUSH EXEC dial, or MARK on the Remote Commander.  
The CUT-OUT point of the first program is set, then the bottom part of the program mark changes to light blue.
- (9) Repeat steps 5 to 8, then set the program.  
When the program is set, the program mark changes to light blue.  
You can set a maximum of 20 programs.

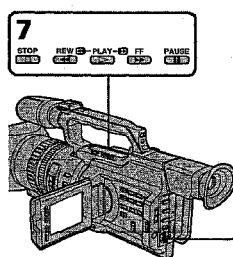


On a blank portion of the tape  
You cannot set CUT-IN or CUT-OUT on a blank portion of the tape.

### Note

The total time of the programs is indicated on the LCD screen or in the viewfinder, however, if the time code on the tape is not continuous, the time may not be indicated properly.

## Перезапись только нужных эпизодов – Цифровой видеомонтаж по программе

- (6) Нажмите на диск SEL/PUSH EXEC или кнопку MARK на пульте дистанционного управления.  
Место начала CUT-IN первого запрограммированного эпизода установлено, и цвет верхнего индикатора метки программы меняется на светло-голубой.
- (7) Найдите конец первого эпизода, который требуется вставить, с помощью кнопок видеоконтроля, затем выключите режим паузы воспроизведения (стр. 42).
- (8) Нажмите на диск SEL/PUSH EXEC или кнопку MARK на пульте дистанционного управления.  
Место окончания CUT-OUT первого запрограммированного эпизода установлено, и цвет нижнего индикатора метки программы меняется на светло-голубой.
- (9) Повторите пункты с 5 по 8, затем завершите программирование.  
После завершения программирования цвет индикатора метки программы меняется на светло-голубой.  
Можно составить не более 20 программ.

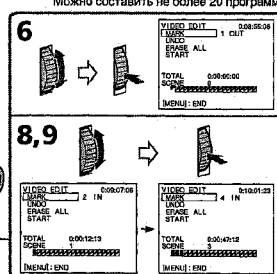

На неиспользованном участке ленты  
Метки начала CUT-IN или окончания CUT-OUT нельзя установить на неиспользованной части ленты.

### Примечание

Общее время программы указывается на экране ЖКД или в видеоскатель, однако, если код времени на ленте не является непрерывным, время может отображаться неправильно.

## Dubbing only desired scenes – Digital program editing

### Erasing the last program

To change the end of the last program, delete the CUT-OUT mark.  
To erase the whole program, delete both the CUT-IN and CUT-OUT marks.

- (1) Turn the SEL/PUSH EXEC dial to select UNDO, then press the dial. The last set program mark flashes.
- (2) Turn the SEL/PUSH EXEC dial to select EXECUTE, then press the dial and the setting is cancelled.

To cancel erasing  
Select RETURN in step 2, then press the SEL/PUSH EXEC dial.

### Erasing all programs

- (1) Select VIDEO EDIT in the menu settings.  
Turn the SEL/PUSH EXEC dial to select ERASE ALL, then press the dial. All the program marks flash.
- (2) Turn the SEL/PUSH EXEC dial to select EXECUTE, then press the dial and the settings are cancelled.

To cancel erasing all programs  
Select RETURN in step 2, then press the SEL/PUSH EXEC dial.

### To cancel a program you have set

Press MENU.  
The program is stored in memory until the tape is ejected.

## Перезапись только нужных эпизодов – Цифровой видеомонтаж по программе

Удаление из программы последнего запрограммированного эпизода  
Чтобы установить другое место окончания последнего запрограммированного эпизода, удалите метку CUT-OUT. Чтобы удалить из программы весь запрограммированный эпизод, удалите обе метки CUT-IN и CUT-OUT.

- (1) Поверните диск SEL/PUSH EXEC для выбора UNDO, а затем нажмите на диск. Замигает метка последней программы.
- (2) Поверните диск SEL/PUSH EXEC для выбора EXECUTE, затем нажмите на диск, и установка будет отменена.

Для отмены удаления  
Выберите RETURN в пункте 2, затем нажмите на диск SEL/PUSH EXEC.

### Удаление из программы всех запрограммированных эпизодов

- (1) Выберите VIDEO EDIT в установках меню. Поверните диск SEL/PUSH EXEC для выбора ERASE ALL, а затем нажмите на диск. Замигают метки всех программ.
- (2) Поверните диск SEL/PUSH EXEC для выбора EXECUTE, затем нажмите на диск, и установки будут отменены.

Для отмены удаления всех запрограммированных эпизодов  
Выберите RETURN в пункте 2, затем нажмите на диск SEL/PUSH EXEC.

Для отмены программы  
Нажмите кнопку MENU.  
Программа хранится в памяти до момента извлечения кассеты.

Editing / Монтаж

123

## Dubbing only desired scenes – Digital program editing

### Operation 2: Performing a digital program editing (Dubbing a tape)

Make sure your camcorder and VCR are connected, and that the VCR is set to recording pause. When you use an i.LINK cable (DV connecting cable), you do not have to set the VCR to recording pause.

When you use a video camera recorder, set its POWER switch to VCR.

- (1) Select VIDEO EDIT: Turn the SEL/PUSH EXEC dial to select START, then press the dial.
- (2) Turn the SEL/PUSH EXEC dial to select EXECUTE, then press the dial.  
The camcorder automatically searches for the beginning of the first program, then starts dubbing.  
The EXECUTING indicator flashes.  
The SEARCH indicator appears during search, and the EDIT indicator appears during edit on the LCD screen or in the viewfinder.  
The program marks light up after dubbing is complete.  
When the dubbing ends, your camcorder and the VCR automatically stop.

### To stop dubbing

Press ■ on this camcorder or on the Remote Commander.

To end the digital program editing function  
Your camcorder stops when the dubbing is complete. Then the display returns to VIDEO EDIT in the menu settings.  
Press MENU to end the digital program editing function.

## Перезапись только нужных эпизодов – Цифровой видеомонтаж по программе

### Действие 2: Выполнение цифрового монтажа программы (перезапись кассеты)

Убедитесь, что видеосъемка подключена к видеомонитору, а видеомонитор включен в режим паузы при записи. Если используется кабель i.LINK (соединительный кабель DV), видеомонитор не нужно переводить в режим паузы записи.

При записи на видеосъемку установите ее переключатель POWER в положение VCR.

- (1) Выберите VIDEO EDIT. Поверните диск SEL/PUSH EXEC для выбора START, а затем нажмите на диск.
- (2) Поверните диск SEL/PUSH EXEC для выбора установки EXECUTE, а затем нажмите на диск.  
Видеосъемка автоматически находит начало первого запрограммированного эпизода и начинает перезапись.  
Мигает индикатор EXECUTING.  
Индикатор SEARCH появляется во время поиска, а индикатор EDIT появляется во время монтажа на экране ЖКД или в видеоскатель.  
После завершения перезаписи загорятся индикаторы меток программ.  
Когда заканчивается перезапись, видеосъемка и видеомонитор автоматически останавливаются.

### Для остановки перезаписи

Нажмите кнопку ■ на видеосъемке или на пульте дистанционного управления.

### Чтобы отключить функцию цифрового монтажа программы

Видеосъемка останавливается после завершения перезаписи. Затем на дисплее снова появляется команда VIDEO EDIT в установках меню.  
Нажмите кнопку MENU для завершения функции монтажа программы.

## Dubbing only desired scenes – Digital program editing

When the operations of the VCR do not work with an i.LINK cable  
Keep the i.LINK connection, and carry out Preparation 2 (p. 116) again.

### You cannot record on the VCR when:

- The cassette is not inserted.
- The tape has run out.
- The write-protect tab is set to the protect position.
- The IR SETUP code is not correct. (When IR is selected.)
- The setup to cancel recording pause is not correct (p. 114). (When IR is selected.)

### NOT READY appears on the LCD screen when:

- The program to operate the digital program edit has not been made.
- i.LINK is selected but an i.LINK cable (DV connecting cable) is not connected. (When i.LINK is selected.)
- The power of the connected VCR is not turned on.

## Перезапись только нужных эпизодов – Цифровой видеомонтаж по программе

Если управление видеомонитором с кабелем i.LINK не работает  
Не отключая кабель i.LINK, выполните Подготовку 2 (стр. 116) еще раз.

### На видеомониторе не удастся произвести запись, если:

- Не вставлена кассета.
- Закончилась лента.
- Лепесток защиты от записи установлен в положение для защиты.
- Неправильный код IR SETUP. (Когда выбран IR.)
- Неправильная настройка для отмены паузы при записи (стр. 114). (Когда выбран IR.)

### Надпись NOT READY появляется на экране ЖКД, если:

- Не составлена программа управления цифровым монтажом программы.
- Выбран i.LINK, но кабель i.LINK (соединительный кабель DV) не подключен. (Когда выбран i.LINK.)
- Подключенный видеомонитор не включен.

Editing / Монтаж


125

122

124

## Using with an analog video unit and a PC - Signal convert function

You can convert the analog input signal to the digital signal and output it from the DV IN/OUT jack on this camcorder. You can capture images and sound from an analog video unit connecting a PC which has the i.LINK (DV) jack to your camcorder.

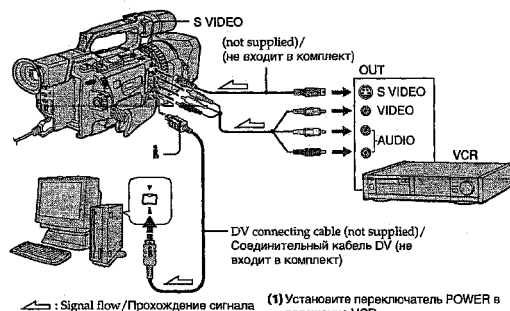

- (1) Set the POWER switch to VCR.
- (2) Press MENU to display the menu.
- (3) Turn the SEL/PUSH EXEC dial to select **AV**, then press the dial.
- (4) Turn the SEL/PUSH EXEC dial to select A/V → DV OUT, then press the dial.
- (5) Turn the SEL/PUSH EXEC dial to select ON, then press the dial.
- (6) Press MENU to erase the menu display.
- (7) Start playback on the analog video unit slightly ahead of the point from which you want to start capturing images.
- (8) Start capturing procedures on your PC. The operation procedures depend on your PC and the software which you use.

For details on how to capture images, refer to the instruction manual of your PC and your software.

## Использование с аналоговым видеоборудованием и ПК - Функция преобразования сигнала

Можно преобразовать аналоговый входной сигнал в цифровой и вывести его на гнездо DV IN/OUT этой видеокамеры. Подключив к видеокамере ПК с разъемом i.LINK (DV), можно записывать отдельные кадры и звук с аналогового видеоприбора.

- (1) Установите переключатель POWER в положение VCR.
- (2) Нажмите кнопку MENU для отображения меню.
- (3) Поверните диск SEL/PUSH EXEC для выбора установки **AV**, а затем нажмите на диск.
- (4) Поверните диск SEL/PUSH EXEC для выбора **AV** → DV OUT, затем нажмите на диск.
- (5) Поверните диск SEL/PUSH EXEC для выбора установки ON, а затем нажмите на диск.
- (6) Нажмите кнопку MENU для удаления индикации меню.
- (7) Включите режим воспроизведения на аналоговом видеоприборе немного раньше того места, с которого нужно начать запись кадров.
- (8) Начните запись кадров на ПК. Порядок действий при этом зависит от используемого ПК и программного обеспечения.

Более подробную информацию о записи кадров см. в инструкциях по эксплуатации ПК и программного обеспечения.

## Using with an analog video unit and a PC - Signal convert function

After capturing images and sound  
Stop capturing procedures on your PC, and stop the playback on the analog video unit.

### Notes

- When you edit the captured image and sound from the analog video unit by a PC, you need to install an appropriate software which can exchange video signals between the camcorder and a PC.
- Depending on the condition of the analog video signals, the PC may not be able to output the images correctly when you convert analog video signals into digital video signals via your camcorder. Depending on the analog video unit, the image may contain noise or incorrect colours.
- The camcorder cannot output the digital signal when you input the analog signal that includes a copyright protection signal.

## Использование с аналоговым видеоборудованием и ПК - Функция преобразования сигнала

После записи кадров и звука  
Прекратите процедуру записи на ПК и остановите воспроизведение на аналоговом видеоприборе.

### Примечания

- При монтаже снятых кадров и звука с аналогового видеоприбора с помощью ПК необходимо установить соответствующее программное обеспечение, способное передавать видеосигналы между видеокамерой и ПК.
- В зависимости от качества аналогового видеосигнала, ПК может неправильно отображать кадры после преобразования видеокамерой аналоговых видеосигналов в цифровые. В зависимости от аналогового видеоприбора, изображение может быть расплывчатым или с неправильной цветопередачей.
- Видеокамера не может выдавать цифровой сигнал, если входной аналоговый сигнал содержит сигнал для защиты авторских прав.

126

## Recording video or TV programs

### Using the A/V connecting cable

You can record a tape from another VCR or a TV program from a TV that has video/audio outputs. Use your camcorder as a recorder.


- (1) Insert a blank tape (or a tape you want to record over) into your camcorder. If you want to record a tape from the VCR, insert a recorded tape into the VCR.
- (2) Set the POWER switch to VCR on your camcorder.
- (3) Set DISPLAY in **AV** to LCD in the menu settings (p. 154).
- (4) Press MENU to erase the menu display.
- (5) Press **REC** and the button on its right simultaneously on your camcorder, then immediately press **II** on your camcorder.
- (6) Press **II** on the VCR to start playback if you record a tape from a VCR. Select a TV program if you record from a TV. The picture from a TV or VCR appears on the LCD screen or in the viewfinder.
- (7) Press **II** on your camcorder at the scene from which you want to start recording.

## Запись видео или телепрограмм

### Использование соединительного кабеля аудио/видео

Можно выполнить запись на ленту с другого видеомассетного или записать телевизионную программу с телевизора, который имеет видео/аудио выходы. Используйте видеокамеру в качестве записывающего устройства.

- (1) Вставьте чистую ленту (или ленту, на которую нужно выполнить запись) в видеокамеру. Если необходимо сделать запись с видеомассетного, вставьте записанную ленту в видеомассетный VCR.
- (2) Установите на видеокамере переключатель POWER в положение VCR.
- (3) Установите команду DISPLAY в **AV** в положении LCD в установках меню (стр. 154).
- (4) Нажмите кнопку MENU для удаления индикации меню.
- (5) Одновременно нажмите кнопку **REC** и кнопку справа от нее на видеокамере, затем сразу нажмите кнопку **II** на видеокамере.
- (6) Нажмите кнопку **II** на видеомассетном для начала воспроизведения, если запись выполняется с видеомассетного. Если запись выполняется с телевизора, изображение с телевизора или видеомассетного появится на экране ЖКД или в видоискателе.
- (7) Нажмите кнопку **II** на видеокамере в том месте, с которого нужно начать запись.

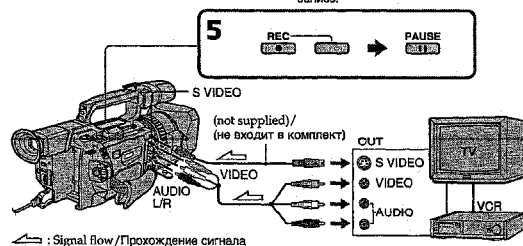

128

## Recording video or TV programs

When you have finished recording  
Press **■** on both your camcorder and the VCR.

### Using the Remote Commander

In step 5, press **REC** and MARK simultaneously, then immediately press **II**. And in step 7, press **II** at the scene from which you want to start recording.

If your VCR is a monaural type  
Connect the yellow plug of the A/V connecting cable to the video output jack and the white plug to the audio output jack on the VCR or the TV. The red plugs are not used.

Connect using an S video cable (not supplied) to obtain high-quality pictures  
With this connection, you do not need to connect the yellow (video) plug of the A/V connecting cable.  
Connect an S video cable (not supplied) to the S video jacks of both your camcorder and the VCR.  
This connection produces higher quality DV format pictures.

If you do various playbacks on the VCR during recording  
The recorded picture may be blurred.

On the commander mode  
Your camcorder works in the commander mode, VTR 2. Commander modes 1, 2 and 3 are used to distinguish your camcorder from other Sony VCRs to avoid remote control misoperation. If you use another Sony VCR in the commander mode VTR 2, we recommend changing the commander mode or covering the sensor of the VCR with black paper.

On index signal  
The index is automatically marked on a tape when you start recording. If you mark the index using the INDEX MARK button during recording, "LINE" appears in the CH column on the INDEX SEARCH screen, and the index is recorded on cassette memory.

## Запись видео или телепрограмм

После завершения записи  
Нажмите кнопку **■** на видеокамере и на видеомассетном.

Использование пульта дистанционного управления  
В пункте 5 одновременно нажмите кнопку **REC** и кнопку MARK, затем сразу нажмите кнопку **II**. В пункте 7 нажмите кнопку **II** в том месте, с которого нужно начать запись.

Если видеомассетный монофонического типа  
Подключите желтый штекер соединительного кабеля аудио/видео к выходному гнезду видеосигнала, а белый штекер к выходному гнезду аудиосигнала на видеомассетном или телевизоре. Красные штекеры не используются.

Соединение с помощью видеокабеля S (не входит в комплект) для получения высококачественных изображений  
При таком соединении не нужно подключать желтый (видео) штекер соединительного кабеля аудио/видео. Подсоедините видеокабель S (не входит в комплект) к видеогнездам S на видеокамере и видеомассетного. Это соединение позволяет получить высококачественное изображение формата DV.

Если во время записи на видеомассетном воспроизводятся различные эпизоды  
Записываемое изображение может быть размытым.

О режиме пульта дистанционного управления  
Эта видеокамера работает в режиме пульта дистанционного управления VTR 2. Режимы пульта дистанционного управления 1, 2 и 3 используются для отличия данной видеокамеры от других видеомассетных фирмы Sony во избежание неправильной работы пульта дистанционного управления. Если используете другой видеомассетный фирмы Sony, работающий в режиме VTR 2, рекомендуется изменить режим пульта дистанционного управления или закрыть датчик дистанционного управления видеомассетного черной бумагой.

Об индексном сигнале  
Сигнал индексной метки записывается сразу после начала записи. Если индексная метка записывается с помощью кнопки INDEX MARK во время записи, в столбце CH на экране INDEX SEARCH появляется индикация "LINE", и индексная метка записывается в кассетную память.

Editing / Монтаж

127

Editing / Монтаж

129

## Recording video or TV programs

### Using an i.LINK cable (DV connecting cable)

Simply connect the i.LINK cable (DV connecting cable) (not supplied) to DV IN/OUT and to DV IN/OUT of the DV products. With digital-to-digital connection, video and audio signals are transmitted in digital form for high-quality editing.


- (1) Insert a blank tape (or a tape you want to record over) into your camcorder, and insert the recorded tape into the VCR.
- (2) Set the POWER switch to VCR on your camcorder.
- (3) Set DISPLAY in **REC** to LCD in the menu settings (p. 154).
- (4) Press MENU to erase the menu display.
- (5) Press **REC** and the button on its right simultaneously on your camcorder, then immediately press **II** on your camcorder.
- (6) Press **▶** on the VCR to start playback. The picture to be recorded appears on the LCD screen or in the viewfinder.
- (7) Press **II** on your camcorder at the scene from which you want to start recording.

## Запись видео или телепрограмм

### Использование кабеля i.LINK (соединительный кабель DV)

Просто подсоедините кабель i.LINK (соединительный кабель DV) (не входит в комплект) к гнезду DV IN/OUT и гнезду DV IN/OUT аппаратов DV. При цифровом соединении видео- и аудиосигналы передаются в цифровом виде, что обеспечивает высокое качество монтажа.

- (1) Вставьте незаписанную ленту (или ленту, на которую нужно выполнить запись) в видеокамеру, а записанную ленту - в видеомаягнитофон.
- (2) Установите на видеокамере переключатель POWER в положение VCR.
- (3) Установите команду DISPLAY в **REC** в положение LCD в установках меню (стр. 154).
- (4) Нажмите кнопку MENU для удаления индикации меню.
- (5) Одновременно нажмите кнопку **REC** и кнопку справа от нее на видеокамере, затем сразу нажмите кнопку **II** на видеокамере.
- (6) Нажмите кнопку **▶** на видеомаягнитофоне для начала воспроизведения. Записываемое изображение появится на экране ЖКД или в видоскатель.
- (7) Нажмите кнопку **II** на видеокамере в том месте, с которого нужно начать запись.

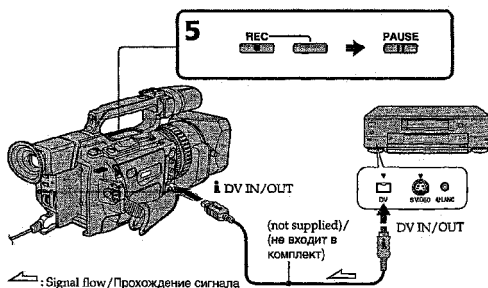


130

## Inserting a scene from a VCR - Insert editing

You can insert a new scene from a VCR onto your originally recorded tape by specifying the insert start and end points. Use the Remote Commander for this operation. Connections are the same as on page 105 or 126. Insert a cassette containing the desired scene into the VCR.

## Вставка эпизода с видеомаягнитофона - Монтаж вставки

Можно вставить новый эпизод с видеомаягнитофона на уже записанную ленту, указав места его начала и окончания. Для этой операции используйте пульт дистанционного управления. Данные соединения аналогичны описанным на стр. 105 или 126. Вставьте кассету с необходимым эпизодом в видеомаягнитофон.

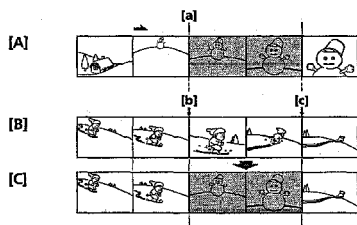

- [A]: The tape that contains the scene to be superimposed.  
[B]: The tape to be edited  
[C]: The tape after editing

- [A]: Лента, содержащая эпизод для наложения  
[B]: Лента для монтажа  
[C]: Лента после монтажа

132

## Recording video or TV programs

### When you have finished recording

Press **■** on both your camcorder and the VCR.

### Using the Remote Commander

In step 5, press **REC** and MARK simultaneously, then immediately press **II**. And in step 7, press **II** at the scene from which you want to start recording.

You can connect only one VCR using the i.LINK cable (DV connecting cable)

When you dub a picture in digital form The colour of the display may be uneven. However this does not affect the dubbed picture.

If you record a still picture in playback mode via the DV IN/OUT jack The recorded picture becomes rough. And when you play back the picture using your camcorder, the picture may jitter.

### Before recording

Press DISPLAY and make sure that the DV IN indicator appears on the LCD screen or in the viewfinder. The DV IN indicator may appear on both pieces of equipment.

## Запись видео или телепрограмм

После завершения записи Нажмите кнопку **■** на видеокамере и на видеомаягнитофоне.

### Использование пульта дистанционного управления

В пункте 5 одновременно нажмите кнопку **REC** и кнопку MARK, затем сразу нажмите кнопку **II**. В пункте 7 нажмите кнопку **II** в том месте, с которого нужно начать запись.

С помощью кабеля i.LINK (соединительного кабеля DV) можно подсоединить только один видеомаягнитофон

При перезаписи изображения в цифровом виде Цвет изображения на дисплее может быть неоднородным. Однако это не влияет на качество перезаписываемого изображения.

При записи неподвижного изображения в режиме паузы воспроизведения через гнездо DV IN/OUT Записываемое изображение будет нечетким. При воспроизведении неподвижного изображения на данной видеокамере оно может дрожать.

Перед записью Нажмите кнопку DISPLAY и убедитесь, что на экране ЖКД или в видоскатель появился индикатор DV IN. Индикатор DV IN может появиться на обоих устройствах.

Editing / Монтаж

131


## Inserting a scene from a VCR - Insert editing

- (1) Set the POWER switch to VCR on your camcorder.
- (2) On the VCR, locate a point just before the insert start point [a], then press **II** to set the VCR to the playback pause mode.
- (3) On your camcorder, locate the insert end point [c] by pressing **◀◀** or **▶▶**. Then press **II** to set it to the playback pause mode.
- (4) Press ZERO SET MEMORY on the Remote Commander. The ZERO SET MEMORY indicator flashes and the end point of the insert is stored in memory. The tape counter shows "0:00:00." If the tape counter does not appear, press DISPLAY.
- (5) On your camcorder, locate the insert start point [b] by pressing **◀◀**, then press **REC** and the button on its right simultaneously, then immediately press **II** on your camcorder.
- (6) First press **II** on the VCR, and after a few seconds press **II** on your camcorder to start inserting the new scene. Inserting automatically stops near the zero point on the tape counter. Your camcorder automatically returns to the recording pause mode.

## Вставка эпизода с видеомаягнитофона - Монтаж вставки

- (1) Установите на видеокамере переключатель POWER в положение VCR.
- (2) На видеомаягнитофоне найдите место, где будет вставлен эпизод [a], затем нажмите кнопку **II** для установки видеомаягнитофона в режим паузы воспроизведения.
- (3) На видеокамере найдите конец вставляемого эпизода [c], нажав кнопку **◀◀** или **▶▶**. Затем нажмите кнопку **II** для установки ее в режим паузы воспроизведения.
- (4) Нажмите кнопку ZERO SET MEMORY на пульте дистанционного управления. Индикатор ZERO SET MEMORY начнет мигать, а место окончания вставки будет сохранено в памяти. Показание счетчика станет равным "0:00:00". Если счетчик не появился, нажмите кнопку DISPLAY.
- (5) На видеокамере найдите место начала вставляемого эпизода [b], нажав кнопку **◀◀**, затем одновременно нажмите кнопку **REC** и кнопку справа от нее и сразу нажмите кнопку **II** на видеокамере.
- (6) Сначала нажмите кнопку **II** на видеомаягнитофоне и, спустя несколько секунд, кнопку **II** на видеокамере для начала вставки новой сцены. Вставка остановится автоматически в месте нулевой отметки счетчика. Видеокамера автоматически вернется в режим паузы записи.

Editing / Монтаж

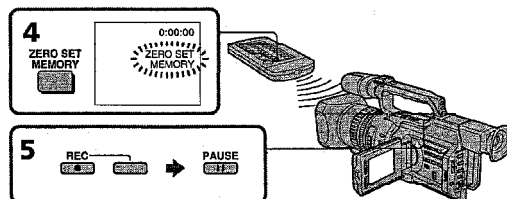

133



## Inserting a scene from a VCR – Insert editing

### To change the insert end point

Press ZERO SET MEMORY on the Remote Commander again after step 5 to erase the ZERO SET MEMORY indicator and begin from step 3.

### Using the Remote Commander

In step 5, press ● REC and MARK simultaneously, then immediately press II. And in step 6, press II at the scene from which you want to start recording.

#### Note

The picture and sound recorded on the portion between the insert start and end points will be erased when you insert the new scene.

If you insert scenes on the tape recorded with an other camcorder (including an other DCR-VX2000E).

The picture and sound may be distorted. We recommend that you insert scenes on a tape recorded with your camcorder.

When the inserted picture is played back the picture and sound may be distorted at the end of the inserted portion. This is not a malfunction.

The picture and sound at the start point and the end point may be distorted in the LP mode.

To insert a scene without setting the insert end point

Skip steps 3 and 4. Press ■ when you want to stop inserting.

## Вставка эпизода с видеомагнитофона – Монтаж вставки

### Для изменения места окончания вставки

Снова нажмите кнопку ZERO SET MEMORY на пульте дистанционного управления после пункта 5 для удаления индикатора ZERO SET MEMORY и начните с пункта 3.

### Использование пульта дистанционного управления

В пункте 5 одновременно нажмите кнопку ● REC и кнопку MARK, затем сразу нажмите кнопку II. В пункте 6 нажмите кнопку II в том месте, с которого нужно начать запись.

#### Примечание

Изображение и звук, записанные на ленте между местами начала и окончания вставки, будут стерты при вставке нового эпизода.

При вставке эпизодов на ленту, записанную на другой видеокамере (включая другую камеру DCR-VX2000E) изображение и звук могут искажаться. Рекомендуется вставлять эпизоды на ленту, записанную с помощью данной видеокамеры.

### При воспроизведении вставленного изображения

Изображение и звук могут искажаться в конце вставленного эпизода. Однако это не является неисправностью. Изображение и звук в режиме LP могут искажаться в начале и конце вставленного эпизода.


### Для вставки эпизода без указания места окончания вставки

Пропустите пункты 3 и 4. Нажмите кнопку ■, когда нужно остановить вставку.

## Audio dubbing

You can record an audio sound to add to the original sound on a tape by connecting audio equipment or a microphone. If you connect audio equipment, you can add sound to your recorded tape by specifying the starting and ending points. The original sound will not be erased. You can also use the Remote Commander for this operation.

### Connecting the microphone with the MIC jack

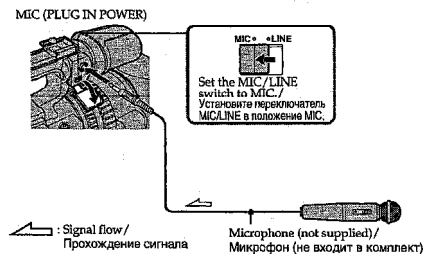

You can check the picture on TV by connecting with the video jack. You cannot monitor the additional sound by the speaker. Use the headphone jack.

## Аудиоперезапись

Вы можете записывать аудиосигнал в дополнение к первоначальному звуку на ленте, подсоединив аудиоаппаратуру или микрофон. Если подсоединена аудиоаппаратура, то можно добавить звук на записанную ленту, указав места начала и окончания. Первоначальный звук при этом не будет стерт. Для этой операции можно также использовать пульт дистанционного управления.

### Подсоединение микрофона к гнезду MIC

134

135

## Audio dubbing


### Connecting the audio equipment with the MIC jack




Signal flow / Прохождение сигнала

## Аудиоперезапись

### Подсоединение аудиоаппаратуры с помощью гнезда MIC

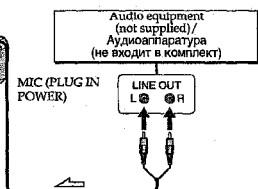

### Connecting the microphone with the intelligent accessory shoe

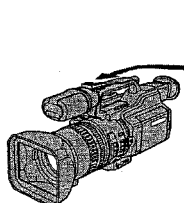


### Подсоединение микрофона с помощью держателя для вспомогательных принадлежностей

We recommend that you use the gun microphone. If the microphone can select the zoom microphone type, set it to the gun microphone position. / Рекомендуем использовать направленный микрофон. Если для микрофона можно выбрать тип зум-микрофона, установите его в положение направленного микрофона.

## Audio dubbing


### Dubbing with the AUDIO L/R jacks

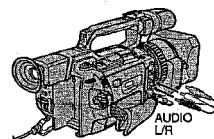

Signal flow / Прохождение сигнала

## Аудиоперезапись

### Перезапись с помощью гнезда AUDIO L/R

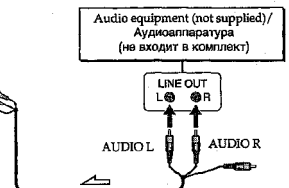

Do not connect the video (yellow) plug. / Не подсоединяйте видео (желтый) штекер.

### Dubbing with the supplied microphone

No connection is necessary.

#### Notes

- When dubbing with the built-in microphone or an external one, you can check the recorded picture on the LCD screen, in the viewfinder, or on the screen of equipment connected with the VIDEO jack, and you can check the recorded sound by using headphones.
- When dubbing with the AUDIO L/R jacks, you can check the recorded picture on the LCD screen or in the viewfinder, and you can check the recorded sound by using a headphones.
- You can check both the original sound and new sound that will be dubbed, with headphones.
- You can adjust the balance of the new sound and original sound using AUDIO MIX in the menu settings. You can monitor the sound using headphones during audio dubbing.

### Перезапись с помощью прилагаемого микрофона

Никакие подсоединения не требуются.

#### Примечания

- При перезаписи с использованием встроенного или внешнего микрофона можно проверять записываемое изображение на экране ЖКД, в видискателе или на экране аппаратуры, подключенной с помощью гнезда VIDEO, а также записываемый звук, используя головные телефоны.
- При перезаписи с помощью гнезд AUDIO L/R можно проверять записываемое изображение на экране ЖКД или в видискателе, а также записываемый звук с помощью головных телефонов.
- Как первоначальный звук, так и новый звук, который будет записан, можно проверить с помощью головных телефонов.
- Можно отрегулировать баланс нового звука и первоначального звука путем выбора установки AUDIO MIX в установках меню. Вы можете контролировать звук во время аудиоперезаписи с помощью головных телефонов.

136

137

## Audio dubbing


### Adding an audio sound on a recorded tape

- (1) Insert the recorded tape into your camcorder.
- (2) Set the POWER switch to VCR on your camcorder.
- (3) Locate the recording start point by pressing **II**. Then press **II** at the point where you want to start recording to set your camcorder to the playback pause mode.
- (4) Press **■** AUDIO DUB. The green **■** indicator appears on the LCD screen or in the viewfinder.
- (5) Press **II** and start playing back the audio you want to record at the same time. The new sound is recorded in stereo 2 (ST2) during playback.
- (6) Press **■** at the point where you want to stop recording.

## Аудиоперезапись

### Добавление звукового сигнала на записанную ленту

- (1) Вставьте записанную ленту в видеокамеру.
- (2) Установите на видеокамере переключатель POWER в положение VCR.
- (3) Найдите место начала записи, нажимая кнопку **II**. Затем нажмите кнопку **II** в том месте, где нужно начать запись, для установки видеокамеры в режим паузы воспроизведения.
- (4) Нажмите кнопку **■** AUDIO DUB. Зеленый индикатор **■** появится на экране ЖКД или в видискателе.
- (5) Нажмите кнопку **II** и одновременно начните воспроизведение звука, который нужно записать. Новый звук будет записан в режиме стерео 2 (ST2) во время воспроизведения.
- (6) Нажмите кнопку **■** в том месте, где нужно закончить запись.

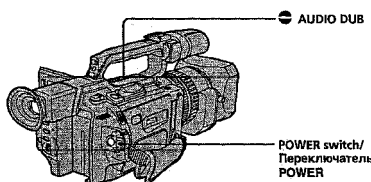

## Audio dubbing

### Monitoring the new recorded sound

**To play back the sound**  
Adjust the balance between the original sound (ST1) and the new sound (ST2) by selecting AUDIO MIX in the menu settings (p. 154).



If you wait five minutes after you disconnect the power source or remove the battery pack, the setting of AUDIO MIX returns to the original sound (ST1) only. The default setting is for original sound only.

#### Notes

- New sound cannot be recorded on a tape already recorded in the 16-bit mode (p. 159).
- New sound cannot be recorded on a tape already recorded in the LP mode.
- You cannot add audio with the **■** DV IN/OUT jack.

#### If you make all the connections

The audio input to be recorded will take precedence over others in the following order.

- MIC (PLUG IN POWER) jack
- Intelligent accessory shoe
- AUDIO L/R jacks
- Built-in microphone

If an i.LINK cable (DV connecting cable) (not supplied) is connected to your camcorder. You cannot add sound to a recorded tape.

## Аудиоперезапись

### Контроль нового записанного звука

**Для воспроизведения звука**  
Отрегулируйте баланс между первоначальным звуком (ST1) и новым звуком (ST2), выбрав команду AUDIO MIX в установках меню (стр. 154).

Через пять минут после отсоединения источника питания или снятия батарейного блока установка AUDIO MIX вернется к первоначальному звуку (ST1). Установка по умолчанию предназначена только для первоначального звука.

#### Примечания

- Новый звук нельзя записать на ленту, записанную в 16-битовом режиме (стр. 159).
- Новый звук не может быть записан на ленту, уже записанную в режиме LP.
- Нельзя добавлять звук через гнездо **■** DV IN/OUT.

Если Вы выполнили все подсоединения. Записываемый входной сигнал будет иметь приоритет над другими сигналами в следующей последовательности.

- Гнездо MIC (PLUG IN POWER)
- Держатель для вспомогательных принадлежностей
- Гнезда AUDIO L/R
- Встроенный микрофон

Если к видеокамере подсоединен кабель i.LINK (соединительный кабель DV) (не входит в комплект). Нельзя добавлять звук на записанную ленту.

138

## Audio dubbing

If you set the write-protect tab of the tape to lock. You cannot record on the tape. Slide the write-protect tab to release the write protection.

We recommend that you add new sound on a tape recorded with your camcorder. If you add new sound on a tape recorded with another camcorder (including an other DCR-VX2000E), the sound quality may deteriorate.

**To add new sound more precisely**  
Press ZERO SET MEMORY on the Remote Commander at the point where you want to stop recording later in playback mode. Then, follow the procedure from step 3. Recording automatically stops at the point where ZERO SET MEMORY was pressed.

**On blank portions**  
You cannot add an audio.

You can adjust the recording level manually using the recording adjustment display in the following cases:

- Dubbing with an optional external microphone or audio equipment through the MIC jack
- Dubbing with an optional external microphone installed into the intelligent accessory shoe
- Dubbing with the internal microphone

## Аудиоперезапись

Если защитный лепесток установлен в положение защиты от записи. Нельзя записывать на ленту. Передвиньте лепесток защиты от записи для отключения защиты.

Рекомендуется добавлять новый звук на ленту, записанную в полностью данной видеокамере. При добавлении нового звука на ленту, записанную с помощью другой видеокамеры (включая другую камеру DCR-VX2000E), качество звука может ухудшиться.

#### Для более точного добавления нового звука

Нажмите кнопку ZERO SET MEMORY на пульте дистанционного управления в том месте, где нужно закончить запись позже в режиме воспроизведения. Затем выполните процедуру из пункта 3. Запись автоматически останавливается в том месте, где будет нажата кнопка ZERO SET MEMORY.

**На незаписанные участки**  
Невозможно добавлять звук.

Уровень записи можно регулировать вручную, используя экран регулировки записи, в следующих случаях:

- Переапись с помощью дополнительного внешнего микрофона или аудиопаратуры через гнездо MIC
- Переапись с помощью дополнительного внешнего микрофона, вставленного в держатель для вспомогательных принадлежностей
- Переапись с помощью встроенного микрофона

## Superimposing a title

If you use a tape with cassette memory, you can superimpose the title while recording or after recording. When you play back the tape, the title is displayed for five seconds from the point where you superimposed it.

You can select one of eight preset titles and two custom titles (p. 147).



## Наложение титра

Если Вы используете ленту с кассетной памятью, Вы можете выполнить наложение титра во время записи или после записи. Если Вы воспроизводите ленту, титр будет отображаться в течение пяти секунд с того места, где Вы наложили его.

Вы можете выбрать один из восьми предварительно установленных титров и двух собственных титров (стр. 147).

You can also select the colour, size and position of titles./ Вы можете также выбрать цвет, размер и положение титров.

140

139

Editing / Монтаж

141

## Superimposing a title


- (1) Press TITLE to display the title menu in standby, recording, playback, or playback pause mode.
- (2) Turn the SEL/PUSH EXEC dial to select  $\square$ , then press the dial.
- (3) Turn the SEL/PUSH EXEC dial to select the desired title, then press the dial. The title flashes.
- (4) Change the colour, size, or position, if necessary.
  - Turn the SEL/PUSH EXEC dial to select the COLOUR, SIZE, or POSITION, then press the dial. The item appears.
  - Turn the SEL/PUSH EXEC dial to select the desired item, then press the dial.
  - Repeat steps 1 and 2 until the title is laid out as desired.
- (5) Press the SEL/PUSH EXEC dial again to complete the setting. In playback, playback pause, or recording mode: The "TITLE SAVE" indicator appears on the screen for five seconds and the title is set. In standby mode: The "TITLE" indicator appears. When you press START/STOP to start recording, "TITLE SAVE" appears on the screen for five seconds and the title is set.

## Наложение титра

- (1) Нажмите кнопку TITLE для отображения меню титров в режиме ожидания, записи, воспроизведения или паузы воспроизведения.
- (2) Поверните диск SEL/PUSH EXEC для выбора установки  $\square$ , а затем нажмите на диск.
- (3) Поверните диск SEL/PUSH EXEC для выбора нужного титра, а затем нажмите на диск. Титр начнет мигать.
- (4) Измените цвет, размер или положение титра, если нужно.
  - Поверните диск SEL/PUSH EXEC для выбора COLOUR, SIZE или POSITION, а затем нажмите на диск.
  - Поверните диск SEL/PUSH EXEC для выбора нужного пункта, а затем нажмите на диск.
  - Повторите пункты 1 и 2 до тех пор, пока титр не будет расположен так, как нужно.
- (5) Нажмите на диск SEL/PUSH EXEC для завершения установки. В режиме воспроизведения, паузы воспроизведения и записи: В течение пяти секунд на экране появится индикатор "TITLE SAVE", и установка титра будет завершена. В режиме ожидания: Появится индикатор "TITLE". При нажатии кнопки START/STOP для начала записи на экране в течение пяти секунд появится индикатор "TITLE SAVE", и установка титра будет завершена.

## Superimposing a title

## Наложение титра

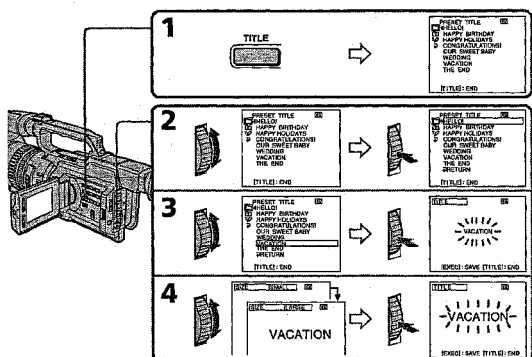

If you set the write-protect tab to lock You cannot superimpose or erase the title. Slide the write-protect tab to release the write protection.

To use a custom title If you want to use the custom title, select  $\square$  in step 2.

If the tape has a blank portion You cannot superimpose a title on that portion.

If the tape has a blank portion in the middle of the recorded parts The title may not be displayed correctly.

Если защитный лепесток установлен в положение защиты от записи Вы не сможете выполнить наложение или стирание титра. Передвиньте лепесток защиты от записи для отключения защиты.

Для использования собственного титра Если нужно использовать собственный титр, выберите  $\square$  в пункте 2.

Если на ленте имеется незаписанный участок В этом участке наложение титра невозможно.

Если на ленте имеется незаписанный участок между записанными частями Титр может отображаться неправильно.

## Superimposing a title

The titles superimposed with your camcorder

- They are displayed only on the DV "DV" format video equipment with the index titer function.
- The point you superimposed the title may be detected as an index signal when searching a recording with other video equipment.

### To not display titles

Set TITLE DSPL to OFF in the menu settings (p. 154).

### Title setting

- The title colour changes as follows: WHITE  $\leftrightarrow$  YELLOW  $\leftrightarrow$  VIOLET  $\leftrightarrow$  RED  $\leftrightarrow$  CYAN  $\leftrightarrow$  GREEN  $\leftrightarrow$  BLUE
- The title size changes as follows: SMALL  $\leftrightarrow$  LARGE
- You cannot input more than 12 characters in LARGE size.
- If you select the title size "SMALL," you have nine choices for the title position. If you select the title size "LARGE," you have eight choices for the title position.

If the "C4 FULL" mark appears The cassette memory is full. If you erase the title, index data, date data, photo data, or cassette label in the cassette, you can then superimpose a title.

## Наложение титра

Титры, наложенные с помощью Вашей видеокамеры

- Они отображаются только на видеосаппаратуре формата DV "DV" с функцией индексного наложения титров.
- Место наложения титра может быть обнаружено по индексному сигналу при поиске записи с помощью другой видеосаппаратуры.

Для отмены отображения титров Установите команду TITLE DSPL в положение OFF в установках меню (стр. 154).

### Установка титра

- Цвет титра изменяется следующим образом: WHITE (БЕЛЫЙ)  $\leftrightarrow$  YELLOW (ЖЕЛТЫЙ)  $\leftrightarrow$  VIOLET (ФИОЛЕТОВЫЙ)  $\leftrightarrow$  RED (КРАСНЫЙ)  $\leftrightarrow$  CYAN (ГОЛУБОЙ)  $\leftrightarrow$  GREEN (ЗЕЛЕНый)  $\leftrightarrow$  BLUE (СИНИЙ)
- Размер титра изменяется следующим образом: SMALL (МАЛЕНЬКИЙ)  $\leftrightarrow$  LARGE (БОЛЬШОЙ)
- При большом размере нельзя ввести более 12 символов.
- Если выбран "SMALL" (маленький) размер титра, можно выбрать один из девяти вариантов символов в позиции титра.
- Если выбран "LARGE" (большой) размер титров, можно выбрать один из восьми вариантов символов в позиции титра.

Если появляется символ "C4 FULL" Кассетная память переполнена. Если на кассете стереть титр, индексные данные, информацию о дате, данные фото или кассетную маркировку, то после этого можно делать наложение титра.

## Superimposing a title


### Erasing a title

- (1) Set the POWER switch to VCR or CAMERA.
- (2) Press MENU to display the menu.
- (3) Turn the SEL/PUSH EXEC dial to select  $\square$ , then press the dial.
- (4) Turn the SEL/PUSH EXEC dial to select TITLEERASE, then press the dial. The title erase display appears.
- (5) Turn the SEL/PUSH EXEC dial to select the title you want to erase, then press the dial. The "ERASE OK ?" indicator appears.
- (6) Make sure the title is the one you want to erase, and turn the SEL/PUSH EXEC dial to select OK, then press the dial. "OK" changes to "EXECUTE."
- (7) Press the SEL/PUSH EXEC dial. "ERASING" flashes for about two seconds and "COMPLETE" appears after erasing the title.

## Наложение титра

### Стирание титра

- (1) Установите переключатель POWER в положение VCR или CAMERA.
- (2) Нажмите кнопку MENU для отображения меню.
- (3) Поверните диск SEL/PUSH EXEC для выбора установки  $\square$ , а затем нажмите на диск.
- (4) Поверните диск SEL/PUSH EXEC для выбора титра TITLE ERASE, а затем нажмите на диск.
- (5) Появится индикация стирания титра. Поверните диск SEL/PUSH EXEC для выбора титра, который Вы хотите стереть, а затем нажмите на диск. Появится индикатор "ERASE OK ?".
- (6) Убедитесь, что это именно тот титр, который Вы хотите стереть, и поверните диск SEL/PUSH EXEC для выбора команды OK, а затем нажмите на диск. Индикация "OK" изменится на индикацию "EXECUTE".
- (7) Нажмите на диск SEL/PUSH EXEC. Индикация "ERASING" мигает примерно две секунды, и после стирания титра появляется индикация "COMPLETE".

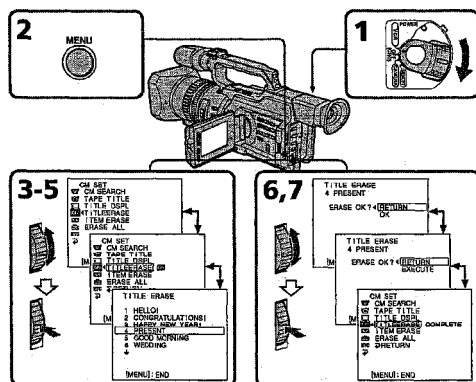

## Superimposing a title

### To cancel erasing

Select RETURN in step 6 or 7, then press the SEL/PUSH EXEC dial.

### To erase all the titles

See "Erasing the cassette memory data" on page 151.

## Наложение титра

### Для отмены удаления

Выберите RETURN в пункте 6 или 7, затем нажмите на диск SEL/PUSH EXEC.

### Для удаления всех титров

См. раздел "Стирание данных памяти кассеты" на стр. 151.

## Making your own titles


You can make up to two titles and store them in cassette memory. Each title can have up to 20 characters.

- (1) Press TITLE in the standby, playback, or playback pause mode.
- (2) Turn the SEL/PUSH EXEC dial to select  $\frac{1}{2}$ , then press the dial.
- (3) Turn the SEL/PUSH EXEC dial to select CUSTOM1 SET or CUSTOM2 SET, then press the dial.
- (4) Turn the SEL/PUSH EXEC dial to select the column of the desired character, then press the dial.
- (5) Turn the SEL/PUSH EXEC dial to select the desired character, then press the dial.
- (6) Repeat steps 4 and 5 until you have selected all characters and completed the title.
- (7) To finish making your own titles, turn the SEL/PUSH EXEC dial to select [SET], then press the dial. The title is stored in memory.
- (8) Press TITLE to erase the title menu display.

## Создание Ваших собственных титров

Можно создать не более двух титров и сохранить их в кассетной памяти. Каждый титр может содержать до 20 символов.

- (1) Нажмите кнопку TITLE в режиме ожидания, воспроизведения или паузы воспроизведения.
- (2) Поверните диск SEL/PUSH EXEC для выбора установки  $\frac{1}{2}$ , а затем нажмите на диск.
- (3) Поверните диск SEL/PUSH EXEC для выбора CUSTOM1 SET или CUSTOM2 SET, а затем нажмите на диск.
- (4) Поверните диск SEL/PUSH EXEC для выбора колонки с нужным символом, а затем нажмите на диск.
- (5) Поверните диск SEL/PUSH EXEC для выбора нужного символа, а затем нажмите на диск.
- (6) Повторите пункты 4 и 5 до тех пор, пока Вы не выберите все символы и полностью не составите титр.
- (7) Для завершения составления списка собственных титров поверните диск SEL/PUSH EXEC для выбора команды [SET], а затем нажмите на диск. Титр будет сохранен в памяти.
- (8) Нажмите кнопку TITLE для отключения индикации меню титров.

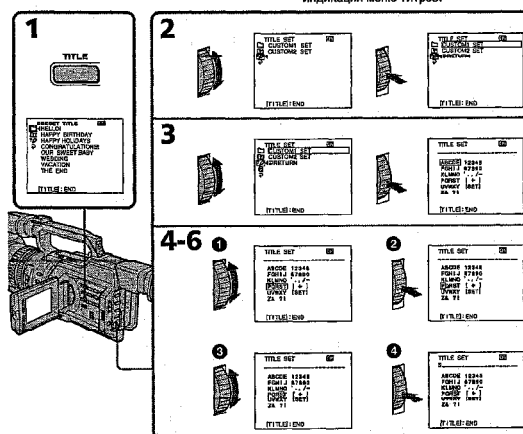

146

147

## Making your own titles

### To change a title you have stored

In step 3, select CUSTOM1 SET or CUSTOM2 SET, depending on which title you want to change, then press the SEL/PUSH EXEC dial. Turn the SEL/PUSH EXEC dial to select [+], then press the dial to delete the title. The last character is erased. Enter a new title as desired.

If you take five minutes or longer to enter characters in standby mode while a cassette is in your camcorder, the power automatically goes off.

The characters you have entered remain stored in memory. Set the POWER switch to OFF (CHG) once and then follow the procedure from step 7 again.

We recommend setting the operation in playback or playback pause mode or removing the cassette so that your camcorder does not automatically turn off while you are entering title characters.

To erase a character  
Turn the SEL/PUSH EXEC dial to select [+], then press the dial. The last character is erased.

To enter a space  
Select [Z& ?], then select the blank part.

## Создание Ваших собственных титров

Для изменения сохраненного в памяти титра  
В пункте 3 выберите установку CUSTOM1 SET или CUSTOM2 SET, в зависимости от титра, который Вы хотите изменить, а затем нажмите диск SEL/PUSH EXEC. Поверните диск SEL/PUSH EXEC для выбора установки [+], затем нажмите на диск для удаления титра. Последний символ будет стерт. Введите новый нужный титр.

Если в режиме ожидания ввод символов занимает пять или более минут, когда кассета находится в видеокамере, питание автоматически отключается.  
Символы, которые Вы ввели, сохранятся в памяти видеокамеры. Установите переключатель POWER в положение OFF (CHG), а затем снова выполните процедуру из пункта 7.

Рекомендуется установить режим воспроизведения или паузы воспроизведения, или извлечь кассету, чтобы видеокамера автоматически не выключалась во время ввода символов титров.

Для стирания символа  
Поверните диск SEL/PUSH EXEC для выбора установки [+], а затем нажмите на диск. Последний символ будет стерт.

Для ввода пробела  
Выберите [Z& ?], затем выберите пустую часть.

## Labeling a cassette


If you use a tape with cassette memory, you can label a cassette. The label can consist of up to 10 characters and is stored in cassette memory. When you insert the labelled cassette and set the POWER switch to VCR, CAMERA, or MEMORY, the label is displayed for about five seconds.

- (1) Insert the cassette you want to label.
- (2) Set the POWER switch to VCR or CAMERA.
- (3) Press MENU to display the menu.
- (4) Turn the SEL/PUSH EXEC dial to select  $\frac{1}{2}$ , then press the dial.
- (5) Turn the SEL/PUSH EXEC dial to select TAPE TITLE, then press the dial. The tape title display appears.
- (6) Turn the SEL/PUSH EXEC dial to select the column of the desired character, then press the dial.
- (7) Turn the SEL/PUSH EXEC dial to select the desired character, then press the dial.
- (8) Repeat steps 6 and 7 until you finish the label.
- (9) Turn the SEL/PUSH EXEC dial to select [SET], then press the dial. The label is stored in memory.

## Маркировка кассеты

При использовании ленты с кассетной памятью Вы можете выполнить маркировку кассеты. Маркировка может состоять из 10 символов и хранится в памяти кассеты. При вставке маркированной кассеты и установке переключателя POWER в положение VCR, CAMERA или MEMORY, а точнее около пяти секунд будет отображаться маркировка.

- (1) Вставьте кассету, которую Вы хотите маркировать.
- (2) Установите переключатель POWER в положение VCR или CAMERA.
- (3) Нажмите кнопку MENU для отображения меню.
- (4) Поверните диск SEL/PUSH EXEC для выбора установки  $\frac{1}{2}$ , а затем нажмите на диск.
- (5) Поверните диск SEL/PUSH EXEC для выбора установки TAPE TITLE, а затем нажмите на диск. Появится изображение маркировки ленты.
- (6) Поверните диск SEL/PUSH EXEC для выбора колонки с нужным символом, а затем нажмите на диск.
- (7) Поверните диск SEL/PUSH EXEC для выбора нужного символа, а затем нажмите на диск.
- (8) Повторите пункты 6 и 7 до тех пор, пока не завершите маркировку.
- (9) Поверните диск SEL/PUSH EXEC для выбора команды [SET], а затем нажмите на диск. Маркировка сохранена в памяти.

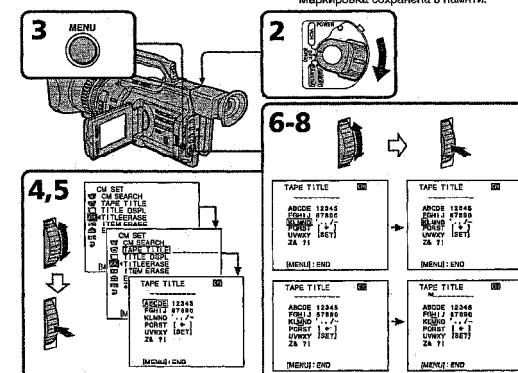

148

149

## Labeling a cassette

**To change the label you have made**  
Insert the cassette to change the label, and operate in the same way as you do to make a new label.

**If you set the write-protect tab of the tape to lock**  
You cannot label the tape. Slide the write-protect tab to release the write protection.

**If you have superimposed titles in the cassette**  
When the label is displayed, up to four titles also appear.

**When the "----" indicator has fewer than 10 spaces**  
The cassette memory is full.  
The "----" indicates the number of characters you can select for the label.

**To erase a character**  
Turn the SEL/PUSH EXEC dial to select [←], then press the dial. The last character is erased.

**To enter a space**  
Select [Z& ?!], then select the blank part.

## Маркировка кассеты

**Для изменения выполненной маркировки**  
Вставьте кассету, маркировку которой необходимо изменить, и выполните те же действия, что и для создания новой маркировки.

**Если защитный лепесток установлен в положение защиты от записи**  
Вы не сможете выполнить маркировку ленты. Передвиньте лепесток защиты от записи для отключения защиты.

**Если Вы выполнили наложение титров на кассете**  
Когда отображается маркировка, также отображаются до четырех титров.

**Если индикатор "----" содержит менее 10 знаков**  
Кассетная память переполнена.  
Индикатор "----" показывает количество символов, которые можно выбрать для маркировки.

**Для стирания символа**  
Поверните диск SEL/PUSH EXEC для выбора установщика [←], а затем нажмите на диск. Последний символ будет стерт.

**Для ввода пробела**  
Выберите [Z& ?!], затем выберите пустую часть.

## Erasing the cassette memory data

You can erase data stored in cassette memory, each item's data can be erased separately.  
You can also erase all items' data once.

## Стирание данных памяти кассеты

Данные, хранящиеся в кассетной памяти можно стереть, при этом данные каждого элемента должны стираться отдельно. Можно также стереть данные всех элементов одновременно.

150

## Erasing the cassette memory data

### Erasing each item's data separately

- (1) Set the POWER switch to VCR or CAMERA.
- (2) Press MENU to display the menu display.
- (3) Turn the SEL/PUSH EXEC dial to select [OK], then press the dial.
- (4) Turn the SEL/PUSH EXEC dial to select ITEM ERASE, then press the dial.
- (5) Turn the SEL/PUSH EXEC dial to select the item that you want to erase its data, then press the dial.

Item	Meaning
INDEX ALL	Erases all the index data.
TITLE ALL	Erases all the title data.
DATE ALL	Erases all the date data.
PHOTO ALL	Erases all the photo data.

- (6) Turn the SEL/PUSH EXEC dial to select OK, then press the dial. "OK" changes to "EXECUTE."
- (7) Press the SEL/PUSH EXEC dial.

## Стирание данных памяти кассеты


### Стирание данных каждого элемента отдельно

- (1) Установите переключатель POWER в положение VCR или CAMERA.
- (2) Нажмите кнопку MENU для отображения дисплея меню.
- (3) Поверните диск SEL/PUSH EXEC для выбора установки [OK], а затем нажмите на диск.
- (4) Поверните диск SEL/PUSH EXEC для выбора команды ITEM ERASE, а затем нажмите диск.
- (5) Поверните диск SEL/PUSH EXEC для выбора элемента, данные которого нужно стереть, а затем нажмите на диск.


Элемент	Назначение
INDEX ALL	Стирает все индексные данные.
TITLE ALL	Стирает все данные титров.
DATE ALL	Стирает все данные дат.
PHOTO ALL	Стирает все данные фото.

- (6) Поверните диск SEL/PUSH EXEC для выбора установки OK, а затем нажмите на диск. Индикация "OK" изменится на индикацию "EXECUTE".
- (7) Нажмите на диск SEL/PUSH EXEC. Индикация "ERASING" мигает примерно две секунды, и после стирания данных выбранного элемента появляется индикация "COMPLETE".

## Erasing the cassette memory data

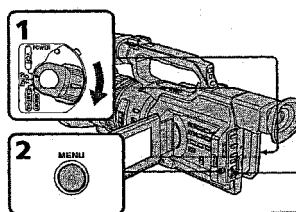

## Стирание данных памяти кассеты

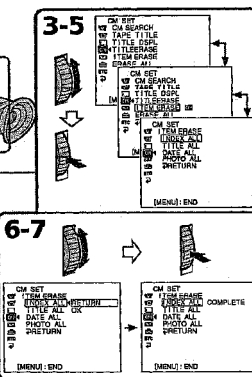

### To cancel erasing

Select RETURN in step 6 or 7, then press the SEL/PUSH EXEC dial.

### Erasing all the data in cassette memory

- (1) Set the POWER switch to VCR or CAMERA.
- (2) Press MENU to display the menu display.
- (3) Turn the SEL/PUSH EXEC dial to select [OK], then press the dial.
- (4) Turn the SEL/PUSH EXEC dial to select ERASE ALL, then press the dial.
- (5) Turn the SEL/PUSH EXEC dial to select OK, then press the dial. "OK" changes to "EXECUTE."
- (6) Press the SEL/PUSH EXEC dial.

"ERASING" flashes for about two seconds and "COMPLETE" appears after erasing all the data.

### To cancel erasing

Select RETURN in step 5 or 6, then press the SEL/PUSH EXEC dial.

### Для отмены удаления

Выберите RETURN в пункте 6 или 7, затем нажмите на диск SEL/PUSH EXEC.

### Стирание всех данных в кассетной памяти

- (1) Установите переключатель POWER в положение VCR или CAMERA.
- (2) Нажмите кнопку MENU для отображения дисплея меню.
- (3) Поверните диск SEL/PUSH EXEC для выбора установки [OK], а затем нажмите на диск.
- (4) Поверните диск SEL/PUSH EXEC для выбора команды ERASE ALL, а затем нажмите на диск.
- (5) Поверните диск SEL/PUSH EXEC для выбора установки OK, а затем нажмите на диск. "OK" изменится на "EXECUTE".
- (6) Нажмите на диск SEL/PUSH EXEC. Индикация "ERASING" мигает примерно две секунды, и после стирания всех данных появляется индикация "COMPLETE".

### Для отмены удаления

Выберите RETURN в пункте 5 или 6, затем нажмите на диск SEL/PUSH EXEC.

152

Editing / Монтаж

151

Editing / Монтаж

153

## — Customizing Your Camcorder — Changing the menu settings

To change the mode settings in the menu settings, select the menu items with the SEL/PUSH EXEC dial. The default settings can be partially changed. First, select the icon, then the menu item and then the mode.

- (1) In standby, or when the POWER switch is set to VCR or MEMORY, press MENU.
- (2) Turn the SEL/PUSH EXEC dial to select the desired icon, then press the dial to set it.
- (3) Turn the SEL/PUSH EXEC dial to select the desired item, then press the dial to set it.
- (4) Turn the SEL/PUSH EXEC dial to select the desired mode, then press the dial to set it.
- (5) If you want to change other items, select RETURN and press the dial, then repeat steps 2 to 4.

For details, see "Selecting the mode setting of each item" (p. 156).

## — Выполнение индивидуальных установок на видеокамере — Изменение установок меню


Для изменения установок режима в установках меню выберите пункты меню с помощью диска SEL/PUSH EXEC. Заводские установки могут частично отличаться. Сначала выберите пиктограмму, затем пункт меню, а затем режим.

- (1) В режиме ожидания или когда переключатель POWER установлен в положение VCR или MEMORY, нажмите MENU.
- (2) Поверните диск SEL/PUSH EXEC для выбора нужной пиктограммы, а затем нажмите на диск для выполнения установки.
- (3) Поверните диск SEL/PUSH EXEC для выбора нужного элемента, а затем нажмите на диск для выполнения установки.
- (4) Поверните диск SEL/PUSH EXEC для выбора нужного режима, а затем нажмите на диск для выполнения установки.
- (5) Если необходимо изменить другие элементы, выберите RETURN и нажмите на диск, затем повторите пункты 2 - 4.

Подробные сведения приведены в разделе "Выбор установок режима каждого элемента" (стр. 162).

## Changing the menu settings

## Изменение установок меню

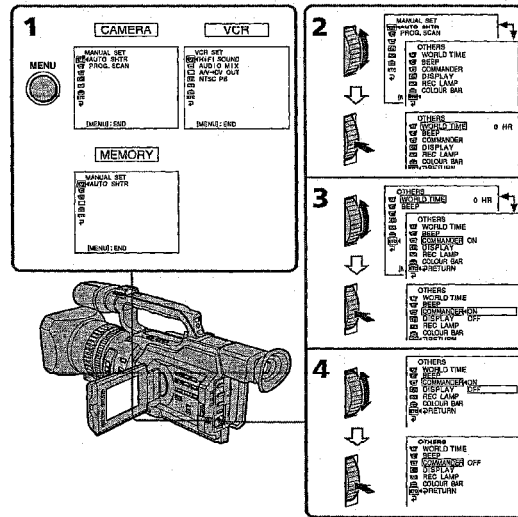

**To make the menu display disappear**  
Press MENU.

**Для того, чтобы скрыть индикацию меню**  
Нажмите кнопку MENU.

Menu items are displayed as the following icons:

- MANUAL SET
- CAMERA SET
- VCR SET
- LCD/VF SET
- MEMORY SET
- CM SET
- TAPE SET
- SETUP MENU
- OTHERS

Пункты меню отображаются в виде приведенных ниже пиктограмм:

- MANUAL SET
- CAMERA SET
- VCR SET
- LCD/VF SET
- MEMORY SET
- CM SET
- TAPE SET
- SETUP MENU
- OTHERS

154

155

## Changing the menu settings

### English

### Selecting the mode setting of each item ● is the default setting.

Menu items differ depending on the position of the POWER switch. The LCD screen or viewfinder screen shows only the items you can operate at the moment.

Icon/Item	Mode	Meaning	POWER switch
AUTO SHTR	● ON	To automatically adjust the electronic shutter speed.	CAMERA
	OFF	To fix the electronic shutter speed.	MEMORY
PROG. SCAN	● OFF	Records still/moving pictures in the interface format.	CAMERA
	ON	Records still/moving pictures in progressive mode.	
D ZOOM	● OFF	To deactivate the digital zoom. Up to 12x zoom is carried out.	CAMERA
	24x	To activate the digital zoom. More than 12x zoom is performed digitally. This value goes up to 24x (p. 30).	
	48x	To activate the digital zoom. More than 12x zoom is performed digitally. This value goes up to 48x (p. 30).	
16:9 WIDE	● OFF	To not record a 16:9 wide picture.	CAMERA
	ON	To record a 16:9 wide picture (p. 53).	
STEADYSHOT	● ON	To compensate for camera-shake.	CAMERA
	OFF	To cancel the SteadyShot function. Natural pictures are produced when shooting a stationary object with a tripod.	MEMORY

### Notes on the SteadyShot function

- The SteadyShot function will not correct excessive camera-shake.
- Attachment of a conversion lens (not supplied) may influence the SteadyShot function.

### If you cancel the SteadyShot function

The SteadyShot OFF indicator appears. Your camcorder prevents excessive compensation for camera-shake.

## Changing the menu settings

Icon/Item	Mode	Meaning	POWER switch
FRAME REC	● OFF	Does not make a cut recording.	CAMERA
	ON	Makes a cut recording (p. 87).	
INT. REC	ON	Makes an interval recording (p. 83).	CAMERA
	● OFF	Does not make an interval recording.	
HI/LO SOUND	● STEREO	Sets the interval time and recording time.	VCR
	1	To play back a stereo tape or dual sound track tape with main and sub sound (p. 212).	
	2	To play back a stereo tape with the left sound or a dual sound track tape with main sound.	
AUDIO MIX	—	To play back a stereo tape with the right sound or a dual sound track tape with sub sound.	VCR
	—	To adjust the balance between the stereo 1 and stereo 2 (p. 139).	
A/V → DV OUT	● OFF	To output analog images in digital format using your camcorder.	VCR
	ON	To output digital images in analog format using your camcorder.	
NTSC/PAL	● ON PAL TV	To play back a tape recorded on your camcorder on a PAL system TV.	VCR
	NTSC 4.43	To play back a tape recorded in the NTSC colour system on a TV with the NTSC 4.43 mode.	
LCD B. L.	● BRT NORMAL	To set the brightness on the LCD screen to normal.	VCR
	BRIGHT	To brighten the LCD screen.	CAMERA
LCD COLOUR	—	To adjust the colour on the LCD screen with the SEL/PUSH EXEC dial.	MEMORY
	—	To get low-intensity	
	—	To get high-intensity	
VF B. L.	● BRT NORMAL	To set the brightness on the viewfinder screen to normal.	VCR
	BRIGHT	To brighten the viewfinder screen.	CAMERA
GUIDEFAME	● OFF	Does not display the guide frame.	MEMORY
	ON	Displays the guide frame (p. 52).	

### Notes on LCD B.L. and VF B.L.

- When you select "BRIGHT," battery life is reduced a little during recording.
- When you use power sources other than the battery pack, "BRIGHT" is automatically selected.

156

157

## Changing the menu settings

Icon/Item	Mode	Meaning	POWER switch
CONTINUOUS	● OFF ON	Not to record continuously. To record four images continuously (p. 178).	MEMORY
QUALITY	● MULTI SCRN	To record nine images continuously (p. 178).	VCR
	● SUPER FINE (SPFN)	To record still images in the super fine quality mode, using a "Memory Stick" (p. 174).	MEMORY
	● FINE (FINE)	To record still images in the fine image quality mode, using a "Memory Stick" (p. 174).	
	● STANDARD (STD)	To record still images in the standard image quality mode, using a "Memory Stick" (p. 174).	
PRINT MARK	● OFF	To erase print marks on still images.	VCR
	ON	To write a print mark on the recorded still images you want to print out later.	MEMORY
PROTECT	● OFF	To release protection from still images.	VCR
	ON	To protect selected still images against accidental erasure (p. 202).	MEMORY
SLIDE SHOW	—	To play back all the images as a slide show (p. 200).	MEMORY
DELETE ALL	—	To delete all unprotected images (p. 206).	MEMORY
FORMAT	● RETURN	To cancel formatting.	MEMORY
	OK	To format an inserted "Memory Stick." 1. Select FORMAT with the SEL/PUSH EXEC dial, then press the dial. 2. Turn the SEL/PUSH EXEC dial to select OK, then press the dial. 3. After "EXECUTE" appears, press the SEL/PUSH EXEC dial. "FORMATTING" appears during formatting. "COMPLETE" appears when formatting is finished.	
PHOTO SAVE	—	To duplicate images on a mini DV tape onto a "Memory Stick" (p. 191).	VCR

### Formatting erases all information on the "Memory Stick"

Check the contents of the "Memory Stick" before formatting.

- Formatting erases sample images on the "Memory Stick."
- Formatting erases the protected image data on the "Memory Stick."

### Notes on formatting

- Supplied or optional "Memory Stick"s have been formatted at the factory. Formatting with this camcorder is not required.
- While the display shows "FORMATTING," do not turn the POWER switch, press any button, or eject a "Memory Stick."
- You cannot format a "Memory Stick" if the write-protect tab on the "Memory Stick" is set to LOCK.
- Format again if the message "E5" appears.

### If formatting fails

The "E5 FORMAT ERROR" message appears.

## Changing the menu settings

Icon/Item	Mode	Meaning	POWER switch
CM SEARCH	● ON OFF	To search using cassette memory (p. 93, 95, 97, 100). To search without using cassette memory.	VCR
TAPE TITLE	—	To label a cassette (p. 149).	VCR CAMERA
TITLE DSPL	● ON	To display the title you have superimposed.	VCR
	OFF	Not to display the title.	
TITLE ERASE	—	To erase the title you have superimposed (p. 145).	VCR CAMERA
ITEM ERASE	—	To erase each item's data in cassette memory (p. 151).	VCR CAMERA
	—	To erase all the data in cassette memory (p. 153).	VCR CAMERA
REC MODE	● SP	To record in the SP (Standard Play) mode.	VCR
	LP	To increase the recording time to 1.5 times the SP mode.	CAMERA
AUDIO MODE	● 12BIT	To record in 12-bit mode (two stereo sounds).	VCR
	16BIT	To record in 16-bit mode (one stereo sound with high quality).	CAMERA

### Notes on the LP mode

- When you record a tape in the LP mode on your camcorder, we recommend playing back the tape on your camcorder. When you play back the tape on other camcorders or VCRs, noise may occur in pictures or sound.
- When you record in the LP mode, we recommend using a Sony Excellence/Master mini DV cassette so that you can get the most out of your camcorder.
- You cannot make audio dubbing on a tape recorded in the LP mode. Use the SP mode for the tape to be audio-dubbed.
- When you record in the SP and LP modes on one tape or you record some scenes in the LP mode, the playback picture may be distorted or the time code may not be written properly between scenes.

### Notes on AUDIO MODE

- You cannot dub an audio sound on a tape recorded in the 16-bit mode.
- When playing back a tape recorded in the 16-bit mode, you cannot adjust the balance in AUDIO MIX.

Customizing Your Camcorder / Бронирование меню и управление функциями на экране

158

## Changing the menu settings

Icon/Item	Mode	Meaning	POWER switch
REMAIN	● AUTO	To display the remaining tape indication: • for about eight seconds after your camcorder is turned on and calculates the remaining amount of tape • for about eight seconds after a cassette is inserted and your camcorder calculates the remaining amount of tape • for about eight seconds after  is pressed in VCR mode • for about eight seconds after DISPLAY is pressed to display the screen indicators • for the period of tape rewinding, forwarding or picture search in the VCR mode ON To always display the remaining tape indicator.	VCR CAMERA
DATA CODE	● DATE/CAM	To display date, time and various settings during playback.	VCR
	DATE	To display date and time during playback.	
MIC LEVEL	● AUTO	Adjusts audio recording level automatically.	VCR
	MANUAL	Adjusts audio recording level manually (p. 73).	CAMERA MEMORY
CLOCK SET	—	To reset the date or time (p. 168).	CAMERA
LTR SIZE	● NORMAL	To display selected menu items in normal size.	VCR
	2x	To display selected menu items at twice the normal size.	CAMERA MEMORY
DEMO MODE	● ON	To make the demonstration appear.	CAMERA
	OFF	To cancel the demonstration mode.	
WORLD TIME	—	To set the clock to the local time. Turn the SEL/PUSH EXEC dial to set a time difference. The clock changes by the time difference you set here. If you set the time difference to 0, the clock returns to the originally set time.	CAMERA MEMORY

### Notes on DEMO MODE

- You cannot select DEMO MODE when a cassette is inserted in your camcorder.
- DEMO MODE is set to STBY (Standby) at the factory and the demonstration starts about 10 minutes after you have set the POWER switch to CAMERA without a cassette inserted.
- To cancel the demonstration, insert a cassette, set the POWER switch to other than CAMERA, or set DEMO MODE to OFF.

## Changing the menu settings

Icon/Item	Mode	Meaning	POWER switch
BEEP	● MELODY	To chime a melody in normal operations, and beep a warning sound for five seconds.	VCR CAMERA
COMMANDER	NORMAL	To beep in the following situations: turning on the power, pressing the start/stop button, and when a warning message appears.	MEMORY
	OFF	To cancel the melody, beep, and shutter click sound.	
	● ON	To activate the Remote Commander supplied with your camcorder.	VCR CAMERA
DISPLAY	OFF	To deactivate the Remote Commander to avoid remote control misoperation caused by an other VCR's remote control.	MEMORY
	● LCD	To show the display on the LCD screen and viewfinder screen.	VCR CAMERA
	V-OUT/LCD	To show the display on a TV screen, LCD screen and viewfinder screen.	MEMORY
REC LAMP	● ON	To light up the camera recording lamps at the front and rear of your camcorder.	CAMERA MEMORY
	OFF	To turn the camera recording lamps off.	
COLOUR BAR	● OFF	Does not display the colour bar.	CAMERA
	ON	Displays the colour bar.	
VIDEO EDIT	—	To make programs and perform video editing (p. 121).	VCR
EDIT SET	—	To adjust and set the synchronization of your camcorder and a VCR for dubbing in video program editing mode (p. 119).	VCR

### Note

If you press DISPLAY with DISPLAY set to V-OUT/LCD in the menu settings, the picture from a TV or VCR will not appear on the LCD screen even when your camcorder is connected to outputs on the TV or VCR (except using an i.LINK cable (DV connecting cable)).

### When recording a close subject

When REC LAMP is set to ON, the red camera recording lamps on the front and rear of the camcorder may reflect on the subject if it is close. In this case, we recommend you set REC LAMP to OFF.

### After more than five minutes after removing the power source

The "PROG. SCAN," "HI-FI SOUND," "AUDIO MIX," "MIC LEVEL," and "COMMANDER" items are returned to their default settings.

The other menu items are held in memory even when the power source is removed.

Customizing Your Camcorder / Бронирование меню и управление функциями на экране

159

160

161

## Resetting the date and time

The default clock setting is set to London time for United Kingdom, and to Paris time for the other European countries.


If you do not use your camcorder for about four months, the date and time settings may be released (bars may appear) because the vanadium-lithium battery installed in your camcorder will have been discharged (p. 236). First, set the year, then the month, the day, the hour and then the minute.

- (1) Press MENU to display the menu in the standby mode.
- (2) Turn the SEL/PUSH EXEC dial to select **CLOCK SET**, then press the dial.
- (3) Turn the SEL/PUSH EXEC dial to select **CLOCK SET**, then press the dial.
- (4) Turn the SEL/PUSH EXEC dial to adjust to the desired year, then press the dial.
- (5) Set the month, day and hour by turning the SEL/PUSH EXEC dial and pressing the dial.
- (6) Set the minute by turning the SEL/PUSH EXEC dial and pressing the dial by the time signal. The clock starts to move.
- (7) Press MENU to erase the menu display.

## Переустановка даты и времени

По умолчанию часы установлены на лондонское время для моделей Великобритании и на парижское время для других европейских моделей. Если видеокamera не использовалась около четырех месяцев, установки даты и времени могут исчезнуть (появятся черточки), поскольку ванадиево-литиевая батарейка, установленная в видеокамере, разрядится (стр. 236). Сначала установите год, затем месяц, день, час и минуту.


- (1) Нажмите кнопку MENU для отображения меню в режиме ожидания.
- (2) Поверните диск SEL/PUSH EXEC для выбора команды CLOCK SET, а затем нажмите на диск.
- (3) Поверните диск SEL/PUSH EXEC для выбора команды CLOCK SET, а затем нажмите на диск.
- (4) Поверните диск SEL/PUSH EXEC для выбора нужного года, а затем нажмите на диск.
- (5) Поворачивая диск SEL/PUSH EXEC и нажимая на него, установите месяц, день и час.
- (6) Установите минуты, поворачивая диск SEL/PUSH EXEC и нажимая на него в момент появления сигнала точного времени. Часы начнут функционировать.
- (7) Нажмите кнопку MENU для удаления индикации меню.

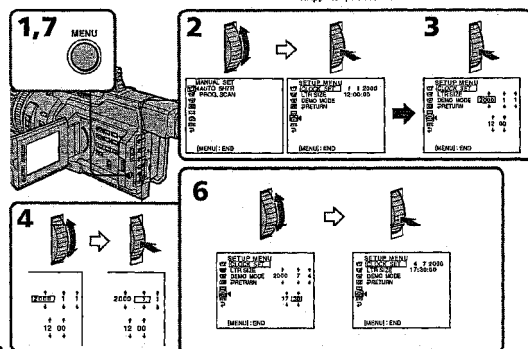

168

## Resetting the date and time

The year changes as follows:



If you do not set the date and time "----" (time) and "----" (date) are recorded on the data code of the tape and the "Memory Stick."

**Note on the time indicator**  
The internal clock of your camcorder operates on a 24-hour cycle.

## Переустановка даты и времени

Год изменяется следующим образом:

Если Вы не установите дату и время В коде данных на ленте и карте памяти "Memory Stick" будет записана индикация "----" (время) и "----" (дата).

**Примечание по индикатору времени**  
Встроенные часы этой видеокамеры работают в 24-часовом режиме.

## Using a "Memory Stick" – introduction

You can record and play back still images on the "Memory Stick" supplied with your camcorder. You can easily play back, record or delete still images. You can exchange image data with other equipment such as a personal computer etc., using the Memory Stick Reader/Writer supplied with your camcorder or a PC card adaptor for Memory Stick (not supplied).

**On file format (JPEG)**  
Your camcorder compresses image data in JPEG format (extension .jpg).

**Typical image data file name**  
100-0001: As displayed on the LCD screen or in the viewfinder of the camcorder.  
Ds00001.jpg: As displayed on your PC screen.

## Before using a "Memory Stick"

- You cannot record or erase still images when the write-protect tab on the "Memory Stick" is set to LOCK.
- We recommend backing up important data.
- Image data may be damaged in the following cases:
  - If you remove the "Memory Stick," turn the power off, or detach the battery for replacement when the access lamp is flashing.
  - If you use a "Memory Stick" near static electricity or magnetic fields.

## Использование "Memory Stick" – введение

Можно записывать и воспроизводить неподвижные изображения на "Memory Stick", прилагаемой к видеокамере. Вы можете легко воспроизводить, записывать или удалять неподвижные изображения. Можно выполнять обмен данными изображения с другой аппаратурой, например, персональным компьютером и т.п., используя устройство чтения/записи "Memory Stick", прилагаемое к видеокамере, или адаптер PC card для "Memory Stick" (не входит в комплект).

**О формате файлов (JPEG)**  
Эта видеокамера сжимает данные изображения в формат JPEG (о расширении .jpg).

**Обычное имя файла данных изображения**  
100-0001: Как отображается на экране ЖКД или в видоискателе видеокамеры.  
Ds00001.jpg: Как отображается на экране ПК.

## Перед использованием "Memory Stick"

- Неподвижные изображения невозможно записывать или стирать, если лепесток защиты от записи на "Memory Stick" установлен в положение LOCK.
- Для важных данных рекомендуется создавать резервную копию.
- Данные изображения могут быть повреждены в следующих случаях:
  - Если Вы извлекаете "Memory Stick", выключаете питание или отсоединяете батарейный блок для замены, когда мигает лампочка обращения ACCESS.
  - Если "Memory Stick" используется рядом с источниками статического электричества или магнитных полей.

## Using a "Memory Stick" – introduction

- Prevent metallic objects or your finger from coming into contact with the metal parts of the connecting section.
- Stick its label on the labeling position.
- Do not bend, drop or apply strong shock to a "Memory Stick."
- Do not disassemble or modify a "Memory Stick."
- Do not let the "Memory Stick" get wet.
- Do not use or keep a "Memory Stick" in locations that are:
  - Extremely hot such as in a car parked in the sun or under the scorching sun.
  - Under direct sunlight.
  - Very humid or subject to corrosive gases.
- When you carry or store a "Memory Stick," put it in its case.

## A "Memory Stick" formatted by a computer

A "Memory Stick" formatted by the Windows OS or Macintosh computers does not have a guaranteed compatibility with this camcorder.

## Notes on image data compatibility

- Image data files recorded on a "Memory Stick" by your camcorder conform to the Design Rules for Camera File Systems universal standard (DCF98 standard) established by the JEIDA (Japan Electronic Industry Development Association). You cannot play back on your camcorder still images recorded on other equipment (DCR-TRV900E/TRV900/TRV900E or DSC-D700/D770) that does not conform to this universal standard. (These models are not sold in some areas.)
- If you cannot use a "Memory Stick" that is used with other equipment, format it with this camcorder (p. 158). However, formatting erases all information on the "Memory Stick."

## Использование "Memory Stick" – введение

- Не прикасайтесь металлическими предметами или пальцами к металлическим частям соединительных секций.
- Этикетку следует приклеивать в позиции маркировки.
- Не сгибайте, не роняйте и сильно не трясите "Memory Stick".
- Не разбирайте и не модифицируйте "Memory Stick".
- Не допускайте попадания влаги на "Memory Stick".
- Не используйте и не храните "Memory Stick":
  - В слишком жарких местах, например, в автомобиле, припаркованном в солнечном месте, или под палящим солнцем.
  - На солнце.
  - В очень влажных местах или местах, подверженных воздействию агрессивных газов.
- При переноске или хранении "Memory Stick" необходимо положить в футляр.

## "Memory Stick", отформатированная на компьютере

"Memory Stick", отформатированная с помощью компьютеров с операционной системой Windows или Macintosh, не обладают гарантированной совместимостью с этой видеокамерой.

## Примечания по совместимости данных изображения

- Файлы данных изображений, записанные видеокamera на "Memory Stick", соответствуют универсальному стандарту (DCF98), согласно правилам проектирования файловых систем для видеокamer, установленному ассоциацией JEIDA (Японской ассоциацией развития электронной промышленности). На этой видеокамере нельзя воспроизводить неподвижные изображения, записанные на другой аппаратуре (DCR-TRV900E/TRV900E или DSC-D700/D770), которая не соответствует этому универсальному стандарту. (Эти модели не продаются в некоторых областях.)
- Если Вы не можете использовать "Memory Stick", которые используются на другой аппаратуре, отформатируйте их с помощью этой видеокамеры (стр. 164). Однако форматирование удалит всю информацию на "Memory Stick".

Customizing Your Camcorder / Выполнение индивидуальных установок на видеокамеру

169


"Memory Stick" Operations / Операции с "Memory Stick"

170

171



## Using a "Memory Stick" - introduction

"Memory Stick" and  are trademarks of Sony Corporation.

- Windows is a registered trademark licensed to Microsoft Corporation, registered in the U.S.A. and other countries.
- Macintosh and Mac OS are trademarks of Apple Computer, Inc.
- All other product names mentioned herein may be the trademarks or registered trademarks of their respective companies. Furthermore, "TM" and "®" are not mentioned in each case in this manual.

## Использование "Memory Stick" - введение

"Memory Stick" и  являются торговыми марками корпорации Sony.

- Windows является зарегистрированной торговой маркой, которая запатентована корпорацией Microsoft, зарегистрированной в США и других странах.
- Macintosh и Mac OS являются торговыми марками Apple Computer, Inc.
- Все другие наименования продуктов, упомянутые в этом документе, могут быть торговыми марками или зарегистрированными торговыми марками соответствующих компаний. Символы "TM" и "®" в каждом случае не упоминаются в данном руководстве.

## Using a "Memory Stick" - introduction


### Inserting a "Memory Stick"

Insert the "Memory Stick" with the Sony logo pointing toward the LCD panel and the b mark pointing inward.

## Использование "Memory Stick" - введение

### Установка "Memory Stick"

Вставьте "Memory Stick" с эмблемой Sony, указывающей в направлении панели ЖКД, и обозначением b, направленным внутрь.

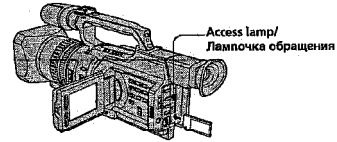


### To eject a "Memory Stick"

Push the "Memory Stick" inward, then release your finger. The "Memory Stick" comes out a little.

### Для извлечения "Memory Stick"

Нажмите на "Memory Stick", затем отпустите. "Memory Stick" выйдет из отсека.

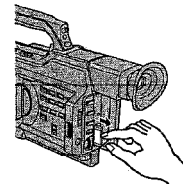

### Note

The "Memory Stick" may pop out depending on the way you push it.

### Примечание

"Memory Stick" может резко выскочить из отсека, в зависимости от нажатия на нее.

When the access lamp is lit or flashing  
Never shake or strike your camcorder. Do not turn the power off, eject a "Memory Stick" or remove the battery pack. Otherwise, image data breakdown may occur.

Если лампочка обращения горит или мигает  
Никогда не трясите видеокамеру и не стучите по ней. Не выключайте питание, не извлекайте "Memory Stick" из отсека и не удалите батарейный блок. В противном случае данные изображения могут быть повреждены.

172

## Using a "Memory Stick" - introduction

If the "MEMORY STICK ERROR" indicator appears  
The "Memory Stick" is broken or the file format is not proper. Eject the "Memory Stick", check it, and insert it again. If the same indicator appears, use another "Memory Stick."

### Selecting the image quality mode

You can select the image quality mode in still picture recording. The default setting is SUPER FINE.

- (1) Set the POWER switch to VCR or MEMORY. Make sure that the LOCK switch is set to the right (unlock) position.
- (2) Press MENU to display the menu.
- (3) Turn the SEL/PUSH EXEC dial to select QUALITY, then press the dial.
- (4) Turn the SEL/PUSH EXEC dial to select QUALITY, then press the dial.
- (5) Turn the SEL/PUSH EXEC dial to select the desired image quality, then press the dial.

## Использование "Memory Stick" - введение

Если появился индикатор "MEMORY STICK ERROR"  
Повреждена "Memory Stick", или файл несоответствующего формата. Извлеките "Memory Stick", проверьте ее и снова установите. Если снова появится тот же индикатор, используйте другую "Memory Stick".

### Выбор режима качества изображения

Во время записи неподвижного изображения можно выбрать режим качества изображения. По умолчанию используется SUPER FINE.

- (1) Установите переключатель POWER в положение VCR или MEMORY. Убедитесь, что переключатель LOCK установлен в правое положение (разблокирован).
- (2) Нажмите кнопку MENU для отображения меню.
- (3) Поверните диск SEL/PUSH EXEC для выбора установки QUALITY, а затем нажмите на диск.
- (4) Поверните диск SEL/PUSH EXEC для выбора установки QUALITY, а затем нажмите на диск.
- (5) Поверните диск SEL/PUSH EXEC для выбора желаемого качества изображения, а затем нажмите на диск.

## Using a "Memory Stick" - introduction

### Image quality settings

Setting (Display)	Meaning
SUPER FINE (SFN)	This is the highest image quality in this camcorder. The number of still images you can record is fewer than FINE. The image is compressed to about 1/3.
FINE (FINE)	Use this mode when you want to record high quality images. The image is compressed to about 1/6.
STANDARD (STD)	This is the standard image quality. The image is compressed to about 1/10.

### Note

In some cases, changing the image quality mode may not affect the image quality, depending on the types of images you are shooting.

Differences in image quality mode  
Recorded images are compressed in JPEG format before being stored in memory. The memory capacity allotted to each image varies depending on the image quality mode selected. Details are shown in the table below.

Image quality mode	Memory capacity
SUPER FINE	Approx. 190 KB
FINE	Approx. 100 KB
STANDARD	Approx. 60 KB

Note on the image quality mode indicator  
This is only displayed during recording.

## Использование "Memory Stick" - введение

### Установки качества изображения

Установка	Назначение
SUPER FINE (SFN)	Это наилучшее качество изображения в видеокамере. Количество неподвижных изображений, которые можно записать, будет меньше, чем при установке FINE. Изображение сжимается примерно до 1/3.
FINE (FINE)	Используйте этот режим, если необходимо записать высокочастотные изображения. Изображение сжимается примерно до 1/6.
STANDARD (STD)	Это стандартное качество изображения. Изображение сжимается примерно до 1/10.

### Примечание

В некоторых случаях изменение режима качества изображения может не отразиться на качестве изображения, в зависимости от типа изображений, съемку которых Вы производите.


### Различия в режиме качества изображения

Перед сохранением в памяти записанные изображения сжимаются в формате JPEG. Объем памяти, выделенный для каждого изображения, изменяется в зависимости от выбранного режима качества изображения. Подробно это показано в таблице.

Режим качества изображения	Объем памяти
SUPER FINE	Прибл. 190 Kb
FINE	Прибл. 100 Kb
STANDARD	Прибл. 60 Kb

### Индикатор режима качества изображения

Отображается только во время записи.

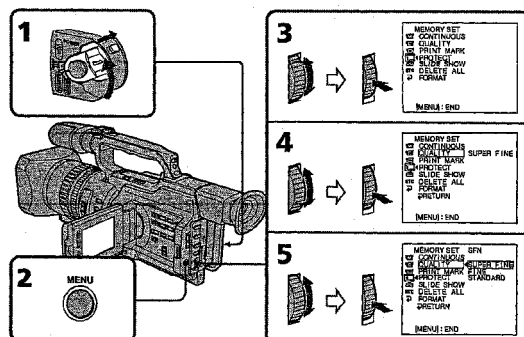

174

"Memory Stick" Operations / Операции с "Memory Stick"

173

"Memory Stick" Operations / Операции с "Memory Stick"

175

## Using a "Memory Stick" – introduction

### The approximate number of images you can record on a "Memory Stick"

The approximate number of images you can record on a "Memory Stick" that is formatted using this camcorder varies depending on which image quality mode you select and the complexity of the subject.

	Image quality mode/Режимы качества изображения		
	SUPER FINE (SFN)	FINE (FINE)	STANDARD (STD)
4 MB type (supplied) / 4 Мб (входит в комплект)	20 images / 20 изображений	40 images / 40 изображений	60 images / 60 изображений
8 MB type (not supplied) / 8 Мб (не входит в комплект)	40 images / 40 изображений	81 images / 81 изображение	122 images / 122 изображения
16 MB type (not supplied) / 16 Мб (не входит в комплект)	82 images / 82 изображения	164 images / 164 изображения	246 images / 246 изображений
32 MB type (not supplied) / 32 Мб (не входит в комплект)	164 images / 164 изображения	329 images / 329 изображений	494 images / 494 изображения
64 MB type (not supplied) / 64 Мб (не входит в комплект)	329 images / 329 изображений	659 images / 659 изображений	988 images / 988 изображений

## Использование "Memory Stick" – введение

### Приблизительное количество изображений, которое можно записать на "Memory Stick"

Приблизительное количество изображений, которое можно записать на "Memory Stick", отформатированную с помощью данной видеокамеры, меняется в зависимости от выбранного режима качества изображения и сложности объекта.

## Recording still images on a "Memory Stick" – Memory Photo recording

You can record still images on a "Memory Stick."

### Before operation

Insert a "Memory Stick" into your camcorder.

- (1) Set the POWER switch to MEMORY. Make sure that the LOCK switch is set to the right (unlock) position.
- (2) Keep pressing PHOTO lightly until the desired still picture appears. The green mark stops flashing, then lights up. The brightness of the picture and focus are re-adjusted, being targeted for the middle of the picture and are fixed. Recording does not start yet.
- (3) Press PHOTO deeply. The shutter clicks and the image is frozen. The image displayed on the screen will be recorded on the "Memory Stick." Recording is complete when the bar scroll indicator disappears.


## Запись неподвижных изображений на "Memory Stick" – Запись фотографий в память

На "Memory Stick" можно записывать неподвижные изображения.

### Перед началом работы

Вставьте "Memory Stick" в видеокамеру.

- (1) Установите переключатель POWER в положение MEMORY. Убедитесь, что переключатель LOCK установлен в правое положение (разблокирован).
- (2) Держите слегка нажатой кнопку PHOTO до тех пор, пока не появится требуемое неподвижное изображение. Зеленая метка прекратит мигать и затем загорится. Яркость изображения и фокусировка настраиваются по центру изображения и фиксируются. Запись еще не начинается.
- (3) Нажмите кнопку PHOTO сильнее. Щелкнет затвор, и изображение на экране запишется на "Memory Stick". Запись будет завершена, когда исчезнет индикатор в виде полоски.

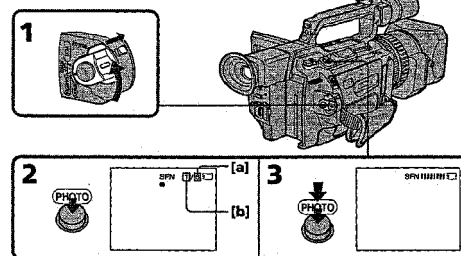

[a] The number of images that can be recorded on the "Memory Stick"  
[b] The number of recorded images

[a] Количество изображений, которое может быть записано на "Memory Stick"  
[b] Количество записанных изображений

176

## Recording still images on a "Memory Stick" – Memory Photo recording

When the POWER switch is set to MEMORY The following functions do not work: wide TV mode, digital effect, picture effect, title, digital zoom, fader, shutter speed (1/25 or smaller) adjustment, and low lux mode and sports lesson mode in PROGRAM AE. (The indicator flashes in the low lux or sports lesson mode.)

### Note

When you press the PHOTO button lightly at step 2, the focus of the image seems to be momentarily out.

While you are recording a still image You can neither turn off the power nor press PHOTO.

When you press PHOTO on the Remote Commander Your camcorder immediately records the image that is on the screen when you press the button.

### Recording images continuously


You can record still images continuously. Select one of the two modes described below before recording.

#### Continuous mode [a]

You can four record still images continuously. The number of images is in accordance with remaining capacity of the "Memory Stick."

#### Multi screen mode [b]

You can record nine still images continuously on a single page.

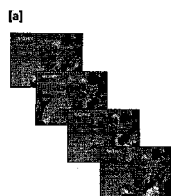

## Запись неподвижных изображений на "Memory Stick" – Запись фотографий в память

Если переключатель POWER установлен в положение MEMORY Следующие функции не работают: широкоэкранный телевизионный режим, цифровой эффект, эффект изображения, титр, цифровая трансформация, фрейдер, регулировка скорости затвора (1/25 или ниже), режим низкой освещенности, а также режим спортивных состязаний в PROGRAM AE. (Индикатор мигает при съемке в режиме низкой освещенности или спортивных состязаний.)

### Примечание

Если слегка нажать кнопку PHOTO в пункте 2, возникает ощущение, что фокусировка изображения временно теряется.

При записи неподвижного изображения невозможно выключить питание или нажать кнопку PHOTO.


Если нажать кнопку PHOTO на пульте дистанционного управления Видеокамера сразу же запишет изображение, которое будет на экране в момент нажатия кнопки.

### Непрерывная запись изображений

Можно выполнять непрерывную запись неподвижных изображений. Перед записью выберите один из двух режимов, описанных ниже.

Непрерывный режим [a] Можно выполнять непрерывную запись четырех неподвижных изображений. Количество изображений зависит от объема свободной памяти на "Memory Stick".

Многоэкранный режим [b] Можно записывать 9 неподвижных изображений непрерывно на одной странице.

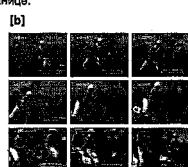

## Recording still images on a "Memory Stick" – Memory Photo recording


While pressing down PHOTO, the camcorder shoots still images continuously. The maximum number of recordable still images is up to four. If you release the button during shooting, the recording stops even if it is in progress.

- (1) Set the POWER switch to MEMORY. Make sure that the LOCK switch is set to the right (unlock) position.
- (2) Press MENU to display the menu.
- (3) Turn the SEL/PUSH EXEC dial to select [a], then press the dial.
- (4) Turn the SEL/PUSH EXEC dial to select CONTINUOUS, then press the dial.
- (5) Turn the SEL/PUSH EXEC dial to the desired setting, then press the dial.

## Запись неподвижных изображений на "Memory Stick" – Запись фотографий в память

При нажатии кнопки PHOTO видеокамера снимает неподвижные изображения непрерывно. Можно записать не более четырех неподвижных изображений. Если отпустить кнопку во время съемки, запись прекратится, даже если съемка не завершена.

- (1) Установите переключатель POWER в положение MEMORY. Убедитесь, что переключатель LOCK установлен в правое положение (разблокирован).
- (2) Нажмите кнопку MENU для отображения меню.
- (3) Поверните диск SEL/PUSH EXEC для выбора установки [a], а затем нажмите на диск.
- (4) Поверните диск SEL/PUSH EXEC для выбора установки CONTINUOUS, затем нажмите на диск.
- (5) Поверните диск SEL/PUSH EXEC для выбора желаемой установки, а затем нажмите на диск.

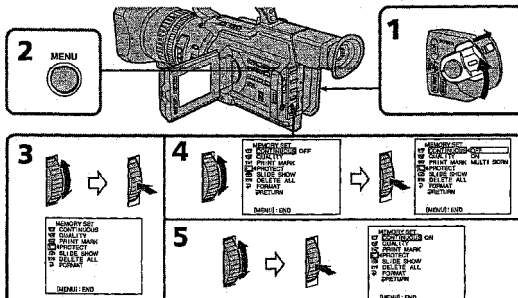

178

"Memory Stick" Operations / Операции с "Memory Stick"

177

"Memory Stick" Operations / Операции с "Memory Stick"

179

## Recording still images on a "Memory Stick" – Memory Photo recording

### Continuous shooting settings

Setting	Meaning (indicator on the screen)
OFF	Your camcorder shoots one image at a time. (no indicator)
ON	Your camcorder shoots four still images at about 0.5 sec intervals. (P)
MULTISCRN	Your camcorder shoots nine still images at about 0.5 sec intervals and displays the images on a single page divided into nine boxes. (P)

### If the capacity of the "Memory Stick" becomes full

"FULL" appears on the screen, and you cannot record still pictures on this "Memory Stick."

### The number of images in continuous shooting

The number of images you can shoot continuously varies depending on the remaining capacity of the "Memory Stick." The shutter always clicks four times, however, the number of images recordable may be less than four.

### Note on using a video flash light (not supplied)

The video flash light does not work in the continuous or multi screen mode if you install it to the intelligent accessory shoe.

### When shooting with the self-timer function or the Remote Commander

The camcorder automatically records up to the maximum recordable number of still pictures.

## Запись неподвижных изображений на "Memory Stick" – Запись фотографий в память

### Установки непрерывной съемки

Установка	Значение (индикатор на экране)
OFF	Видеокамера делает один снимок за раз (без индикатора).
ON	Видеокамера снимает четыре неподвижных изображения с интервалами около 0,5 секунд. (P)
MULTI SCRN	Видеокамера снимает девять неподвижных изображений с интервалами примерно 0,5 сек и отображает их на одной странице, разделенной на девять прямоугольников. (P)

### Если "Memory Stick" переполняется

На экране появляется индикатор "FULL", и неподвижные изображения больше нельзя записывать на эту "Memory Stick".

### Количество изображений при непрерывной съемке

Количество изображений, которые можно снимать непрерывно, изменяется в зависимости от размера изображения и емкости "Memory Stick". Затвор всегда щелкает четыре раза, однако количество записываемых изображений может быть меньше четырех.

### Использование видеовспышки (не входит в комплект)

Видеовспышка не работает в непрерывном или многоэкранном режиме, если она установлена в держатель для вспомогательных устройств.

### При съемке с функцией таймера самозапуска или с помощью пульта дистанционного управления

Видеокамера автоматически записывает максимально возможное количество неподвижных изображений.


## Recording still images on a "Memory Stick" – Memory Photo recording

### Self-timer memory photo recording

You can make a memory photo recording with the self-timer. This mode is useful when you want to record yourself. You can also use the Remote Commander.

- (1) Set the POWER switch to MEMORY. Make sure that the LOCK switch is set to the right (unlock) position.
- (2) Press  $\odot$  (self-timer) in standby mode. The  $\odot$  (self-timer) indicator appears on the LCD screen or in the viewfinder.
- (3) Press PHOTO deeply.

The self-timer starts counting down from 10 with a beep sound. In the last two seconds of the countdown, the beep sound gets faster, then recording starts automatically.

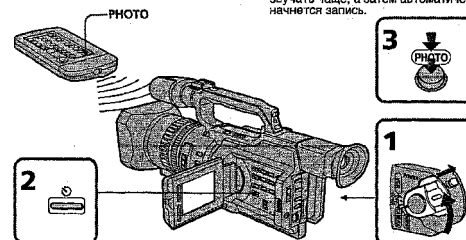

### To cancel self-timer recording

Press  $\odot$  (self-timer) so that the  $\odot$  indicator disappears from the LCD or viewfinder screen. You cannot cancel the self-timer recording using the Remote Commander.

### Note

The self-timer recording mode is automatically cancelled when:  
– Self-timer recording is finished.  
– The POWER switch is set to OFF (CHG) or VCR.

## Запись неподвижных изображений на "Memory Stick" – Запись фотографий в память

### Фотосъемка по таймеру самозапуска с сохранением в памяти

Можно выполнять фотосъемку с сохранением в памяти по таймеру самозапуска. Этот режим полезен в том случае, если Вы хотите снять себя. Для этого можно также использовать пульт дистанционного управления.

- (1) Установите переключатель POWER в положение MEMORY. Убедитесь, что переключатель LOCK установлен в правое положение (разблокирован).
- (2) В режиме ожидания нажмите кнопку  $\odot$  (таймер самозапуска). На экране ЖКД или в видоискателе появится индикатор  $\odot$  (таймер самозапуска).
- (3) Нажмите кнопку PHOTO сильнее. Таймер самозапуска начнет обратный отсчет с 10 с зуммерным сигналом. В последние две секунды обратного отсчета зуммерный сигнал будет звучать чаще, а затем автоматически начнется запись.

### Для отмены записи по таймеру самозапуска

Нажмите кнопку  $\odot$  (таймер самозапуска), чтобы индикатор  $\odot$  исчез с экрана ЖКД или видоискателя. Запись по таймеру самозапуска невозможно отменить с помощью пульта дистанционного управления.

### Примечание

Режим записи по таймеру самозапуска будет автоматически отменен, если:  
– Окончена запись по таймеру самозапуска.  
– Выключатель POWER установлен в положение OFF (CHG) или VCR.

180

## Superimposing a still image in a "Memory Stick" on a moving picture – MEMORY MIX

You can superimpose a still image you have recorded on a "Memory Stick" on the top of the moving picture you are recording.

### M. CHROM (Memory chromakey)

You can swap a blue area of a still image such as an illustration or a frame with a moving picture.

### M. LUMI (Memory luminancekey)

You can swap a brighter area of a still image such as a handwritten illustration or title with a moving picture. Record a title on a "Memory Stick" before a trip or event for convenience.

### C. CHROM (Camera chromakey)

You can superimpose a moving picture on a still image that used as background. Shoot the subject against a blue background. The blue area of the moving picture will be swapped with a still image.

### M. OVERLAP (Memory overlap)

You can make a moving picture fade in on top of a still image.

## Наложение неподвижного изображения из "Memory Stick" на подвижное изображение – MEMORY MIX

Неподвижное изображения, записанное на "Memory Stick", можно наложить на записываемое подвижное изображение.

### M. CHROM (кнопка замены по цветности)

Можно заменить синюю область неподвижного изображения, например, рисунок или кадр, подвижным изображением.

### M. LUMI (кнопка замены по яркости)

Можно заменить более светлую область неподвижного изображения, например, рисунок, сделанный от руки, или титр, подающим изображением. Перед путешествием или каким-нибудь событием запишите титр для удобства на "Memory Stick".


### C. CHROM (кнопка цветности видеокамеры)

Подвижное изображение можно наложить на неподвижное изображение, которое используется в качестве фона. Снимите объект на синем фоне. Синяя часть подвижного изображения будет заменена на неподвижное изображение.

### M. OVERLAP (наложение с помощью памяти)

Можно сделать так, чтобы подвижное изображение постепенно появлялось поверх неподвижного изображения.

## Superimposing a still image in a "Memory Stick" on a moving picture – MEMORY MIX

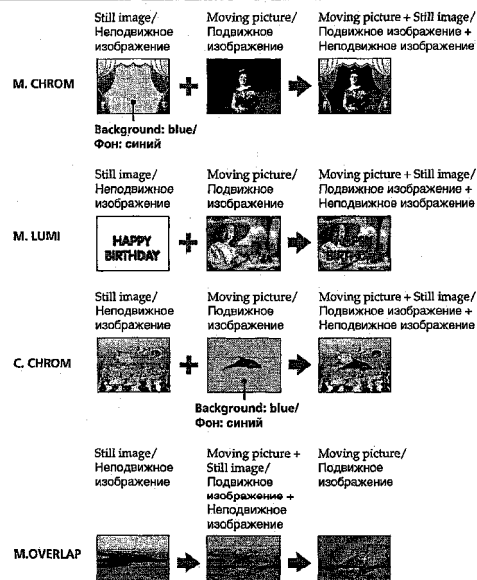

182

181

## Superimposing a still image in a "Memory Stick" on a moving picture – MEMORY MIX

### Before operation

Insert a recorded "Memory Stick" and a mini DV tape to be recorded into your camcorder.

- (1) Set the POWER switch to CAMERA.
- (2) Press MEMORY MIX in standby mode. The last recorded or last composed image appears on the lower part of the screen as a thumbnail image.
- (3) Press MEMORY+/- or +/- on the Remote Commander to select the still image you want to superimpose. To see the next image, press MEMORY+ or + on the Remote Commander.
- (4) Turn the SEL/PUSH EXEC dial to select the desired mode. The mode changes as follows: M. CHROM ↔ M. LUMI ↔ C. CHROM ↔ M. OVERLAP
- (5) Press the SEL/PUSH EXEC dial. The still image is superimposed on the moving picture, and your camcorder is in standby mode.
- (6) Turn the SEL/PUSH EXEC dial to adjust the effect.
- (7) Press START/STOP to start recording.

## Наложение неподвижного изображения из "Memory Stick" на подвижное изображение – MEMORY MIX


### Перед началом работы

Вставьте в видеокамеру "Memory Stick" с записью и ленту мини DV для записи.

- (1) Установите переключатель POWER в положение CAMERA.
- (2) Нажмите кнопку MEMORY MIX в режиме ожидания. Последнее записанное или скомпозированное изображение появится в нижней части экрана в виде небольшого изображения.
- (3) Нажмите кнопку MEMORY+/- или +/- на пульте дистанционного управления для выбора неподвижного изображения, которое требуется наложить. Чтобы просмотреть предыдущее изображение, нажмите кнопку MEMORY- или - на пульте дистанционного управления. Чтобы просмотреть следующее изображение, нажмите кнопку MEMORY+ или + на пульте дистанционного управления.
- (4) Поверните диск SEL/PUSH EXEC для выбора нужного режима. Режим будет изменяться следующим образом: M. CHROM ↔ M. LUMI ↔ C. CHROM ↔ M. OVERLAP
- (5) Нажмите на диск SEL/PUSH EXEC. Неподвижное изображение накладывается на подвижное, а видеокамера переходит в режим ожидания.
- (6) Поверните диск SEL/PUSH EXEC для регулировки эффекта.
- (7) Нажмите кнопку START/STOP для начала записи.

## Superimposing a still image in a "Memory Stick" on a moving picture – MEMORY MIX

## Наложение неподвижного изображения из "Memory Stick" на подвижное изображение – MEMORY MIX

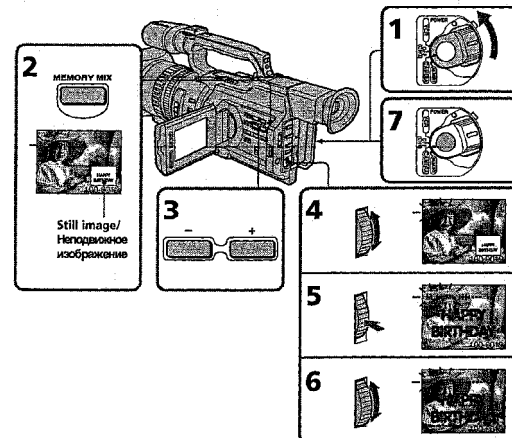

### Items to be adjusted

M. CHROM	The colour (blue) scheme of the area in the still picture which is to be swapped with a moving picture
M. LUMI	The colour (bright) scheme of the area in the still picture which is to be swapped with a moving picture
C. CHROM	The colour (blue) scheme of the area in the moving picture which is to be swapped with a still picture
M. OVERLAP	No adjustment necessary

As the bar is shorter, the effect is enhanced.

### Элементы для регулировки

M. CHROM	Цветовая гамма (синяя) области неподвижного изображения, которую нужно заменить подвижным изображением
M. LUMI	Цветовая гамма (светлая) области неподвижного изображения, которую нужно заменить подвижным изображением
C. CHROM	Цветовая гамма (синяя) области подвижного изображения, которую нужно заменить неподвижным изображением
M. OVERLAP	Регулировка не требуется

Чем короче полоса, тем сильнее эффект.

"Memory Stick" Operations / Операции с "Memory Stick"

## Superimposing a still image in a "Memory Stick" on a moving picture – MEMORY MIX

### To change the still image to be superimposed

Do either of the following:

- Press MEMORY+/- after step 6.
- Press the SEL/PUSH EXEC dial after step 6, and repeat the procedure from step 4 (except M. OVERLAP).

### To change the mode setting

Press SEL/PUSH EXEC dial after step 6, and repeat the procedure from step 4 (except M. OVERLAP).

### To cancel MEMORY MIX

Press MEMORY MIX.

### During recording

You cannot change the mode setting.

### The "Memory Stick" supplied with your camcorder has 20 images stored

- For M. CHROM: 18 images (such as a frame) 100-0001 to 100-0018
- For C. CHROM: two images (such as background) 100-0019 to 100-0020

### Sample images

Sample images stored in the "Memory Stick" supplied with your camcorder are protected (p. 202).

If a still image to be superimposed has lots of white areas  
The thumbnail image may not be displayed clearly.

Image data modified with personal computers or shot with other equipment  
You may not be able to play them back with your camcorder.

## Наложение неподвижного изображения из "Memory Stick" на подвижное изображение – MEMORY MIX

### Чтобы изменить накладываемое неподвижное изображение

Выполните одно из следующих действий.

- Нажмите кнопку MEMORY+/- после пункта 6.
- Нажмите на диск SEL/PUSH EXEC после пункта 6 и повторите процедуру с пункта 4 (кроме M. OVERLAP).

Для изменения установки режима  
Нажмите на диск SEL/PUSH EXEC после пункта 6 и повторите процедуру с пункта 4 (кроме M. OVERLAP).

### Для отмены режима MEMORY MIX

Нажмите кнопку MEMORY MIX.

### Во время записи

Установку режима изменять нельзя.

### "Memory Stick", прилагаемая к видеокамере содержит 20 изображений

- Для M. CHROM: 18 изображений (например, кадр) с 100-0001 по 100-0018
- Для C. CHROM: два изображения (например, фон) с 100-0019 по 100-0020

### Образцы изображений

Образцы изображений, которые сохранены на "Memory Stick", прилагаемой к видеокамере, защищены (стр. 202).

Если в неподвижном изображении, которое требуется наложить, существует много областей белого цвета  
Мини-изображение может отображаться не совсем отчетливо.

Изображения, измененные с помощью персонального компьютера или снятые с помощью другой аппаратуры  
Могут не воспроизводиться с помощью данной видеокамеры.

## Recording an image from a mini DV tape as a still image

Your camcorder can read moving picture data recorded on a mini DV tape and record it as a still image on a "Memory Stick." Your camcorder can also take in moving picture data through the input connector and record it as a still image on a "Memory Stick."

### Before operation

Insert a recorded mini DV tape and a "Memory Stick" into your camcorder.

- (1) Set the POWER switch to VCR.
- (2) Press . The picture recorded on the mini DV tape is played back.
- (3) Keep pressing PHOTO lightly until the picture from the mini DV tape freezes. "CAPTURE" appears on the LCD screen or in the viewfinder. Recording does not start yet.
- (4) Press PHOTO deeper. The image displayed on the screen will be recorded on a "Memory Stick." Recording is complete when the bar scroll indicator disappears.


## Запись изображения с ленты мини DV как неподвижного изображения

Видеокамера может считывать данные движущегося изображения, записанные на ленте мини DV, и записывать их как неподвижное изображение на "Memory Stick". Видеокамера также может принимать данные движущегося изображения через входной разъем и записывать их как неподвижное изображение на "Memory Stick".

### Перед началом работы

Вставьте записанную ленту мини DV и "Memory Stick" в видеокамеру.

- (1) Установите переключатель POWER в положение VCR.
- (2) Нажмите кнопку . Начнется воспроизведение изображения, записанного на ленте мини DV.
- (3) Держите слегка нажатой кнопку PHOTO до тех пор, пока изображение с ленты мини DV не будет "зафиксировано". На экране ЖКД или в видоискателе появится индикация "CAPTURE". Запись еще не начинается.
- (4) Нажмите кнопку PHOTO сильнее. Изображение на экране будет записано на "Memory Stick". Запись будет завершена, когда исчезнет индикатор в виде полосы.

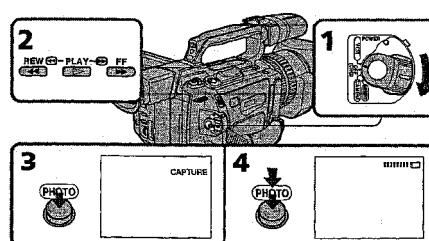

"Memory Stick" Operations / Операции с "Memory Stick"

## Recording an image from a mini DV tape as a still image

When the access lamp is lit or is flashing. Never shake or strike the unit. Also, do not turn the power off, eject a "Memory Stick" or remove the battery pack. Otherwise, image data breakdown may occur.

If "E" appears on the LCD screen or in the viewfinder

The inserted "Memory Stick" is incompatible with your camcorder because its format does not conform to that of your camcorder. Check the format of the "Memory Stick."

If you press PHOTO lightly in the playback mode  
The playback pauses momentarily.

Sound recorded on a mini DV tape  
You cannot record the sound from a mini DV tape.

Titles that are already recorded on mini DV tapes  
You cannot record the titles on a "Memory Stick."

When you press PHOTO on the Remote Commander  
Your camcorder immediately records the image that is on the screen when you press the button.

## Запись изображения с ленты мини DV как неподвижного изображения

Когда горит или мигает лампочка обращения. Никогда не трясите видеокамеру и не стучите по ней. Также не выключайте питание, не вынимайте "Memory Stick" из отсека и не снимайте батарейный блок. В противном случае данные изображения могут быть повреждены.

Если на экране ЖКД или в видоискателе появится индикация "E"  
Установлена "Memory Stick", которая не совместима с видеокамерой, поскольку ее формат не соответствует формату видеокамеры. Проверьте формат "Memory Stick".

Если в режиме воспроизведения слегка нажать кнопку PHOTO  
Во время воспроизведения сразу же включается пауза.

Звук, записанный на ленту мини DV  
С ленты мини DV нельзя записывать звук.

Титры, ранее записанные на ленту мини DV  
Эти титры нельзя записывать на "Memory Stick".


Если нажать кнопку PHOTO на пульте дистанционного управления  
Видеокамера сразу же запишет изображение, которое будет на экране в момент нажатия кнопки.

## Recording an image from a mini DV tape as a still image

### Recording a still image from other equipment

- (1) Set the POWER switch to VCR on your camcorder and set DISPLAY in **DISP** to LCD in the menu settings.
- (2) Play back the recorded tape, or turn the TV on to see the desired program.  
The picture from the other equipment appears on the LCD screen or in the viewfinder.
- (3) Follow steps 3 and 4 on page 187.

### When recording an image through the VIDEO jack

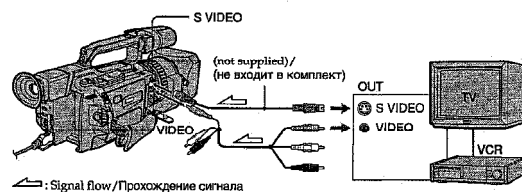

Connect the yellow plug of the A/V connecting cable supplied with your camcorder to the video output jack on the VCR or the TV.

Connect using an S video cable (not supplied) to obtain high-quality pictures  
With this connection, you do not need to connect the yellow (video) plug of the A/V connecting cable.

Connect an S video cable (not supplied) to the S video jacks of both your camcorder and the VCR/TV.  
This connection produces higher quality DV format pictures.

## Запись изображения с ленты мини DV как неподвижного изображения

### Запись неподвижного изображения с другого оборудования

- (1) Установите переключатель POWER в положение VCR на видеокамере и команду DISPLAY в **DISP** в положение LCD в установках меню.
- (2) Начните воспроизведение записанной ленты или включите телевизор для просмотра желаемой программы.  
Изображение с другого оборудования появится на экране ЖКД или в видоискателе.
- (3) Выполните пункты 3 и 4 на стр. 187.

### При записи изображения через гнездо VIDEO


Подключите желтый штекер соединительного кабеля аудио/видео, прилагаемого к видеокамере, к выходному гнезду видеосигнала на видеомониторе или телевизоре.

Соединение с помощью видеокабеля S (не входит в комплект) для получения высококачественных изображений  
При таком соединении не нужно подключать желтый (видео) штекер соединительного кабеля аудио/видео. Подсоедините видеокабель S (не входит в комплект) к видеогнездам S на видеокамере и видеомониторе/телевизоре.  
Это соединение позволяет получить высококачественное изображение формата DV.

188

## Recording an image from a mini DV tape as a still image

When recording the image through the DV IN/OUT jack

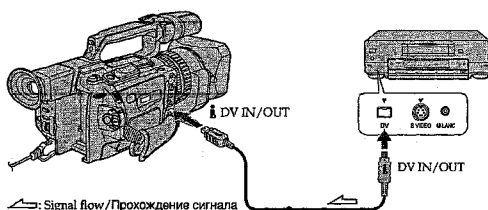

i.LINK cable (DV connecting cable) (not supplied) / Кабель i.LINK (соединительный кабель DV) (не входит в комплект)

## Запись изображения с ленты мини DV как неподвижного изображения

При записи изображения через гнездо DV IN/OUT

## Copying still images from a mini DV tape - Photo save

Using the search function, you can automatically take in only still images from mini DV tapes and record them on a "Memory Stick" in sequence.

### Before operation

- Insert a recorded mini DV tape into your camcorder and rewind the tape.
- Insert a "Memory Stick" into your camcorder.

- (1) Set the POWER switch to VCR.
- (2) Press MENU to display the menu.
- (3) Turn the SEL/PUSH EXEC dial to select **PHOTO SAVE**, then press the dial.
- (4) Turn the SEL/PUSH EXEC dial to select **PHOTO SAVE**, then press the dial. "PHOTO BUTTON" appears on the LCD screen or in the viewfinder.
- (5) Press PHOTO deeply. The still image from the mini DV tape is recorded on the "Memory Stick". The number of still images copied is displayed. "END" is displayed when copying is completed.


## Копирование неподвижных изображений с ленты мини DV - Сохранение в памяти фотоснимков

С помощью функции поиска можно автоматически делать снимки с лент мини DV и последовательно записывать их на "Memory Stick".

### Перед началом работы

- Вставьте записанную ленту мини DV в видеокамеру и перемотайте ее назад.
- Вставьте "Memory Stick" в видеокамеру.

- (1) Установите переключатель POWER в положение VCR.
- (2) Нажмите кнопку MENU для отображения меню.
- (3) Поверните диск SEL/PUSH EXEC для выбора установки **PHOTO SAVE**, а затем нажмите на диск.
- (4) Поверните диск SEL/PUSH EXEC для выбора установки **PHOTO SAVE**, а затем нажмите на диск. На экране ЖКД или в видоискателе появится индикация "PHOTO BUTTON".
- (5) Нажмите кнопку PHOTO сильно. Неподвижное изображение на ленте мини DV запишется на "Memory Stick". Будет отображено количество скопированных неподвижных изображений. По завершении копирования будет отображена индикация "END".

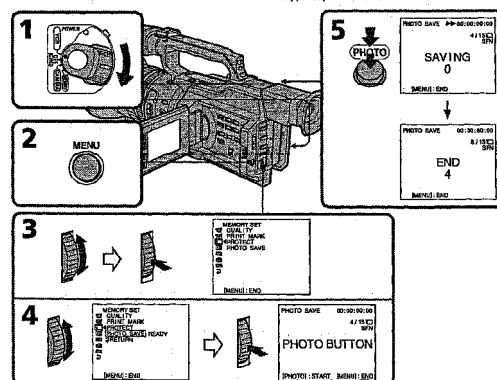

190

"Memory Stick" Operations / Операции с "Memory Stick"

189

"Memory Stick" Operations / Операции с "Memory Stick"

191

## Copying still images from a mini DV tape – Photo save

**To cancel copying**  
Press MENU.

**When the memory of the "Memory Stick" is full**  
"MEMORY FULL" appears on the LCD screen or in the viewfinder, and the copying stops. Insert another "Memory Stick" and repeat the procedure from step 2.

**When the access lamp is lit or flashing**  
Never shake or strike your camcorder. Also, do not turn the power off, eject the "Memory Stick" or remove the battery pack. Otherwise, the image data breakdown may occur.

**To record all the images recorded on the mini DV tape**  
Rewind the tape all the way back and start copying.

**If the write-protect tab on the "Memory Stick" is set to LOCK**  
"NOT READY" appears when you select the item in the menu settings.

**When you change the "Memory Stick" in the middle of copying**  
Your camcorder resumes copying from the last image recorded on the previous "Memory Stick."

## Копирование неподвижных изображений с ленты мини DV – Сохранение в памяти фотоснимков

**Для отмены копирования**  
Нажмите кнопку MENU.

**В случае переполнения "Memory Stick"**  
На экране ЖКД или в видоискателе появится индикация "MEMORY FULL", и копирование прекратится. Вставьте другую "Memory Stick" и повторите процедуру с пункта 2.

**Если лампочка обращения горит или мигает**  
Никогда не трясите видеокамеру и не стучите по ней. Также не выключайте питание, не вынимайте "Memory Stick" из отсека и не снимайте батарейный блок. В противном случае данные изображения могут быть повреждены.

**Для записи всех изображений, записанных на ленте мини DV**  
Перемотайте ленту до конца назад и начните копирование.

**Если лепесток защиты от записи на "Memory Stick" установлен в положение LOCK**  
При выборе элемента в установках меню появится индикация "NOT READY".

**Если заменить "Memory Stick" в процессе копирования**  
Видеокамера продолжит копирование с последнего изображения, записанного на предыдущей "Memory Stick".

## Viewing a still picture – Memory Photo playback

You can play back still images recorded on a "Memory Stick." You can also play back six images at a time by selecting the index screen.

### Before operation

Insert a "Memory Stick" into your camcorder.

- (1) Set the POWER switch to VCR or MEMORY. Make sure that the LOCK switch is set to the right (unlock) position.
- (2) Press MEMORY PLAY. The last recorded image is displayed.
- (3) Press MEMORY +/- or +/- on the Remote Commander to select the desired still image. To see the previous image, press MEMORY - or - on the Remote Commander. To see the next image, press MEMORY + or + on the Remote Commander.


## Просмотр неподвижного изображения – Воспроизведение фотоснимков из памяти

Можно воспроизводить неподвижные изображения, записанные на "Memory Stick". Можно также воспроизводить одновременно шесть изображений путем выбора индексного экрана.

### Перед началом работы

Вставьте "Memory Stick" в видеокамеру.

- (1) Установите переключатель POWER в положение VCR или MEMORY. Убедитесь, что переключатель LOCK установлен в правое положение (разблокирован).
- (2) Нажмите кнопку MEMORY PLAY. Появится последнее записанное изображение.
- (3) Нажмите кнопку MEMORY +/- или кнопку +/- на пульте дистанционного управления для выбора требуемого неподвижного изображения. Чтобы просмотреть предыдущее изображение, нажмите кнопку MEMORY - или - на пульте дистанционного управления. Чтобы просмотреть следующее изображение, нажмите кнопку MEMORY + или + на пульте дистанционного управления.

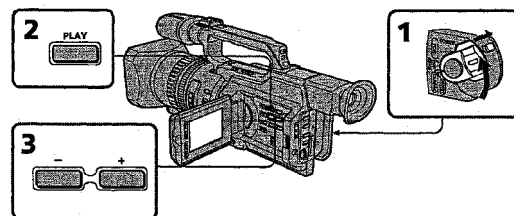

**To stop memory photo playback**  
Press MEMORY PLAY again.

**Для остановки воспроизведения фотоснимков из памяти**  
Нажмите кнопку MEMORY PLAY еще раз.

192

## Viewing a still picture – Memory Photo playback

To play back recorded images on a TV screen


- Connect your camcorder to the TV with the A/V connecting cable supplied with your camcorder before operation.
- When operating memory photo playback on a TV or on the LCD screen, the image quality may appear to have deteriorated. This is not a malfunction. The image data is as good as ever.
- Turn the volume of the TV down before operation, or noise (howling) may be output from the TV speakers.

**When no images are recorded on the "Memory Stick"**  
The message "NO FILE" appears.

**Image data modified with personal computers or shot with other equipment**  
You may not be able to play them back with your camcorder.

**Note on the date/time indicator**  
Recording date/time is not displayed, however, it is automatically recorded on the "Memory Stick." You can check the recording date/time while in memory playback mode by pressing DATA CODE.

### Screen indicators during still image playback

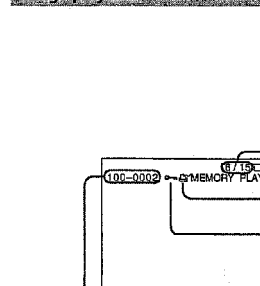

## Просмотр неподвижного изображения – Воспроизведение фотоснимков из памяти

Для воспроизведения записанных изображений на экране телевизора

- Перед началом воспроизведения подсоедините видеокамеру к телевизору с помощью соединительного кабеля аудио/видео, который прилагается к видеокамере.
- При воспроизведении фотоснимков из памяти на экране телевизора или ЖКД качество изображения может ухудшиться. Однако это не является неисправностью. Данные изображения находятся в том же состоянии, как и прежде.
- Перед началом воспроизведения уменьшите громкость звука телевизора, иначе в громкоговорителях может быть слышен шум (рыль).

**Изображения, измененные с помощью персонального компьютера или снятые с помощью другой аппаратуры**  
Могут не воспроизводиться с помощью данной видеокамеры.


**Если на "Memory Stick" отсутствуют записанные изображения**  
Появляется сообщение "NO FILE".

**Изображения, измененные с помощью персонального компьютера или снятые с помощью другой аппаратуры**  
Могут не воспроизводиться с помощью данной видеокамеры.

### Индикатор даты/времени

Дата/время записи не отображается во время съемки, однако они автоматически записываются на "Memory Stick". Дату/время записи можно проверить в режиме воспроизведения из памяти при нажатии кнопки DATA CODE.

### Экранные индикаторы во время воспроизведения неподвижных изображений

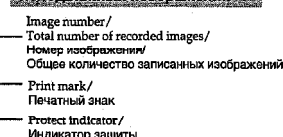

## Viewing a still picture – Memory Photo playback

### On data file name

- When the hyphen is indicated between the directory and the file number, this data file name means that this file corresponds to the DCF98 standard.
- When the underline is indicated between the directory and the file number, this data file name means that this file does not correspond to the DCF98 standard.
- The directory is not indicated if the file structure in the "Memory Stick" does not correspond to the DCF98 standard.
- The "DIRECTOR ERROR" message may appear if the file structure in the "Memory Stick" does not correspond to the DCF98 standard. In this case, you cannot record on that "Memory Stick," however, you can play back images in the "Memory Stick."
- When the data file name is flashes, the file may be broken or the file format does not correspond to your camcorder.

### Playing back six recorded images at a time (index screen)

You can play back six recorded images at a time. This function is especially useful when searching for a particular image.

- (1) Set the POWER switch to VCR or MEMORY. Make sure that the LOCK switch is set to the right (unlock) position.
- (2) Press MEMORY INDEX to display the index screen.

## Просмотр неподвижного изображения – Воспроизведение фотоснимков из памяти


### Сведения об имени файла данных

- Если между названием директории и номером файла имеется дефис, такое имя файла означает, что он соответствует стандарту DCF98.
- Если между названием директории и номером файла имеется символ подчеркивания, такое имя файла означает, что он не соответствует стандарту DCF98.
- Директория не указывается, если структура файла на "Memory Stick" не соответствует стандарту DCF98.
- Если структура файла на "Memory Stick" не соответствует стандарту DCF98, может появиться сообщение "DIRECTOR ERROR". В этом случае производить запись на "Memory Stick" нельзя, но можно воспроизводить изображения с "Memory Stick".
- Когда имя файла данных мигает, то, возможно, файл поврежден, или его формат не соответствует данной видеокамере.

### Одновременное воспроизведение шести записанных изображений (индексный экран)

Можно воспроизводить шесть записанных изображений одновременно. Эта функция является особенно удобной при выполнении поиска отдельных изображений.

- (1) Установите переключатель POWER в положение VCR или MEMORY. Убедитесь, что переключатель LOCK установлен в правое положение (разблокирован).
- (2) Нажмите кнопку MEMORY INDEX для отображения индексного экрана.

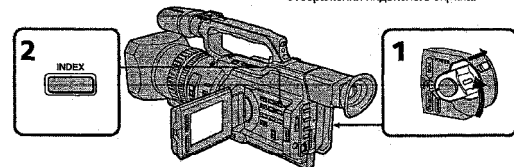

Memory Stick Operations / Операции с "Memory Stick"

Memory Stick Operations / Операции с "Memory Stick"

194

193

195


## Viewing a still picture - Memory Photo playback

A red ► mark appears above the image that is displayed before changing to the index screen mode.

MEMORY - : to display the previous six images

MEMORY + : to display the following six images

If you select the desired image by turning the SEL/PUSH EXEC dial, then press the dial, the selected image will be displayed on full screen.

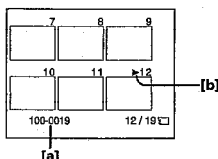

[a] File name  
[b] ► mark

### To return to the normal playback screen (single screen)

Press MEMORY +/- to move the ► mark to the image you want to display on full screen, then press MEMORY PLAY.

Files modified with personal computers  
These files may not be displayed on the index screen. Image files shot with other equipment may not be displayed on the index screen either.

### Note

When displaying the index screen, a number appears above each image. This indicates the order in which images are recorded on the "Memory Stick." These numbers are different from the data file names.

## Просмотр неподвижного изображения - Воспроизведение фотоснимков из памяти

Над изображением появится красная метка ►, которая отображается перед переключением в режим индексного экрана.

MEMORY - : для отображения шести предыдущих изображений

MEMORY + : для отображения шести следующих изображений

Если выбрать нужное изображение, повернув диск SEL/PUSH EXEC, а затем нажать на диск, то выбранное изображение будет отображено на полном экране.

[a] Имя файла  
[b] Метка ►

### Для возврата к экрану обычного воспроизведения (одиночный экран)

Нажмите кнопку MEMORY +/- для перемещения метки ► к изображению, которое нужно отобразить на полный экран, а затем нажмите кнопку MEMORY PLAY.

Файлы, модифицированные с помощью персонального компьютера  
Эти файлы могут не отображаться на индексном экране. Файлы изображений, снятых с помощью другой аппаратуры, также могут не отображаться на индексном экране.

### Примечание

При отображении индексного экрана над каждым изображением будет появляться номер. Он указывает последовательность, в которой изображения были записаны на "Memory Stick". Эти номера отличаются от имен файлов данных.

## Viewing a still picture - Memory Photo playback

### Viewing the recorded images using a personal computer

The image data recorded with your camcorder is compressed in the JPEG format. If you use the application software, "PictureGear 4.1 Lite" supplied with your camcorder, you can see images recorded on a "Memory Stick" on a computer screen. Use the Memory Stick Reader/Writer supplied with your camcorder, the Memory Stick/PC card kit or PC card adaptor for Memory Stick (not supplied) for this operation. For detailed instructions on operation, refer to the operating instructions of the serial port adaptor, Memory Stick/PC card kit or PC card adaptor for Memory Stick and your application software. For details, refer to the operating instructions of your accessory.

- Do not modify the directory of the file that corresponds to the DCF98 standard. The modified file will not be read.
- If you use the new "Memory Stick," be sure to use it first with this camcorder.

### Recommended Windows environment

- OS: Microsoft Windows 98 standard installation
- Operation in an environment upgraded to Windows 98 is not assured.
- CPU: MMX Pentium 200 MHz or faster

### Recommended Macintosh environment

- OS: Mac OS system 8.5/8.6 standard installation
- Model: iMac/G3

## Просмотр неподвижного изображения - Воспроизведение фотоснимков из памяти

### Просмотр записанных изображений с помощью персонального компьютера

Данные изображения, записанные с помощью видеокамеры, снимаются в формате JPEG. С помощью поставляемого с видеокамерой прикладного программного обеспечения "PictureGear 4.1 Lite" можно просматривать изображения, записанные на "Memory Stick", на экране компьютера. Для этой операции используйте устройство чтения/записи Memory Stick, прилагаемое к видеокамере, комплект Memory Stick/PC card или адаптер PC card для Memory Stick (не входит в комплект). Подробные указания по этой операции см. в инструкциях по эксплуатации адаптера последовательного порта, комплекта Memory Stick/PC card или адаптера PC card для Memory Stick и прикладного программного обеспечения. Подробные сведения содержатся в инструкциях по эксплуатации вспомогательных принадлежностей.

- Не меняйте директорию файла, который соответствует стандарту DCF98. Измененный файл не будет читаться.
- При использовании новой "Memory Stick" необходимо прежде всего использовать ее с этой видеокамерой.

### Рекомендуемая среда Windows

- ОС: стандартная установка Microsoft Windows 98
- Работа может быть нестабильной при использовании не стандартной, а обновленной версии Windows 98.
- CPU: MMX Pentium 200 МГц или выше

### Рекомендуемая среда Macintosh

- ОС: стандартная установка в системе Mac OS 8.5/8.6
- Модели: iMac/G3

## Copying an image recorded on a "Memory Stick" to mini DV tapes

You can copy still images or titles recorded on a "Memory Stick" to a mini DV tape.

### Before operation

Insert a mini DV tape for recording and a "Memory Stick" for playback into your camcorder.

- (1) Set the POWER switch to VCR.
- (2) Using the video control buttons, search for a point where you want to record the desired still image. Set the mini DV tape to playback pause mode.
- (3) Press ► REC and the button on its right simultaneously on your camcorder. The mini DV tape is set to the recording pause mode.
- (4) Press MEMORY PLAY to play back the still image you want to copy.
- (5) Press II to start recording and press II again to stop.
- (6) If you have more to copy, repeat steps 4 and 5.


## Копирование изображений, записанных на "Memory Stick", на ленты мини DV

Можно копировать неподвижные изображения или титры, записанные на "Memory Stick", на ленты мини DV.

### Перед началом работы

Вставьте ленту мини DV, на которую будет производиться запись, и "Memory Stick", с которой будет воспроизводиться воспроизведение, в видеокамеру.

- (1) Установите выключатель POWER в положение VCR.
- (2) С помощью кнопок видеоконтроля найдите место, откуда необходимо начать запись требуемого неподвижного изображения. Установите ленту мини DV в режим паузы воспроизведения.
- (3) Одновременно нажмите кнопку ► REC и кнопку справа от нее на видеокамере. Лента мини DV установлена в режим паузы записи.
- (4) Нажмите кнопку MEMORY PLAY для воспроизведения неподвижного изображения, которое необходимо скопировать.
- (5) Нажмите кнопку II, чтобы начать запись. Для остановки записи снова нажмите кнопку II.
- (6) Если необходимо также скопировать другие изображения, повторите пункты 4 и 5.

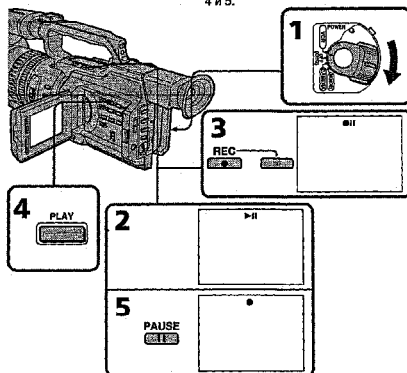

## Copying an image recorded on a "Memory Stick" to mini DV tapes

To stop copying in the middle  
Press II.

### During copying

- You cannot operate the following buttons: MEMORY PLAY, MEMORY INDEX, MEMORY DELETE, MEMORY +, MEMORY -, and MEMORY MIX.
- If you continue copying, do not use EDIT/SEARCH to search for the point where you want to record the desired still image. If you do, the playback image disappears from the screen.

### Note on the Index screen

You cannot record the index screen.

Image data modified with personal computers or shot with other equipment  
You may not be able to copy them with your camcorder.

If you press DISPLAY in standby or recording mode

You can see memory playback and the file name indicators in addition to the indicators pertinent to mini DV tapes, such as the time code indicator.

## Копирование изображений, записанных на "Memory Stick", на ленты мини DV

Для остановки копирования, не дожидаясь окончания  
Нажмите кнопку II.

### Во время копирования

- Нельзя использовать следующие кнопки: MEMORY PLAY, MEMORY INDEX, MEMORY DELETE, MEMORY + и MEMORY -, а также MEMORY MIX.
- Во время копирования нельзя пользоваться кнопкой EDIT/SEARCH для поиска места, откуда необходимо начать запись нужного неподвижного изображения. Если сделать это, воспроизводимое изображение исчезнет с экрана.

Примечание по индексному экрану  
Индексный экран невозможно записать.

Изображения, измененные с помощью персонального компьютера или снятые с помощью другой аппаратуры  
Возможно, их нельзя будет скопировать с помощью видеокамеры.


Если нажать кнопку DISPLAY в режиме ожидания или записи  
Кроме индикаторов, относящихся к лентам мини DV, например, индикатор кода времени, можно увидеть индикаторы воспроизведения из памяти и имени файла.

## Playing back images continuously – SLIDE SHOW

You can automatically play back images in sequence. This function is useful especially when checking recorded images or during a presentation.

### Before operation

Insert a "Memory Stick" into your camcorder.


- (1) Set the POWER switch to MEMORY. Make sure that the LOCK switch is set to the right (unlock) position.
- (2) Press MENU to display the menu.
- (3) Turn the SEL/PUSH EXEC dial to select , then press the dial.
- (4) Turn the SEL/PUSH EXEC dial to select SLIDE SHOW, then press the dial.
- (5) Press MEMORY PLAY. Your camcorder plays back the images recorded on the "Memory Stick" in sequence.


## Непрерывное воспроизведение изображений – SLIDE SHOW

Можно автоматически воспроизводить изображения в непрерывной последовательности. Эта функция особенно удобна при проверке записанных изображений или во время презентации.

### Перед началом работы

Вставьте "Memory Stick" в видеокамеру.

- (1) Установите переключатель POWER в положение MEMORY. Убедитесь, что переключатель LOCK установлен в правое положение (разблокирован).
- (2) Нажмите кнопку MENU для отображения меню.
- (3) Поверните диск SEL/PUSH EXEC для выбора установки , а затем нажмите на диск.
- (4) Поверните диск SEL/PUSH EXEC для выбора установки SLIDE SHOW, а затем нажмите на диск.
- (5) Нажмите кнопку MEMORY PLAY. Видеокамера воспроизводит изображения, записанные на "Memory Stick", в непрерывной последовательности.

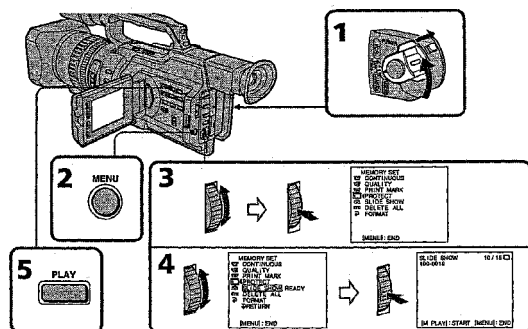

200

## Playing back images continuously – SLIDE SHOW

**To stop or end the slide show**  
Press MENU.

**To pause during a slide show**  
Press MEMORY PLAY.

**To start the slide show from a particular image**  
Select the desired image using MEMORY +/- buttons before step 2.

**To view the recorded images on TV**  
Connect your camcorder to a TV with the A/V connecting cable supplied with your camcorder before operation.

**If you change the "Memory Stick" during operation**  
Be sure to follow the steps again from the beginning.

## Непрерывное воспроизведение изображений – SLIDE SHOW

**Для остановки или прекращения демонстрации изображений**  
Нажмите кнопку MENU.

**Для паузы во время демонстрации изображений**  
Нажмите кнопку MEMORY PLAY.

**Для начала показа изображений с определенного изображения**  
Перед пунктом 2 выберите требуемое изображение с помощью кнопок MEMORY +/-.

**Для просмотра записанных изображений на экране телевизора**  
Перед началом процедуры подключите видеокамеру к телевизору с помощью соединительного кабеля аудио/видео, прилагаемого к видеокамере.

**Если заменить "Memory Stick" во время работы**  
Выполните все действия с начала.

"Memory Stick" Operation / Операции с "Memory Stick"


201

## Preventing accidental erasure – Image protection

To prevent accidental erasure of important images, you can protect selected images.

### Before operation

Insert a "Memory Stick" into your camcorder.


- (1) Set the POWER switch to MEMORY or VCR. Make sure that the LOCK switch is set to the right (unlock) position.
- (2) Play back the image you want to protect (p. 193).
- (3) Press MENU to display the menu.
- (4) Turn the SEL/PUSH EXEC dial to select , then press the dial.
- (5) Turn the SEL/PUSH EXEC dial to select PROTECT, then press the dial.
- (6) Turn the SEL/PUSH EXEC dial to select ON, then press the dial.
- (7) Press MENU to erase the menu display. The "o-m" mark is displayed beside the data file name of the protected image.


## Предотвращение случайного стирания – Защита изображения

Для предотвращения случайного стирания важных изображений выбранные изображения можно защитить.

### Перед началом работы

Вставьте "Memory Stick" в видеокамеру.

- (1) Установите переключатель POWER в положение MEMORY или VCR. Убедитесь, что переключатель LOCK установлен в правое положение (разблокирован).
- (2) Воспроизведите изображение, которое нужно защитить (стр. 193).
- (3) Нажмите кнопку MENU для отображения меню.
- (4) Поверните диск SEL/PUSH EXEC для выбора установки , а затем нажмите на диск.
- (5) Поверните диск SEL/PUSH EXEC для выбора установки PROTECT, а затем нажмите на диск.
- (6) Поверните диск SEL/PUSH EXEC для выбора установки ON, а затем нажмите на диск.
- (7) Нажмите кнопку MENU для удаления индикации меню. Рядом с названием файла защищенного изображения появится знак "o-m".

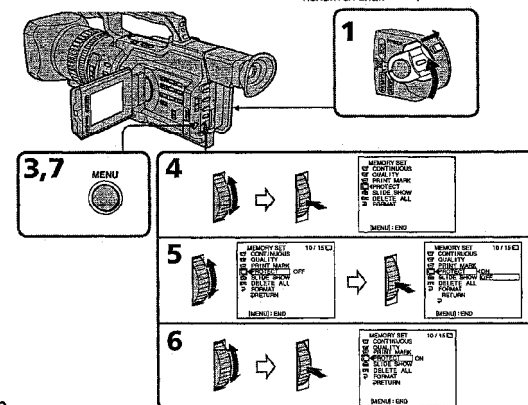

202

## Preventing accidental erasure – Image protection

**To cancel image protection**  
Select OFF in step 6, then press the SEL/PUSH EXEC dial.

### Note

Formatting erases all information on the "Memory Stick," including the protected image data. Check the contents of the "Memory Stick" before formatting.

**If the write-protect tab on the "Memory Stick" is set to LOCK**  
You cannot carry out image protection.

## Предотвращение случайного стирания – Защита изображения

**Для отмены защиты изображения**  
Выберите установку OFF в пункте 6, а затем нажмите на диск SEL/PUSH EXEC.

### Примечание

Во время форматирования удаляются все данные на "Memory Stick", включая данные защищенных изображений. Перед форматированием проверьте содержимое "Memory Stick".

Если лепесток защиты от записи на "Memory Stick" установлен в положение LOCK, выполнить защиту изображения будет невозможно.

"Memory Stick" Operation / Операции с "Memory Stick"

203



## Deleting images


You can delete images stored in a "Memory Stick."

### Deleting selected images

#### Before operation

Insert a "Memory Stick" into your camcorder.

- (1) Set the POWER switch to MEMORY or VCR. Make sure that the LOCK switch is set to the right (unlock) position.
- (2) Play back the image you want to delete (p. 193).
- (3) Press MEMORY DELETE. "DELETE?" appears on the LCD screen or in the viewfinder.
- (4) Press MEMORY DELETE again. The selected image is deleted.

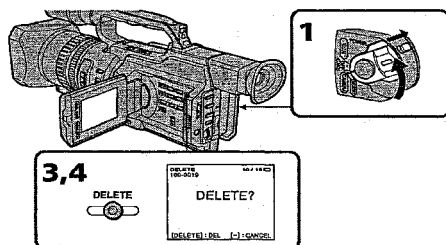

**To cancel deleting an image**  
Press MEMORY - in step 4.

**To delete an image displayed on the index screen**  
Press MEMORY +/- to move the ► mark to the desired image and follow steps 3 and 4.

## Удаление изображений

Можно удалить изображения, записанные на "Memory Stick".

### Удаление выбранных изображений

#### Перед началом работы

Вставьте "Memory Stick" в видеокамеру.

- (1) Установите переключатель POWER в положение MEMORY или VCR. Убедитесь, что переключатель LOCK установлен в правое положение (разблокирован).
- (2) Воспроизведите изображение, которое необходимо удалить (стр. 193).
- (3) Нажмите кнопку MEMORY DELETE. Индикатор "DELETE?" появится на экране ЖКД или в видоискателе.
- (4) Нажмите кнопку MEMORY DELETE еще раз. Выбранное изображение будет удалено.

**Для отмены удаления изображения**  
Нажмите кнопку MEMORY - в пункте 4.

**Для удаления изображения, отображаемого на индексном экране**  
Нажмите кнопку MEMORY +/- для перемещения метки ► к нужному изображению и выполните действия пунктов 3 и 4.

## Deleting images

### Notes

- To delete a protected image, first cancel image protection.
- Once you delete an image, you cannot restore it. Check the images to be deleted carefully before deleting them.

#### While "DELETING" appears

Do not turn the POWER switch or press any buttons.

If the write-protect tab on the "Memory Stick" is set to LOCK

You cannot delete any image.

## Удаление изображений

### Примечания

- Для удаления защищенного изображения сначала отмените защиту изображения.
- После удаления изображения его невозможно будет восстановить. Перед удалением внимательно проверьте изображения.

Во время отображения индикации "DELETING"

Не изменяйте положение переключателя POWER и не нажимайте никаких кнопок.

Если лепесток защиты от записи на "Memory Stick" установлен в положение LOCK

Невозможно будет удалить ни одно изображение.

204

205


## Deleting images

### Deleting all the images

You can delete all the unprotected images in a "Memory Stick."

#### Before operation

Insert a "Memory Stick" into your camcorder.

- (1) Set the POWER switch to MEMORY. Make sure that the LOCK switch is set to the right (unlock) position.
- (2) Press MENU to display the menu.
- (3) Turn the SEL/PUSH EXEC dial to select , then press the dial.
- (4) Turn the SEL/PUSH EXEC dial to select DELETE ALL, then press the dial.
- (5) Turn the SEL/PUSH EXEC dial to select OK, then press the dial. "OK" changes to "EXECUTE."
- (6) Press the SEL/PUSH EXEC dial. "DELETING" appears on the LCD screen or in the viewfinder. When all the unprotected images are deleted, "COMPLETE" is displayed.


## Удаление изображений

### Удаление всех изображений


Можно удалить все незащищенные изображения на "Memory Stick".

#### Перед началом работы

Вставьте "Memory Stick" в видеокамеру.

- (1) Установите переключатель POWER в положение MEMORY. Убедитесь, что переключатель LOCK установлен в правое положение (разблокирован).
- (2) Нажмите кнопку MENU для отображения меню.
- (3) Поверните диск SEL/PUSH EXEC для выбора установки , а затем нажмите на диск.
- (4) Поверните диск SEL/PUSH EXEC для выбора установки DELETE ALL, а затем нажмите на диск.
- (5) Поверните диск SEL/PUSH EXEC для выбора установки OK, а затем нажмите на диск. Индикация "OK" изменится на индикацию "EXECUTE".
- (6) Нажмите на диск SEL/PUSH EXEC. Индикатор "DELETING" появится на экране ЖКД или в видоискателе. Когда все незащищенные изображения будут удалены, на дисплее появится индикация "COMPLETE".

## Deleting images

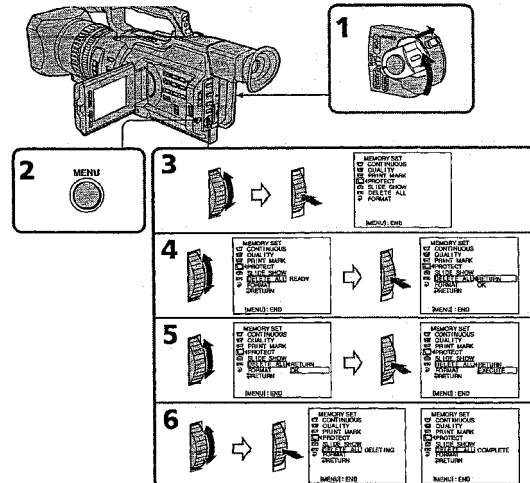

**To cancel deleting all the images in the "Memory Stick"**  
Select RETURN in step 5 or 6, then press the SEL/PUSH EXEC dial.

## Удаление изображений

**Для отмены удаления всех изображений на "Memory Stick"**  
Выборите RETURN в пункте 5 или 6, затем нажмите на диск SEL/PUSH EXEC.

206


207

## Writing a print mark – Print mark

You can specify the recorded still image to be printed out. This function is useful for printing out still images later. Your camcorder conforms with the DPOF (Digital Print Order Format) standard for specifying the still images to print out.

### Before operation

Insert a "Memory Stick" into your camcorder.


- (1) Set the POWER switch to MEMORY or VCR. Make sure that the LOCK switch is set to the right (unlock) position.
- (2) Play back the image to be printed out (p. 193).
- (3) Press MENU to display the menu.
- (4) Turn the SEL/PUSH EXEC dial to select , then press the dial.
- (5) Turn the SEL/PUSH EXEC dial to select PRINT MARK, then press the dial.
- (6) Turn the SEL/PUSH EXEC dial to select ON, then press the dial.
- (7) Press MENU to erase the menu display. The "PM" mark is displayed beside the data file name of an image.

## Запись печатных знаков – Print Mark


Можно указать записанные неподвижные изображения для распечатки. Эта функция является полезной для последующей распечатки неподвижных изображений. Данная видеокамера удовлетворяет требованиям стандарта DPOF (цифровой формат порядка печати) для печати неподвижных изображений.

### Перед началом работы



Вставьте "Memory Stick" в видеокамеру.

- (1) Установите переключатель POWER в положение MEMORY или VCR. Убедитесь, что переключатель LOCK установлен в правое положение (разблокирован).
- (2) Воспроизведите изображение, которое необходимо распечатать (стр. 193).
- (3) Нажмите кнопку MENU для отображения меню.
- (4) Поверните диск SEL/PUSH EXEC для выбора установки , а затем нажмите на диск.
- (5) Поверните диск SEL/PUSH EXEC для выбора установки PRINT MARK, а затем нажмите на диск.
- (6) Поверните диск SEL/PUSH EXEC для выбора установки ON, а затем нажмите на диск.
- (7) Нажмите кнопку MENU для удаления индикации меню. Рядом с названием файла изображения появится знак "PM".

## Writing a print mark – Print mark

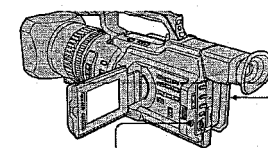

## Запись печатных знаков – Print Mark

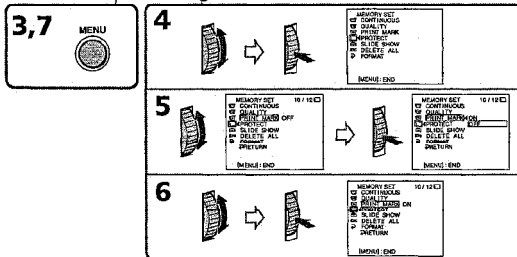

### To cancel writing print marks

Select OFF in step 6, then press the SEL/PUSH EXEC dial.

If the write-protect tab on the "Memory Stick" is set to LOCK  
You cannot write print marks on still images.

### Для отмены записи печатных знаков










Выберите установку OFF в пункте 6, а затем нажмите на диск SEL/PUSH EXEC.



Если лепесток защиты от записи на "Memory Stick" установлен в положение LOCK  
Вы не сможете записать печатные знаки на неподвижных изображениях.

208

## Additional Information – Usable cassettes

### Selecting cassette types

You can use the "DV" mini DV cassette only. You cannot use any other  8 mm, Hi8 Hi8,  Digital8,  VHS,  Hi8,  Hi8,  S-VHS,  S-VHS,  ED Betamax or  DV cassette.

\* There are two types of mini DV cassettes: with cassette memory and without cassette memory. Tapes with cassette memory have  (Cassette Memory) mark. Sony recommends that you use a tape with  mark to enjoy your camcorder fully.

The IC memory is built in the cassette with cassette memory. Using this IC memory, your camcorder can read, write, and search data such as the date of recording or titles. The functions using the cassette memory require successive signals recorded on the tape. If the tape has a blank portion in the beginning or between the recorded portions, a title may not be displayed properly or the search functions may not work correctly.










Not to make any blank portion on the tape, press END SEARCH to return to the end of the recorded portion before you begin the next recording when:



- You have ejected the cassette while recording.
- You have played back the tape in VCR mode. If there is a blank portion or discontinuous signal on your tape, re-record from the beginning to the end of the tape concerning above.

When you record, using a digital video camera recorder without a cassette memory function, on a tape recorded by one with the cassette memory function, the same result may occur.

## Дополнительная информация – Используемые кассеты

### Выбор типа кассет

Можно использовать только кассеты мини DV "DV". Нельзя использовать какие-либо другие кассеты типа  8 mm, Hi8 Hi8,  Digital8,  VHS,  Hi8,  Hi8,  S-VHS,  S-VHS,  ED Betamax или  DV.

\* Существует два типа кассет мини DV: с кассетной памятью и без кассетной памяти. Ленты с кассетной памятью имеют знак  (кассетная память). Корпорация Sony рекомендует использовать ленту со знаком , так как это наиболее подходящий тип для данной видеокамеры.

На данном типе кассет установлена память в виде интегральной схемы. Видеокамера может считывать и записывать данные, такие как даты записи или титры и т.д., на эту интегральную схему памяти. Для функций, использующих кассетную память, требуется запись на ленту последовательных сигналов. Если на ленте имеется незаписанный участок в начале или между записанными частями, то титр может отображаться с искажениями, или функция поиска может работать неправильно.

Для того, чтобы не допустить появления незаписанных участков на ленте, нажмите кнопку END SEARCH для возврата к концу записанного участка перед началом следующего записи, если:

- Кассета была извлечена во время записи.
- Лента воспроизводилась в режиме VCR. Если на ленте имеется незаписанный участок или прерывающийся сигнал, выполните перезапись с начала до конца с учетом вышесказанного.

Такой же результат может получиться при выполнении записи с помощью цифровой видеокамеры без функции кассетной памяти на ленту, записанную с помощью функции кассетной памяти.

## Usable cassettes

### CM/4K mark on the cassette

The memory capacity of tapes marked with CM/4K is 4 Kb. Your camcorder can accommodate up to 16 Kb. 16 Kb tape is marked with CM/16K.

The maximum number of data recordable on cassette memory (when using 4 Kb cassette memory)

Data	Numbers
INDEX	32
TITLE	25
DATE	6 (10 bytes/1 data)
PHOTO	12 (10 bytes/1 data)
CASSETTE LABEL	1 (6 bytes/1 data)

### Copyright signal

#### When you play back

When you connect your camcorder to any other video camera recorder to dub a tape that has recorded copyright control signals for copyright protection, you may not record the tape that played back on your camcorder.

#### When you record

You cannot record software on your camcorder that contains copyright control signals for copyright protection of software. "COPY INHIBIT" appears on the LCD screen, in the viewfinder or on the TV screen if you try to record such software. Your camcorder does not record copyright control signals on the tape when it records.

## Используемые кассеты

### Знак CM/4K на кассете

Емкость памяти кассет с меткой CM/4K равна 4 Кб. Для этой видеокамеры можно использовать кассеты с объемом памяти до 16 Кб. 16 Кб кассета обозначается с помощью знака CM/16K.

Максимальное количество данных, которое может быть записано на кассетную память (при использовании кассетной памяти 4 Кб)

Данные	Количество
ИНДЕКС	32
НАЗВАНИЕ	25
ДАТА	6 (10 байтов/1 запись)
ФОТОГРАФИЯ	12 (10 байтов/1 запись)
МАРКИРОВКА	1 (6 байтов/1 запись)

### Сигнал авторского права

#### При воспроизведении

При подсоединении видеокамеры к какой-либо другой видеокамере с целью переадресации ленты, на которой записаны сигналы авторского права для защиты авторских прав, невозможно будет воспроизвести запись с ленты, воспроизводимой на Вашей видеокамере.

#### При записи

На этой видеокамере нельзя выполнять запись программы, которая содержит сигналы авторского права для защиты авторских прав. При попытке записи такой программы на экране ЖКД, в видоискателе или на экране телевизора появится индикация "COPY INHIBIT". Во время записи эта видеокамера не воспроизводит сигналы авторского права на ленту.

"Memory Stick" Operation / Операции с "Memory Stick"

209

Additional Information / Дополнительная информация



## Troubleshooting

If you run into any problem using your camcorder, use the following table to troubleshoot the problem. If the problem persists, disconnect the power source and contact your Sony dealer or local authorized Sony service facility. If "C" appears on the LCD screen, display window or in the viewfinder, the self-diagnosis display function has worked. See page 222.

In the recording mode	
Symptom	Cause and/or Corrective Actions
START/STOP does not operate.	<ul style="list-style-type: none"> <li>The POWER switch is not set to CAMERA.               <ul style="list-style-type: none"> <li>Set it to CAMERA. (p. 22)</li> </ul> </li> <li>The tape has run out.               <ul style="list-style-type: none"> <li>Rewind the tape or insert a new one. (p. 20, 42)</li> </ul> </li> <li>The write-protect tab on the cassette is set to expose the red mark.               <ul style="list-style-type: none"> <li>Use a new tape or slide the tab. (p. 20)</li> </ul> </li> <li>The tape is stuck to the drum (moisture condensation).               <ul style="list-style-type: none"> <li>Remove the cassette and leave your camcorder for at least one hour to acclimatize. (p. 234)</li> </ul> </li> </ul>
The power goes off.	<ul style="list-style-type: none"> <li>While being operated in CAMERA mode, your camcorder has been in the standby mode for more than five minutes.               <ul style="list-style-type: none"> <li>Set the POWER switch to OFF (CHG) and then to CAMERA again. (p. 24)</li> </ul> </li> <li>The battery pack is dead or nearly dead.               <ul style="list-style-type: none"> <li>Install a charged battery pack. (p. 13, 14)</li> </ul> </li> </ul>
The image on the viewfinder screen is not clear.	<ul style="list-style-type: none"> <li>The viewfinder lens is not adjusted.               <ul style="list-style-type: none"> <li>Adjust the viewfinder lens. (p. 28)</li> </ul> </li> </ul>
The SteadyShot function does not work.	<ul style="list-style-type: none"> <li>STEADYSHOT is set to OFF in the menu settings.               <ul style="list-style-type: none"> <li>Set it to ON. (p. 154)</li> </ul> </li> </ul>
The autofocus function does not work.	<ul style="list-style-type: none"> <li>The camcorder is in manual focus mode.               <ul style="list-style-type: none"> <li>Turn to auto focus mode. (p. 81)</li> </ul> </li> <li>Shooting conditions are not suitable for autofocus.               <ul style="list-style-type: none"> <li>Adjust focus manually. (p. 81)</li> </ul> </li> </ul>
The fader function does not work.	<ul style="list-style-type: none"> <li>The digital effect function is working.               <ul style="list-style-type: none"> <li>Cancel it. (p. 54)</li> </ul> </li> </ul>
A vertical band appears when you shoot a subject such as lights or a candle flame against a dark background.	<ul style="list-style-type: none"> <li>The contrast between the subject and background is too high. This is not a malfunction.</li> </ul>
Vertical streaks appear when you shoot a very bright subject.	<ul style="list-style-type: none"> <li>This is called the smear phenomenon. This is not a malfunction.</li> </ul>

## Troubleshooting

Symptom	Cause and/or Corrective Actions
Some tiny white spots appear on the LCD screen or in the viewfinder.	<ul style="list-style-type: none"> <li>When the shutter speed is too low or the low lux mode is selected.</li> </ul>
Unknown pictures or messages are displayed on the LCD screen or in the viewfinder.	<ul style="list-style-type: none"> <li>If 10 minutes elapse after you set the POWER switch to CAMERA or DEMO MODE is set to ON in the menu settings without a cassette inserted, your camcorder automatically starts the demonstration.               <ul style="list-style-type: none"> <li>Insert a cassette. The demonstration stops.</li> <li>You can also cancel DEMO MODE. (p. 160)</li> </ul> </li> </ul>
The click of the shutter does not sound.	<ul style="list-style-type: none"> <li>BEEP is set to OFF in the menu settings.               <ul style="list-style-type: none"> <li>Set it to MELODY or NORMAL. (p. 154)</li> </ul> </li> </ul>
The image is not bright even if you use the video flash light.	<ul style="list-style-type: none"> <li>The ND FILTER selector is set to 1 or 2.               <ul style="list-style-type: none"> <li>Set it to OFF. (p. 66)</li> </ul> </li> <li>The manual adjustment is not suitable for the situations. (The 5 indicator flashes.)               <ul style="list-style-type: none"> <li>Set the AUTO LOCK selector to AUTO LOCK, or cancel the manual adjustment. (p. 61)</li> </ul> </li> </ul>
In the playback mode	
Symptom	Cause and/or Corrective Actions
The tape does not move when a video control button is pressed.	<ul style="list-style-type: none"> <li>The POWER switch is not set to VCR.               <ul style="list-style-type: none"> <li>Set it to VCR. (p. 38)</li> </ul> </li> </ul>
The playback button does not function.	<ul style="list-style-type: none"> <li>The tape has run out.               <ul style="list-style-type: none"> <li>Rewind the tape. (p. 42)</li> </ul> </li> </ul>
There are horizontal lines on the picture or the playback picture is not clear or does not appear.	<ul style="list-style-type: none"> <li>The video head may be dirty.               <ul style="list-style-type: none"> <li>Clean the heads using the Sony DVM12CL cleaning cassette (not supplied). (p. 235)</li> </ul> </li> </ul>
No sound or only a low sound is heard when playing back a tape.	<ul style="list-style-type: none"> <li>The volume is turned to minimum.               <ul style="list-style-type: none"> <li>Turn up the volume. (p. 38)</li> </ul> </li> <li>AUDIO MIX is set to the ST2 side in the menu settings.               <ul style="list-style-type: none"> <li>Adjust AUDIO MIX. (p. 154)</li> </ul> </li> </ul>
The title search function does not work.	<ul style="list-style-type: none"> <li>The tape has no cassette memory.               <ul style="list-style-type: none"> <li>Use a tape with cassette memory. (p. 95, 210)</li> </ul> </li> <li>CM SEARCH is set to OFF in the menu settings.               <ul style="list-style-type: none"> <li>Set it to ON. (p. 154)</li> </ul> </li> <li>There is no title in the tape.               <ul style="list-style-type: none"> <li>Superimpose the titles. (p. 141)</li> </ul> </li> <li>The tape has a blank portion in the recorded portion. (p. 95)</li> </ul>

(continued on the following page)

Additional Information / Дополнительная информация

## Troubleshooting

Symptom	Cause and/or Corrective Actions
Displaying the recorded date, date search function does not work.	<ul style="list-style-type: none"> <li>The tape has no cassette memory.               <ul style="list-style-type: none"> <li>Use a tape with cassette memory. (p. 97, 210)</li> </ul> </li> <li>CM SEARCH is set to OFF in the menu settings.               <ul style="list-style-type: none"> <li>Set it to ON. (p. 154)</li> </ul> </li> <li>The tape has a blank portion in the recorded portion. (p. 95)</li> </ul>
The new sound now being added, or that has been added to the recorded tape is not heard.	<ul style="list-style-type: none"> <li>AUDIO MIX is set to ST1 side in the menu settings.               <ul style="list-style-type: none"> <li>Set it to the side you want to monitor. (p. 154)</li> </ul> </li> </ul>
The title is not displayed.	<ul style="list-style-type: none"> <li>TITLE DSPL is set to OFF in the menu settings.               <ul style="list-style-type: none"> <li>Set it to ON. (p. 154)</li> </ul> </li> </ul>
The sound is muted or images do not appear when monitoring images through TV/VCR.	<ul style="list-style-type: none"> <li>Pull out the A/V connecting cable from the AUDIO L/R and VIDEO jacks, then connect it again.</li> </ul>

In the recording and playback modes	
Symptom	Cause and/or Corrective Actions
The power does not turn on.	<ul style="list-style-type: none"> <li>The battery pack is not installed, or is dead or nearly dead.               <ul style="list-style-type: none"> <li>Install a charged battery pack. (p. 13, 14)</li> </ul> </li> <li>The AC power adaptor is not connected to the mains.               <ul style="list-style-type: none"> <li>Connect the AC power adaptor to the mains. (p. 16)</li> </ul> </li> </ul>
The end search function does not work.	<ul style="list-style-type: none"> <li>The tape was ejected after recording when using a tape without cassette memory. (p. 36, 43)</li> <li>You have not recorded on the new cassette yet. (p. 36, 43)</li> </ul>
The end search function does not work correctly.	<ul style="list-style-type: none"> <li>The tape has a blank portion in the beginning or middle. (p. 37)</li> </ul>
The picture does not appear in the viewfinder.	<ul style="list-style-type: none"> <li>The LCD panel is open.               <ul style="list-style-type: none"> <li>Close the LCD panel. (p. 25)</li> </ul> </li> </ul>
The battery pack is quickly discharged.	<ul style="list-style-type: none"> <li>The operating temperature is too low.               <ul style="list-style-type: none"> <li>The battery pack is not fully charged.                   <ul style="list-style-type: none"> <li>Charge the battery pack fully. (p. 14)</li> </ul> </li> <li>The battery pack is completely dead, and cannot be recharged.                   <ul style="list-style-type: none"> <li>Replace with a new battery pack. (p. 13)</li> </ul> </li> </ul> </li> </ul>
The battery remaining indicator does not indicate the correct time.	<ul style="list-style-type: none"> <li>You have used the battery pack in an extremely hot or cold environment for a long time.               <ul style="list-style-type: none"> <li>The battery pack is completely dead, and cannot be recharged.                   <ul style="list-style-type: none"> <li>Replace with a new battery pack. (p. 13)</li> </ul> </li> <li>The battery is dead.                   <ul style="list-style-type: none"> <li>Use a full-charged battery pack. (p. 13, 14)</li> </ul> </li> </ul> </li> </ul>

## Troubleshooting

Symptom	Cause and/or Corrective Actions
The cassette cannot be removed from the holder.	<ul style="list-style-type: none"> <li>The power source is disconnected.               <ul style="list-style-type: none"> <li>Connect it firmly. (p. 13, 18)</li> </ul> </li> <li>The battery is dead.               <ul style="list-style-type: none"> <li>Use a charged battery pack. (p. 13, 14)</li> </ul> </li> </ul>
The  and  indicators flash and no functions except for cassette ejection work.	<ul style="list-style-type: none"> <li>Moisture condensation has occurred.               <ul style="list-style-type: none"> <li>Remove the cassette and leave your camcorder for at least one hour to acclimatize. (p. 234)</li> </ul> </li> </ul>
indicator does not appear when using a tape with cassette memory.	<ul style="list-style-type: none"> <li>The gold-plated connector of the tape is dirty or dusty.               <ul style="list-style-type: none"> <li>Clean the gold-plated connector. (p. 213)</li> </ul> </li> </ul>
Remaining tape indicator is not displayed.	<ul style="list-style-type: none"> <li>The  is set to AUTO in the menu settings.               <ul style="list-style-type: none"> <li>Set it to ON to always display the remaining tape indicator. (p. 154)</li> </ul> </li> </ul>

When operating using the "Memory Stick"	
Symptom	Cause and/or Corrective Actions
Operations do not function.	<ul style="list-style-type: none"> <li>The POWER switch is set to CAMERA or OFF (CHG).               <ul style="list-style-type: none"> <li>Set it to MEMORY or VCR.</li> </ul> </li> <li>The "Memory Stick" is not inserted.               <ul style="list-style-type: none"> <li>Insert a "Memory Stick." (p. 173)</li> </ul> </li> </ul>
Recording does not function.	<ul style="list-style-type: none"> <li>The "Memory Stick" has already been recorded to its full capacity.               <ul style="list-style-type: none"> <li>Erase unnecessary images and record again. (p. 177, 204)</li> </ul> </li> <li>The "Memory Stick" formatted incorrectly is inserted.               <ul style="list-style-type: none"> <li>Format the "Memory Stick" or use another "Memory Stick." (p. 159)</li> </ul> </li> <li>The write-protect tab on the "Memory Stick" is set to LOCK.               <ul style="list-style-type: none"> <li>Set the tab to write. (p. 170)</li> </ul> </li> </ul>
The image cannot be deleted.	<ul style="list-style-type: none"> <li>The image is protected.               <ul style="list-style-type: none"> <li>Cancel image protection. (p. 202)</li> </ul> </li> <li>The write-protect tab on the "Memory Stick" is set to LOCK.               <ul style="list-style-type: none"> <li>Set the tab to write. (p. 170)</li> </ul> </li> </ul>
You cannot format the "Memory Stick."	<ul style="list-style-type: none"> <li>The write-protect tab on the "Memory Stick" is set to LOCK.               <ul style="list-style-type: none"> <li>Set the tab to write. (p. 170)</li> </ul> </li> </ul>
Deleting all the images cannot be carried out.	<ul style="list-style-type: none"> <li>The write-protect tab on the "Memory Stick" is set to LOCK.               <ul style="list-style-type: none"> <li>Set the tab to write. (p. 170)</li> </ul> </li> </ul>
You cannot protect the image.	<ul style="list-style-type: none"> <li>The write-protect tab on the "Memory Stick" is set to LOCK.               <ul style="list-style-type: none"> <li>Set the tab to write. (p. 170)</li> </ul> </li> <li>The image to be protected is not being played back.               <ul style="list-style-type: none"> <li>Press MEMORY PLAY to play back the image. (p. 193)</li> </ul> </li> </ul>
You cannot write a print mark on the still image.	<ul style="list-style-type: none"> <li>The write-protect tab on the "Memory Stick" is set to LOCK.               <ul style="list-style-type: none"> <li>Set the tab to write. (p. 170)</li> </ul> </li> <li>The image that you will write a print mark is not being played back.               <ul style="list-style-type: none"> <li>Press MEMORY PLAY to play back the image. (p. 193)</li> </ul> </li> </ul>

(continued on the following page)

Additional Information / Дополнительная информация

## Troubleshooting

Symptom	Cause and/or Corrective Actions
The photo save function does not work.	<ul style="list-style-type: none"> <li>The write-protect tab on the "Memory Stick" is set to LOCK.</li> <li>Set the tab to write. (p. 170)</li> <li>The battery pack is dead.</li> <li>Install a charged battery pack or use the AC power adaptor instead of the battery pack. (p. 13, 15)</li> </ul>
<b>Others</b>	
Symptom	Cause and/or Corrective Actions
The title is not recorded.	<ul style="list-style-type: none"> <li>The tape has no cassette memory.</li> <li>Use a tape with cassette memory. (p. 141, 210)</li> <li>The cassette memory is full.</li> <li>Erase unnecessary title. (p. 145)</li> <li>The tape is set to prevent accidental erasure.</li> <li>Slide the write-protect tab so that red portion is not visible. (p. 20)</li> <li>Nothing is recorded in that position on the tape.</li> <li>Superimpose the title to the recorded position. (p. 141)</li> </ul>
The cassette label is not recorded.	<ul style="list-style-type: none"> <li>The tape has no cassette memory.</li> <li>Use a tape with cassette memory. (p. 149, 210)</li> <li>The cassette memory is full.</li> <li>Erase some data. (p. 151)</li> <li>The tape is set to prevent accidental erasure.</li> <li>Slide the write-protect tab so that red portion is not visible. (p. 20)</li> <li>Disconnect the i.LINK cable (DV connecting cable), and connect it again. (p. 106)</li> </ul>
While editing using the i.LINK cable (DV connecting cable), recording picture cannot be monitored.	<ul style="list-style-type: none"> <li>Disconnect the i.LINK cable (DV connecting cable), and connect it again. (p. 106)</li> </ul>
Digital program editing does not function	<ul style="list-style-type: none"> <li>The input selector on the VCR is not set correctly.</li> <li>Check the connection and set up the selector position. (p. 105)</li> <li>The camcorder is not connected to Sony DV equipment.</li> <li>Set CONTROL to IR in the menu settings and set the recording VCR to be controlled by infrared rays.</li> <li>Setting program on a blank portion of the tape is attempted.</li> <li>Set the program again on a recorded portion. (p. 122)</li> <li>Your camcorder and the VCR are not synchronized.</li> <li>Synchronize them. (p. 117)</li> </ul>

## Troubleshooting

Symptom	Cause and/or Corrective Actions
The Remote Commander supplied with your camcorder does not work.	<ul style="list-style-type: none"> <li>COMMANDER is set to OFF in the menu settings.</li> <li>Set it to ON. (p. 154)</li> <li>Something is blocking the infrared rays.</li> <li>Remove the obstacle.</li> <li>The batteries are inserted in the battery holder with the + - polarities incorrectly.</li> <li>Insert the batteries with the correct polarity. (p. 235)</li> <li>The batteries are dead.</li> <li>Insert new ones. (p. 235)</li> </ul>
The picture from a TV or VCR does not appear even when your camcorder is connected to outputs on the TV or VCR.	<ul style="list-style-type: none"> <li>DISPLAY is set to V-OUT/LCD in the menu settings.</li> <li>Set it to LCD. (p. 154)</li> </ul>
The melody or beep sounds for five seconds.	<ul style="list-style-type: none"> <li>Moisture condensation has occurred.</li> <li>Remove the cassette and leave your camcorder for at least one hour to acclimatize. (p. 234)</li> <li>Some troubles have occurred in your camcorder.</li> <li>Remove the cassette and insert it again, then operate your camcorder.</li> </ul>
When charging the battery pack, no indicator appears or the indicator flashes on the display window.	<ul style="list-style-type: none"> <li>The AC power adaptor is disconnected.</li> <li>Connect it properly.</li> <li>The battery pack malfunctions.</li> <li>Contact your Sony dealer or local authorized Sony service facility.</li> </ul>
You cannot charge the battery pack.	<ul style="list-style-type: none"> <li>The POWER switch is not set to OFF (CHG).</li> <li>Set it to OFF (CHG).</li> </ul>
The camcorder is immediately turned off even if the amount of the battery remaining time is enough to operate.	<ul style="list-style-type: none"> <li>Charge the battery pack fully again.</li> <li>The correct remaining time is displayed.</li> </ul>
No function works though the power is on.	<ul style="list-style-type: none"> <li>Disconnect the mains lead of the AC power adaptor or remove the battery, then reconnect it after about one minute. Turn the power on. If the functions still do not work, press the RESET button located at the lower-right of the ZEBRA selector using a sharp-pointed object. (If you press the RESET button, all the settings including the date and time return to the default.) (p. 18, 216)</li> </ul>

Additional Information / Дополнительная информация


220

## English

### Self-diagnosis display

Your camcorder has a self-diagnosis display function. This function displays the current condition of your camcorder as a 5-digit code (a combination of a letter and figures) on the LCD screen, display window, or in the viewfinder. If a 5-digit code is displayed, check the following code chart. The last two digits (indicated by □) will differ depending on the state of your camcorder.

On the LCD screen or in the viewfinder, on the display window



#### Self-diagnosis display

• C-□-□-□-□  
You can service your camcorder yourself.  
• E-□-□-□-□  
Contact your Sony dealer or nearest local authorized Sony service facility.

Five-digit display	Cause and/or Corrective Actions
C-04-□-□-□	<ul style="list-style-type: none"> <li>You are using a battery pack that is not an "InfoLITHIUM" battery pack.</li> <li>Use an "InfoLITHIUM" battery pack. (p. 14)</li> </ul>
C-21-□-□-□	<ul style="list-style-type: none"> <li>Moisture condensation has occurred.</li> <li>Remove the cassette and leave your camcorder for at least one hour to acclimatize. (p. 234)</li> </ul>
C-22-□-□-□	<ul style="list-style-type: none"> <li>The video heads are dirty.</li> <li>Clean the heads using the Sony DVM12CL cleaning cassette (not supplied). (p. 235)</li> </ul>
C-31-□-□-□	<ul style="list-style-type: none"> <li>A malfunction other than the above.</li> <li>Remove the cassette and insert it again, then operate your camcorder.</li> <li>Disconnect the mains lead of the AC power adaptor or remove the battery pack. After reconnecting the power source, operate your camcorder.</li> </ul>
C-32-□-□-□	
E-61-□-□-□	<ul style="list-style-type: none"> <li>A malfunction that you cannot service has occurred.</li> <li>Contact your Sony dealer and inform them of the 5-digit code. (example: E-61-10)</li> </ul>
E-62-□-□-□	

If you are unable to rectify the problem even if you try corrective actions a few times, contact your Sony dealer or nearest local authorized Sony service facility.

### Warning indicators and messages

If indicators and messages appear on the LCD screen or in the viewfinder, check the following:  
See the page in parentheses "( )" for more information.

#### Warning indicators

- The battery is dead or nearly dead**  
Slow flashing:
  - The battery is nearly dead.
  - Depending on conditions, the ⚡ indicator may flash, even if there are five to 10 minutes remaining. If this flashes, we recommend that you charge the battery or install the charged battery.
- Fast flashing:**
  - The battery is dead (p. 14).
  - The battery is completely dead.

#### Warning indicator as to tape

- Slow flashing:**
  - The tape is near the end.
  - No tape is inserted (p. 20).\*
  - The write-protect tab on the cassette is out (red) (p. 20).\*
- Fast flashing:**
  - The tape has run out (p. 42).\*

#### You need to eject the cassette

- Slow flashing:**
  - The write-protect tab on the cassette is out (red) (p. 20).\*
- Fast flashing:**
  - Moisture condensation has occurred (p. 234).\*
  - The tape has run out (p. 42).\*
  - The self-diagnosis display function is activated (p. 222).\*

#### Moisture condensation has occurred\*

- Fast flashing:**
  - Eject the cassette, turn off your camcorder, and leave it for about one hour with the cassette compartment open (p. 234).

### Предупреждающие индикаторы и сообщения

Если на экране ЖКД или в видоискателе появляются индикаторы и сообщения, проверьте следующее:  
Более подробную информацию см. на странице в круглых скобках "( )".

#### Предупреждающие индикаторы

- ⚡ Батарея полностью или почти полностью разряжена**  
Медленное мигание:
  - Батарейный блок почти разряжен.
  - В зависимости от условий, индикатор ⚡ может мигать, даже если еще осталось заряда на 10 минут. Если он мигает, рекомендуется зарядить эту батарею или установить заряженную батарею.
- Быстрое мигание:**
  - Батарейный блок разряжен (стр. 14).
  - Батарейный блок полностью разряжен.

#### Предупреждающий индикатор ⚡

- Относительно ленты**  
Медленное мигание:
  - Лента почти достигла конца.
  - Кассета не вставлена (стр. 20).\*
  - На кассете отсутствует (красный) лепесток защиты от записи (стр. 20).\*
- Быстрое мигание:**
  - Лента закончилась (стр. 42).\*

#### Необходимо извлечь кассету

- Медленное мигание:**
  - На кассете отсутствует (красный) лепесток защиты от записи (стр. 20).\*
- Быстрое мигание:**
  - Произошла конденсация влаги (стр. 234).\*
  - Лента закончилась (стр. 42).\*
  - Сработала функция самодиагностики (стр. 229).\*

#### Произошла конденсация влаги\*

- Быстрое мигание:**
  - Извлеките кассету, выключите видеокamerу и оставьте ее примерно на один час с открытым отсеком для кассеты (стр. 234).

222

230

## Warning indicators and messages

**Ⓢ** Warning indicator as to cassette memory  
Slow flashing:  
• No tape with cassette memory is inserted (p. 210).\*

Self-diagnosis display (p. 222)

Ⓢ The still image is protected  
Slow flashing:  
• The still image is protected (p. 202).\*

**Ⓢ** Warning indicator as to "Memory Stick"™  
Slow flashing:  
• No "Memory Stick" is inserted (p. 173).  
Fast flashing:  
• Unreadable "Memory Stick" is inserted.

100-0001 "Warning indicators) Memory Stick" file error\*

Slow flashing:  
• File is broken.  
• File has no compatibility.

**Ⓢ** "Memory Stick" format error\*

Fast flashing:  
• There are too many directories or more.  
• Data is broken.  
• "Memory Stick" is not formatted correctly (p. 158).

## Warning messages

- **CLOCK SET**  
Reset the date and time (p. 168).
- **FOR "InfoLITHIUM" BATTERY ONLY**  
Use an "InfoLITHIUM" battery pack (p. 14).
- **MEMORY FULL**  
The "Memory Stick" is full in photo save function (p. 192).
- **Ⓢ CLEANING CASSETTE**  
The video heads are dirty (p. 235).\*
- **Ⓢ FULL**  
The tape cassette memory is full (p. 144).\*

## Предупреждающие индикаторы и сообщения

**Ⓢ** Предупреждающий индикатор кассеты с памятью  
Медленное мигание:  
• Не установлена лента с кассетной памятью (стр. 210).\*

Индикация самодиагностики (стр. 222)

Ⓢ Изображение защищено  
Медленное мигание:  
• Изображение защищено (стр. 202).\*

**Ⓢ** Предупреждающий индикатор "Memory Stick"™  
Медленное мигание:  
• Не вставлена "Memory Stick" (стр. 173).  
Быстрое мигание:  
• Вставлена нечитаемая "Memory Stick".

100-0001 "(Предупреждающие индикаторы) ошибка чтения файлов на Memory Stick"™

Медленное мигание:  
• Файл поврежден.  
• Файл несовместим.

**Ⓢ** Ошибка форматирования "Memory Stick"™

Быстрое мигание:  
• Имеется две или более директорий.  
• Данные повреждены.  
• "Memory Stick" отформатирована неправильно (стр. 164).

## Предупреждающие сообщения

- **CLOCK SET**  
Переставьте дату и время (стр. 168).
- **FOR "InfoLITHIUM" BATTERY ONLY**  
Используйте батарейный блок "InfoLITHIUM" (стр. 14).
- **MEMORY FULL**  
"Memory Stick" переполнена при выполнении функции сохранения фотоснимков (стр. 192).
- **Ⓢ CLEANING CASSETTE**  
Загрязнились видеоголовки (стр. 235).\*
- **Ⓢ FULL**  
Кассетная память ленты переполнена (стр. 144).\*

Additional Information / Дополнительная информация

231

232

## Warning indicators and messages

- **16BIT**  
AUDIO MODE is set to 16BIT.\* You cannot dub new sound (p. 159).
- **REC MODE**  
REC MODE is set to LP.\* You cannot dub new sound (p. 159).
- **TAPE**  
There is no recorded portion on the tape.\* You cannot dub new sound (p. 138).
- **"i.LINK" CABLE**  
i.LINK cable is connected (p. 139).\* You cannot dub new sound.
- **Ⓢ FULL**  
The "Memory Stick" is full (p. 180).\*
- **Ⓢ** The write-protect tab on the "Memory Stick" is set to LOCK (p. 170).\*
- **Ⓢ NO FILE**  
No still image is recorded on the "Memory Stick" (p. 194).\*
- **Ⓢ NO MEMORY STICK**  
No "Memory Stick" is inserted (p. 173).\*
- **Ⓢ MEMORY STICK ERROR**  
The "Memory Stick" data is corrupted (p. 173).\*
- **Ⓢ FORMAT ERROR (p. 158)\***
- **Ⓢ DIRECTORY ERROR (p. 195)\***
- **COPY INHIBIT**  
The tape contains copyright control signals for copyright protection of software (p. 211).\*
- **Ⓢ TAPE END**  
The tape has reached the end of the tape (p. 42).\*
- **Ⓢ NO TAPE**  
Insert a cassette tape (p. 20).\*

\* You hear the melody or beep sound.  
\*\* Ⓢ and the message appear alternately.

## Предупреждающие индикаторы и сообщения

- **16BIT**  
AUDIO MODE установлен в положение 16BIT.\* Новый звук невозможно перезаписать (стр. 165).
- **REC MODE**  
REC MODE установлен в положение LP.\* Новый звук невозможно перезаписать (стр. 165).
- **TAPE**  
На ленте нет записанного участка.\* Новый звук невозможно перезаписать (стр. 138).
- **"i.LINK" CABLE**  
Подключен кабель i.LINK (стр. 139).\* Новый звук невозможно перезаписать.
- **Ⓢ FULL**  
"Memory Stick" переполнена (стр. 180).\*
- **Ⓢ** Лепесток защиты от записи на "Memory Stick" установлен в положение LOCK (стр. 170).\*
- **Ⓢ NO FILE**  
На "Memory Stick" нет записанных неподвижных изображений (стр. 194).\*
- **Ⓢ NO MEMORY STICK**  
Не вставлена "Memory Stick" (стр. 173).\*
- **Ⓢ MEMORY STICK ERROR**  
Данные на "Memory Stick" повреждены (стр. 173).\*
- **Ⓢ FORMAT ERROR (стр. 164)\***
- **Ⓢ DIRECTORY ERROR (стр. 195)\***
- **COPY INHIBIT**  
На ленте содержится управляющие сигналы авторских прав для защиты авторских прав на программное обеспечение (стр. 211).\*
- **Ⓢ TAPE END**  
Достигнут конец ленты (стр. 42).\*
- **Ⓢ NO TAPE**  
Вставьте кассету (стр. 20).\*

\* Вы услышите мелодию или звуковой сигнал.  
\*\* Ⓢ и сообщения отображаются поочередно.

## Using your camcorder abroad

### Using your camcorder abroad

You can use your camcorder in any country or area with the AC power adaptor supplied with your camcorder within 100 V to 240 V AC, 50/60 Hz.

Your camcorder is a PAL system based camcorder. If you want to view the playback picture on a TV, it must be a PAL system based TV with the AUDIO/VIDEO input jack. The following shows TV colour systems used overseas.

### PAL system

Australia, Austria, Belgium, China, Czech Republic, Denmark, Finland, Germany, Great Britain, Holland, Hong Kong, Italy, Kuwait, Malaysia, New Zealand, Norway, Portugal, Singapore, Slovak Republic, Spain, Sweden, Switzerland, Thailand, etc.

### PAL-M system

Brazil

### PAL-N system

Argentina, Paraguay, Uruguay

### NTSC system

Bahama Islands, Bolivia, Canada, Central America, Chile, Colombia, Ecuador, Jamaica, Japan, Korea, Mexico, Peru, Surinam, Taiwan, the Philippines, the U.S.A., Venezuela, etc.

### SECAM system

Bulgaria, France, Guyana, Hungary, Iran, Iraq, Monaco, Poland, Russia, Ukraine, etc.

## Simple setting of clock by time difference

You can easily set the clock to the local time by setting a time difference. Select WORLD TIME in the menu settings. See page 154 for more information.

## Использование Вашей видеокамеры за границей

### Использование Вашей видеокамеры за границей

Вы можете использовать Вашу видеокамеру в любой стране или области благодаря сетевому адаптеру переменного тока, прилагаемому к Вашей видеокамере, который можно использовать в диапазоне от 100 до 240 В переменного тока с частотой 50/60 Гц.

Ваша видеокамера работает в системе PAL. Если необходимо просмотреть воспроизводимое изображение на экране телевизора, то это должен быть телевизор, работающий в системе PAL с входными гнездами AUDIO/VIDEO. Ниже приведены системы цветного телевидения, используемые за рубежом.

### Система PAL

Австралия, Австрия, Бельгия, Китай, Чешская Республика, Дания, Финляндия, Германия, Великобритания, Голландия, Гонконг, Италия, Кувейт, Малайзия, Новая Зеландия, Норвегия, Португалия, Сингапур, Словацкая Республика, Испания, Швеция, Швейцария, Таиланд и т.д.

### Система PAL-M

Бразилия

### Система PAL-N

Аргентина, Парагвай, Уругвай

### Система NTSC

Багамские острова, Боливия, Канада, Центральная Америка, Чили, Колумбия, Эквадор, Гватемала, Япония, Корея, Мексика, Перу, Суринам, Тайвань, Филиппины, США, Венесуэла и т.д.

### Система SECAM

Болгария, Франция, Гайана, Венгрия, Иран, Ирак, Монако, Польша, Россия, Украина и т.д.

## Простая установка разницы во времени на часах

Вы можете легко установить часы на местное время путем установкой разницы во времени. Выберите команду WORLD TIME в установках меню. Более детальную информацию см. на стр. 154.

Additional Information / Дополнительная информация

233

## Maintenance information and precautions

### Moisture condensation

If your camcorder is brought directly from a cold place to a warm place, moisture may condense inside your camcorder, on the surface of the tape, or on the lens. In this condition, the tape may stick to the head drum and be damaged or your camcorder may not operate correctly. If there is moisture inside your camcorder, the beep sounds and the **Ⓢ** indicator flashes. When the **Ⓢ** indicator flashes at the same time, the cassette is inserted in your camcorder. If moisture condenses on the lens, the indicator will not appear.

### If moisture condensation occurred

None of the functions except cassette ejection will work. Eject the cassette, turn off your camcorder, and leave it for about one hour with the cassette compartment open. Your camcorder can be used again if the **Ⓢ** indicator does not appear when the power is turned on again.

### Note on moisture condensation

Moisture may condense when you bring your camcorder from a cold place into a warm place (or vice versa) or when you use your camcorder in a hot place as follows:  
• You bring your camcorder from a ski slope into a place warmed up by a heating device.  
• You bring your camcorder from an air-conditioned car or room into a hot place outside.  
• You use your camcorder after a squall or a shower.  
• You use your camcorder in a high temperature and humidity place.

### How to prevent moisture condensation

When you bring your camcorder from a cold place into a warm place, put your camcorder in a plastic bag and tightly seal it. Remove the bag when the air temperature inside the plastic bag has reached the surrounding temperature (after about one hour).

## Информация по уходу за аппаратом и меры предосторожности

### Конденсация влаги

Если видеокамера принесена из холодного места в теплое помещение, то внутри видеокамеры, на поверхности ленты или на объективе может произойти конденсация влаги. В таком состоянии лента может прилипнуть к барабану головки и будет повреждена, или же видеокамера не сможет работать надлежащим образом. Если внутри видеокамеры произошла конденсация влаги, прозвучит звуковой сигнал и замигает индикатор **Ⓢ**. Если одновременно мигает индикатор **Ⓢ**, это значит, что кассета вставлена в видеокамеру. Если влага сконденсировалась на объективе, индикатор появляться не будет.

### Если произошла конденсация влаги

Ни одна из функций, кроме извлечения кассеты, не будет работать. Извлеките кассету, выключите видеокамеру и оставьте ее примерно на один час с открытым отсеком для кассеты. Видеокамеру снова можно использовать, если индикатор **Ⓢ** не появляется при повторном включении питания.

### Примечание по конденсации влаги

Влага может образоваться, если перенести видеокамеру из холодного места в теплое (или наоборот) или при использовании видеокамеры в жарком месте в следующих случаях:  
• Если видеокамера принесена со снежного склона в помещение, где работает обогреватель.  
• Если видеокамера принесена из автомобиля или помещения, в которых работает кондиционер, в жаркое место.  
• Если видеокамера используется после грозы или дождя.  
• Если видеокамера используется в жарком месте или месте с повышенной влажностью.

Как предотвратить конденсацию влаги  
Если видеокамера принесена из холодного места в теплое, положите видеокамеру в полиэтиленовый пакет и плотно закройте его. Выньте видеокамеру из полиэтиленового пакета, когда температура воздуха внутри пакета достигнет температуры окружающего воздуха (приблизительно через один час).

233


234

## Maintenance information and precautions

### Removing Dust from Inside the Viewfinder

Before cleaning, remove the sticker below the viewfinder lens adjustment lever.

- (1) While holding down the hook ①, slide the eyecup in the direction of the arrow and remove it out ②.
- (2) Clean the surface with a commercially available blower.

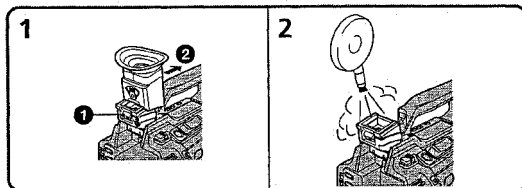

### To reattach the eyecup

Do step 1 above sliding the eyecup in the reverse direction of the arrow.

### Maintenance information

#### Cleaning the video head

To ensure normal recording and clear pictures, clean the video heads. The video head may be dirty when:

- mosaic-pattern noise appears on the playback picture.
- playback pictures do not move.
- playback pictures do not appear.
- the ② indicator and "CLEANING CASSETTE" message appear one after another on the LCD screen or in the viewfinder.

## Информация по уходу за аппаратом и меры предосторожности

### Удаление загрязнений с внутренней стороны видеодиспетчера

Перед чисткой удалите наклейку под рычагом регулировки объектива видеодиспетчера.

- (1) Нажимая на крючок ①, сдвиньте окуляр в направлении стрелки и снимите его ②.
- (2) Произведите очистку поверхности с помощью имеющегося в продаже воздушного приспособления.

### Чтобы снова вставить окуляр

Повторите шаг 1, описанный выше, сдвигая окуляр в направлении, обратном стрелке.

### Информация по уходу за аппаратом

#### Чистка видеоголовки

Для обеспечения нормальной записи и четкого изображения следует периодически чистить видеоголовки. Видеоголовки, возможно, загрязнены, если:

- на воспроизводимом изображении появляются помехи типа мозаики.
- воспроизводимое изображение не движется.
- воспроизводимое изображение не появляется на экране.
- на экране ЖКД или в видоискателе появляются один за другим индикатор ② и сообщение "CLEANING CASSETTE".

## Maintenance information and precautions

If the above problem, [a] or [b] occurs, clean the video heads for 10 seconds with the Sony DVM12CL cleaning cassette (not supplied). Check the picture and if the above problem persists, repeat cleaning.



## Информация по уходу за аппаратом и меры предосторожности

При возникновении проблем типа [a] или [b], почистите видеоголовки с помощью чистой кассеты Sony DVM12CL (не входит в комплект) в течение 10 секунд. Проверьте изображение и, если описанные выше проблемы не устранены, повторите чистку.

### Cleaning the LCD screen

If fingerprints or dust make the LCD screen dirty, we recommend using a LCD Cleaning Cloth (not supplied) to clean the LCD screen.

### Charging the vanadium-lithium battery in your camcorder

Your camcorder is supplied with a vanadium-lithium battery installed so as to retain the date and time, etc., regardless of the setting of the POWER switch. The vanadium-lithium battery is always charged as long as you are using your camcorder. The battery, however, will get discharged gradually if you do not use your camcorder. It will be completely discharged in about four months if you do not use your camcorder at all. Even if the vanadium-lithium battery is not charged, it will not affect the camcorder operation. To retain the date and time, etc., charge the battery if the battery is discharged.

#### Charging the vanadium-lithium battery:

- Connect your camcorder to mains using the AC power adaptor supplied with your camcorder, and leave your camcorder with the POWER switch turned off for more than 24 hours.
- Or install the fully charged battery pack in your camcorder, and leave your camcorder with the POWER switch turned off for more than 24 hours.

### Чистка экрана ЖКД

Если на экране ЖКД появляются отпечатки пальцев или пыль, для очистки экрана ЖКД рекомендуется использовать специальную ткань (не входит в комплект).

### Зарядка ванадиево-литиевой батареи в Вашей видеокамере

В Вашей видеокамере установлена ванадиево-литиевая батарея, которая сохраняет в памяти дату и время и т.п. независимо от установки переключателя POWER. Ванадиево-литиевая батарея заряжается всегда, когда Вы используете свою видеокамеру. Однако батарея будет постепенно разряжаться, если Вы не используете видеокамеру. Если видеокамера совершенно не используется, то батарея полностью разрядится приблизительно через 4 месяца. Даже если ванадиево-литиевая батарея не заряжена, это не повлияет на работу видеокамеры. Для сохранения в памяти даты и времени следует зарядить батарею, если она разряжена.

#### Зарядка ванадиево-литиевой батареи

- Подсоедините видеокамеру к сети с помощью сетевого адаптера переменного тока, прилагаемого к Вашей видеокамере, и оставьте видеокамеру с выключенным питанием более, чем на 24 часа.
- Или же установите полностью заряженный батарейный блок в Вашу видеокамеру и оставьте ее с выключенным питанием более, чем на 24 часа.

235

236

## Maintenance information and precautions

### Precautions

#### Camcorder operation

- Operate your camcorder on 7.2 V (battery pack) or 8.4 V (AC power adaptor).
- For DC or AC operation, use the accessories recommended in this operating instructions.
- If any solid object or liquid get inside the casing, unplug your camcorder and have it checked by a Sony dealer before operating it any further.
- Avoid rough handling or mechanical shock. Be particularly careful of the lens.
- Keep the POWER switch set to OFF (CHG) when you are not using your camcorder.
- Do not wrap your camcorder with a towel, for example, and operate it. Doing so might cause heat to build up inside.
- Keep your camcorder away from strong magnetic fields or mechanical vibration. Noise may appear on the image.
- Do not touch the LCD screen with a sharp-pointed object.
- If your camcorder is used in a cold place, a residual image may appear on the LCD screen. This is not a malfunction.
- While using your camcorder, the back of the LCD screen may heat up. This is not a malfunction.

#### On handling tapes

- Do not insert anything into the small holes on the rear of the cassette. These holes are used to sense the type and thickness of the tape and if the recording tab is in or out.
- Do not open the tape protect cover or touch the tape.
- Avoid touching or damaging the terminals. To remove dust, clean the terminals with a soft cloth.

## Информация по уходу за аппаратом и меры предосторожности

### Меры предосторожности

#### Эксплуатация видеокамеры

- Эксплуатируйте видеокамеру от 7,2 В (батарейный блок) или 8,4 В (сетевой адаптер переменного тока).
- Что касается эксплуатации видеокамеры от постоянного и переменного тока, используйте принадлежности, рекомендуемые в данной инструкции по эксплуатации.
- Если внутрь корпуса попал какой-нибудь твердый предмет или жидкость, выключите видеокамеру и перед дальнейшей ее эксплуатацией проверьте ее у дилера Sony.
- Не допускайте грубого обращения с видеокамерой или механических ударов. Будьте особенно осторожны с объективом.
- Когда видеокамера не используется, установите переключатель POWER в положение OFF (CHG).
- Не заворачивайте видеокамеру, например в полотенце, и не эксплуатируйте ее в таком состоянии. Это может привести к повышению температуры внутри видеокамеры.
- Держите Вашу видеокамеру подальше от сильных магнитных полей и не подвержайте ее механической вибрации. На изображении могут возникнуть помехи.
- Не прикасайтесь к экрану ЖКД острыми предметами.
- При эксплуатации Вашей видеокамеры в холодном месте, на экране ЖКД может появиться остаточное изображение. Однако это не является неисправностью.
- При эксплуатации Вашей видеокамеры, задняя сторона экрана ЖКД может нагреваться. Однако это не является неисправностью.

#### Относительно обращения с лентами

- Не вставляйте никаких предметов в маленькие отверстия на задней стороне кассеты. Эти отверстия используются для определения типа и толщины ленты, а также для определения наличия или отсутствия пленки защиты от записи на ленте.
- Не открывайте предохранительную крышку ленты и не прикасайтесь к ленте.
- Не прикасайтесь к полюсам и не допускайте их повреждения. Для удаления пыли чистите полюса с помощью мягкой ткани.

## Maintenance information and precautions

### Camcorder care

- Remove the tape, and periodically turn on the power, operate the CAMERA and VCR sections and play back a tape for about three minutes when your camcorder is not to be used for a long time.
- Clean the lens with a soft brush to remove dust. If there are fingerprints on the lens, remove them with a soft cloth.
- Clean the camcorder body with a dry soft cloth, or a soft cloth lightly moistened with a mild detergent solution. Do not use any type of solvent which may damage the finish.
- Do not let sand get into your camcorder. When you use your camcorder on a sandy beach or in a dusty place, protect it from the sand or dust. Sand or dust may cause your camcorder to malfunction, and sometimes this malfunction cannot be repaired.

#### AC power adaptor

- Unplug the unit from the mains when you are not using the unit for a long time. To disconnect the mains lead, pull it out by the plug. Never pull the mains lead itself.
- Do not operate the unit with a damaged cord or if the unit has been dropped or damaged.
- Do not bend the mains lead forcibly, or place a heavy object on it. This will damage the lead and may cause fire or electrical shock.
- Prevent metallic objects from coming into contact with the metal parts of the connecting section. If this happens, a short may occur and the unit may be damaged.
- Always keep metal contacts clean.
- Do not disassemble the unit.
- Do not apply mechanical shock or drop the unit.

## Информация по уходу за аппаратом и меры предосторожности

### Уход за видеокамерой

- Когда видеокамера в течение длительного времени не используется, вынимайте кассету и периодически включайте питание, дайте камере поработать в режиме CAMERA и VCR, включая воспроизведение кассеты примерно на три минуты.
- Чистите объектив с помощью мягкой кисточки для удаления пыли. Если имеются отпечатки пальцев на объективе, удалите их с помощью мягкой ткани.
- Чистите корпус видеокамеры с помощью мягкой сухой ткани или мягкой ткани, слегка смоченной слабым раствором моющего средства. Не используйте никакие растворители, которые могут повредить покрытие.
- Не допускайте попадания песка в видеокамеру. Если Вы используете видеокамеру на песчаном пляже или в каком-либо пыльном месте, предохраните аппарат от песка или пыли. Песок или пыль могут привести к неисправности аппарата, которая иногда может быть неисправимой.

#### Сетевой адаптер переменного тока

- Отсоедините аппарат от электрической сети, если он не используется длительное время. Для отсоединения сетевого шнура потяните его за разъем. Никогда не тяните за сам шнур.
- Не эксплуатируйте аппарат с поврежденным шнуром, или если аппарат упал или был поврежден.
- Сильно не перегибайте сетевой провод и не ставьте на него тяжелые предметы. Это может привести к повреждению провода и вызвать пожар или поражение электрическим током.
- Никакие металлические предметы не должны соприкасаться с металлическими контактами соединительной пластины. Если это случится, то может произойти короткое замыкание, и аппарат может быть поврежден.
- Всегда поддерживайте металлические контакты в чистоте.
- Не разбирайте аппарат.
- Не подвержайте аппарат механической вибрации и не роняйте его.

237

238

## Maintenance information and precautions

- While the unit is in use, particularly during charging, keep it away from AM receivers and video equipment. AM receivers and video equipment disturb AM reception and video operation.
- The unit becomes warm during use. This is not a malfunction.
- Do not place the unit in locations that are:
  - Extremely hot or cold
  - Dusty or dirty
  - Very humid
  - Vibrating

### Battery pack

- Use only the specified charger or video equipment with the charging function.
- To prevent accident from a short circuit, do not allow metal objects to come into contact with the battery terminals.
- Keep the battery pack away from fire.
- Never expose the battery pack to temperatures above 60 °C (140 °F), such as in a car parked in the sun or under direct sunlight.
- Keep the battery pack dry.
- Do not expose the battery pack to any mechanical shock.
- Do not disassemble nor modify the battery pack.
- Attach the battery pack to video equipment securely.
- Charging while some capacity remains does not affect the original battery capacity.
- The battery pack is not resistant to water. Do not wet the battery pack.
- Unless you use the battery pack for a long period, store the battery pack after you charge it fully and use it completely once a year.
- Store the battery pack in a cool, dry place.

## Информация по уходу за аппаратом и меры предосторожности

- При использовании аппарата, особенно во время зарядки, держите его подальше от приемников AM-радиовещания и видеоаппаратуры. Приемники AM-радиовещания и видеоаппаратура нарушают AM-радиоприем и работу видеоаппаратуры.
- В процессе эксплуатации аппарат нагревается. Однако это не является неисправностью.
- Не размещайте аппарат в местах:
  - Чрезмерно жарких или холодных
  - Пыльных или грязных
  - Очень влажных
  - Подверженных вибрации

### Батарейный блок

- Используйте только рекомендуемое зарядное устройство или видеоприемник с функцией зарядки.
- Для предотвращения несчастного случая из-за короткого замыкания не допускайте соприкосновения металлических предметов с полюсами батарейного блока.
- Не держите батарейный блок вблизи огня.
- Не подвергайте батарейный блок воздействию температур выше 60 °C, например не оставляйте его в автомобиле, припаркованном в солнечном месте, или под прямым солнечным светом.
- Держите батарейный блок в сухом состоянии.
- Не подвергайте батарейный блок воздействию каких-либо механических ударов.
- Не разбирайте и не видоизменяйте батарейный блок.
- Плотно прикрывайте батарейный блок к видеоаппаратуры.
- Зарядка при наличии остаточного заряда не отражается на первоначальной емкости батареи.
- Батарейный блок не является водонепроницаемым. Не подвергайте батарейный блок воздействию влаги.
- Если Вы длительное время не используете батарейный блок, полностью зарядите его и храните отдельно. Батарейный блок раз в год необходимо полностью разряжать.
- Храните батарейный блок в сухом прохладном месте.

Additional Information / Дополнительная информация

## Maintenance information and precautions

### Notes on dry batteries

- To avoid possible damage from battery leakage or corrosion, observe the following:
  - Be sure to insert the batteries with the + – polarities matched to the + – marks.
  - Dry batteries are not rechargeable.
  - Do not use a combination of new and old batteries.
  - Do not use different types of batteries.
  - Current flows from batteries when you are not using them for a long time.
  - Do not use leaking batteries.

### If batteries are leaking

- Wipe off the liquid in the battery compartment carefully before replacing the batteries.
- If you touch the liquid, wash it off with water.
- If the liquid get into your eyes, wash your eyes with a lot of water and then consult a doctor.

If any problem occurs, unplug your camcorder and contact your nearest Sony dealer.

## Информация по уходу за аппаратом и меры предосторожности

### Сухие батарейки

- Во избежание возможного повреждения видеокамеры вследствие утечки внутреннего вещества батареек или коррозии соблюдайте следующее:
  - При установке батареек соблюдайте правильную полярность + – в соответствии с метками + –.
  - Сухие батарейки нельзя перезаряжать.
  - Не используйте новые батарейки вместе со старыми.
  - Не используйте батарейки разного типа.
  - Если батарейки не используются длительное время, они постепенно разряжаются.
  - Не используйте батарейки, которые потекут.

### Если произошла утечка внутреннего вещества батареек


- Перед тем, как заменить батарейки, тщательно протрите остатки жидкости в отсеке для батареек.
- В случае попадания жидкости на кожу, смойте ее водой.
- В случае попадания жидкости в глаза, промойте глаза большим количеством воды, после чего обратитесь к врачу.

В случае возникновения каких-либо проблем, отключите видеокамеру от источника питания и обратитесь в ближайший сервисный центр Sony.

## — Quick Reference —

## Identifying the parts and controls

### Camcorder

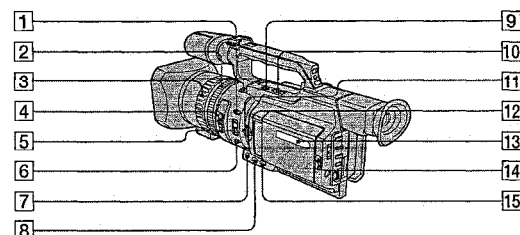

- 1 INDEX MARK button (p. 89)
- 2 Zoom ring (p. 30)
- 3 Focus ring (p. 81)
- 4 ND FILTER selector (p. 66)
- 5 FOCUS selector (p. 81)
- 6 PUSH AUTO button (p. 81)
- 7 FADER button (p. 55)
- 8 BACK LIGHT button (p. 32)
- 9 END SEARCH button (p. 36)
- 10 EDITSEARCH buttons (p. 36)
- 11 EXPOSURE dial (p. 63)
- 12 EXPOSURE button (p. 63)
- 13 Display window (p. 253)
- 14 OPEN button (p. 22, 38)
- 15 SPOT LIGHT button (p. 33)

## — Оперативный справочник —

## Обозначение частей и регуляторов

### Видеокамера

- 1 Кнопка INDEX MARK (стр. 89)
- 2 Кольцо трансфокатора (стр. 30)
- 3 Кольцо фокусировки (стр. 81)
- 4 Селектор ND FILTER (стр. 66)
- 5 Селектор FOCUS (стр. 81)
- 6 Кнопка PUSH AUTO (стр. 81)
- 7 Кнопка FADER (стр. 55)
- 8 Кнопка BACK LIGHT (стр. 32)
- 9 Кнопка END SEARCH (стр. 36)
- 10 Кнопки EDITSEARCH (стр. 36)
- 11 Диск EXPOSURE (стр. 63)
- 12 Кнопка EXPOSURE (стр. 63)
- 13 Окошко дисплея (стр. 253)
- 14 Кнопка OPEN (стр. 22, 38)
- 15 Кнопка SPOT LIGHT (стр. 33)

239

240

## Identifying the parts and controls



This mark indicates that this product is a genuine accessory for Sony video products. When purchasing Sony video products, Sony recommends that you purchase accessories with this "GENUINE VIDEO ACCESSORIES" mark.

Mini DV Digital Video Cassette C/P Memory

These are trademarks of Sony corporation.

### Intelligent Accessory Shoe

- Notes on the intelligent accessory shoe
  - The intelligent accessory shoe supplies power to optional accessories such as a video light or microphone.
  - The intelligent accessory shoe is linked to the POWER switch, allowing you to turn the power supplied by the shoe on and off. Refer to the operating instructions of the accessory for further information.
  - The intelligent accessory shoe has a safety device for fixing the installed accessory securely. To connect an accessory, press down and push it to the end, and then tighten the screw.
  - To remove an accessory, loosen the screw, and then press down and pull out the accessory.

## Обозначение частей и регуляторов



Данная метка означает, что это изделие является подлинной принадлежностью для видеоаппаратуры Sony. При покупке видеоаппаратуры Sony рекомендуется приобретать для нее принадлежность Sony с меткой "GENUINE VIDEO ACCESSORIES".

Mini DV Digital Video Cassette C/P Memory

Корпорация Sony принадлежит несколько торговых марок.

### Intelligent Accessory Shoe

- Примечания по держателю для вспомогательных принадлежностей
  - Держатель для вспомогательных принадлежностей подает питание на вспомогательные принадлежности, такие как видеосветовая или микрофон.
  - Держатель для вспомогательных принадлежностей соединен с переключателем POWER, что позволяет включать и выключать подаваемое на держатель питание. Подробные сведения приводятся в инструкции по эксплуатации вспомогательных принадлежностей.
  - В держателе для вспомогательных принадлежностей имеется предохранительное устройство для надежной фиксации установленной принадлежности. Для подсоединения принадлежности нажмите ее вниз до упора, а затем затяните винт.
  - Для снятия принадлежности ослабьте винт, а затем нажмите принадлежность вниз и потяните ее.


243

244



## Identifying the parts and controls

## Обозначения частей и регуляторов

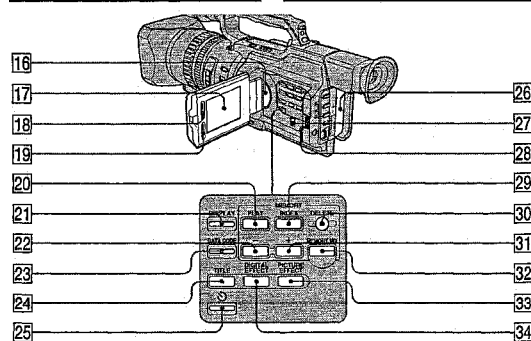

- 16 Speaker
- 17 LCD screen (p. 25)
- 18 LCD BRIGHT buttons (p. 26)
- 19 VOLUME buttons (p. 38)
- 20 MEMORY PLAY button (p. 193)
- 21 DISPLAY button (p. 39)
- 22 MEMORY – button (p. 184, 193)
- 23 DATA CODE button (p. 39)
- 24 TITLE button (p. 142)
- 25 (self-timer) button (p. 34, 48, 181)

- 16 Громкоговоритель
- 17 Экран ЖКД (стр. 25)
- 18 Кнопки LCD BRIGHT (стр. 26)
- 19 Кнопки VOLUME (стр. 38)
- 20 Кнопка MEMORY PLAY (стр. 193)
- 21 Кнопка DISPLAY (стр. 39)
- 22 Кнопка MEMORY – (стр. 184, 193)
- 23 Кнопка DATA CODE (стр. 39)
- 24 Кнопка TITLE (стр. 142)
- 25 Кнопка (Таймер самозапуска) (стр. 34, 48, 181)

Quick Reference / Оперативный справочник

## Identifying the parts and controls

## Обозначение частей и регуляторов

- 26 Battery pack (p. 13)
- 27 ZEBRA selector (p. 67)
- 28 RESET button (p. 221)
- 29 MEMORY INDEX button (p. 195)
- 30 MEMORY DELETE button (p. 204)
- 31 MEMORY + button (p. 184, 193)
- 32 MEMORY MIX button (p. 184)
- 33 PICTURE EFFECT button (p. 56)
- 34 DIGITAL EFFECT button (p. 59)


- 26 Батарейный блок (стр. 13)
- 27 Переключатель ZEBRA (стр. 67)
- 28 Кнопка RESET (стр. 221)
- 29 Кнопка MEMORY INDEX (стр. 195)
- 30 Кнопка MEMORY DELETE (стр. 204)
- 31 Кнопка MEMORY + (стр. 184, 193)
- 32 Кнопка MEMORY MIX (стр. 184)
- 33 Кнопка PICTURE EFFECT (стр. 56)
- 34 Кнопка DIGITAL EFFECT (стр. 59)

245

246

## Identifying the parts and controls

## Обозначение частей и регуляторов

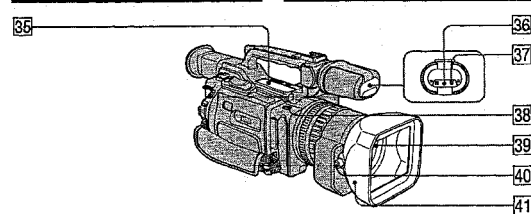

- 35 Video control buttons (p. 38, 42, 121)
  - II SLOW (slow playback)
  - AUDIO DUB (dubbing)
  - STOP (stop)
  - ◀ REW (rewind)
  - ▶ PLAY (playback)
  - ▶▶ FF (Fast-forward)
  - || PAUSE (pause)
  - REC (recording)
 The control buttons light up when you set the POWER switch to VCR.

- 35 Кнопки видеоконтроля (стр. 38, 42, 121)
  - II SLOW (замедленное воспроизведение)
  - AUDIO DUB (перезапись)
  - STOP (остановка)
  - ◀ REW (ускоренная перемотка назад)
  - ▶ PLAY (воспроизведение)
  - ▶▶ FF (ускоренная перемотка вперед)
  - || PAUSE (пауза)
  - REC (запись)
 Кнопки управления подсвечиваются, если переключатель POWER установлен в положение VCR.

- 36 Remote sensor/infrared ray emitter
- 37 Camera recording lamp (p. 22)
- 38 REC START/STOP (p. 27)
- 39 Lens
- 40 Lens hood fixing screw
- 41 Lens hood

- 36 Дистанционный сенсор/инфракрасный излучатель
- 37 Лампочка записи видеокамерой (стр. 22)
- 38 REC START/STOP (начало/остановка записи) (стр. 27)
- 39 Объектив
- 40 Винт для фиксации бленды объектива
- 41 Бленда объектива

**Removing the lens hood**  
To remove the lens hood for attachment of the wide teleconversion lens, etc., loosen the lens hood fixing screw, and unscrew the lens hood counterclockwise.

**When using additional filters**  
We recommend that you use Sony made filters having the genuine accessory mark.


**Снятие бленды объектива**  
Чтобы снять бленду объектива для последующей установки широкоугольного телеобъектива и т.д., ослабьте винт фиксации бленды объектива и поверните ее против часовой стрелки.

**При использовании дополнительных фильтров**  
Рекомендуется использовать фильтры производства корпорации Sony, имеющие знак подлинной принадлежности к марке.

Quick Reference / Оперативный справочник

## Identifying the parts and controls

## Обозначение частей и регуляторов

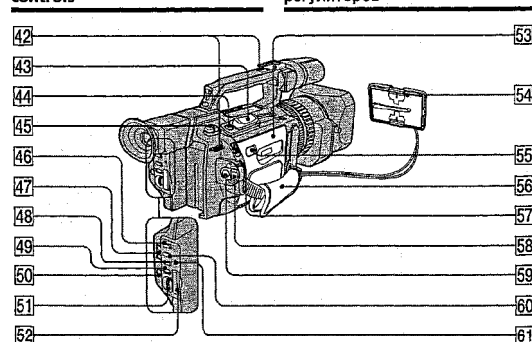

- 42 Hooks for shoulder strap
- 43 Power zoom lever (p. 29)
- 44 PHOTO button (p. 46, 177)
- 45 BATT (battery) RELEASE lever (p. 13)
- 46 PROGRAM AE button (p. 77)
- 47 AUTO LOCK selector (p. 61)
- 48 WHT BAL button (p. 70)
- 49 AUDIO LEVEL button (p. 73)
- 50 MENU button (p. 154)
- 51 SEL/PUSH EXEC dial (p. 154)
- 52 "Memory Stick" slot (p. 173)
- 53 Cassette lid (p. 20)
- 54 Hood cap (p. 22)
- 55 PUSH button (p. 20)

- 42 Крючки для плечевого ремня
- 43 Рычаг привода трансфокатора (стр. 29)
- 44 Кнопка PHOTO (стр. 46, 177)
- 45 Рычажок BATT RELEASE (стр. 13)
- 46 Кнопка PROGRAM AE (стр. 77)
- 47 Переключатель AUTO LOCK (стр. 61)
- 48 Кнопка WHT BAL (стр. 70)
- 49 Кнопка AUDIO LEVEL (стр. 73)
- 50 Кнопка MENU (стр. 154)
- 51 Диск SEL/PUSH EXEC (стр. 154)
- 52 Гнездо для "Memory Stick" (стр. 173)
- 53 Крышка кассетного отсека (стр. 20)
- 54 Крышка (стр. 22)
- 55 Кнопка PUSH (стр. 20)

247

248

## Identifying the parts and controls


- 65 Grip strap
- 67 LOCK switch (p. 22)
- 68 POWER switch (p. 22)
- 69 START/STOP button (p. 22)
- 60 SHUTTER SPEED button (p. 64)
- 61 Access lamp (p. 173)

### Fastening the grip strap

## Обозначение частей и регуляторов

- 65 Ремень для захвата
- 67 Переключатель LOCK (стр. 22)
- 68 Переключатель POWER (стр. 22)
- 69 Кнопка START/STOP (стр. 22)
- 60 Кнопка SHUTTER SPEED (стр. 64)
- 61 Лампочка обращения (стр. 173)

### Прикрепление ремня для захвата

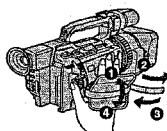

Fasten the grip strap firmly.

**Attaching the shoulder strap**  
Attach the shoulder strap supplied with your camcorder to the hooks for the shoulder strap.

Надежно прикрепите ремень для захвата.

**Прикрепление плечевого ремня**  
Прикрепите плечевой ремень, прилагаемый к Вашей видеокамере, к крючкам для плечевого ремня.



Quick Reference / Оперативный справочник

249

250

## Identifying the parts and controls

- 73 MIC jack (PLUG IN POWER) (p. 135)  
Connect an external microphone (not supplied). This jack also accepts a "plug-in-power" microphone.  
When using a "plug-in-power" microphone, set the MIC/LINE switch to MIC; when using a non-"plug-in-power" microphone or audio equipment, set the MIC/LINE switch to LINE.
- 74 Microphone (p. 137)
- 75 S VIDEO jack (p. 44, 49, 105, 128, 189)
- 76 VIDEO jack (p. 44, 49, 105, 128, 189)
- 77 AUDIO L/R jack (p. 44, 105, 128, 135)
- 78 DV IN/OUT jack (p. 107, 130, 190)  
This "i.LINK" mark is a trademark of Sony Corporation and indicates that this product is in agreement with IEEE 1394-1995 specifications and their revisions.  
The DV IN/OUT jack is i.LINK compatible.
- 79 LANC jack  
LANC stands for Local Application Control Bus System. The LANC control jack is used for controlling the tape transport of video equipment and peripherals connected to it. This jack has the same function as the jack indicated as CONTROL L or REMOTE.
- 80 (headphones) jack  
When you use headphones, the speaker on your camcorder is silent.

## Обозначение частей и регуляторов


- 73 Гнездо MIC (PLUG IN POWER) (стр. 135)  
Для подключения внешнего микрофона (не входит в комплект). Это гнездо также позволяет подключить микрофон "с выключателем питания". При использовании микрофона с "выключателем питания" установите переключатель MIC/LINE в положение MIC, а при использовании микрофона без "выключателя питания" или аудио оборудования установите переключатель MIC/LINE в положение LINE.
- 74 Микрофон (стр. 137)
- 75 Гнездо S VIDEO (стр. 44, 49, 105, 128, 189)
- 76 Гнездо VIDEO (стр. 44, 49, 105, 128, 189)
- 77 Гнездо AUDIO L/R (стр. 44, 105, 128, 135)
- 78 Гнездо DV IN/OUT (стр. 107, 130, 190)  
Знак "i.LINK" является торговой маркой корпорации Sony и указывает на то, что продукция соответствует техническим условиям стандартов IEEE 1394-1995 и их дополнениям.  
Гнездо DV IN/OUT совместимо с каналом передачи сигналов i.LINK.
- 79 Гнездо LANC  
LANC обозначает систему канала местного управления. Гнездо управления LANC используется для контроля за перемещением ленты видеополосы и подключенных к ней периферийных устройств. Данное гнездо имеет такую же функцию, как и разъемы, обозначенные CONTROL L или REMOTE.
- 80 Гнездо (головные телефоны)  
Если используются головные телефоны, громкоговоритель на видеокамере отключается.

Quick Reference / Оперативный справочник

251


252

## Identifying the parts and controls

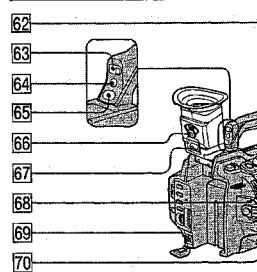

- 62 Carrying handle
- 63 Remote sensor
- 64 Camera recording lamp (p. 22)
- 65 CUSTOM PRESET button (p. 75)
- 66 Viewfinder adjustment lever (p. 28)
- 67 Hook for removing the viewfinder (p. 235)
- 68 EJECT switch (p. 20)
- 69 DC IN jack (p. 14)
- 70 Tripod receptacle  
Make sure that the length of the tripod screw is less than 6.5 mm (9/32 inch). Otherwise, you cannot attach the tripod securely and the screw may damage your camcorder.
- 71 Intelligent accessory shoe
- 72 MIC/LINE switch (p. 135)

## Обозначение частей и регуляторов

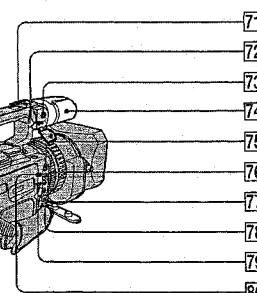


- 71 Ручка для переноски
- 72 Датчик дистанционного управления
- 73 Лампочка записи видеокамерой (стр. 22)
- 74 Кнопка CUSTOM PRESET (стр. 75)
- 75 Рычажок регулировки видоискателя (стр. 28)
- 76 Крючок для снятия видоискателя (стр. 235)
- 77 Переключатель EJECT (стр. 20)
- 78 Гнездо DC IN (стр. 14)
- 79 Гнездо для штатива  
Убедитесь, что длина винта штатива не превышает 6,5 мм. В противном случае Вы не сможете надежно прикрепить штатив, а винт может повредить видеокамеру.
- 71 Держатель для вспомогательных принадлежностей
- 72 Переключатель MIC/LINE (стр. 135)

## Identifying the parts and controls

### Remote Commander

The buttons that have the same name on the Remote Commander as on your camcorder function identically to the buttons on your camcorder.

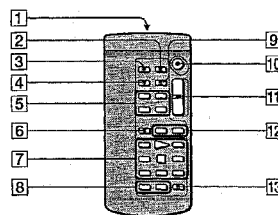

- 1 Transmitter  
Point toward the remote sensor to control your camcorder after turning on your camcorder.
- 2 ZERO SET MEMORY button (p. 91)
- 3 PHOTO button (p. 46, 177)
- 4 DISPLAY button (p. 39)
- 5 Memory control buttons (p. 184, 193)
- 6 SEARCH MODE button (p. 93, 95, 97, 99)
- 7 Video control buttons (p. 42)
- 8 REC button (p. 128)/MARK button (p. 121)
- 9 DATA CODE button (p. 39)
- 10 START/STOP button (p. 22)
- 11 Power zoom button (p. 29)
- 12 I<<</>>>I buttons (p. 93, 95, 97, 99)
- 13 AUDIO DUB button (p. 138)

## Обозначение частей и регуляторов


### Пульт дистанционного управления

Кнопки пульта дистанционного управления, которые имеют одинаковые наименования с кнопками на видеокамере, функционируют идентично.

- 1 Передатчик  
Для управления видеокамерой направляйте пульт на датчик после ее включения.
- 2 Кнопка ZERO SET MEMORY (стр. 91)
- 3 Кнопка PHOTO (стр. 46, 177)
- 4 Кнопка DISPLAY (стр. 39)
- 5 Кнопки управления памятью (стр. 184, 193)
- 6 Кнопка SEARCH MODE (п. 93, 95, 97, 99)
- 7 Кнопки видеоконтроля (стр. 42)
- 8 Кнопка REC (стр. 128)/кнопка MARK (стр. 121)
- 9 Кнопка DATA CODE (стр. 39)
- 10 Кнопка START/STOP (стр. 22)
- 11 Кнопка привода трансфокатора (стр. 29)
- 12 Кнопки I<<</>>>I (стр. 93, 95, 97, 99)
- 13 Кнопка AUDIO DUB (стр. 138)

## Identifying the parts and controls


**To prepare the Remote Commander**  
Insert two R6 (size AA) batteries by matching the + and - polarities on the batteries to the + - marks inside the battery compartment.

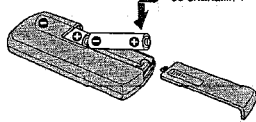

### Notes on the Remote Commander

- Point the remote sensor away from strong light sources such as direct sunlight or overhead lighting. Otherwise, the Remote Commander may not function properly.
- Your camcorder works in the commander mode VTR 2. Commander modes 1, 2 and 3 are used to distinguish your camcorder from other Sony VCRs to avoid remote control misoperation. If you use another Sony VCR in the commander mode VTR 2, we recommend changing the commander mode or covering the sensor of the VCR with black paper.

### Display window



- 1 Remaining battery time indicator (p. 14)/Tape counter (p. 91)/Memory counter (p. 194)/Time code indicator (p. 31)/Self-diagnosis indicator (p. 222)
- 2 FULL charge indicator (p. 14)
- 3 Remaining battery indicator (p. 14)

## Обозначение частей и регуляторов

**Для подготовки пульта дистанционного управления**  
Вставьте две батарейки R6 (размера AA), соблюдая полярность + и - со знаками + - внутри отсека для батареек.

### Применения по пульту дистанционного управления


- Держите дистанционный датчик на расстоянии от сильных источников света, например прямых солнечных лучей или лампы проектора. В противном случае дистанционное управление может не действовать.
- Данная видеокамера работает в режиме пульта дистанционного управления VTR 2. Режимы пульта дистанционного управления 1, 2 и 3 используются для отличия данной видеокамеры от других видеоматричных фирм Sony во избежание неправильной работы пульта дистанционного управления. Если используется другой видеоматричный фирм Sony, рекомендуется изменить режим пульта дистанционного управления или закрыть датчик дистанционного управления видеоматричного черного бумагой.

### Окношко дисплея

- 1 Индикатор оставшегося заряда батарейного блока (стр. 14)/Счетчик ленты (стр. 91)/Индикатор кода времени (стр. 31)/Индикатор самодиагностики (стр. 229)
- 2 Индикатор зарядки FULL (стр. 14)
- 3 Индикатор оставшегося заряда (стр. 14)

## Identifying the parts and controls

### Operation indicators

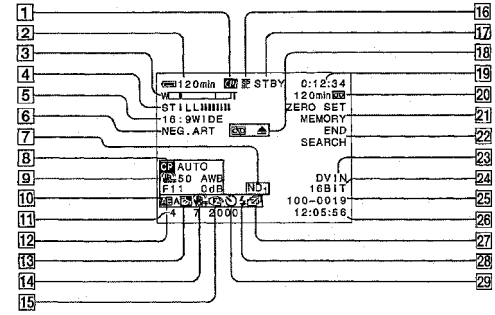

- 1 Cassette memory indicator (p. 210)
- 2 Remaining battery time indicator (p. 31)
- 3 Zoom indicator (p. 29)/Exposure indicator (p. 63)/Data file name indicator (p. 170)
- 4 Digital effect indicator (p. 58)/FADER indicator (p. 54)/MEMORY MIX indicator (p. 184)
- 5 16:9WIDE indicator (p. 53)/PROG. SCAN indicator (p. 50)
- 6 Picture effect indicator (p. 56)
- 7 ND filter indicator (p. 66)
- 8 Custom preset indicator (p. 75)
- 9 Data code indicator (p. 40)

## Обозначение частей и регуляторов

### Рабочие индикаторы

- 1 Индикатор кассетной памяти (стр. 210)
- 2 Индикатор оставшегося заряда батарейного блока (стр. 31)
- 3 Индикатор трансформатора (стр. 29)/Индикатор экспозиции (стр. 63)/Индикатор названия данных (стр. 170)
- 4 Индикатор цифрового эффекта (стр. 58)/Индикатор FADER (стр. 54)/Индикатор MEMORY MIX (стр. 184)
- 5 Индикатор режима 16:9WIDE (стр. 53)/Индикатор PROG. SCAN (стр. 50)
- 6 Индикатор эффекта изображения (стр. 56)
- 7 Индикатор фильтра ND (стр. 66)
- 8 Индикатор индивидуальной настройки (стр. 75)
- 9 Индикатор кода данных (стр. 40)

## Identifying the parts and controls

- 10 LCD bright indicator (p. 26)/Volume indicator (p. 38)
- 11 Date indicator
- 12 PROGRAM AE indicator (p. 77)
- 13 Backlight indicator (p. 32)/Spot light indicator (p. 33)
- 14 SteadyShot OFF indicator (p. 156)
- 15 Manual focus/Infinity indicator (p. 81)
- 16 Recording mode indicator (p. 159)
- 17 Standby/Recording indicator (p. 22)/Video control mode indicator (p. 42)/Image quality mode indicator (p. 174)
- 18 Warning indicators (p. 230)
- 19 Tape counter indicator (p. 91)/Time code indicator (p. 31)/Self-diagnosis indicator (p. 222)/Photo mode indicator (p. 45)/Image number indicator (p. 194)
- 20 Remaining tape indicator (p. 31)/Memory playback indicator (p. 194)
- 21 ZERO SET MEMORY indicator (p. 91)/FRAME REC indicator (p. 87)/Interval recording indicator (p. 84)
- 22 END SEARCH indicator (p. 36)
- 23 DV IN indicator (p. 131)/A/V—DV OUT indicator
- 24 Audio mode indicator (p. 159)
- 25 Data file name indicator  
This indicator appears when the MEMORY MIX function works.
- 26 Audio input level/Time indicator
- 27 Continuous mode indicator (p. 179)
- 28 Video flash ready indicator  
This indicator appears when you use the video flash light (not supplied).
- 29 Self-timer indicator (p. 34)

## Обозначение частей и регуляторов

- 10 Индикатор яркости ЖКД (стр. 26)/Индикатор громкости (стр. 38)
- 11 Индикатор даты
- 12 Индикатор PROGRAM AE (стр. 77)
- 13 Индикатор задней подсветки (стр. 32)/Индикатор проекторного освещения (стр. 33)
- 14 Индикатор выключенной устойчивой съемки (стр. 162)
- 15 Индикатор ручной фокусировки / бесконечности (стр. 81)
- 16 Индикатор режима записи (стр. 159)
- 17 Индикатор ожидания/записи (стр. 22)/Индикатор режима видеоконтроля (стр. 42)/Индикатор режима качества изображения (стр. 174)
- 18 Предупреждающие индикаторы (стр. 230)
- 19 Индикатор счетчика ленты (стр. 91)/Индикатор кода времени (стр. 31)/Индикатор самодиагностики (стр. 222)/Индикатор фоторежима (стр. 45)/Индикатор номера изображения (стр. 194)
- 20 Индикатор оставшейся ленты (стр. 31)/Индикатор воспроизведения из памяти (стр. 194)
- 21 Индикатор ZERO SET MEMORY (стр. 91)/Индикатор FRAME REC (стр. 87)/Индикатор записи с интервалами (стр. 84)
- 22 Индикатор END SEARCH (стр. 36)
- 23 Индикатор DV IN (стр. 131)/Индикатор A/V—DV OUT
- 24 Индикатор автоматического режима (стр. 159)
- 25 Индикатор названия файла данных  
Этот индикатор появляется во время работы функции MEMORY MIX.
- 26 Индикатор уровня аудиосигнала на входе/времени
- 27 Индикатор непрерывного режима данных (стр. 179)
- 28 Индикатор готовности видеовспышки  
Этот индикатор появляется при использовании видеовспышки (не входит в комплект).
- 29 Индикатор таймера самозапуска (стр. 34)

## English

## Quick Function Guide

### Functions to adjust exposure (in the recording mode)

- In insufficient light Low lux mode (p. 77)
- In dark environments such as sunset, fireworks, or general night views Sunset & moon mode (p. 77)
- Shooting backlit subjects BACK LIGHT (p. 32)
- In spotlight, such as at the theater or a formal event SPOT LIGHT (p. 39)

### Functions to give images more impact (in the recording mode)

- Smooth transition between scenes FADER (p. 54)
- Taking a still picture PHOTO (p. 46, 177)
- Digital processing of images PICTURE EFFECT (p. 56)/DIGITAL EFFECT (p. 58)
- Superimposing a title TITLE (p. 141)

### Functions to give a natural appearance to your recordings (in the recording mode)

- Preventing deterioration of picture quality in digital zoom D ZOOM [MENU] (p. 154)
- Focusing manually Manual focus (p. 81)
- Recording fast-moving subjects Sports lesson mode (p. 77)

### Functions to be used in editing (in the recording mode)


- Watching the picture on a wide-screen TV Wide mode (p. 53)
- Viewing images using a personal computer "Memory Stick" (p. 170)

### Functions to be used after recording (in the recording mode)

- Digital processing of recorded images PICTURE EFFECT (p. 102)/DIGITAL EFFECT (p. 103)
- Displaying the date/time or various settings when you recorded Data code (p. 40)
- Quickly locating a desired scene Zero set memory (p. 91)
- Searching for scenes having a title Title search (p. 95)
- Searching for scenes recorded in the photo mode Photo search (p. 99)
- Scanning scenes recorded in the photo mode Photo scan (p. 101)
- Playing back monaural sound or sub sound HIFI SOUND [MENU] (p. 154)

## SECTION 2 DISASSEMBLY

The following flow chart shows the disassembly procedure.

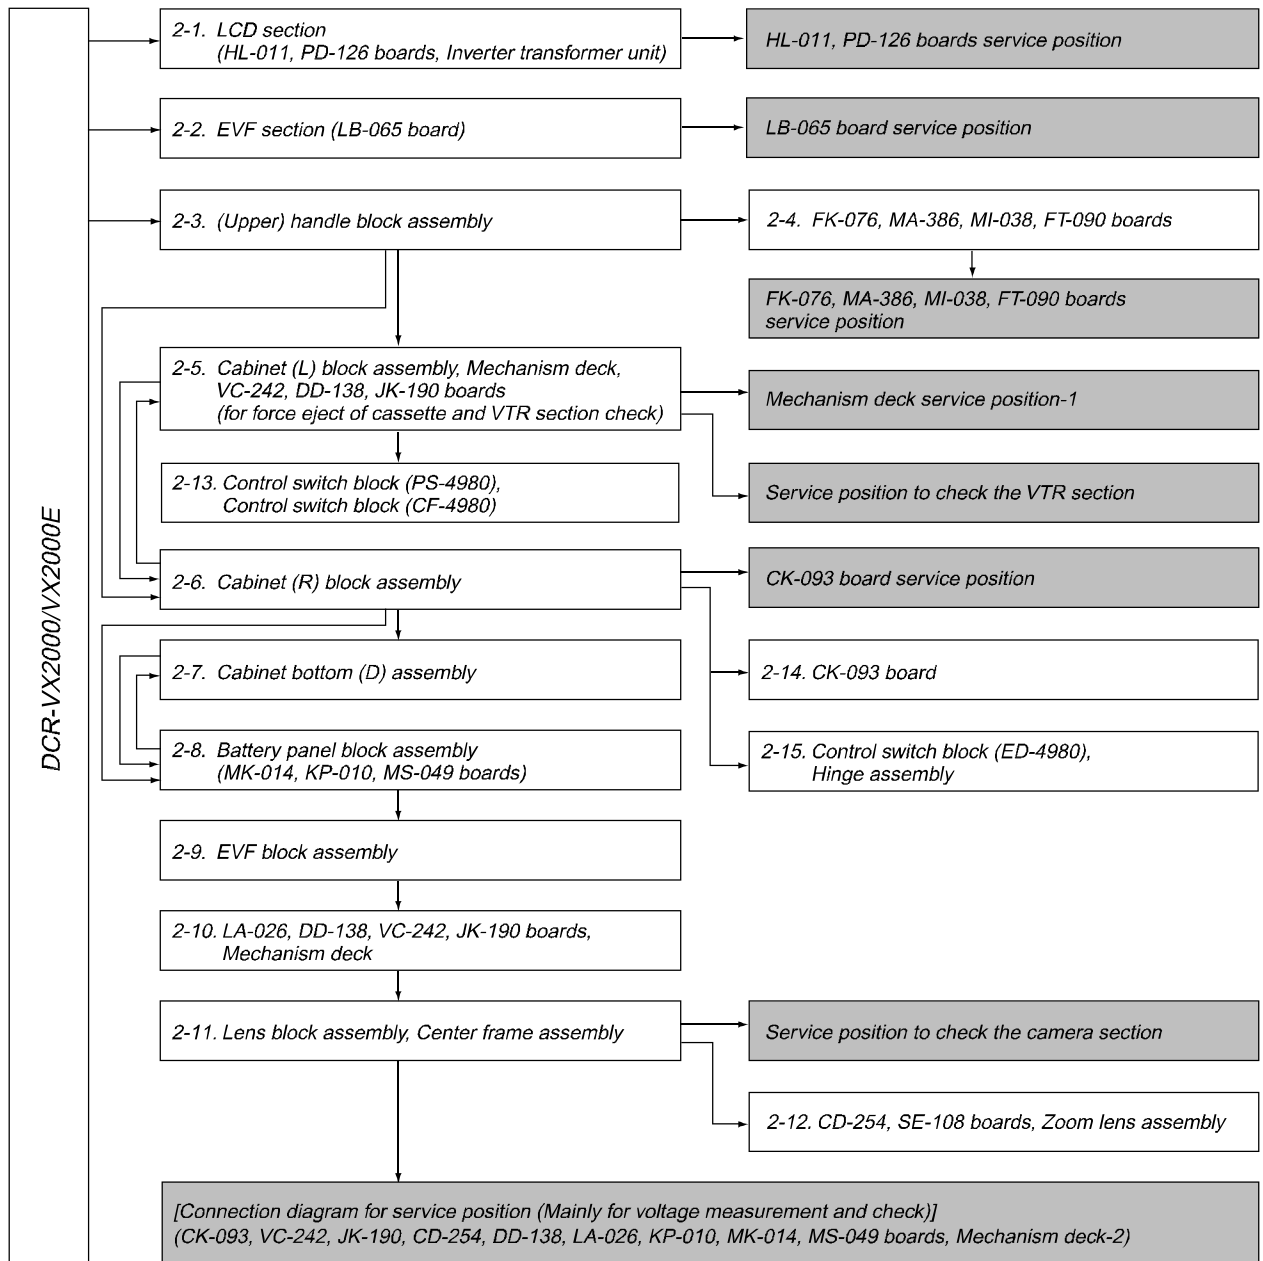

## 2-1. LCD SECTION (HL-011, PD-126 BOARDS, INVERTER TRANSFORMER UNIT)

④ Harness (CP-093) (8P)

② Two screws (M2 × 3), spring bolt

⑥ LCD frame, BL retainer, FP-196 flexible board

⑤ Harness (CP-094) (14P)

⑪ Remove the three solderings

⑬ PCB clip

⑩ Screw (M1.7 × 2.5), lock ace

① FP-195 flexible board (7P)

⑭ PCB clip

⑫ Back light (Cold cathode fluorescent tube)

⑧ P cabinet (M) assembly

⑨ Liquid crystal indicator module (24P)

③ Three claws

⑬ PCB clip

⑭ PCB clip


⑮ Remove the six solderings

⑯ Inverter transformer unit

⑰ PD-126 board

⑱ Remove the three solderings


⑲ Inverter transformer unit

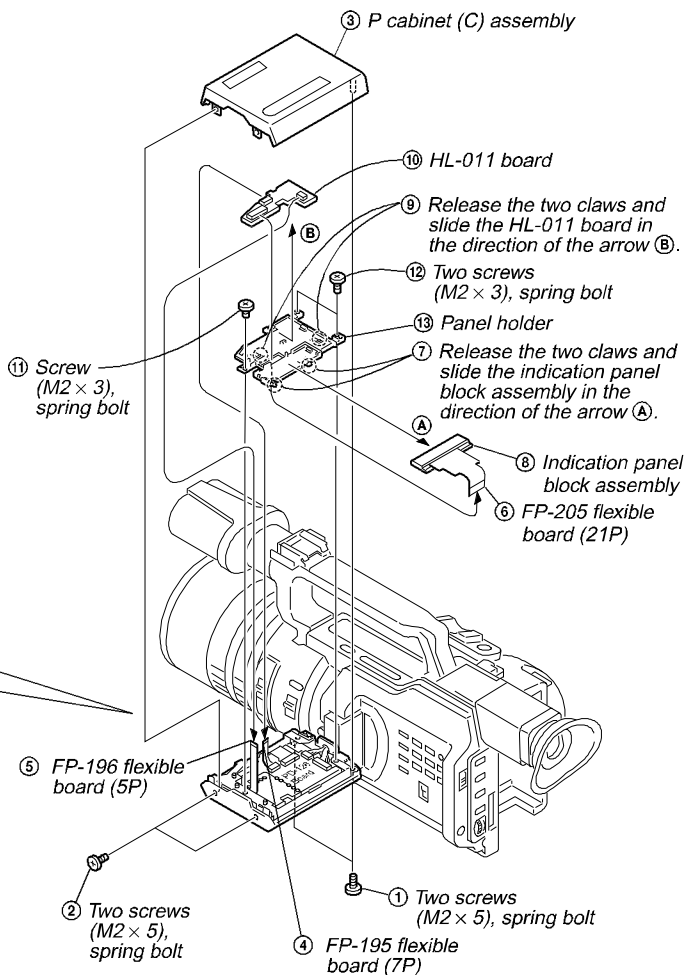


This exploded view diagram illustrates the internal components of the HP DesignJet 500C printer and their assembly connections. The components shown include:

- HL-011 board**: A small circuit board at the top left.
- Indication panel block assembly (21P)**: A component for status indication.
- Adjustment remote commander (RM-95)**: A small remote control device.
- LANC jack**: A connector for the LANC (Local Area Network Controller) interface.
- FP-196 flexible board (5P)**: A flexible circuit board with 5 pins.
- FP-195 flexible board (7P)**: A flexible circuit board with 7 pins.
- PD-126 board**: A main processing board.
- Inverter transformer unit**: A component for the printer's power system.
- CPC-13 jig (J-6082-443-A)**: A long, thin component, likely a cable or connector.
- AC POWER ADAPTOR**: A power supply unit with an **AC IN** connection.


Arrows indicate the assembly path and connection points for each component.

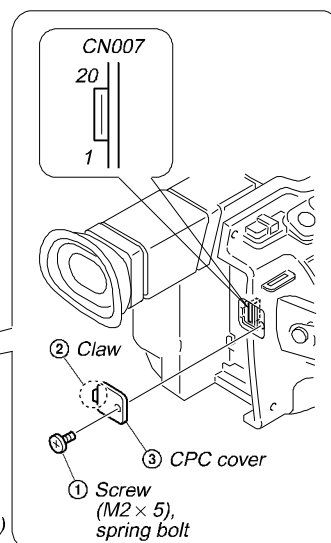


## 2-2. EVF SECTION (LB-065 BOARD)

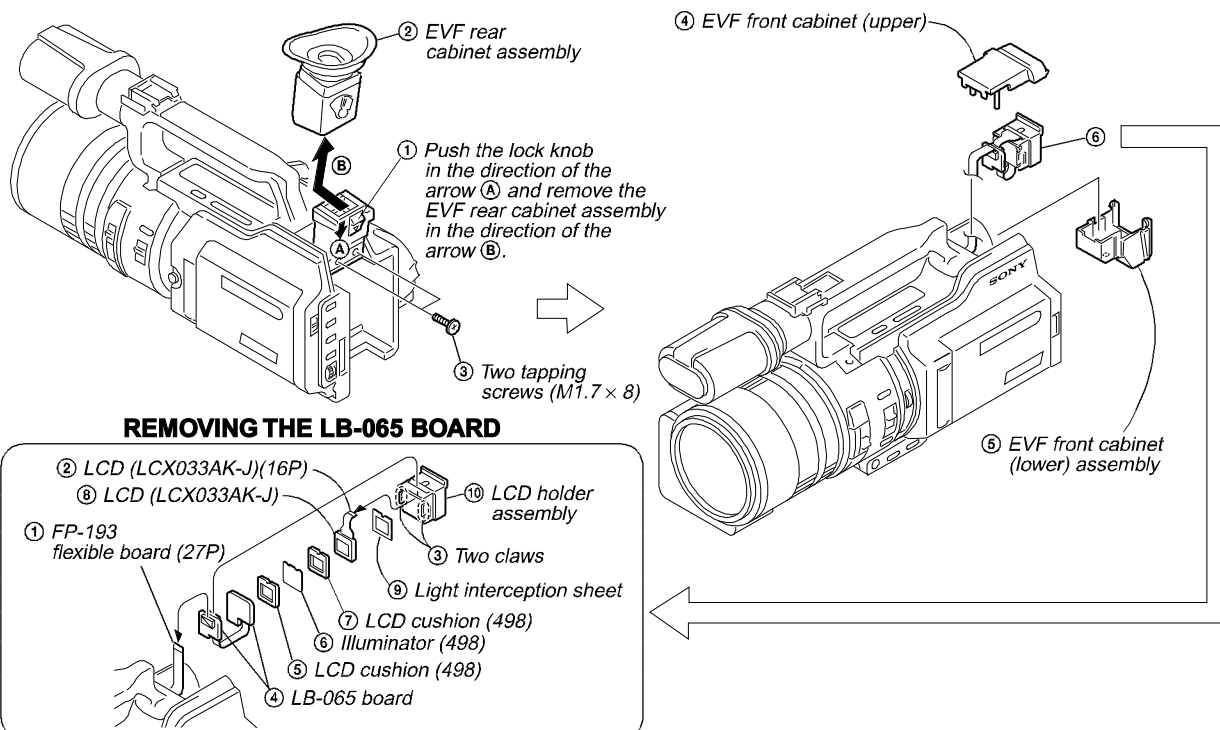


### [LB-065 BOARD SERVICE POSITION]

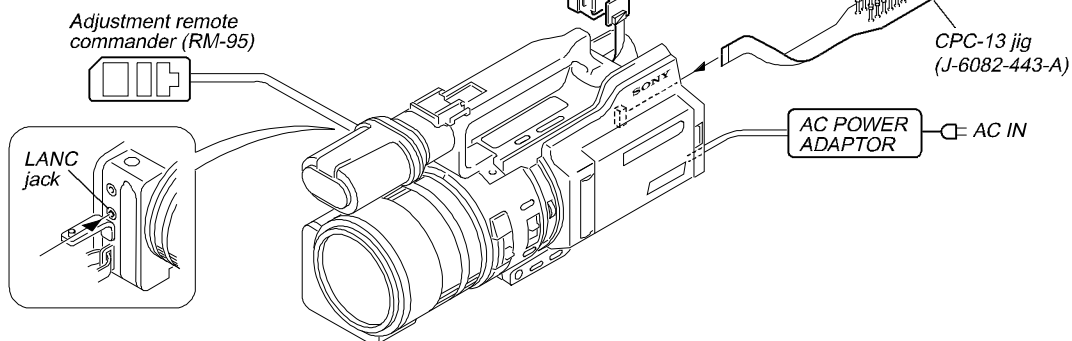


## 2-3. (UPPER) HANDLE BLOCK ASSEMBLY

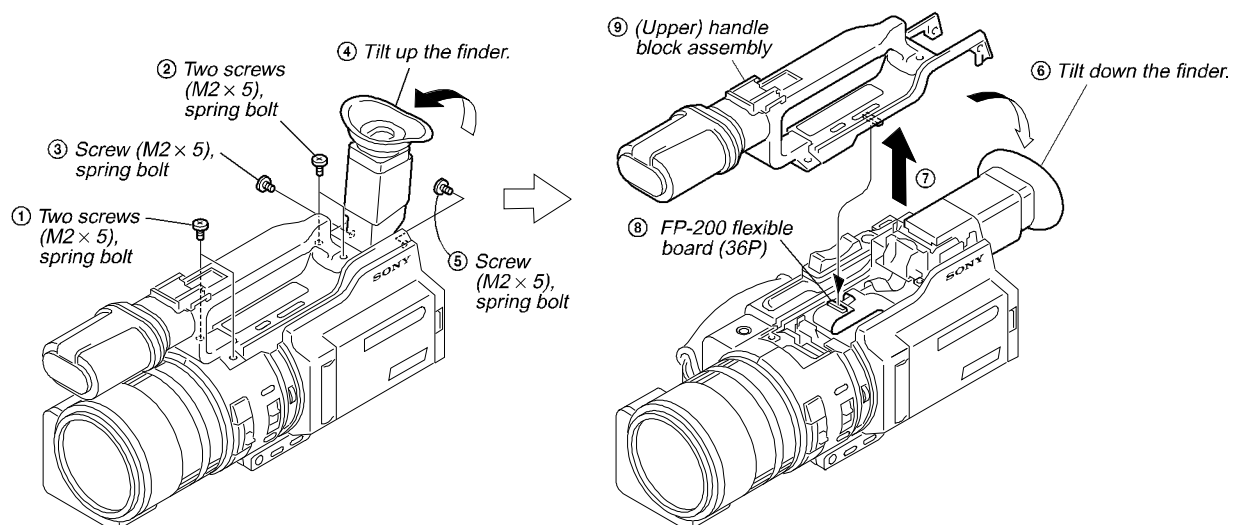


## 2-4. FK-076, MA-386, MI-038, FT-090 BOARDS

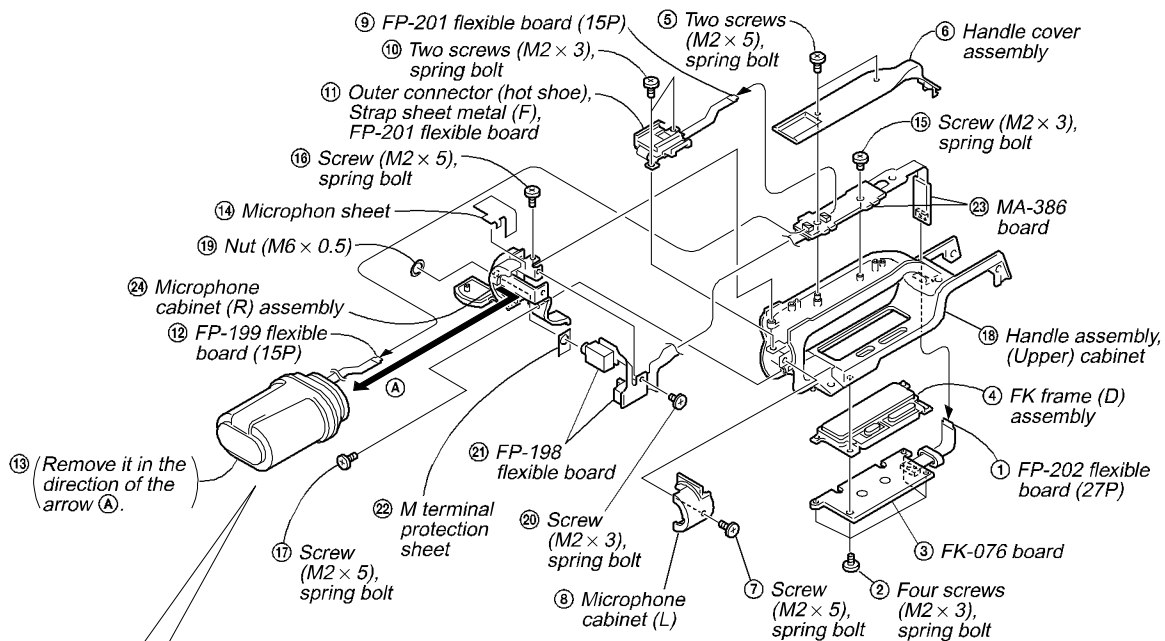


### REMOVING THE MI-038, FT-090 BOARDS

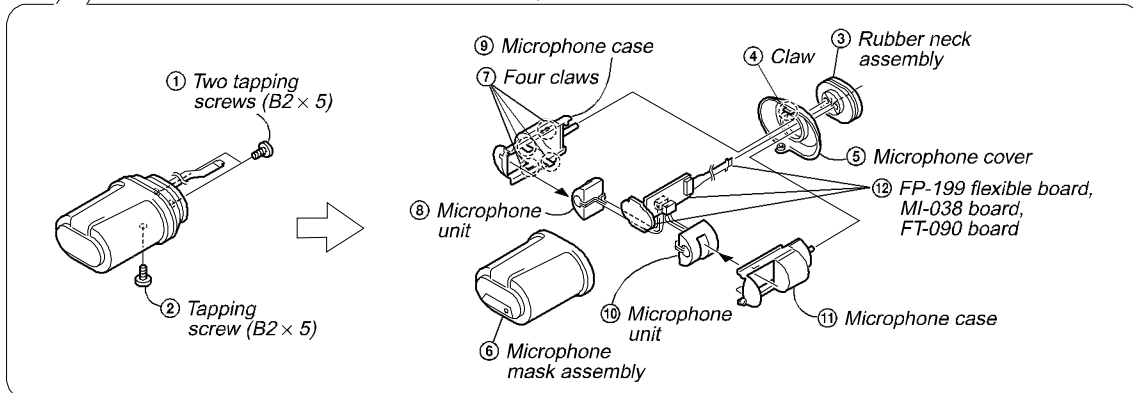

### [FK-076, MA-386, MI-038, FT-090 BOARDS SERVICE POSITION]

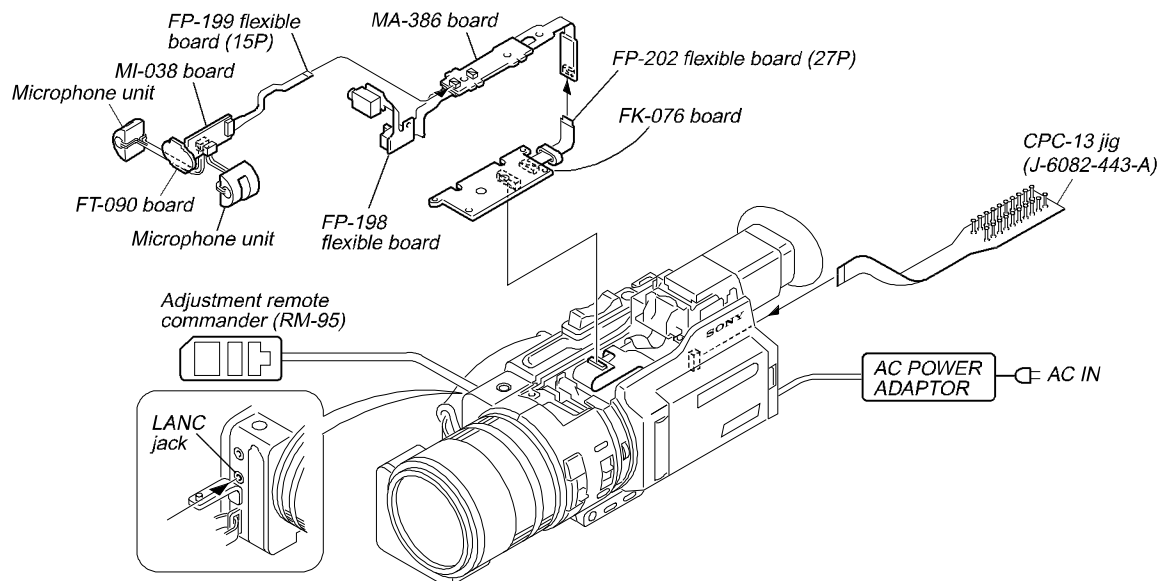


**2-5. CABINET (L) BLOCK ASSEMBLY, MECHANISM DECK,  
VC-242, DD-138, JK-190 BOARDS  
(FOR FORCE EJECT OF CASSETTE AND VTR SECTION CHECK)**

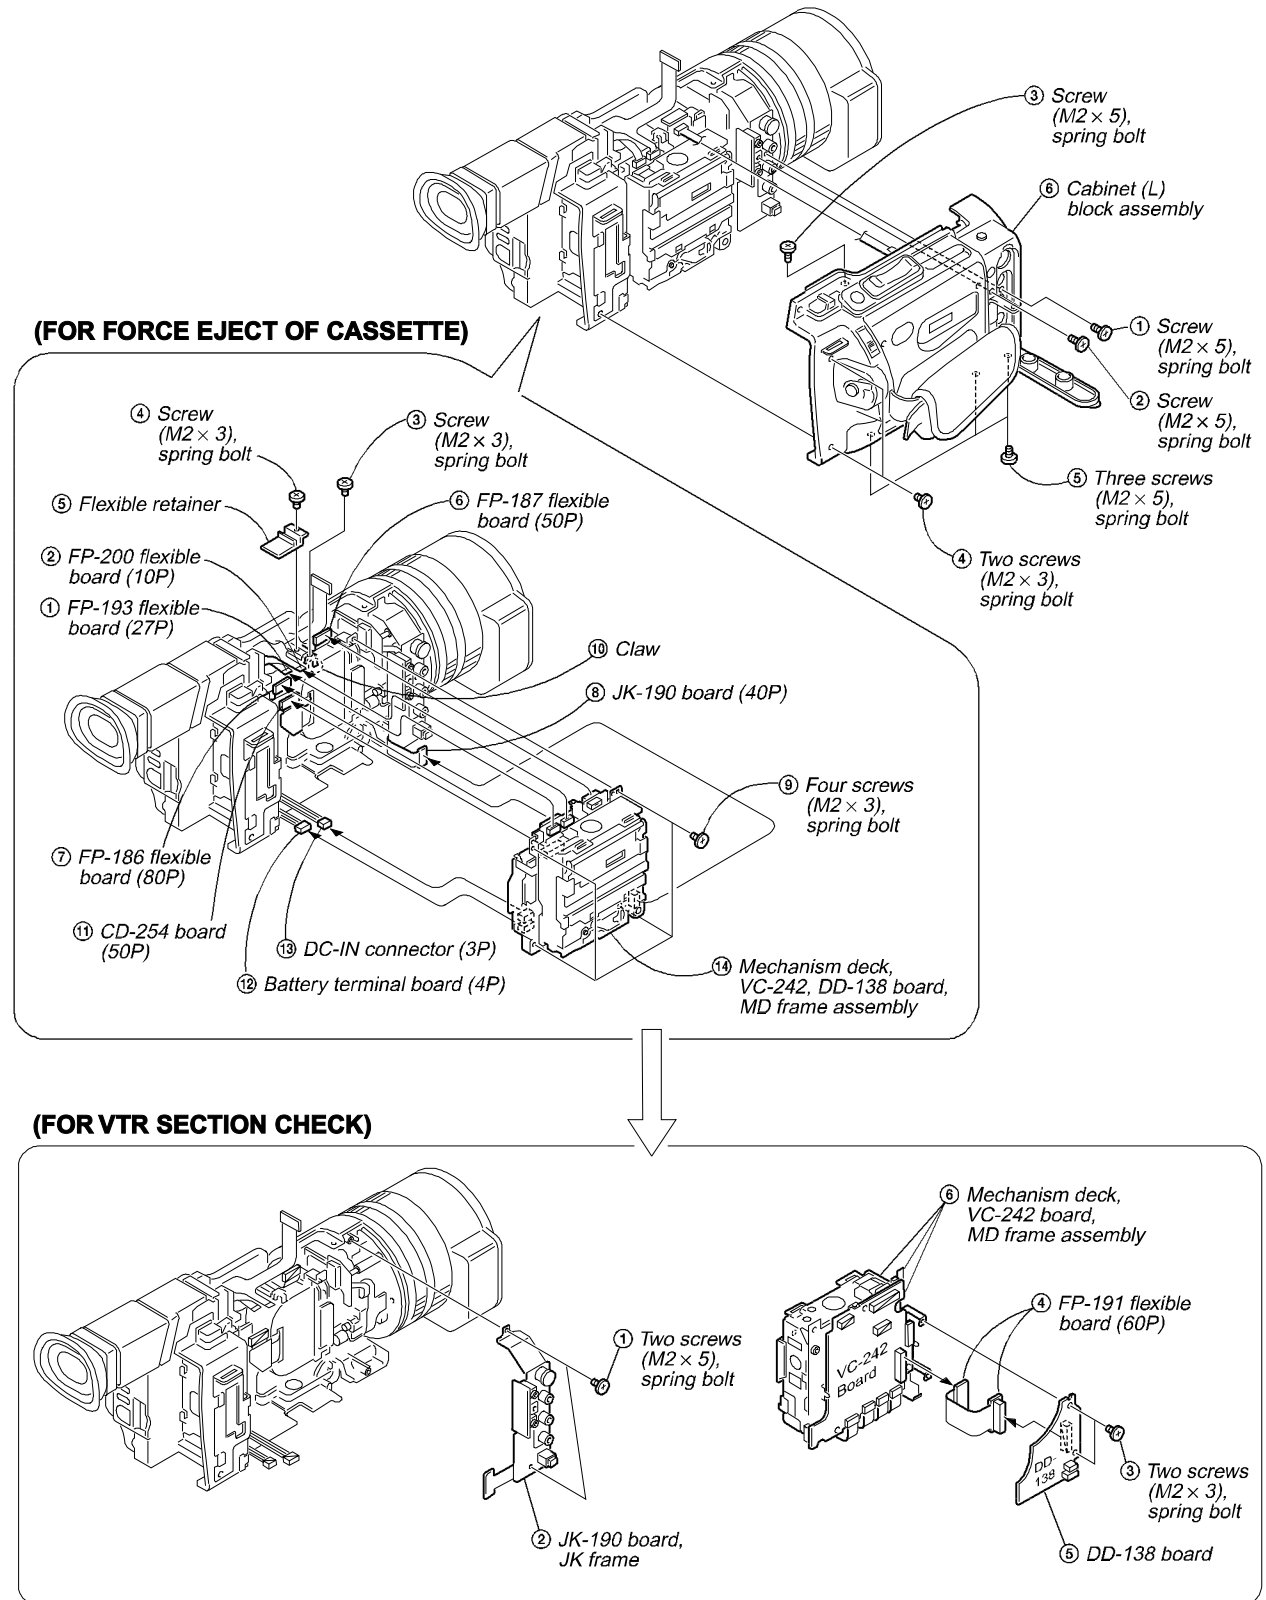



## [MECHANISM DECK SERVICE POSITION-1]

**Note:** Use the parts only which can be removed easily from outside of the mechanism deck.

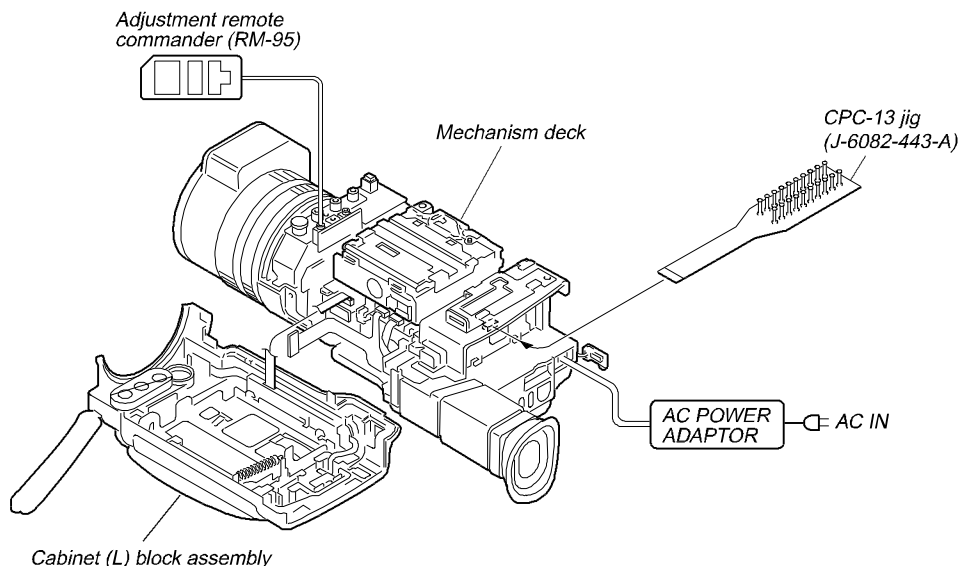

## [SERVICE POSITION TO CHECK THE VTR SECTION]

### Connection to Check the VTR Section

To check the VTR Section, set the VTR to the "forced VTR power ON" mode.


Operate the VTR functions using the adjustment remote commander (with the HOLD switch set in the OFF position) (However, connect the cabinet (L) assembly when cassette is going to be ejected only.)

### Setting the "Forced VTR Power ON" mode


- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: D, address: 10, set data: 02, and press the PAUSE button of the adjustment remote commander.

### Exiting the "Forced VTR Power ON" mode


- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: D, address: 10, set data: 00, and press the PAUSE button of the adjustment remote commander.
- 3) Select page: 0, address: 01, and set data: 00.

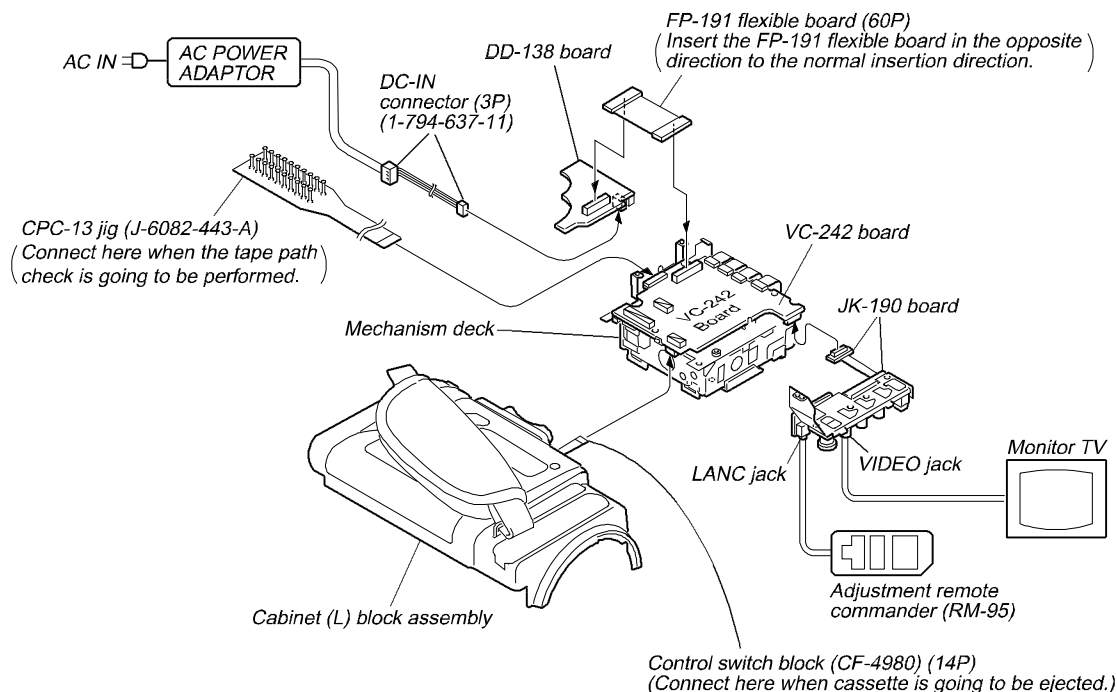


## 2-6. CABINET (R) BLOCK ASSEMBLY

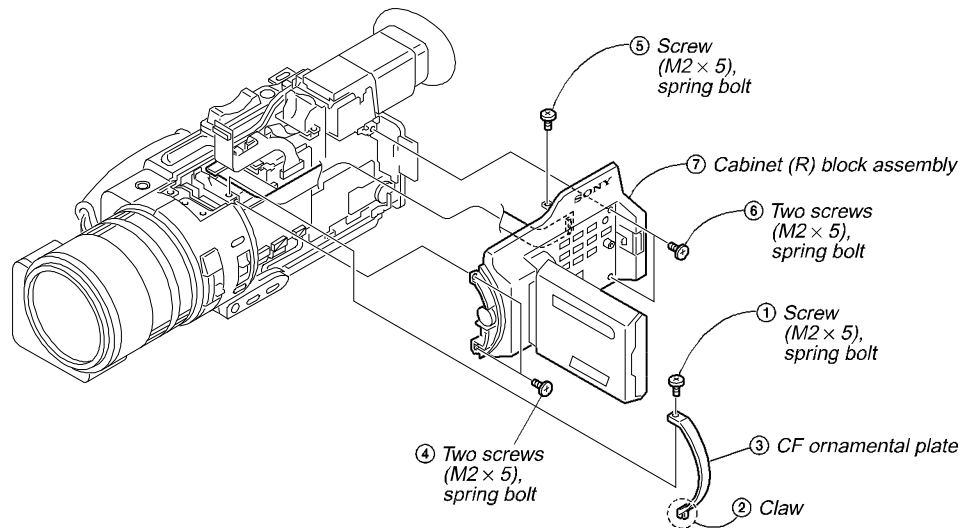


### [CK-093 BOARD SERVICE POSITION]

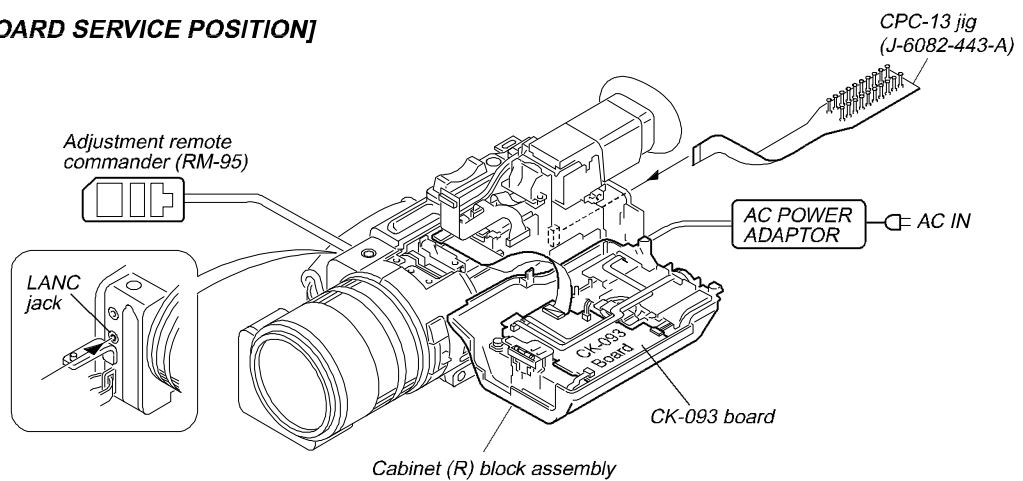


## 2-7. CABINET BOTTOM (D) ASSEMBLY

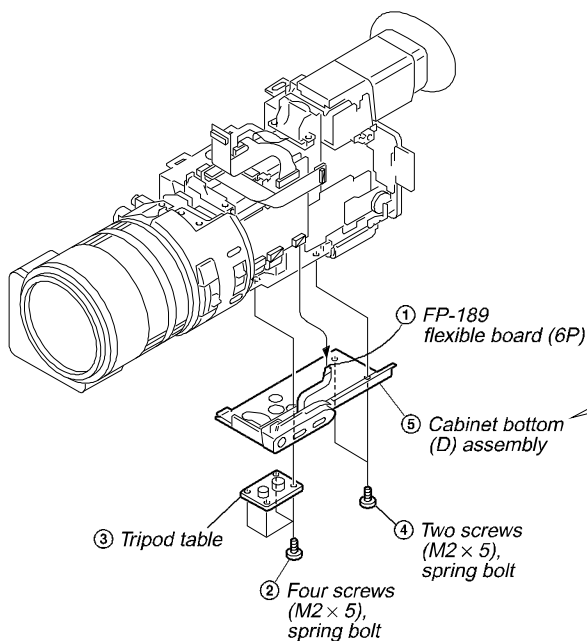


### REMOVING THE FBS COVER ASSEMBLY

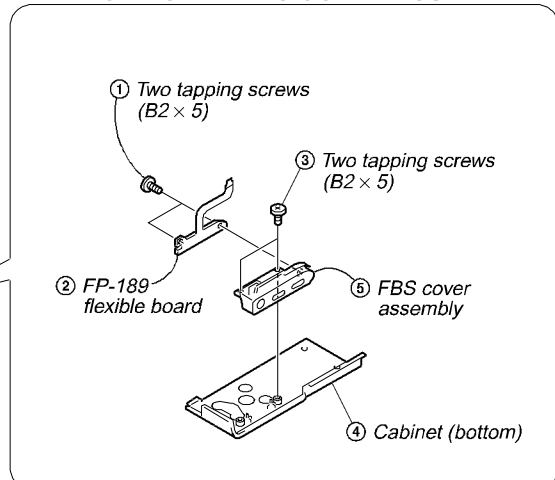


## 2-8. BATTERY PANEL BLOCK ASSEMBLY (MK-014, KP-010, MS-049 BOARDS)

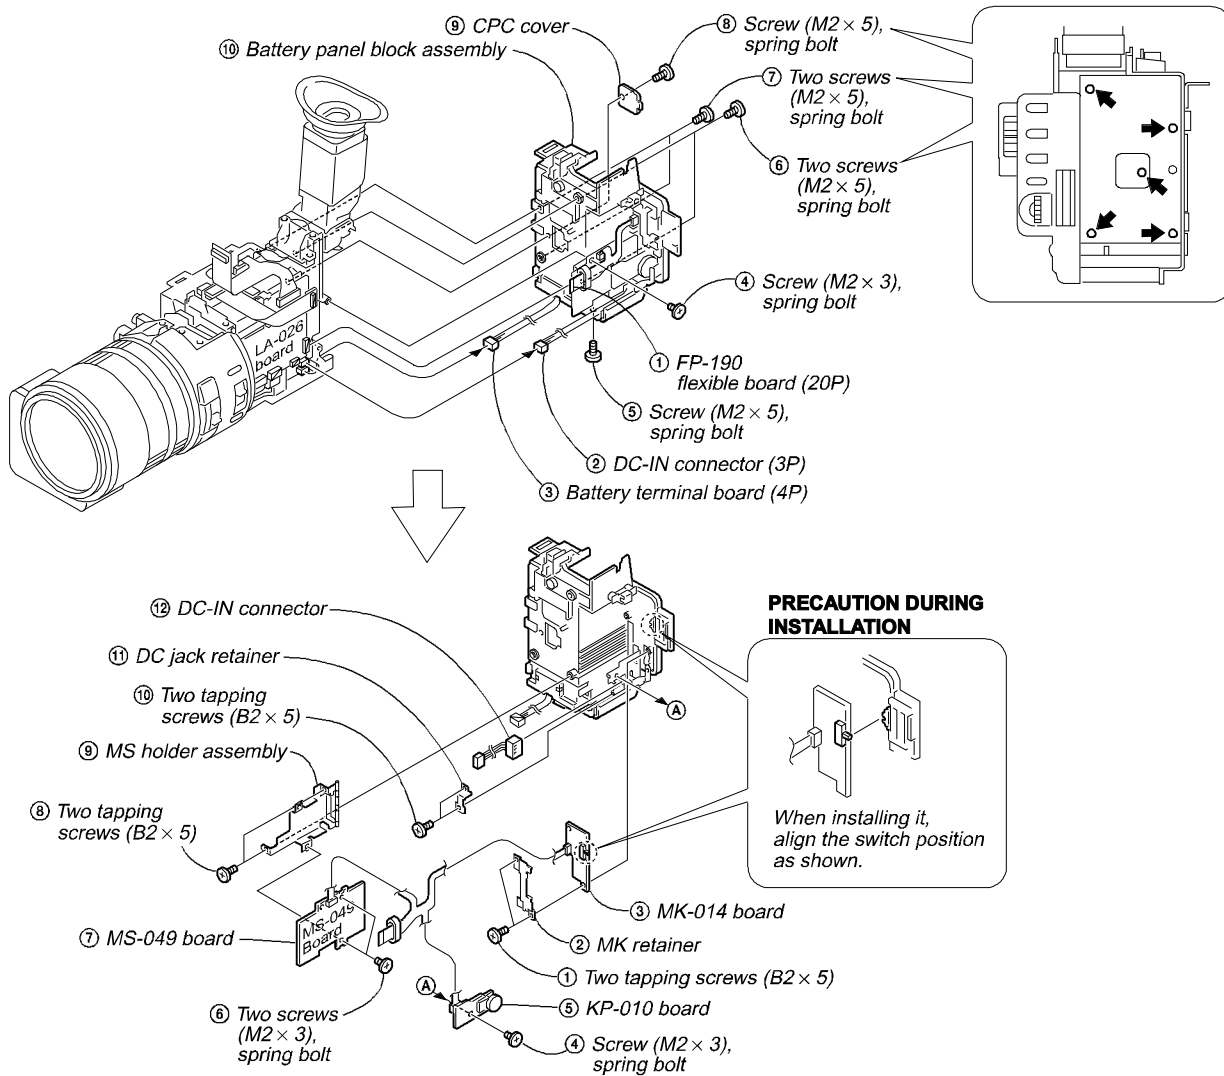


## 2-9. EVF BLOCK ASSEMBLY

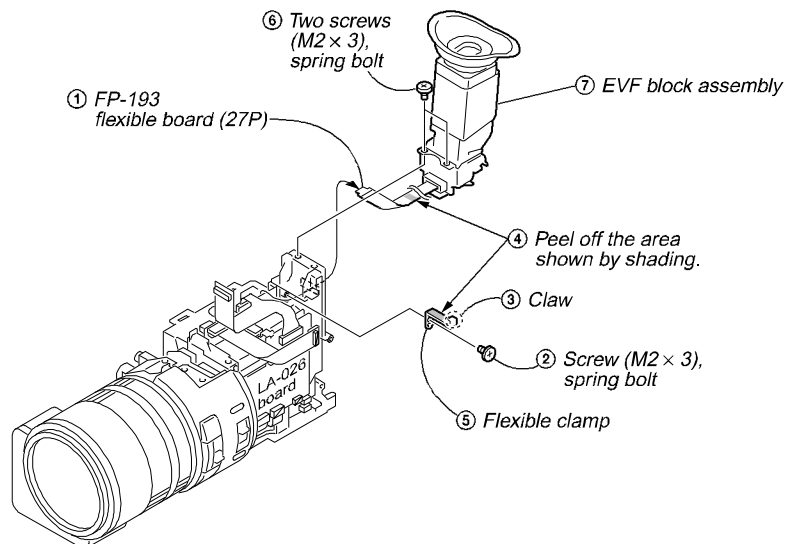

## 2-10.LA-026, DD-138, VC-242, JK-190 BOARDS, MECHANISM DECK

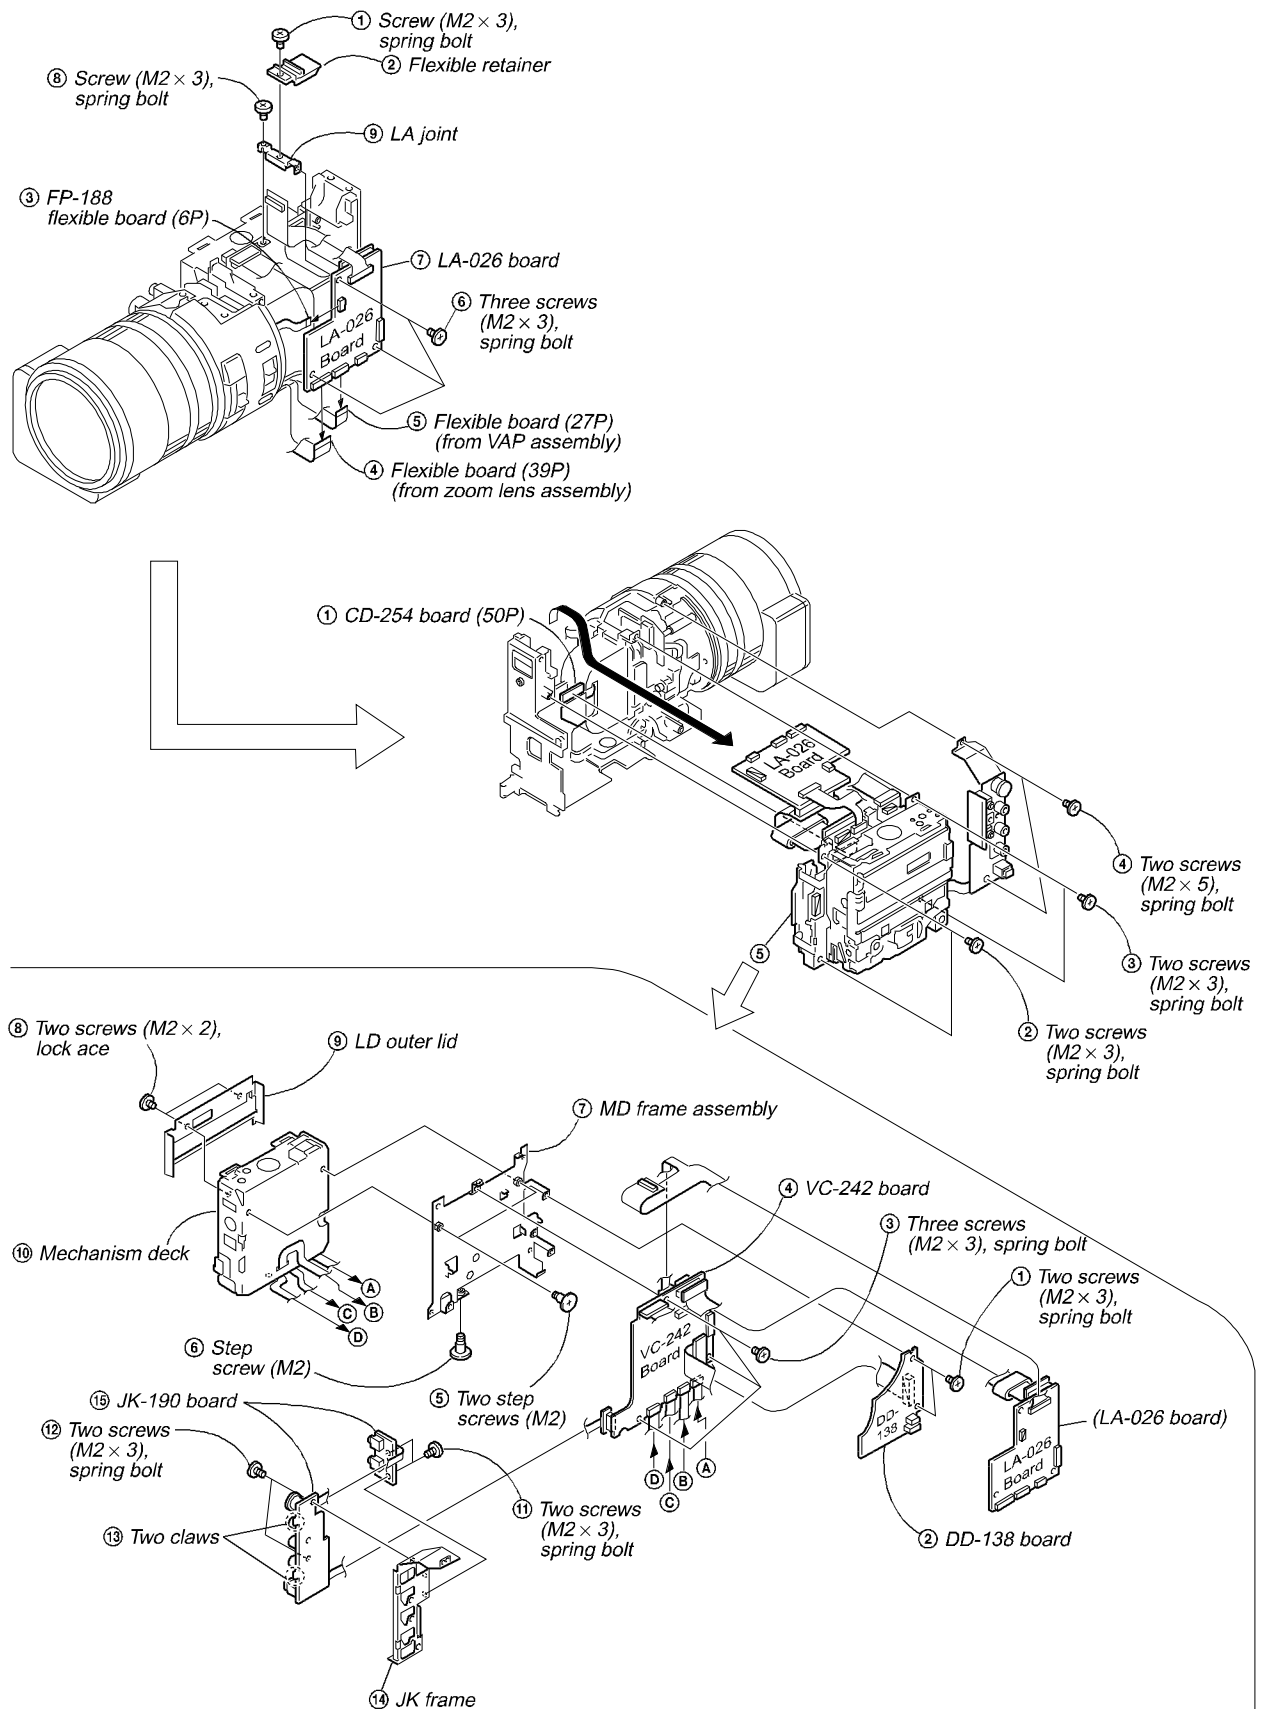

## 2-11.LENS BLOCK ASSEMBLY, CENTER FRAME ASSEMBLY

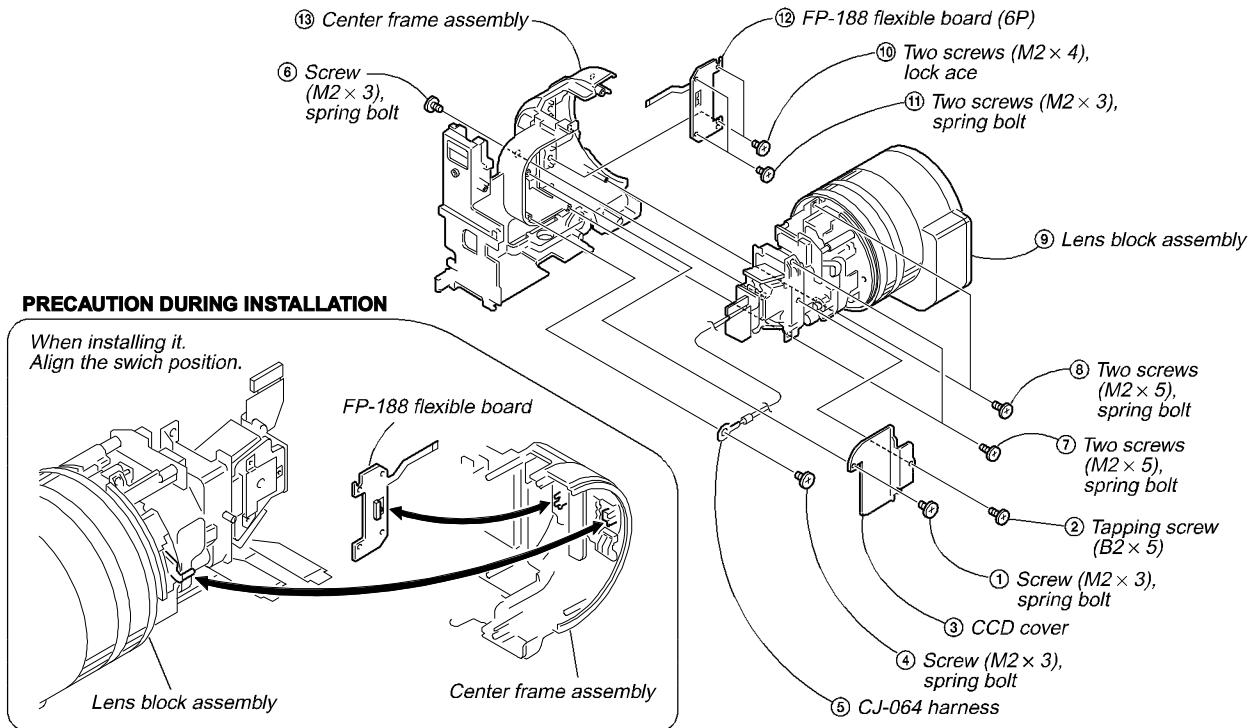

### [SERVICE POSITION TO CHECK THE CAMERA SECTION]

#### Connection to Check the CAMERA Section


To check the CAMERA Section, set the CAMERA to the "forced CAMERA power ON" mode.

##### Setting the "Forced CAMERA Power ON" mode


- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: D, address: 10, set data: 01, and press the PAUSE button of the adjustment remote commander.

##### Exiting the "Forced CAMERA Power ON" mode


- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: D, address: 10, set data: 00, and press the PAUSE button of the adjustment remote commander.
- 3) Select page: 0, address: 01, and set data: 00.

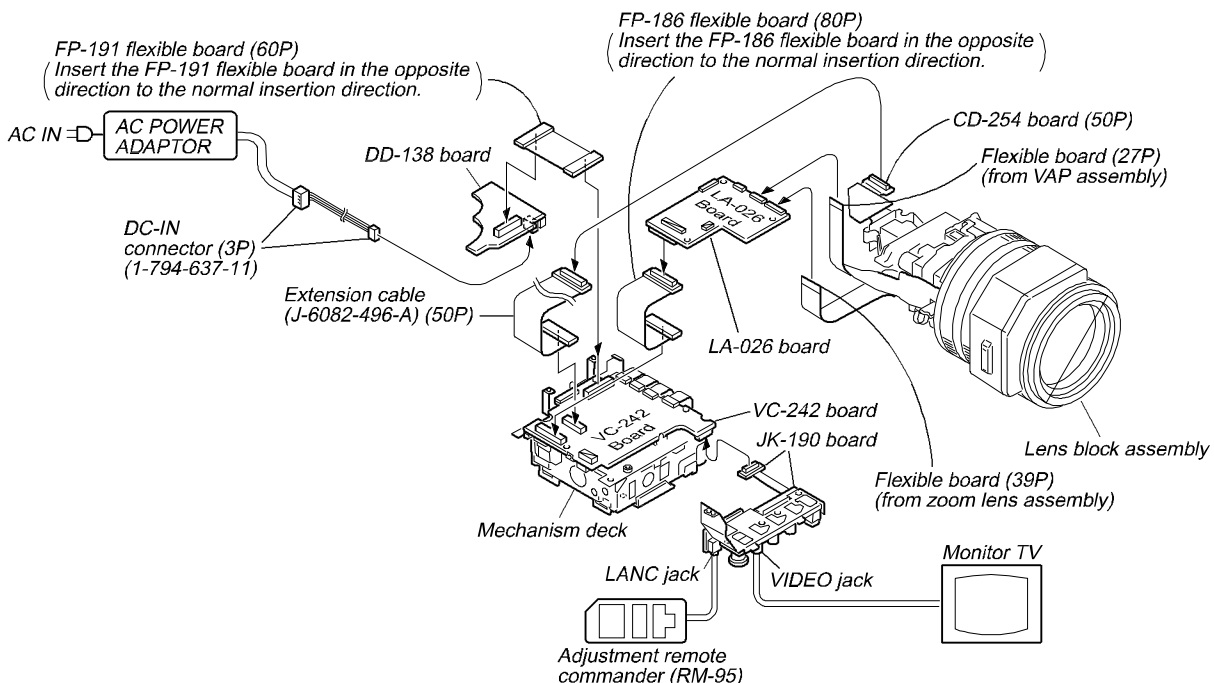


## 2-12. CD-254, SE-108 BOARDS, ZOOM LENS ASSEMBLY

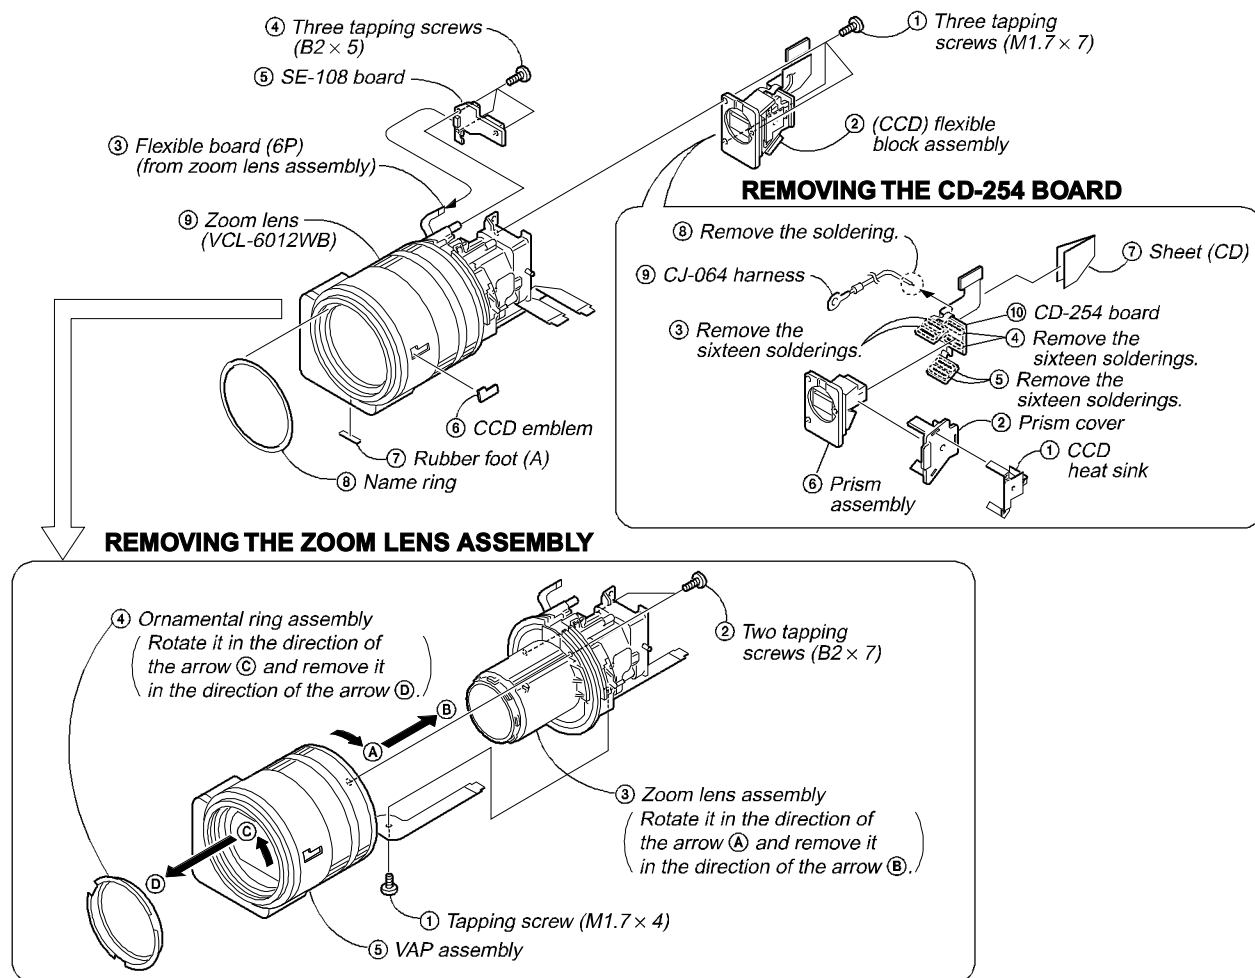

## 2-13. CONTROL SWITCH BLOCK (PS-4980), CONTROL SWITCH BLOCK (CF-4980)

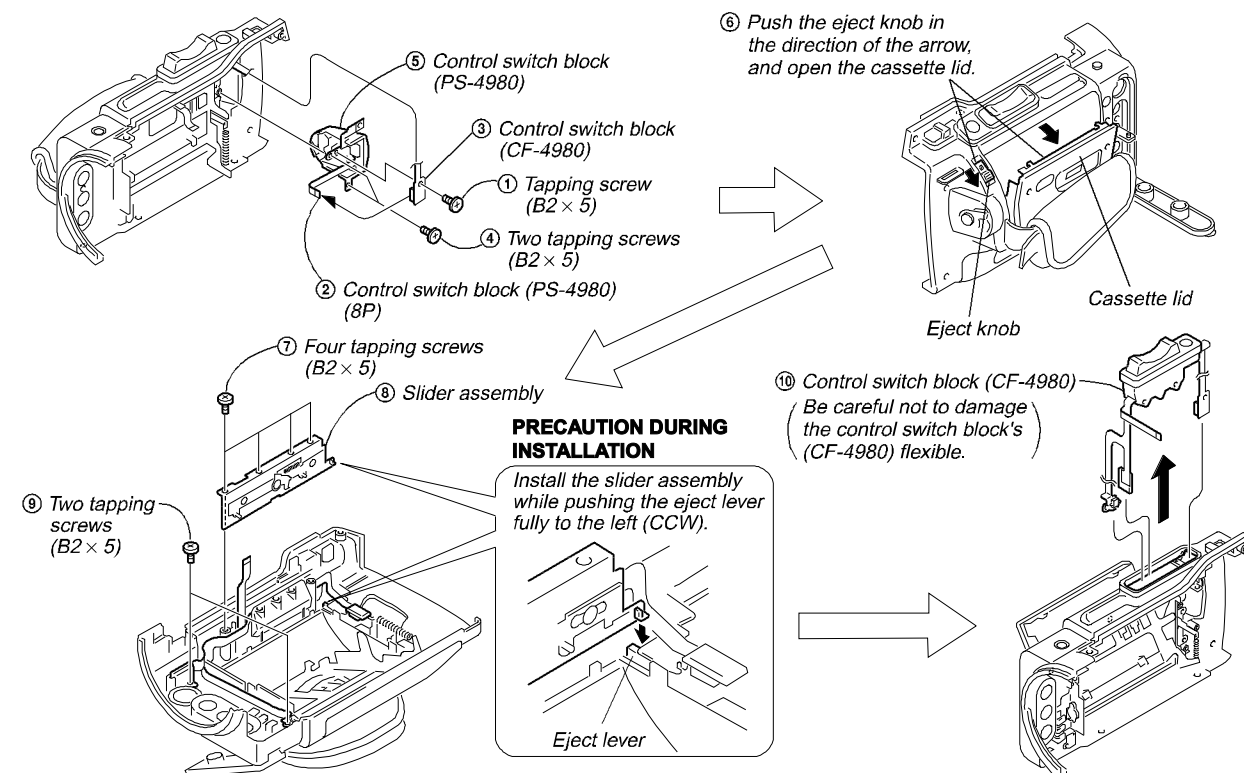


(CK-093, VC-242, JK-190, CD-254, DD-138, LA-026, KP-010, MK-014, MS-049 BOARDS, MECHANISM DECK-2)

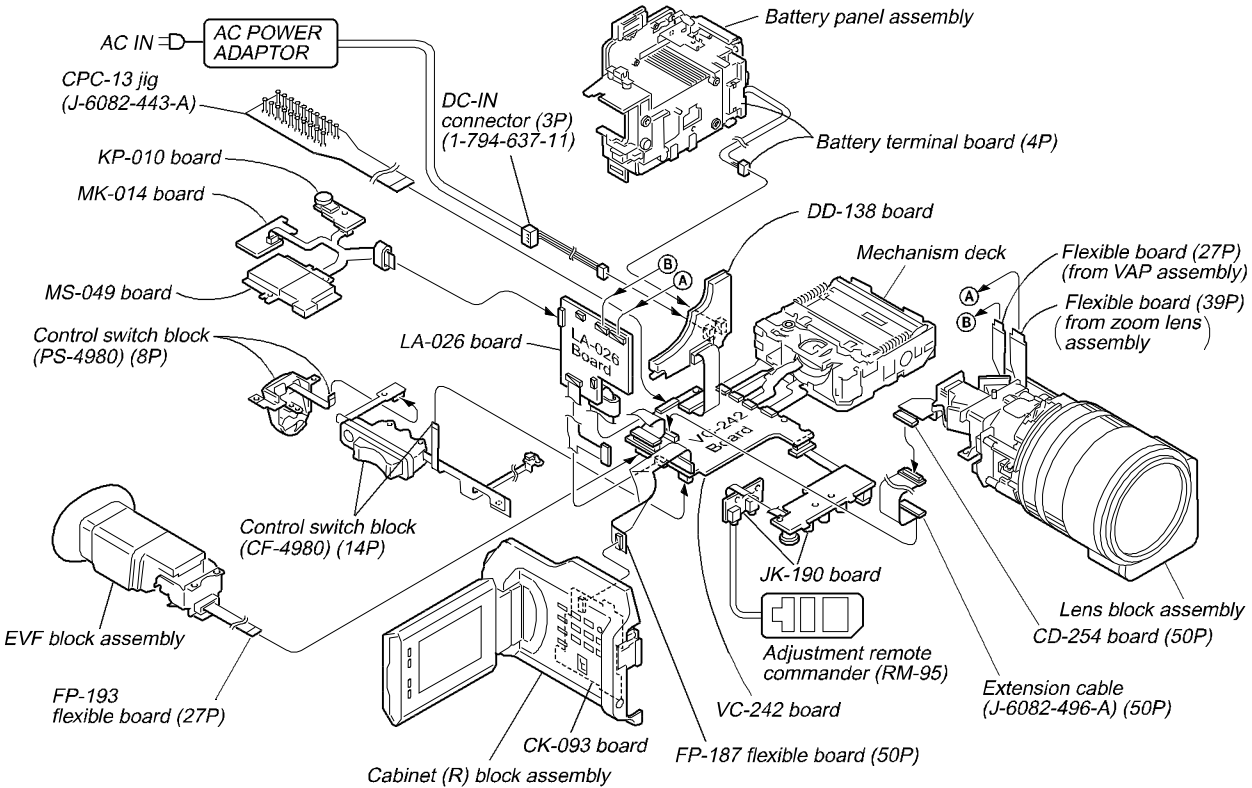

## 2-14. CK-093 BOARD


## PRECAUTION DURING INSTALLATION

*When installing it.  
Align the switch position.*

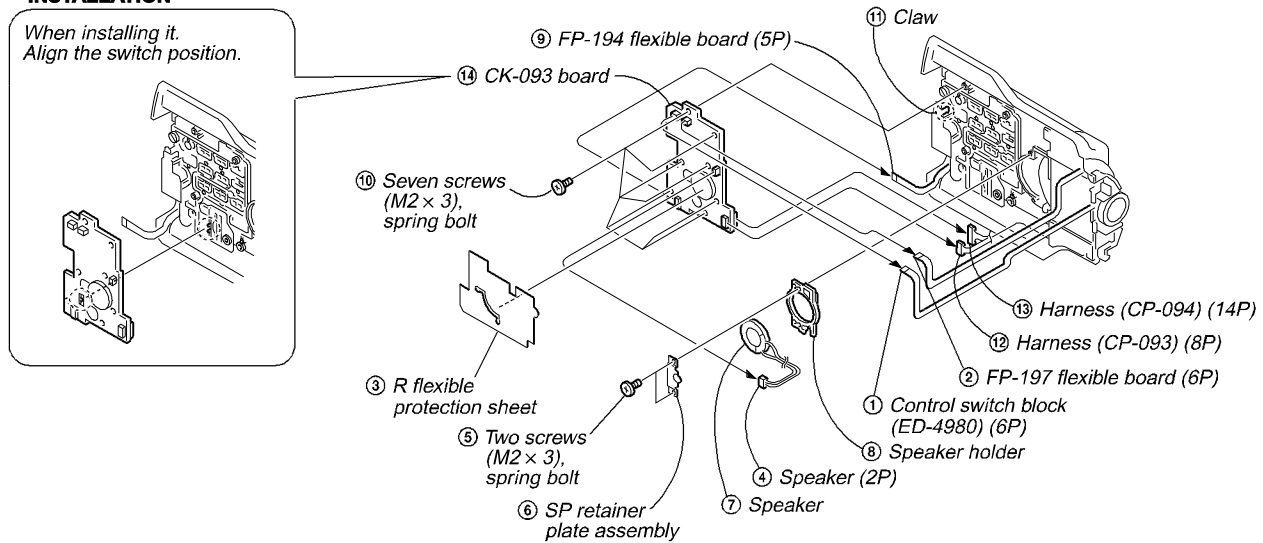

## 2-15. CONTROL SWITCH BLOCK (ED-4980), HINGE ASSEMBLY


Start the removal work after the LCD section has been removed referring section 2-1.

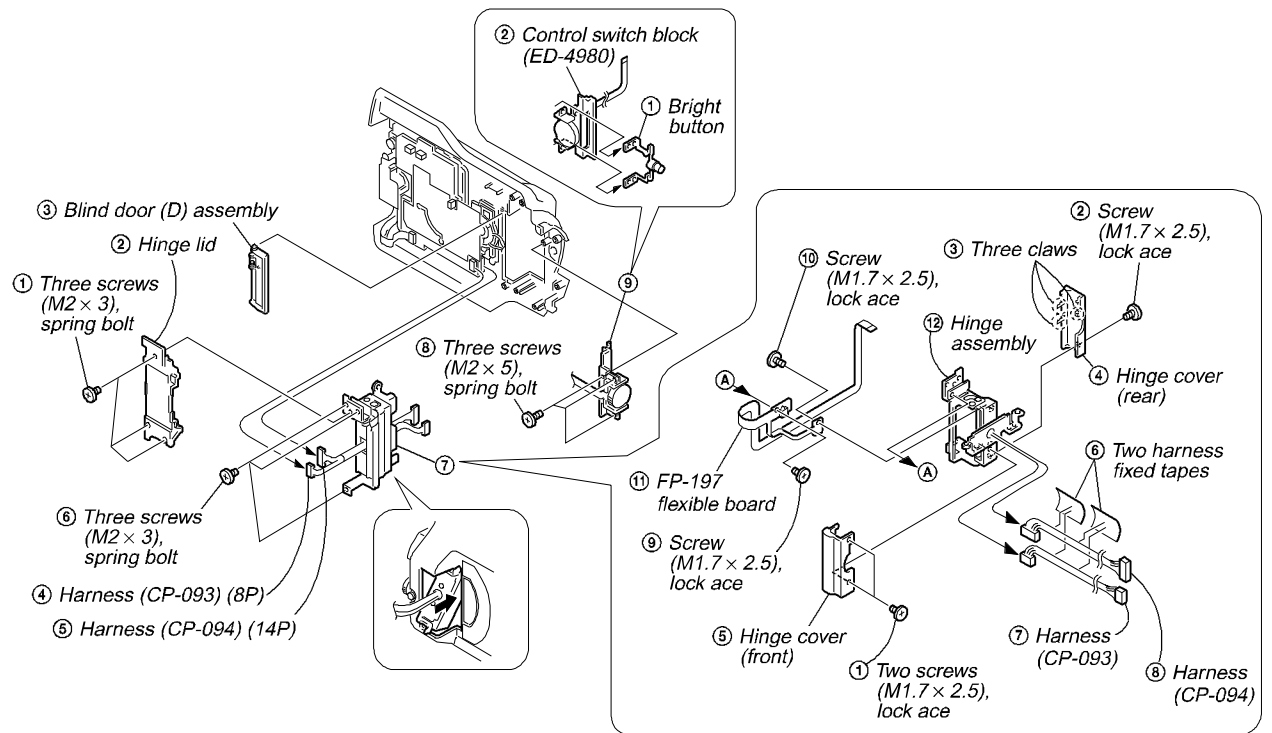




## 2-16. CIRCUIT BOARDS LOCATION

The circuit boards contained in the zoom lens are not shown.

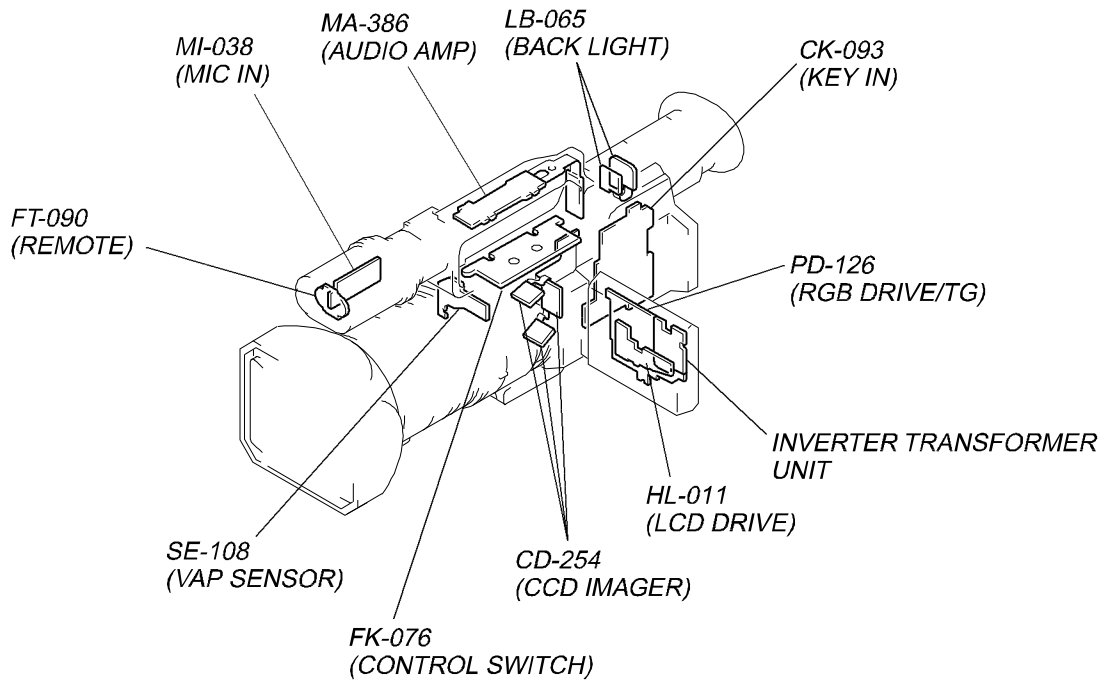






### VC-242

(S/H AGC, TG, CAMERA SIGNAL PROCESS, MS I/F, RS232C I/F, STILL CONTROL, MS DRIVE, DV SIGNAL PROCESS, REC/PB AMP, LINE IN/OUT, LINE A/D, RGB DRIVE/TG, CAMERA CONTROL, DRUM/CAPSTAN MOTOR DRIVE, HI CONTROL, AU LINE A/D, D/A, LINE AMP)

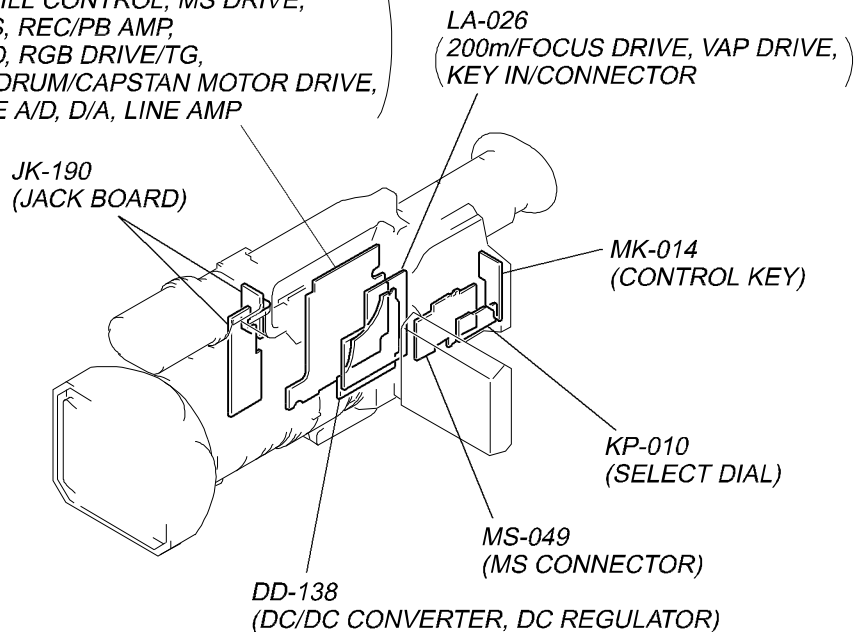


## 2-17.FLEXIBLE BOARDS LOCATION

The flexible boards contained in the mechanism deck and that in the zoom lens are not shown.

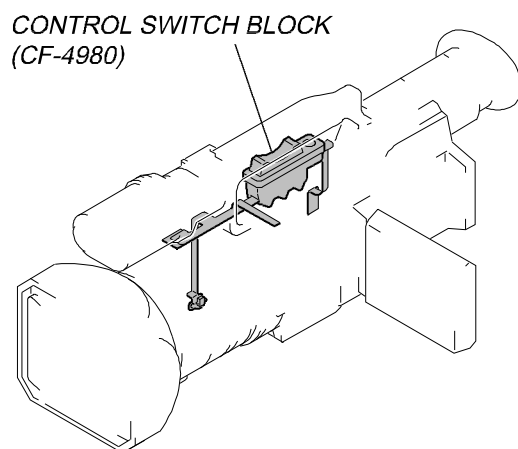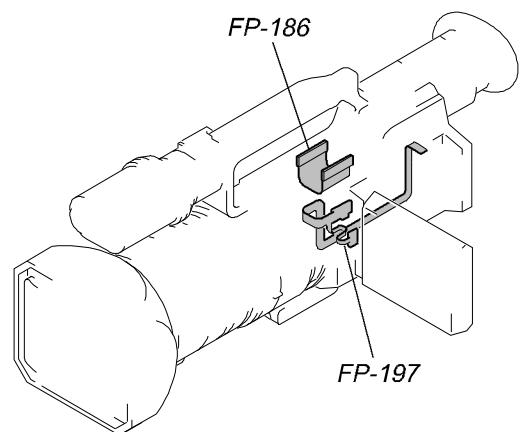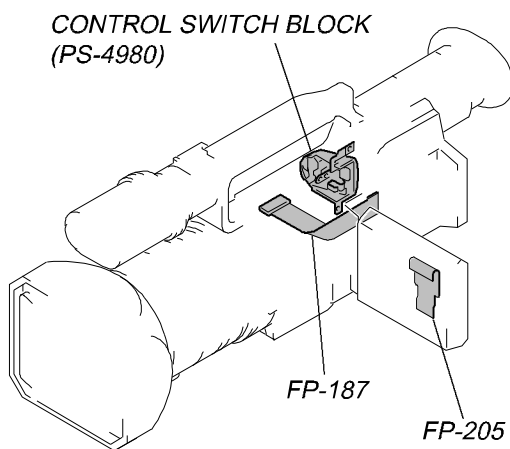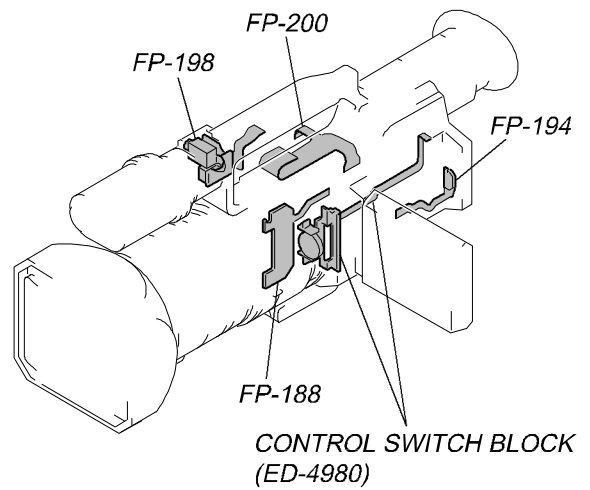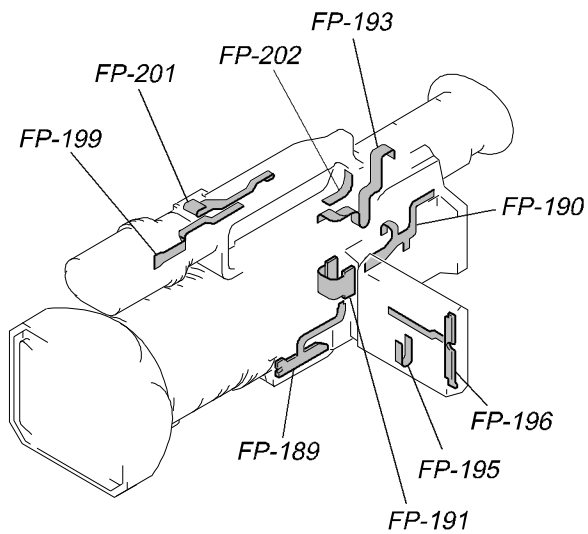


## SECTION 3 BLOCK DIAGRAMS

### 3-1. OVERALL BLOCK DIAGRAM (1/4) ( ) : Page No. shown in ( ) indicates the page to refer on the schematic diagram.

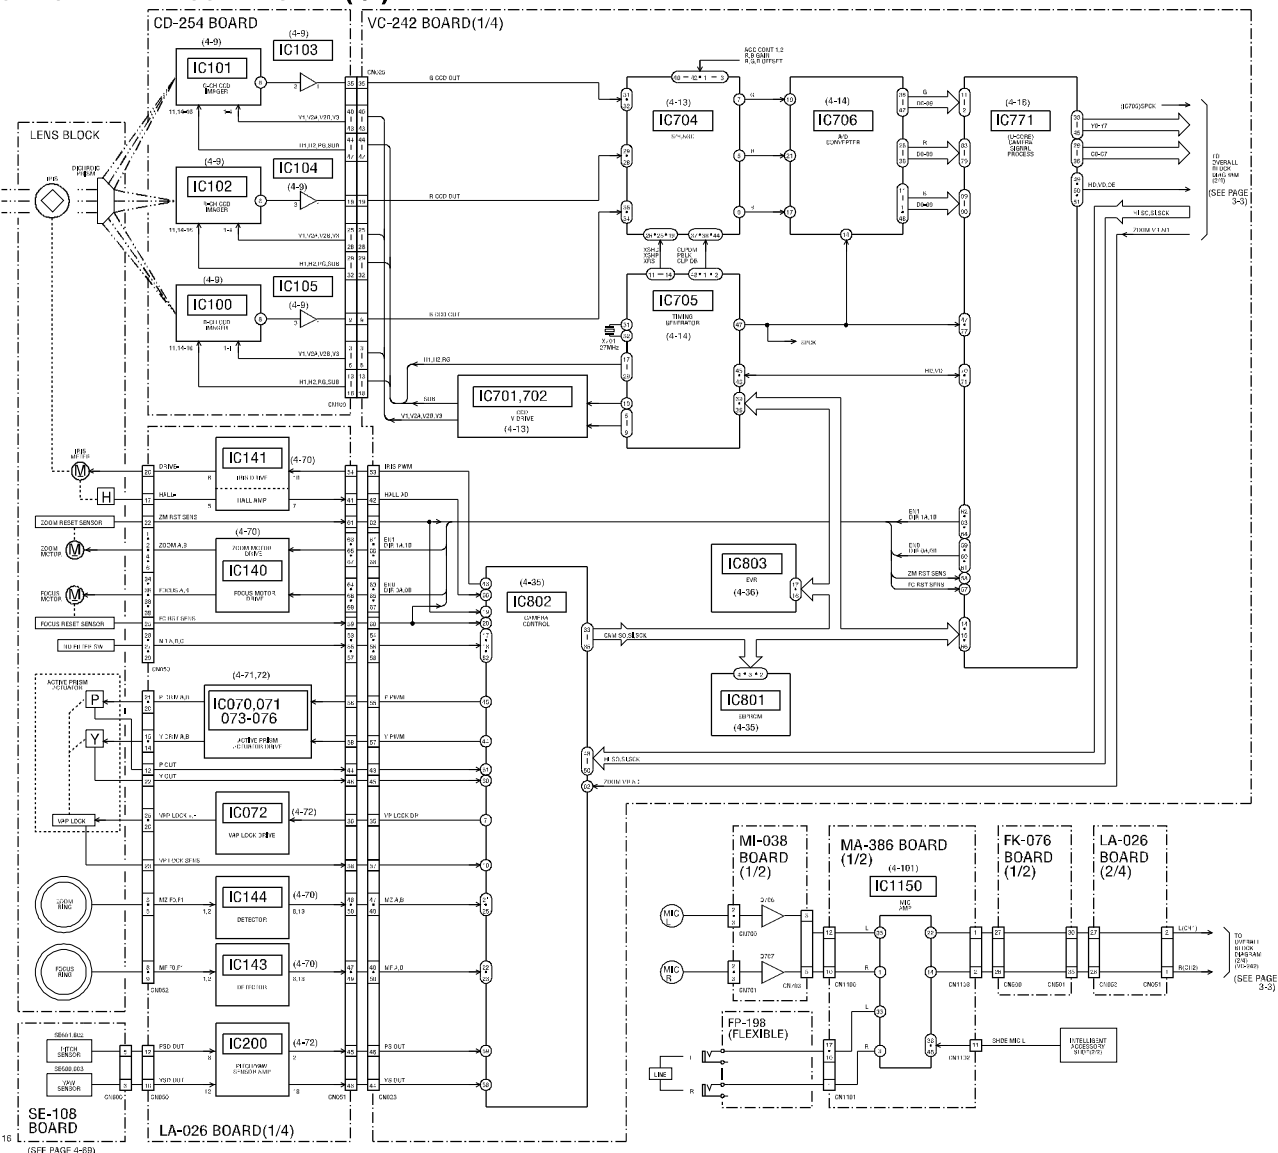


### 3-2. OVERALL BLOCK DIAGRAM (2/4) ( ) : Page No. shown in ( ) indicates the page to refer on the schematic diagram.

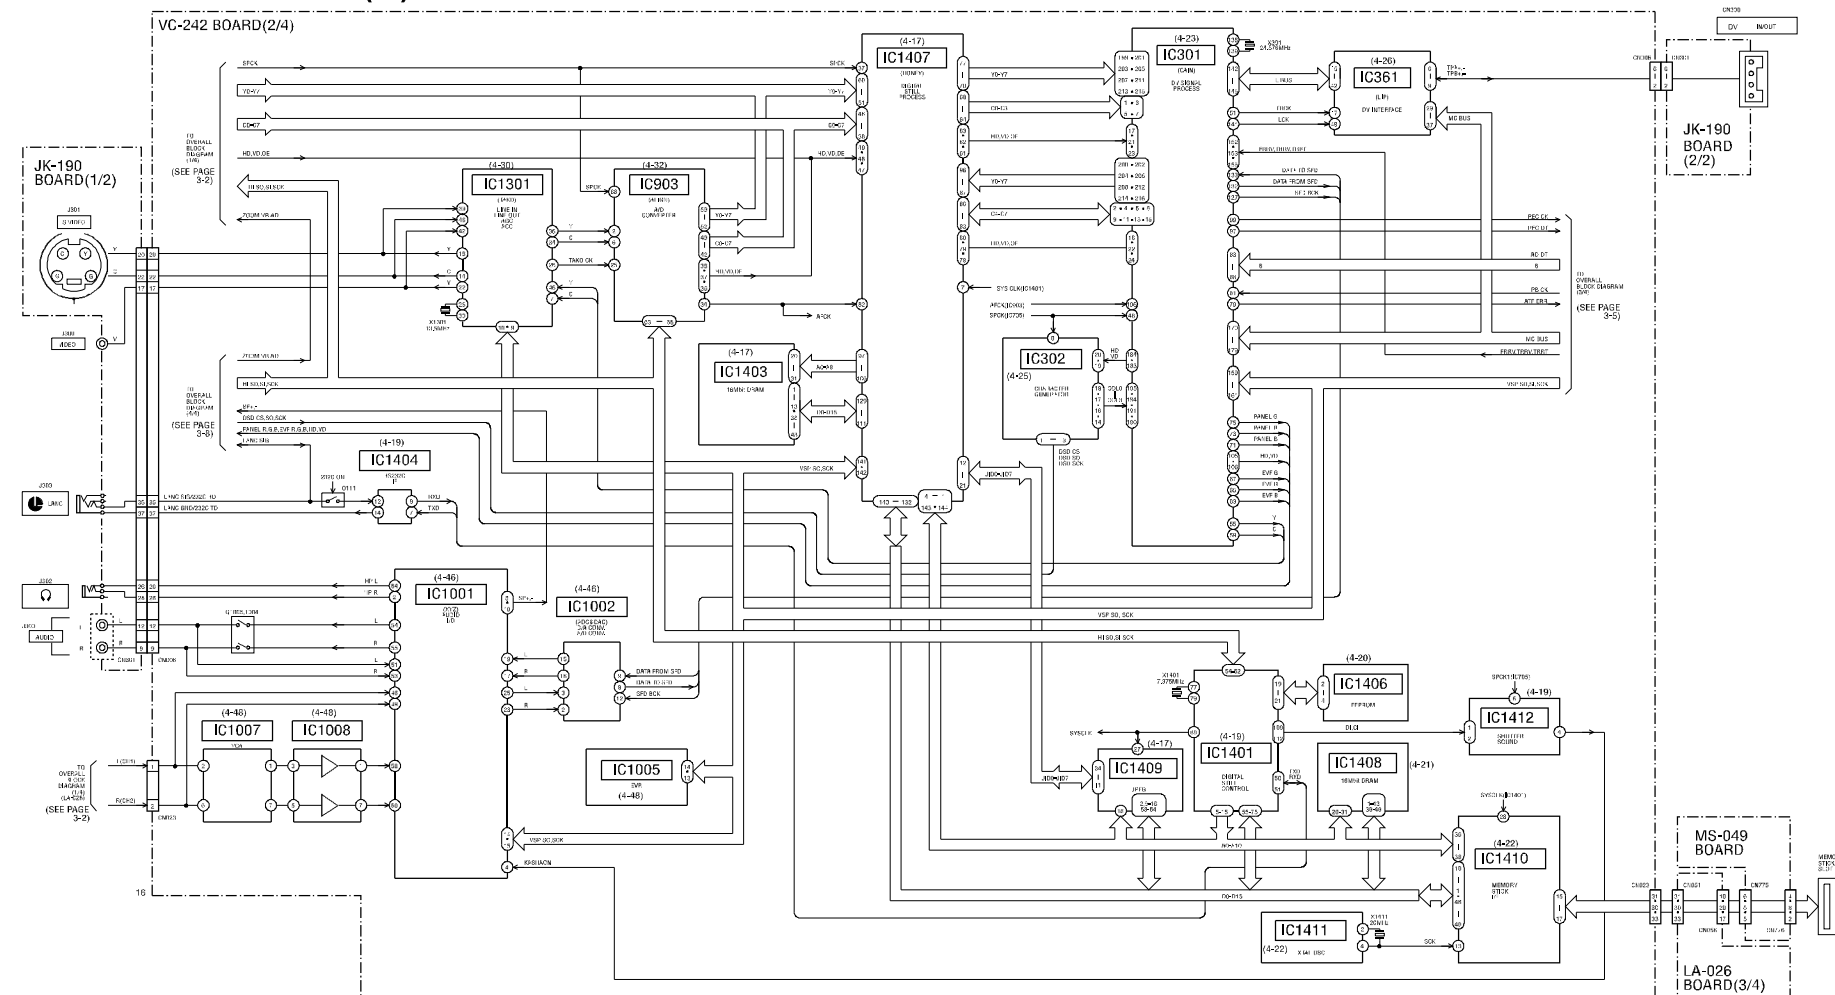


### 3-3. OVERALL BLOCK DIAGRAM (3/4)


( ) : Page No. shown in ( ) indicates the page to refer on the schematic diagram.

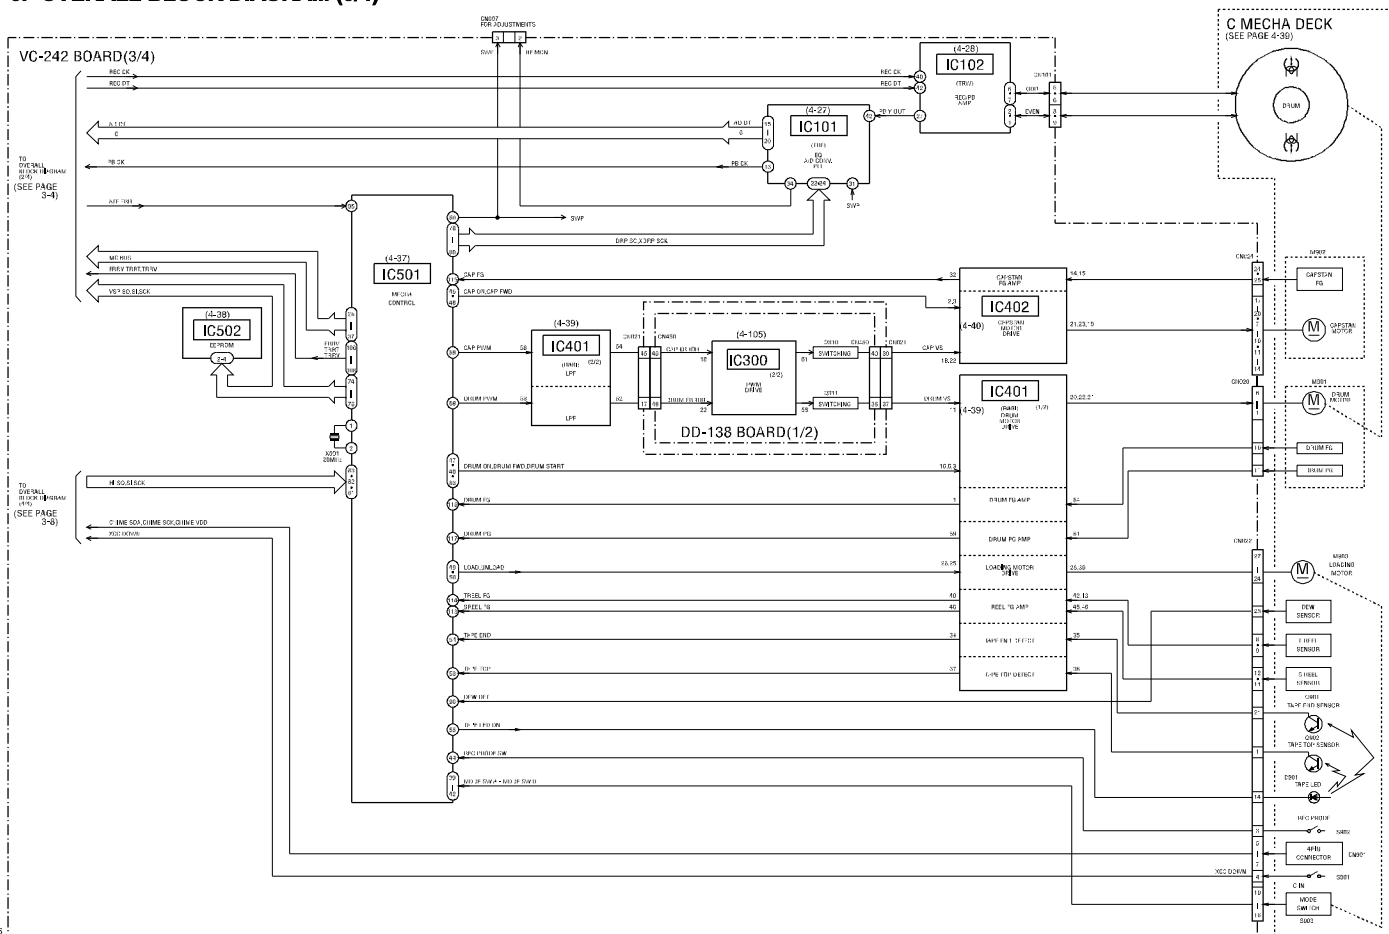



### 3-5. POWER BLOCK DIAGRAM (1/3) ( ) : Page No. shown in ( ) indicates the page to refer on the schematic diagram.

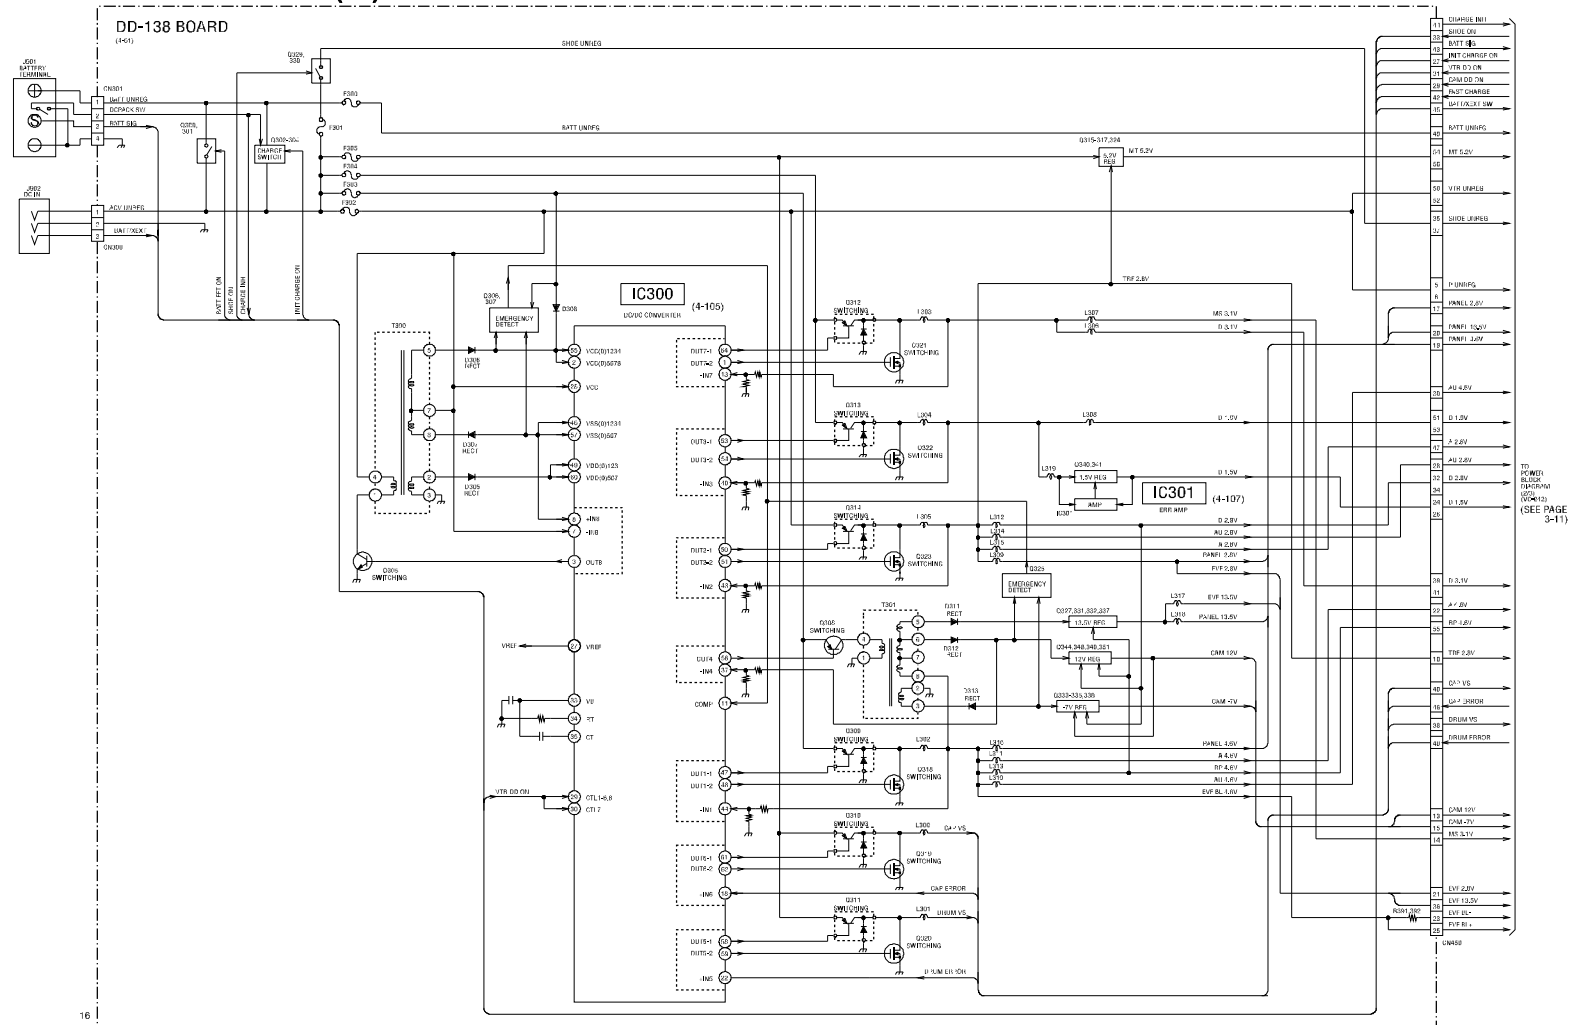

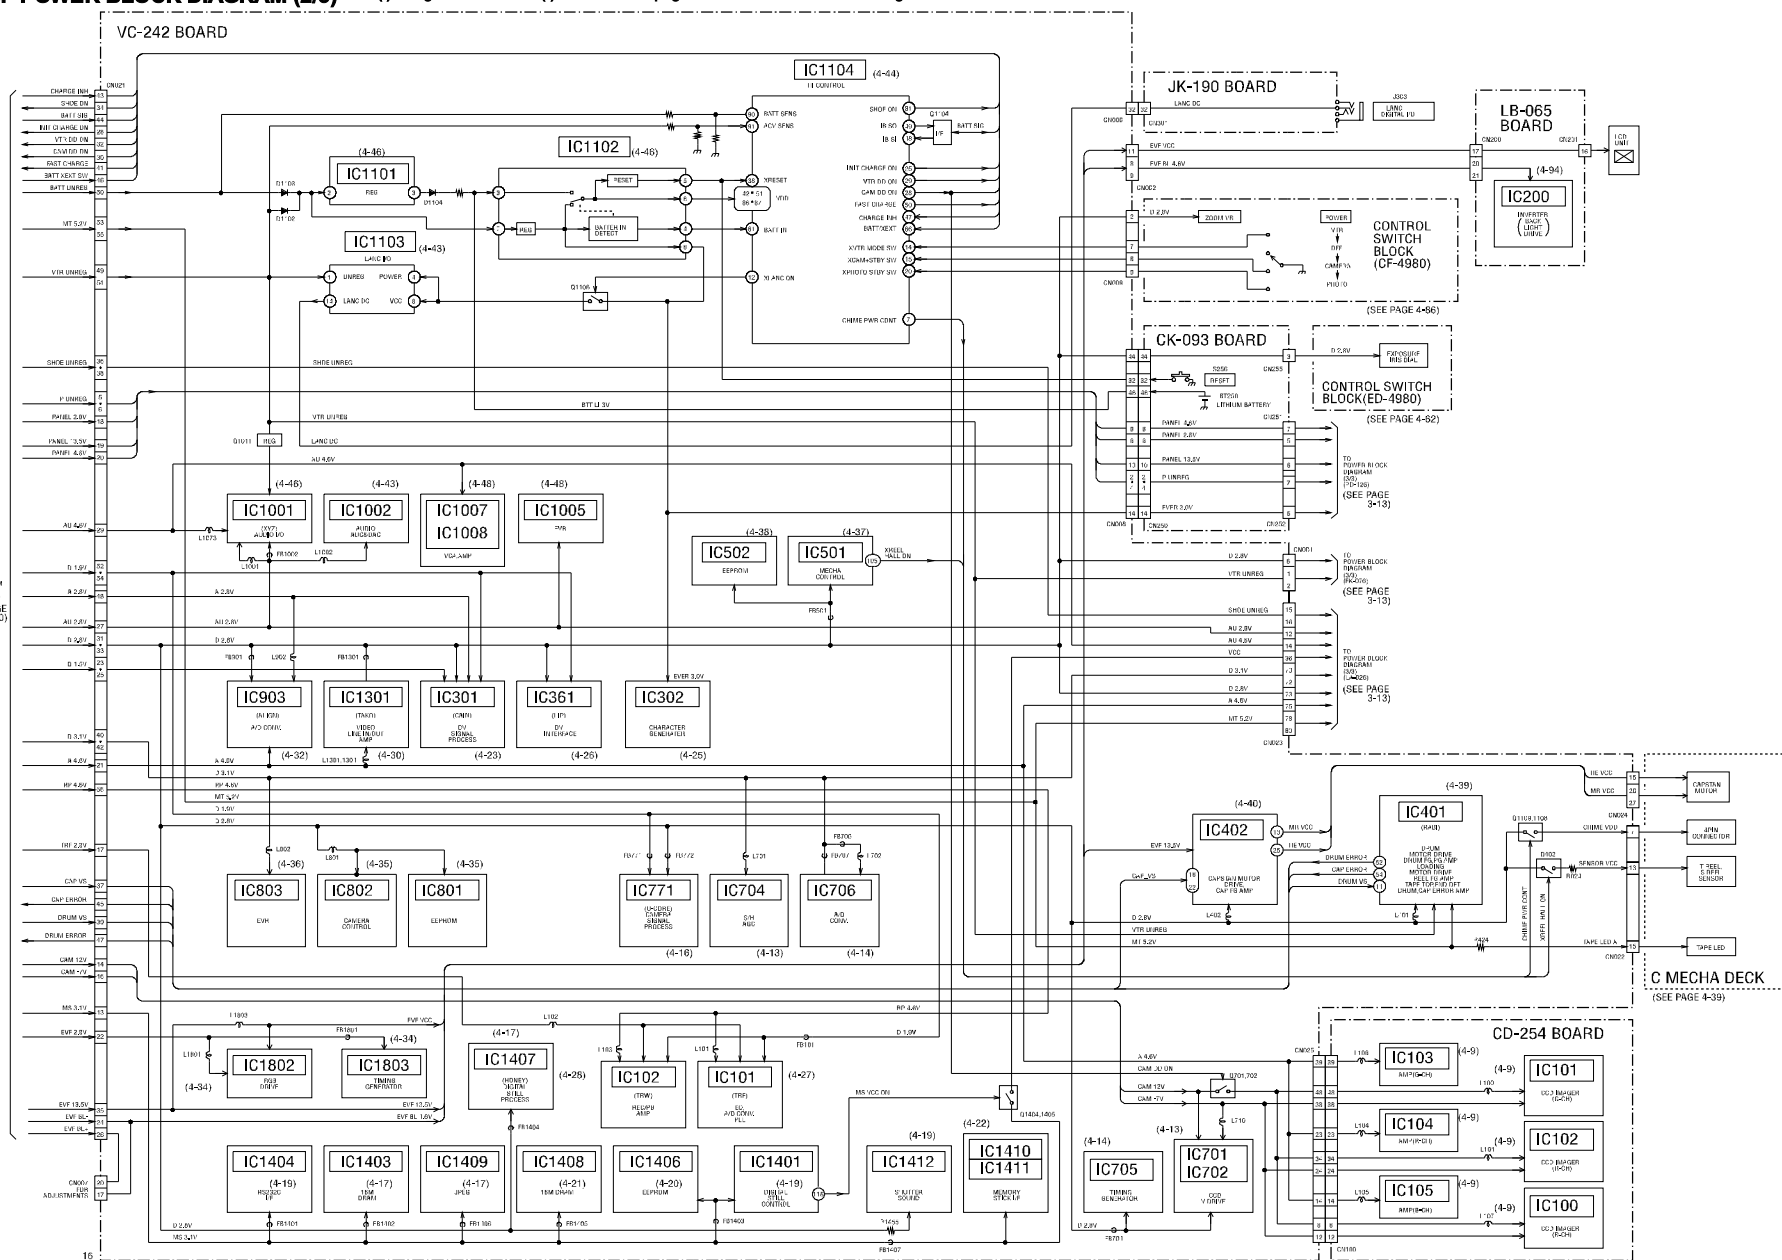







# SECTION 4

## PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS


### 4-1. FRAME SCHEMATIC DIAGRAM (1/3)

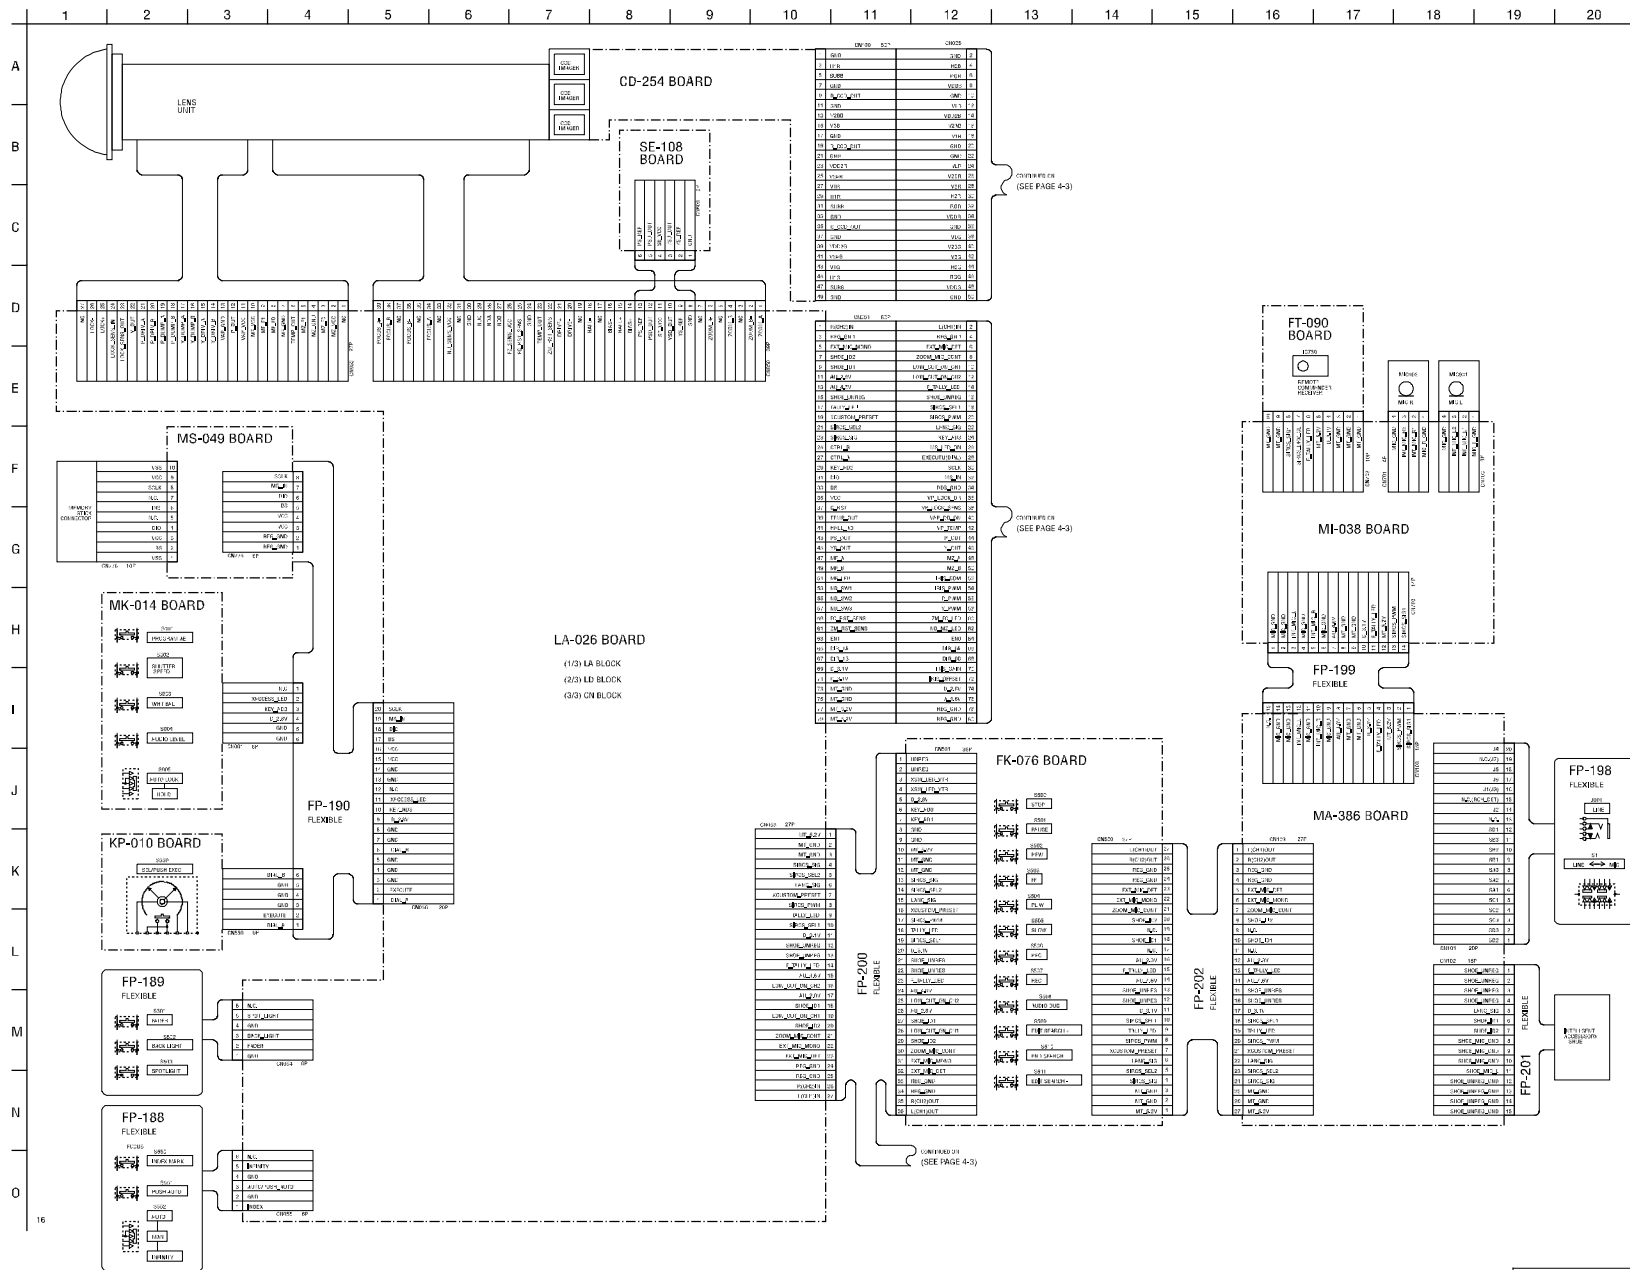

### FRAME SCHEMATIC DIAGRAM (2/3)

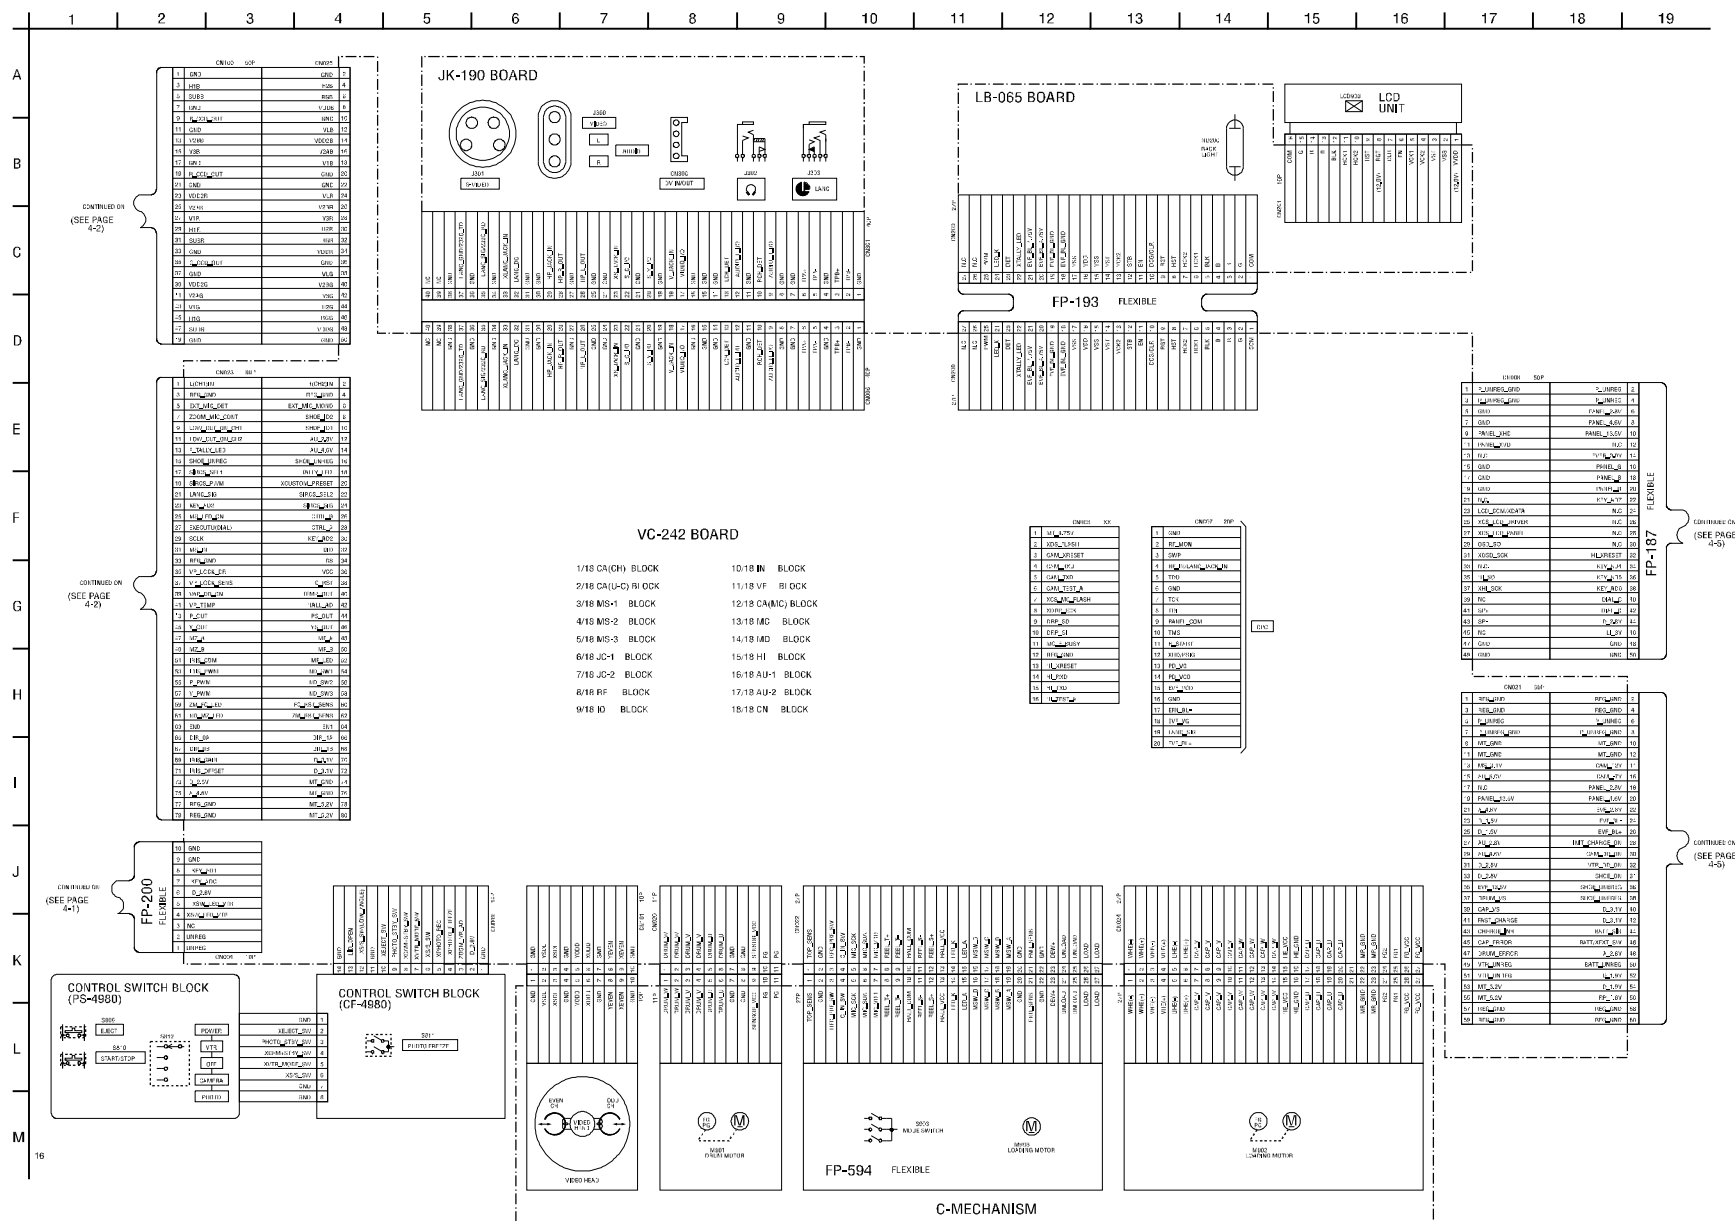


### FRAME SCHEMATIC DIAGRAM (3/3)

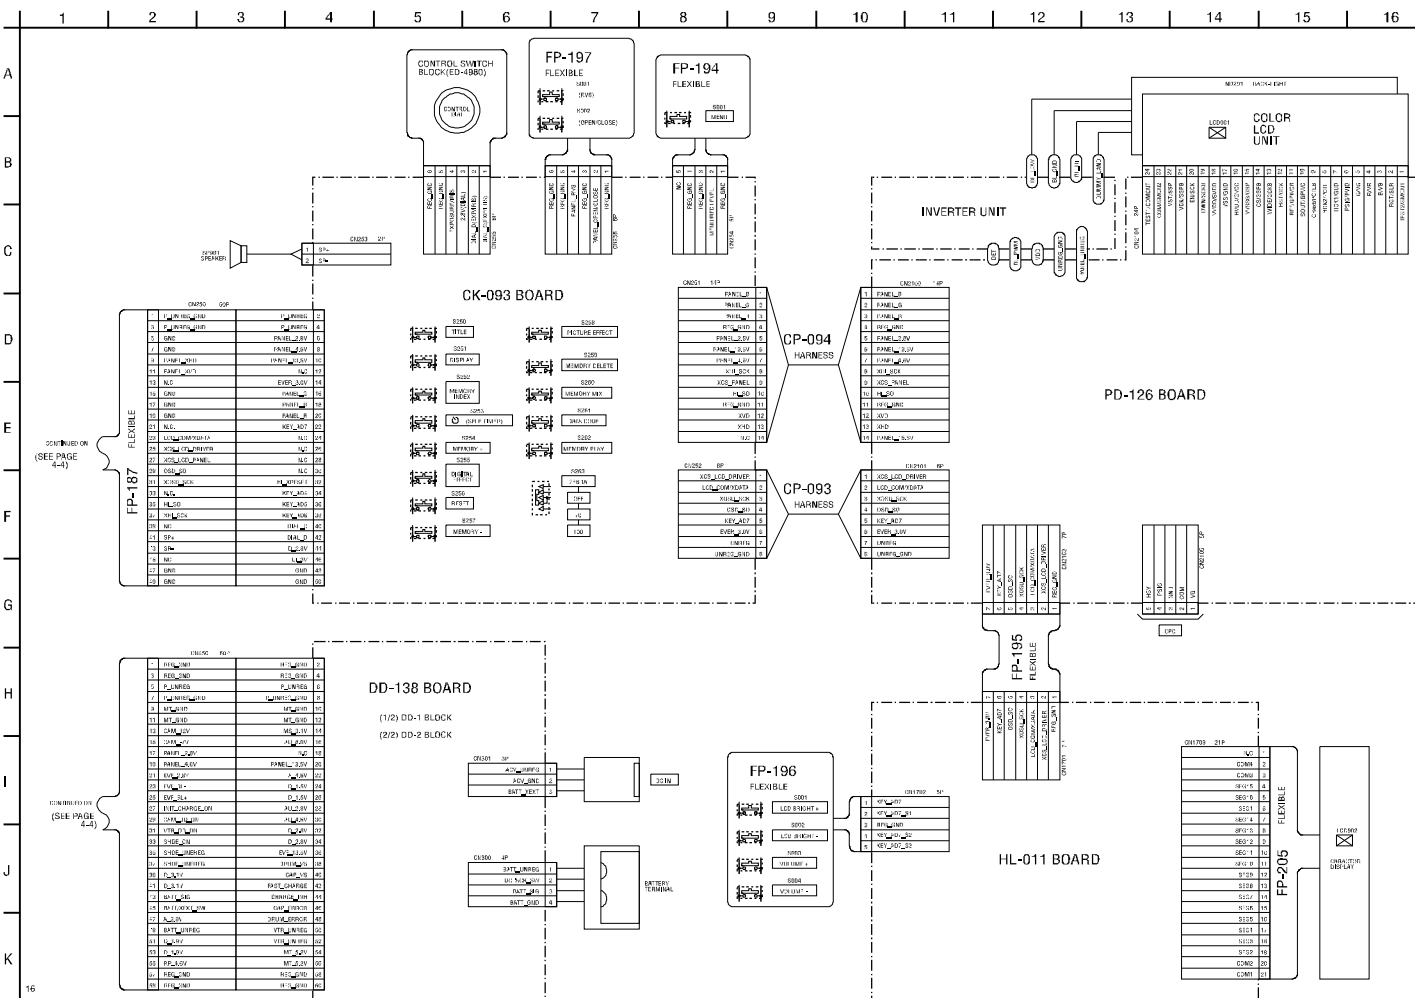


## 4-2. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

**THIS NOTE IS COMMON FOR WIRING BOARDS AND SCHEMATIC DIAGRAMS**  
**(In addition to this, the necessary note is printed in each block)**
**(For printed wiring boards)**

- Pattern from the side which enables seeing.  
(The other layers' patterns are not indicated.)
- Through hole is omitted.
- Circled numbers refer to waveforms.
- There are few cases that the part printed on diagram isn't mounted in this model.
- Chip parts.

**(For schematic diagrams)**

- All capacitors are in mF unless otherwise noted. pF : m mF. 50V or less are not indicated except for electrolytics and tantalums.
- Chip resistors are 1/10W unless otherwise noted. kW=1000W, MW=1000kW.
- Caution when replacing chip parts.  
New parts must be attached after removal of chip.  
Be careful not to heat the minus side of tantalum capacitor, Because it is damaged by the heat.
- Some chip part will be indicated as follows.

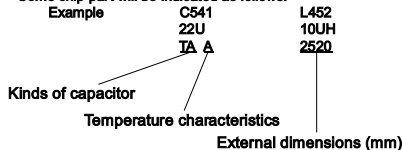

- Constants of resistors, capacitors, ICs and etc with XX indicate that they are not used.
- In such cases, the unused circuits may be indicated.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- Signal name  
XEDIT → EDIT PB/XREC → PB/REC
- non flammable resistor
- fusible resistor
- panel designation
- B+ Line \*
- B- Line \*
- IN/OUT direction of (+,-) B LINE. \*
- adjustment for repair. \*
- Circled numbers refer to waveforms. \*
- Indicated by the color red.


**Note :**  
The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety.  
Replace only with part number specified.

**Note :**  
Les composants identifiés par une marque  $\Delta$  sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.

**(Measuring conditions voltage and waveform)**

- Voltages and waveforms are measured between the measurement points and ground when camera shoots color bar chart of pattern box. They are reference values and reference waveforms. \*
- (VOM of DC 10 M $\Omega$  input impedance is used.).
- Voltage values change depending upon input impedance of VOM used.) \*

## 1. Connection

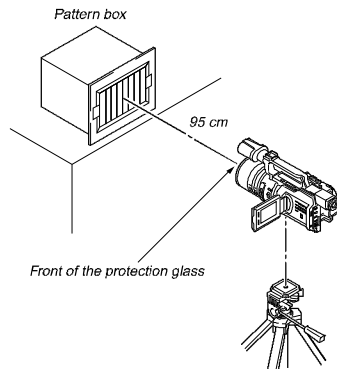

## 2. Adjust the distance so that the output waveform of Fig. a and the Fig. b can be obtain.

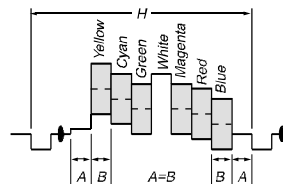


Fig. a (Video output terminal output waveform)


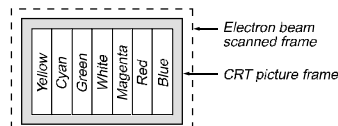


Fig.b (Picture on monitor TV)

When indicating parts by reference number, please include the board name.


For Schematic Diagram  
• Refer to page 4-11 for printed wiring board.  
• Refer to page 4-109 for waveforms.

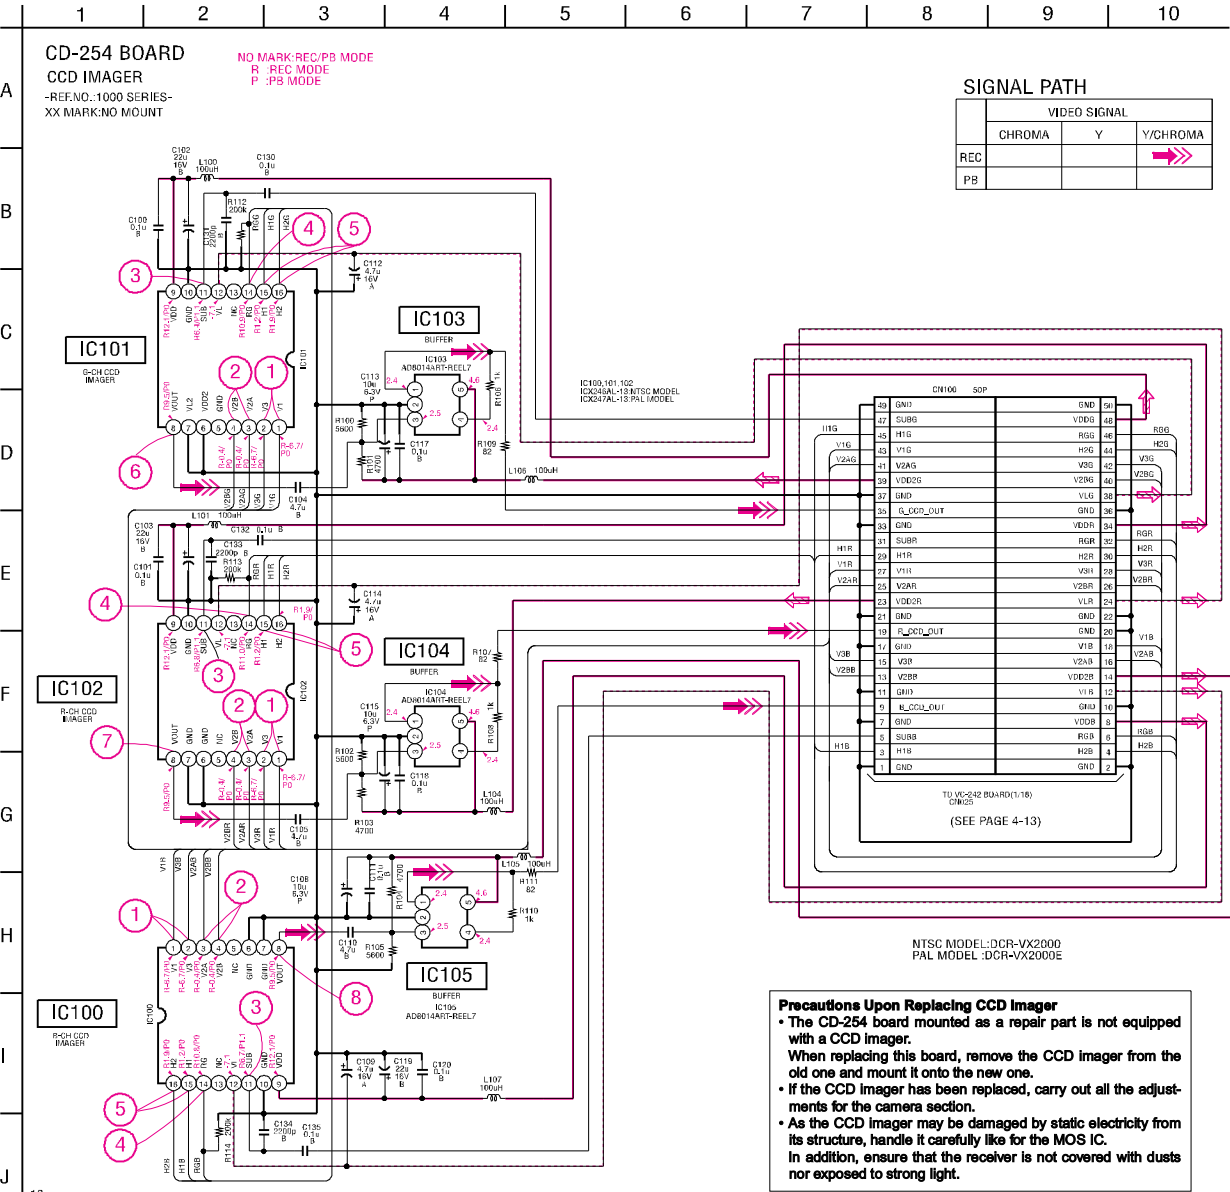

— Ref. No. CD-254 Board; 1,000 Series —

CD-254 BOARD (SIDE A)


## CD-254 BOARD(SIDE B)

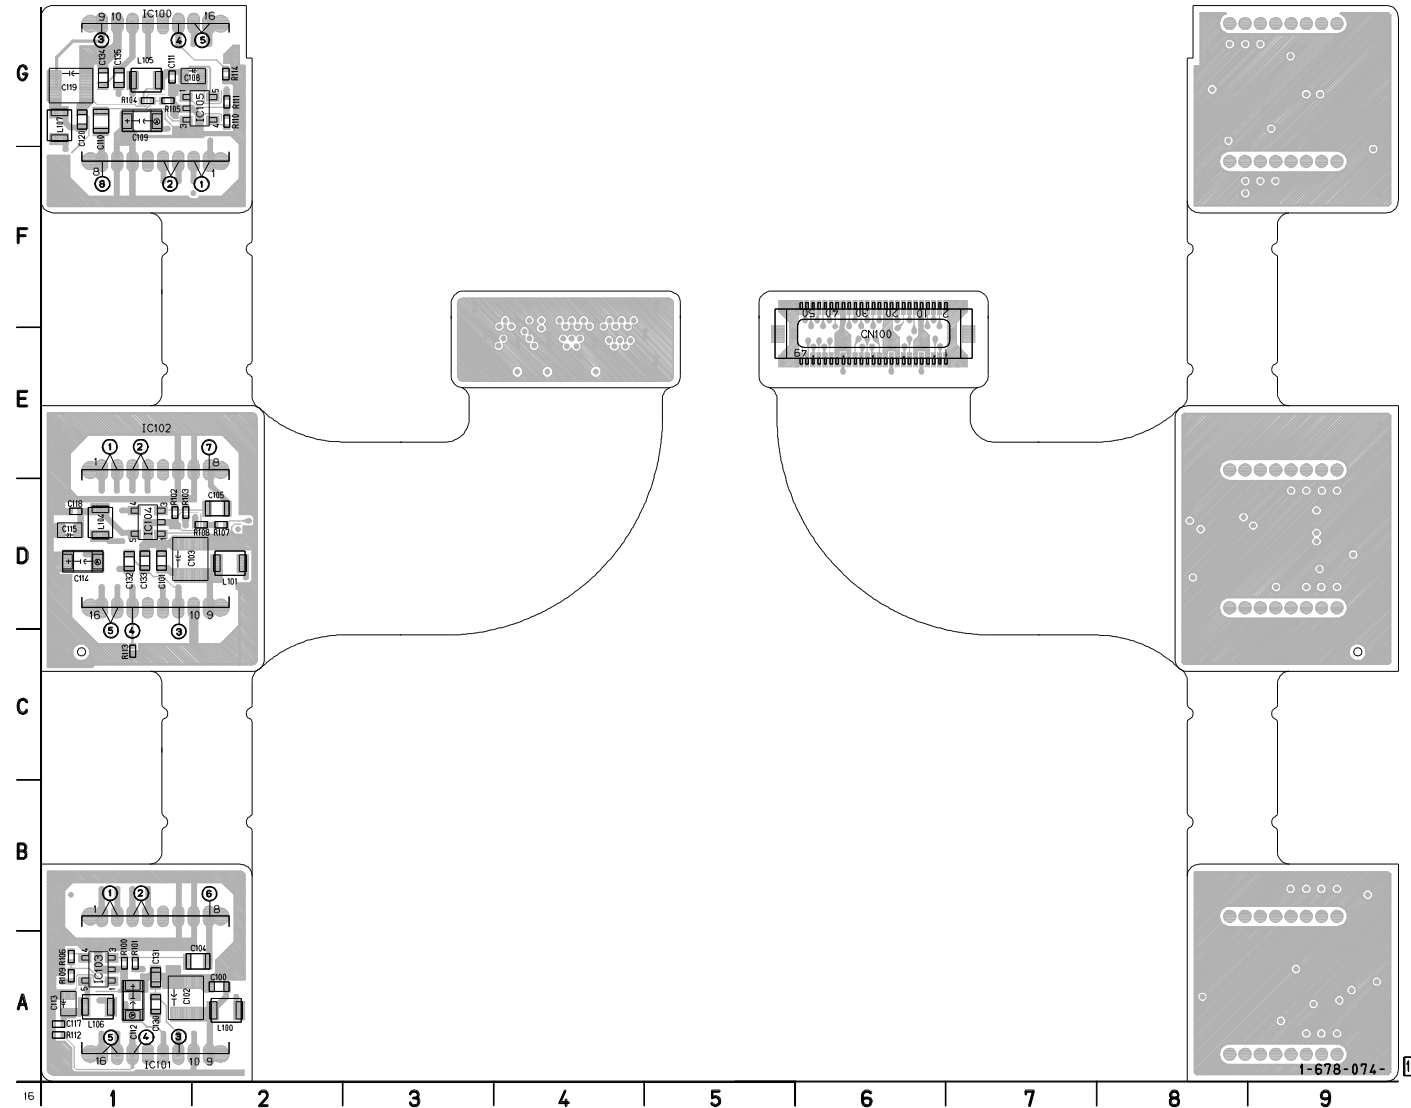

**For printed wiring board**

- Refer to page 4-116 for parts location.
- This board is four-layer print board. However, the patterns of layers two and three have not been included in the diagram.


**There are few cases that the part printed on this diagram isn't mounted in this model.**

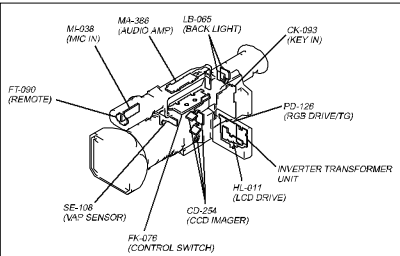


Schematic diagram and printed wiring board of the VC-242 board are not shown.  
Pages from 4-13 to 4-54 are not shown.



**JK-190 (JACK BOARD) PRINTED WIRING BOARD**  
— Ref. No. JK-190 Board; 2,000 Series —  
**JK-190 BOARD (SIDE A)**

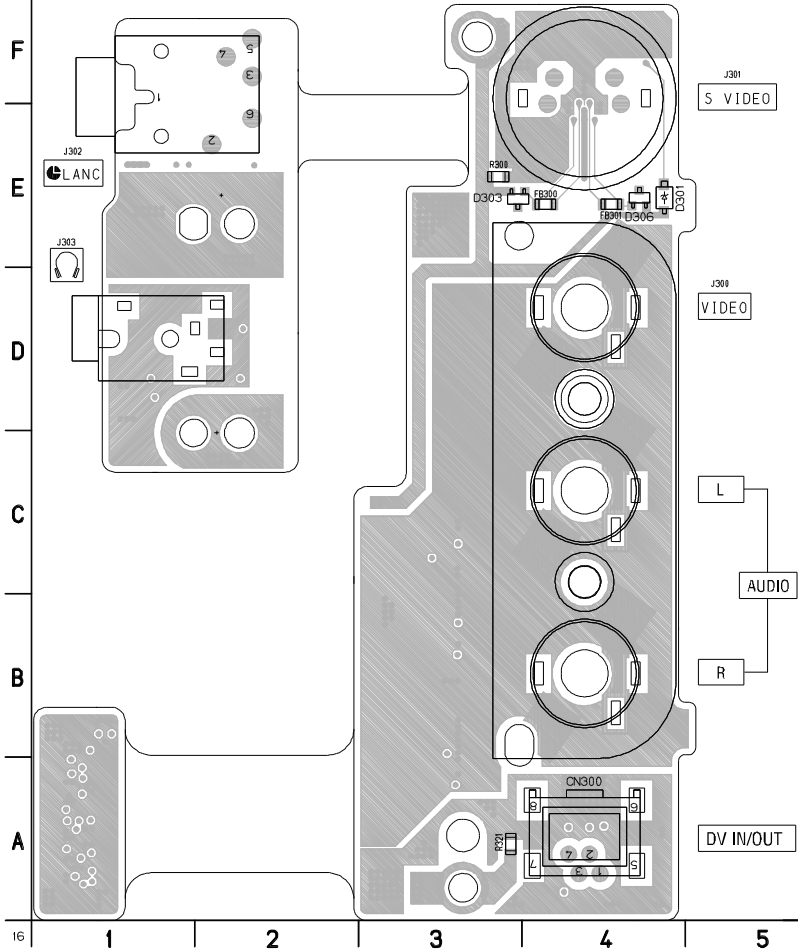

**JK-190 BOARD (SIDE B)**

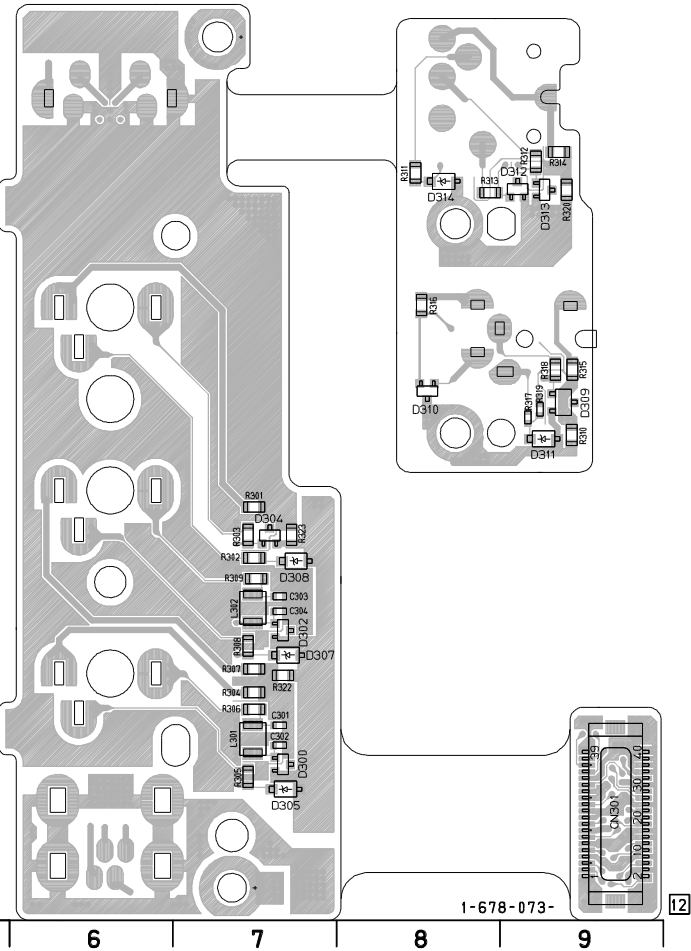


- For printed wiring board**
- Refer to page 4-116 for parts location.
  - This board is four-layer print board. However, the patterns of layers two and three have not been included in the diagram.
  - Chip parts

**Diode**



There are few cases that the part printed on this diagram isn't mounted in this model.

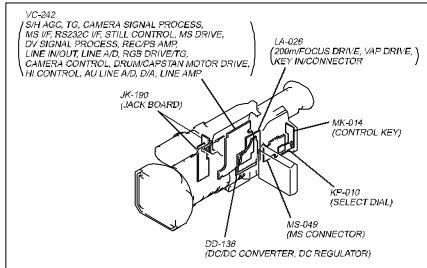





-REF.NO.:1000 SERIES-  
XX MARK:NO MOUNT




11

I



**PD-126 (RGB DRIVE, TG) PRINTED WIRING BOARD**


— Ref. No. PD-126 Board; 20,000 Series —

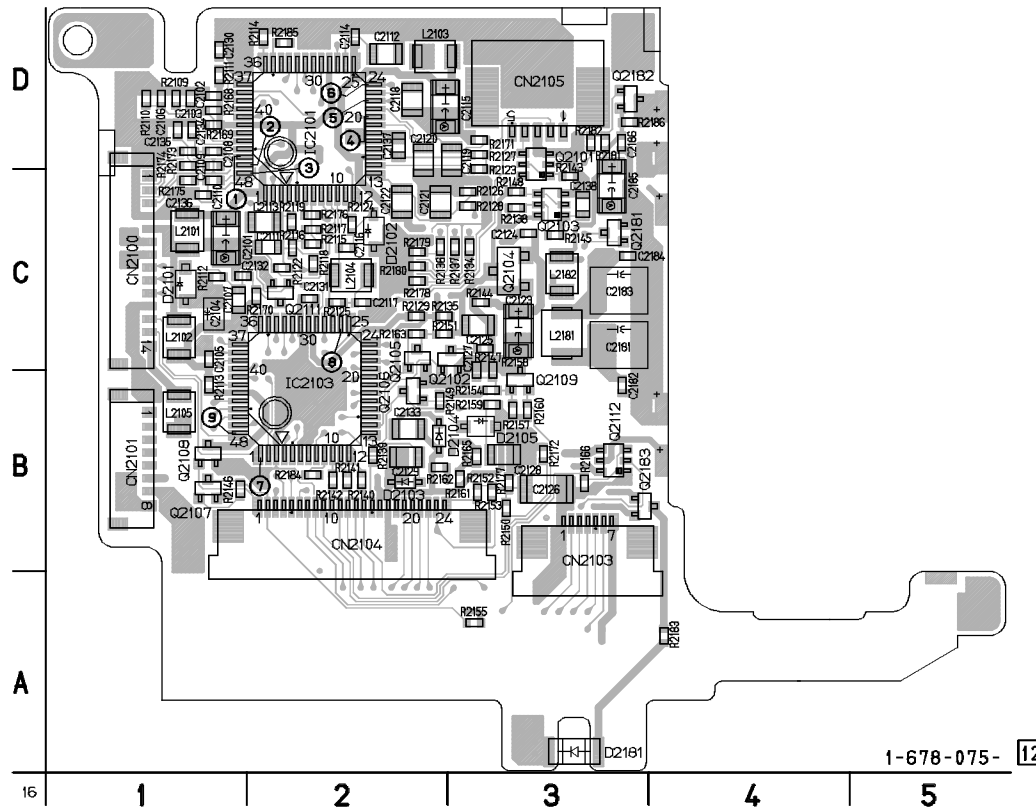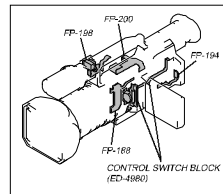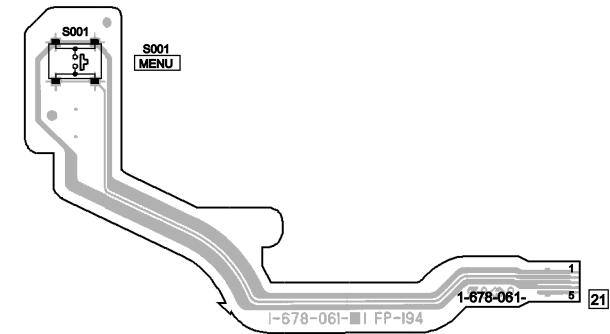**PD-126 BOARD (SIDE A)****FP-194 FLEXIBLE BOARD****For printed wiring board**


- Refer to page 4-116 for parts location.
- This board is four-layer print board. However, the patterns of layers two to four have not been included in the diagram.
- Chip parts

**Transistor**

There are few cases that the part printed on this diagram isn't mounted in this model.

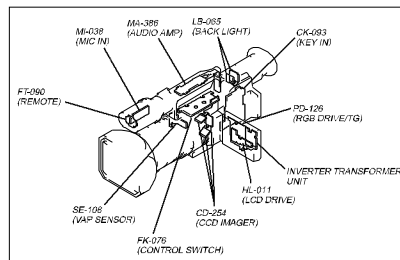


For Schematic Diagram  
• Refer to page 4-109 for waveforms.

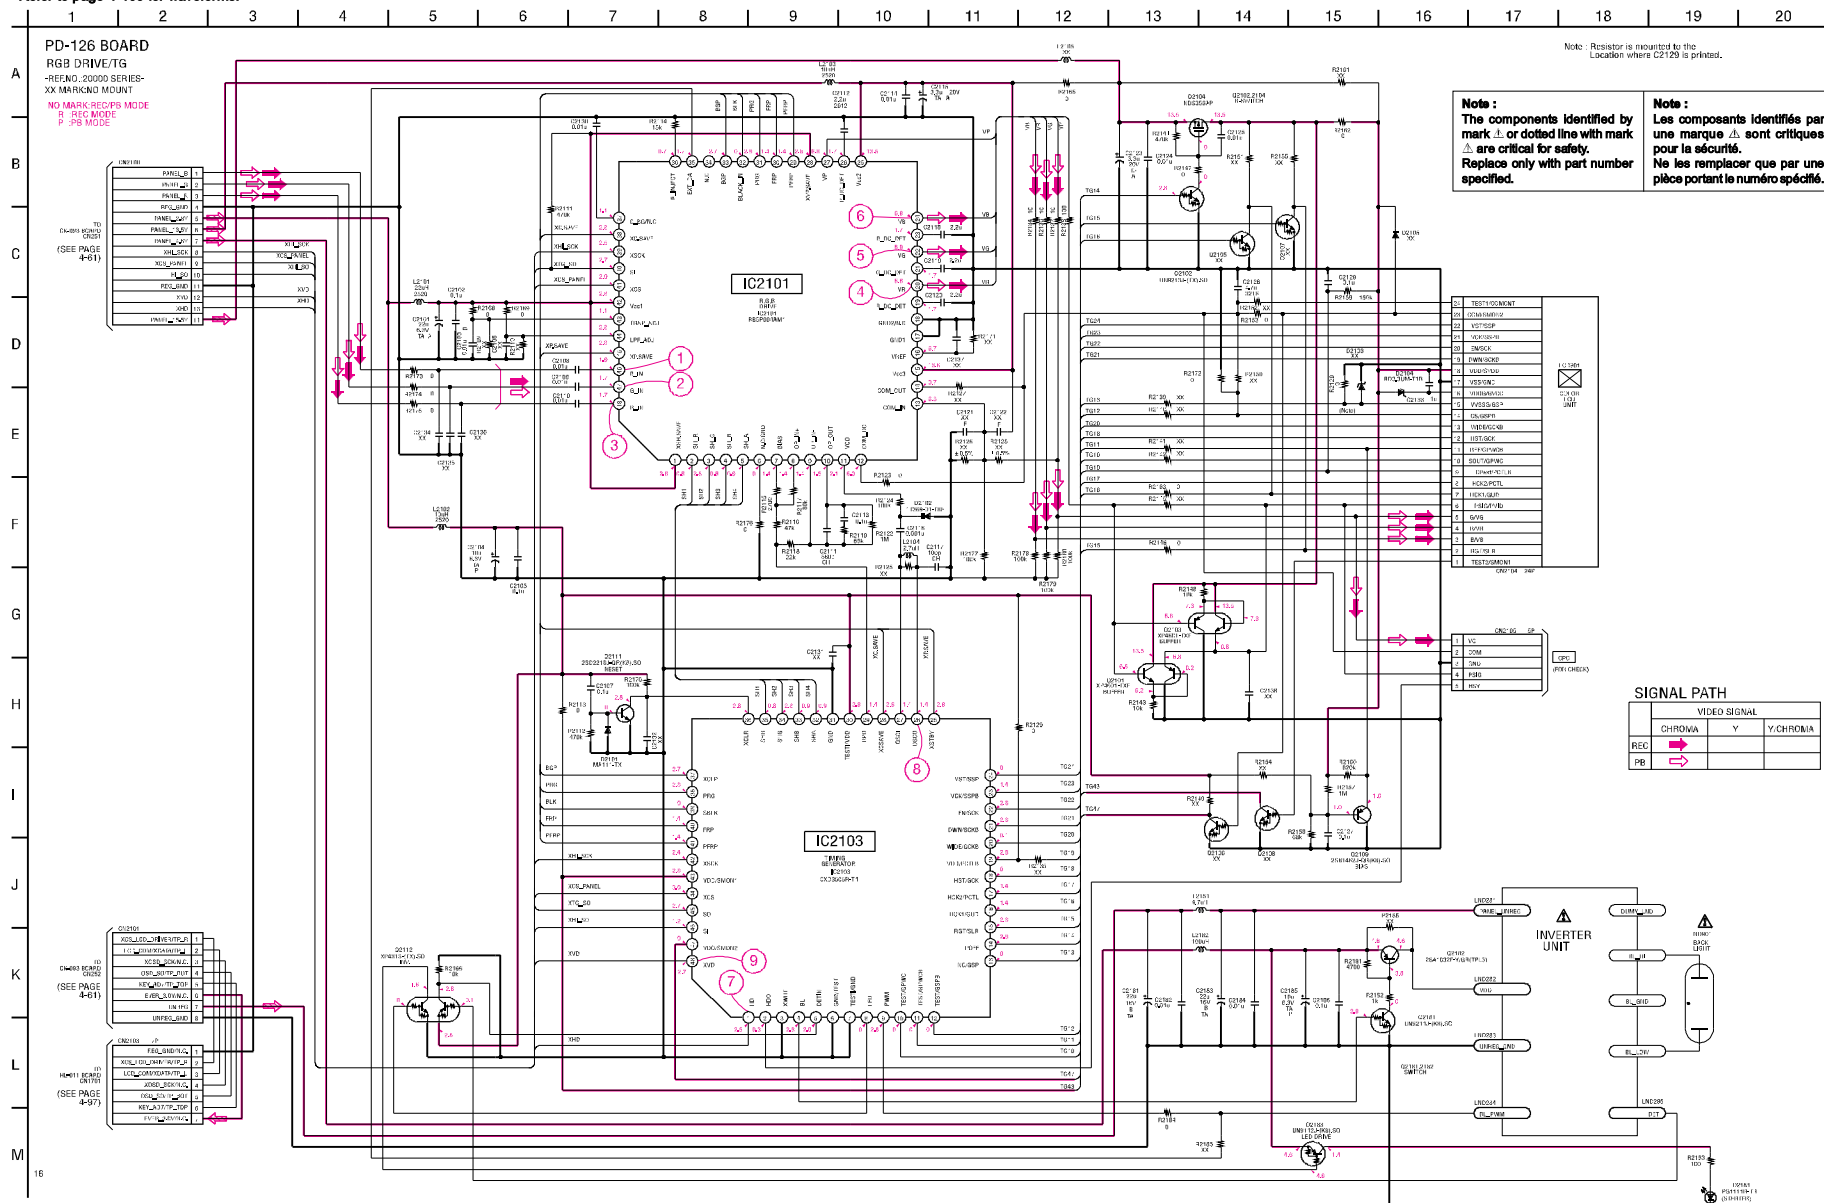


## LA-026 (ZOOM/FOCUS DRIVE, VAP DRIVE, KEY IN/CONNECTOR) PRINTED WIRING BOARD

— Ref. No. LA-026 Board; 20,000 Series —

## LA-026 BOARD (SIDE A)

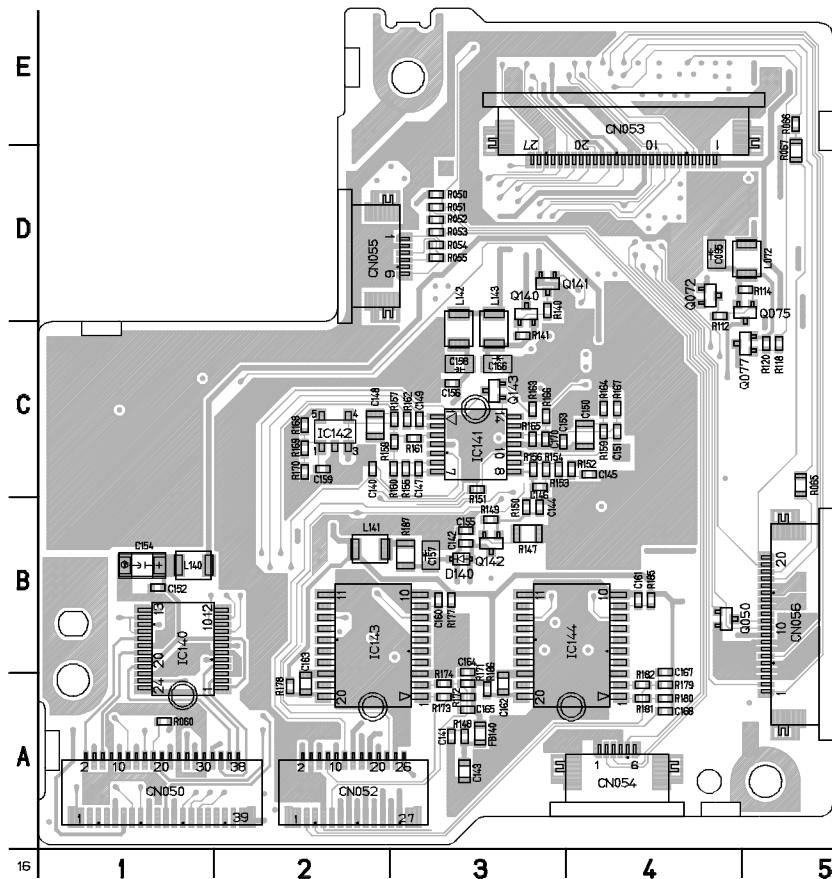

## LA-026 BOARD (SIDE B)

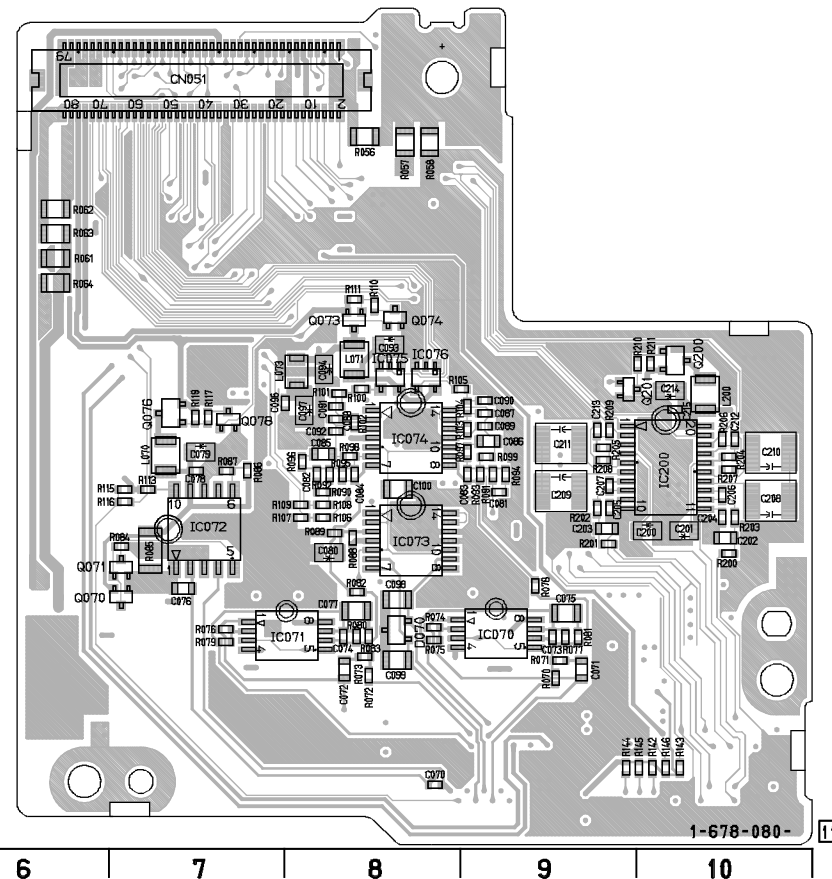

## For printed wiring board

- Refer to page 4-117 for parts location.
- This board is six-layer print board. However, the patterns of layers two to five have not been included in the diagram.
- Chip parts


## Transistor




## Diode



There are few cases that the part printed on this diagram isn't mounted in this model.

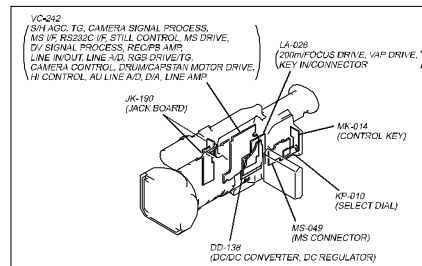


For Schematic Diagram  
• Refer to page 4-75 for SE-108 printed wiring board.

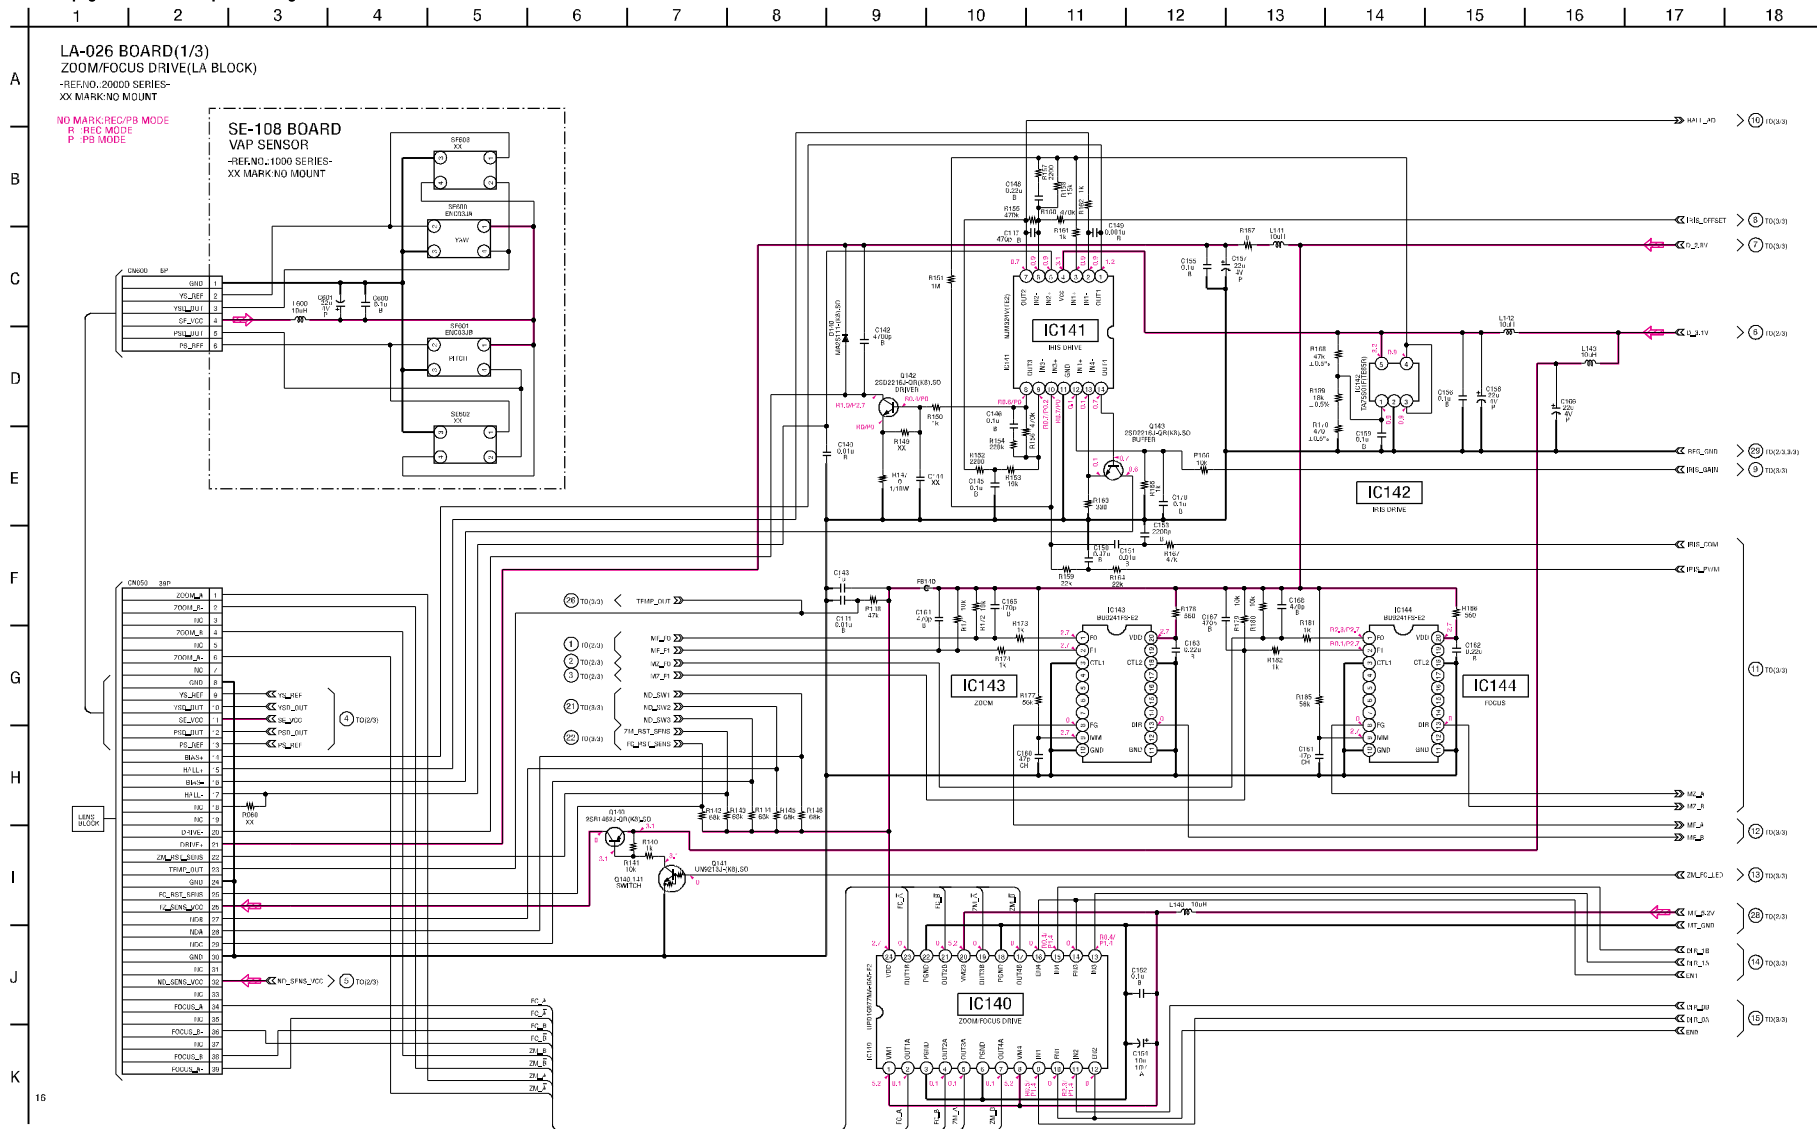




For Schematic Diagram  
 Refer to page 4-67 for printed wiring board.


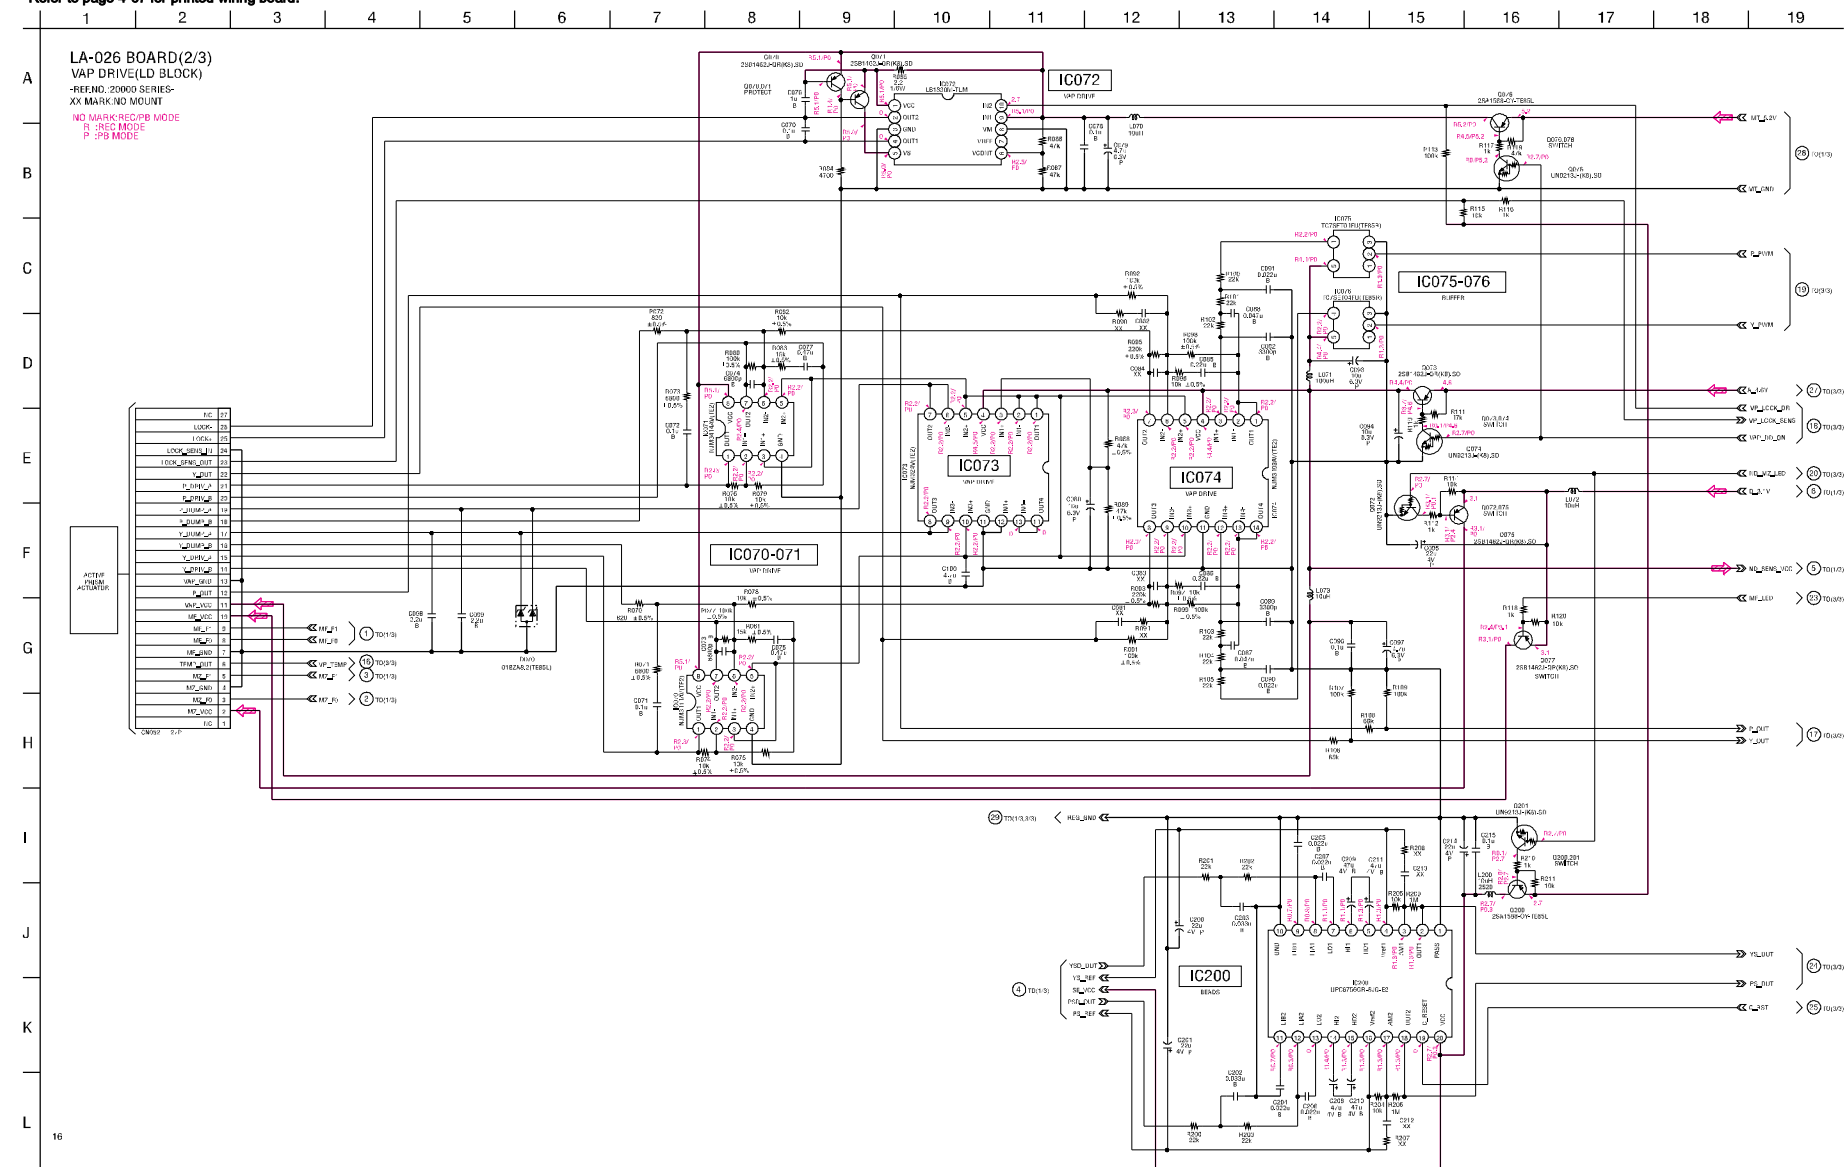


**For Schematic Diagram**  
• Refer to page 4-67 for printed wiring board.

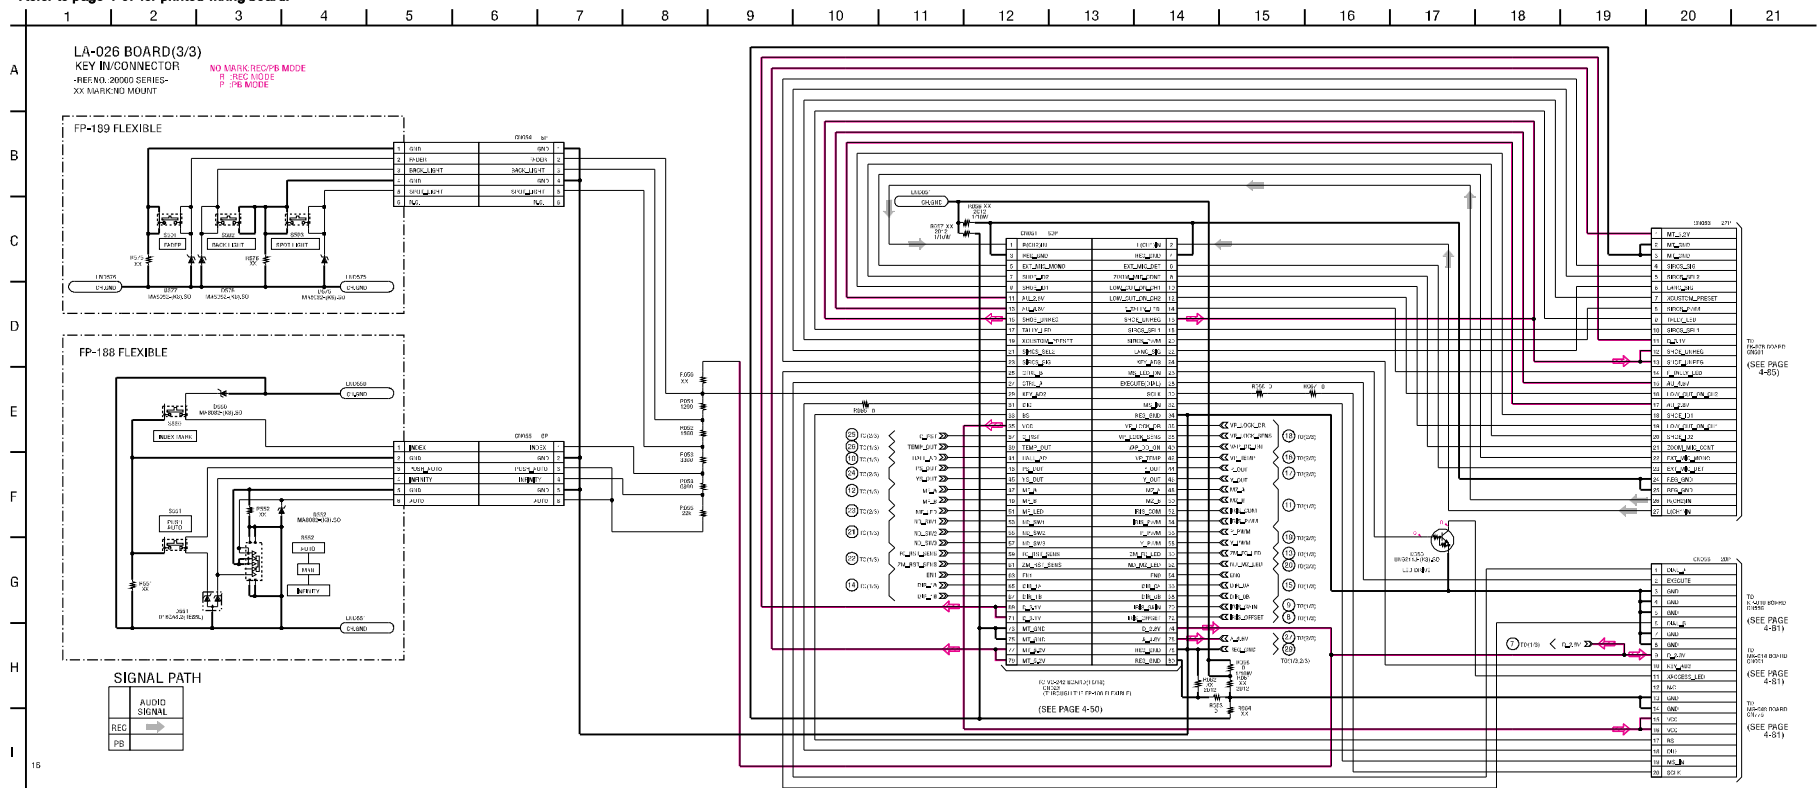

**SE-108 (VAP SENSOR) PRINTED WIRING BOARD**

— Ref. No. SE-108 Board; 1,000 Series —



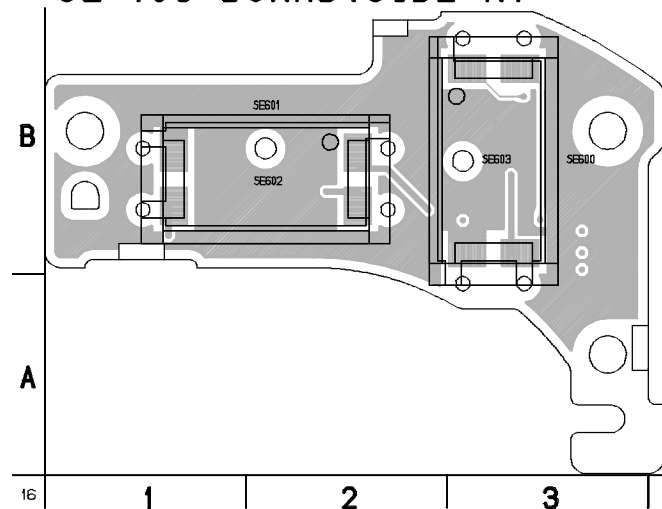
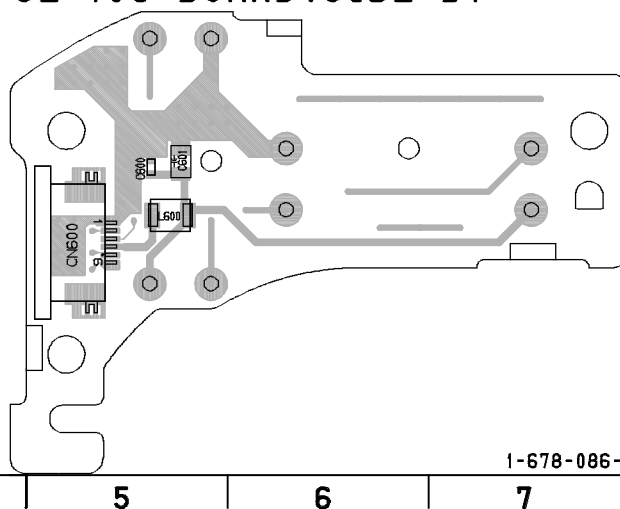
**SE-108 BOARD (SIDE A)****SE-108 BOARD (SIDE B)**

1-678-086-11

**For printed wiring board**



- Refer to page 4-117 for parts location.
- This board is six-layer print board. However, the patterns of layers two to five have not been included in the diagram.

There are few cases that the part printed on this diagram isn't mounted in this model.

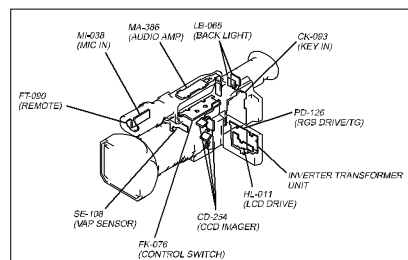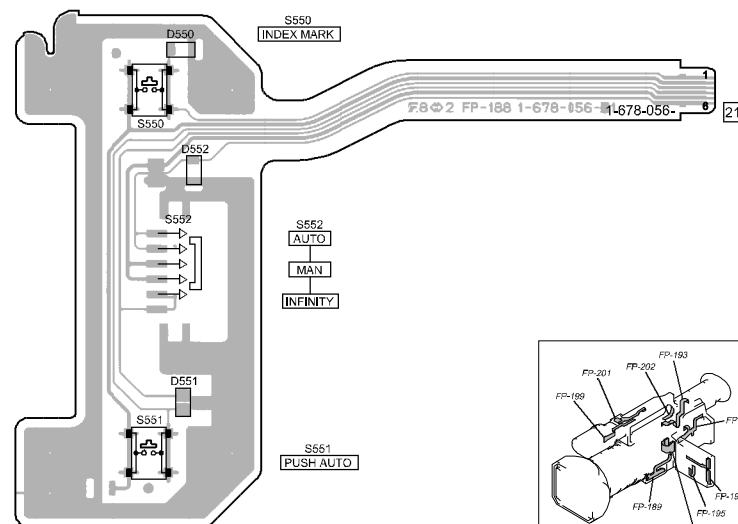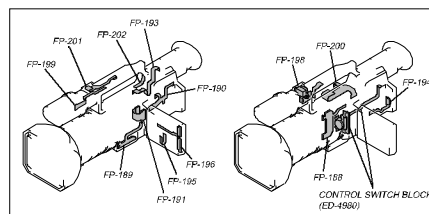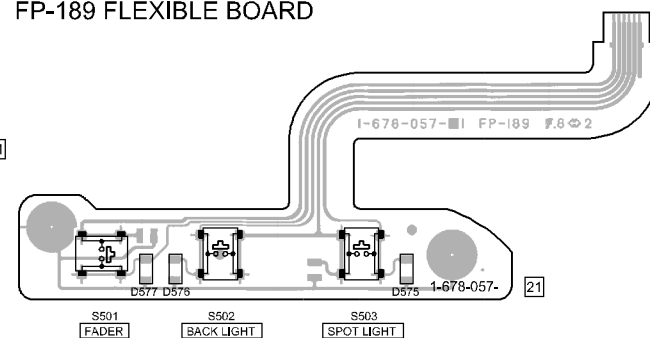**FP-188 FLEXIBLE BOARD****FP-189 FLEXIBLE BOARD**


**MS-049 (MS CONNECTOR) PRINTED WIRING BOARD**

— Ref. No. MS-049 Board; 20,000 Series —

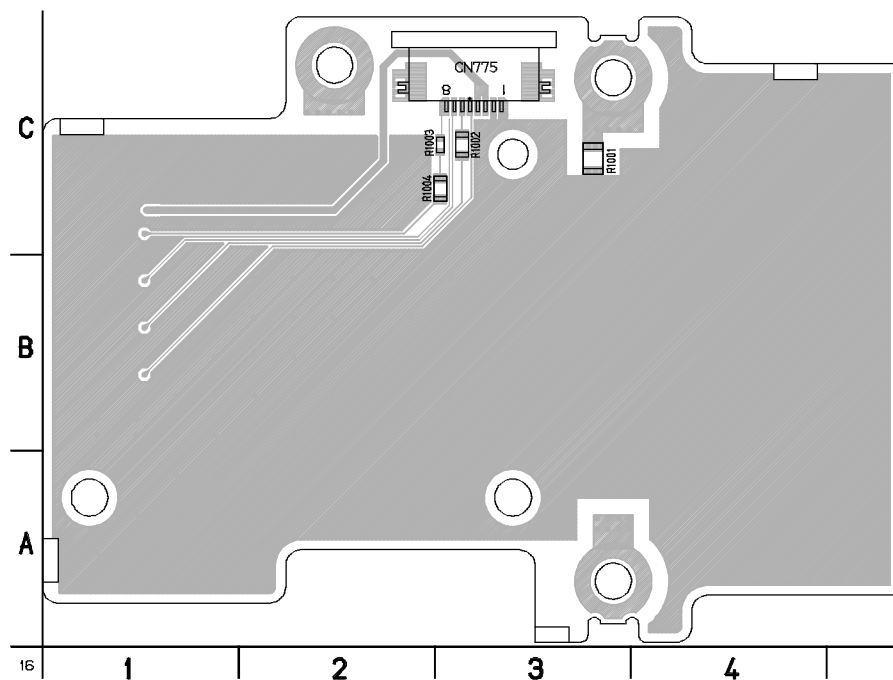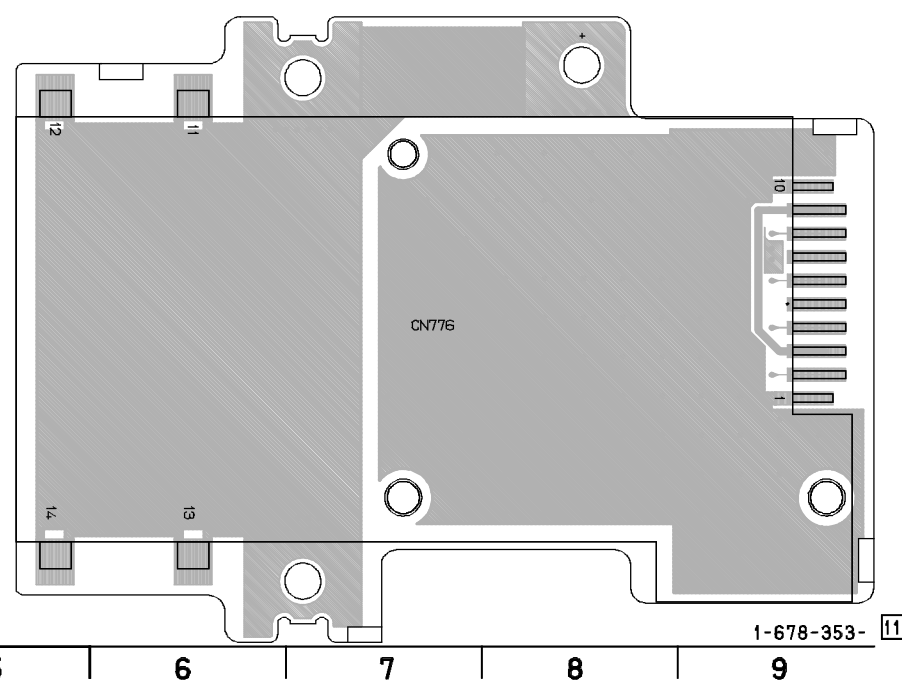**MS-049 BOARD (SIDE A)****MS-049 BOARD (SIDE B)****For printed wiring board**



- Refer to page 4-117 for parts location.
- This board is four-layer print board. However, the patterns of layers two and three have not been included in the diagram.

There are few cases that the part printed on this diagram isn't mounted in this model.

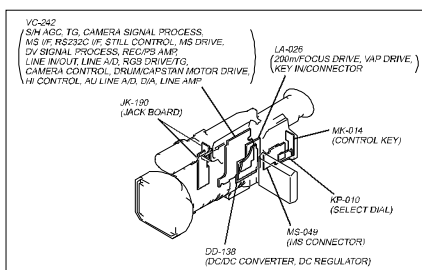

**KP-010 (SELECT DIAL), MK-014 (CONTROL KEY) PRINTED WIRING BOARDS**


— Ref. No. KP-010, MK-014 Boards; 10,000 Series —

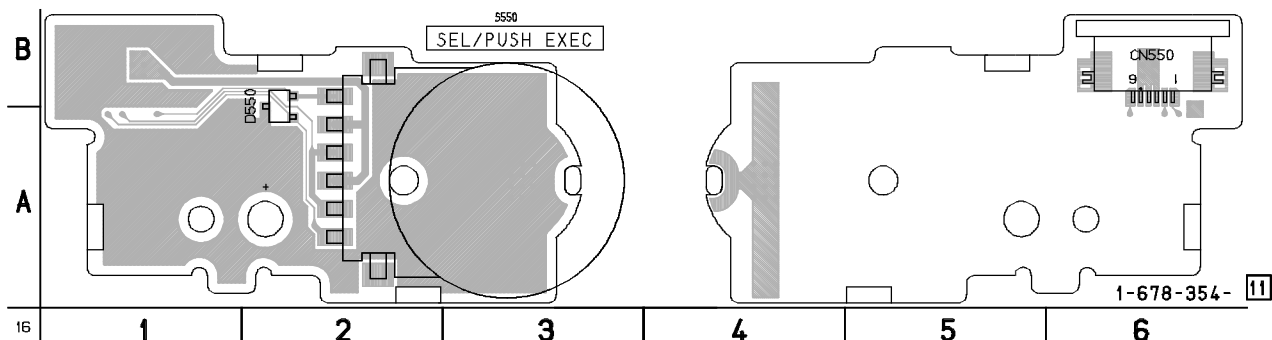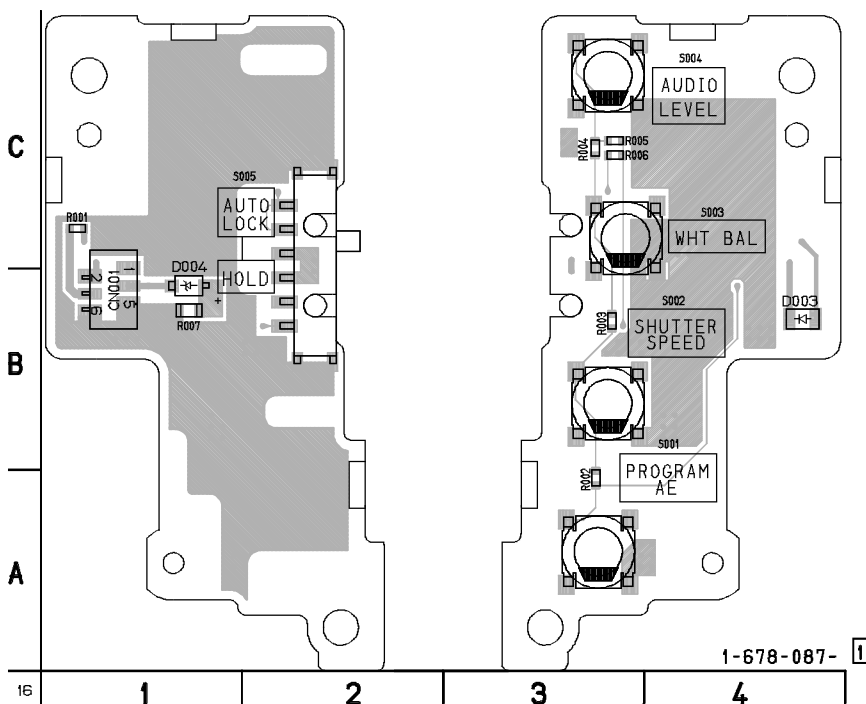**KP-010 BOARD (SIDE A)****KP-010 BOARD (SIDE B)****MK-014 BOARD (SIDE A)****MK-014 BOARD (SIDE B)****For printed wiring boards**

- Refer to page 4-117 for parts location.
- These boards are six-layer print board. However, the patterns of layers two to five have not been included in the diagrams.
- Chip parts


**Diode**

There are few cases that the part printed on this diagram isn't mounted in this model.

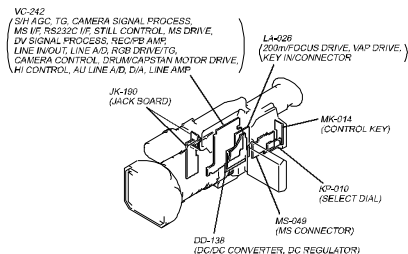


## For Schematic Diagram

• Refer to page 4-77 for MS-049 printed wiring board.

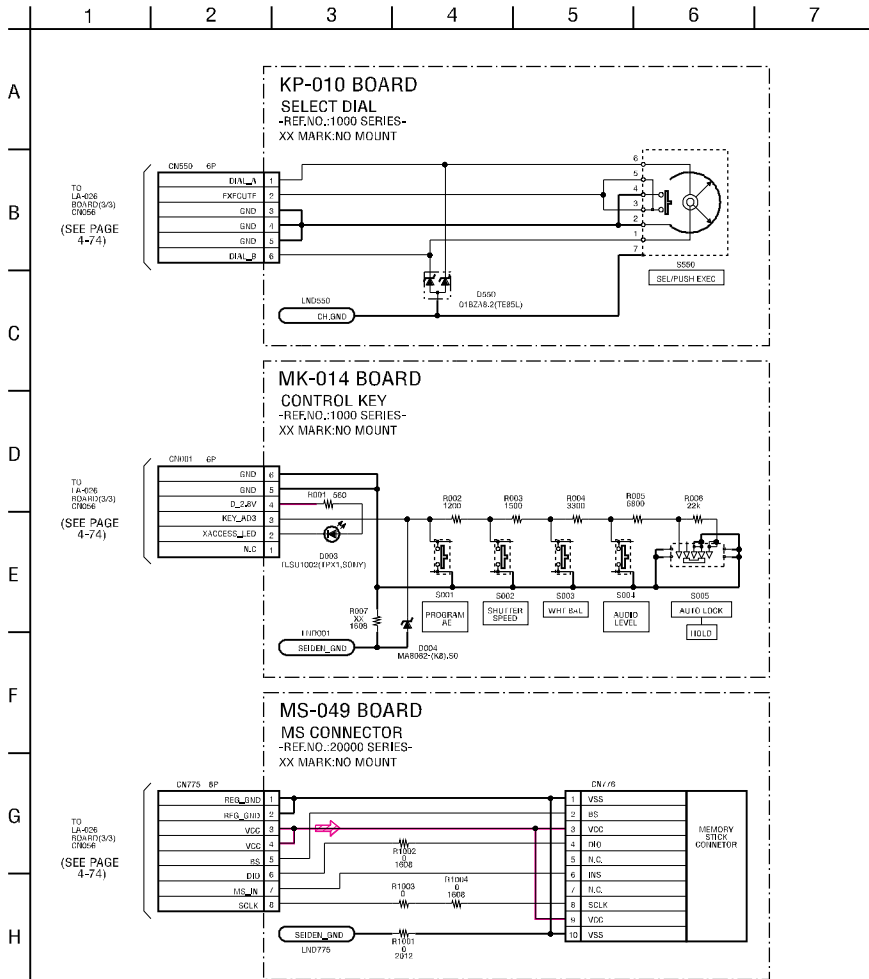

**FK-076 (CONTROL SWITCH) PRINTED WIRING BOARD**



— Ref. No. FK-076 Board; 1,000 Series —

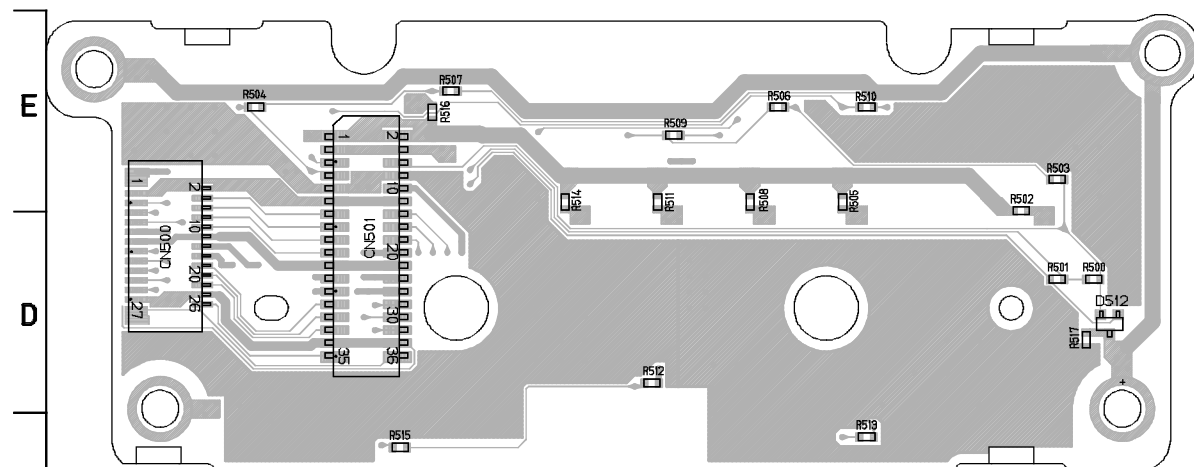
**FK-076 BOARD (SIDE A)****For printed wiring board**

- Refer to page 4-117 for parts location.
- This board is six-layer print board. However, the patterns of layers two to five have not been included in the diagram.
- Chip parts

**Diode**

There are few cases that the part printed on this diagram isn't mounted in this model.

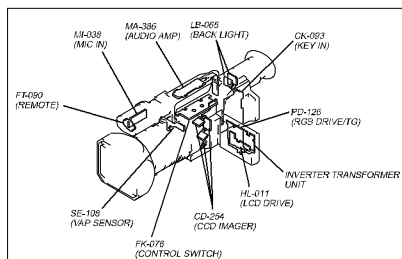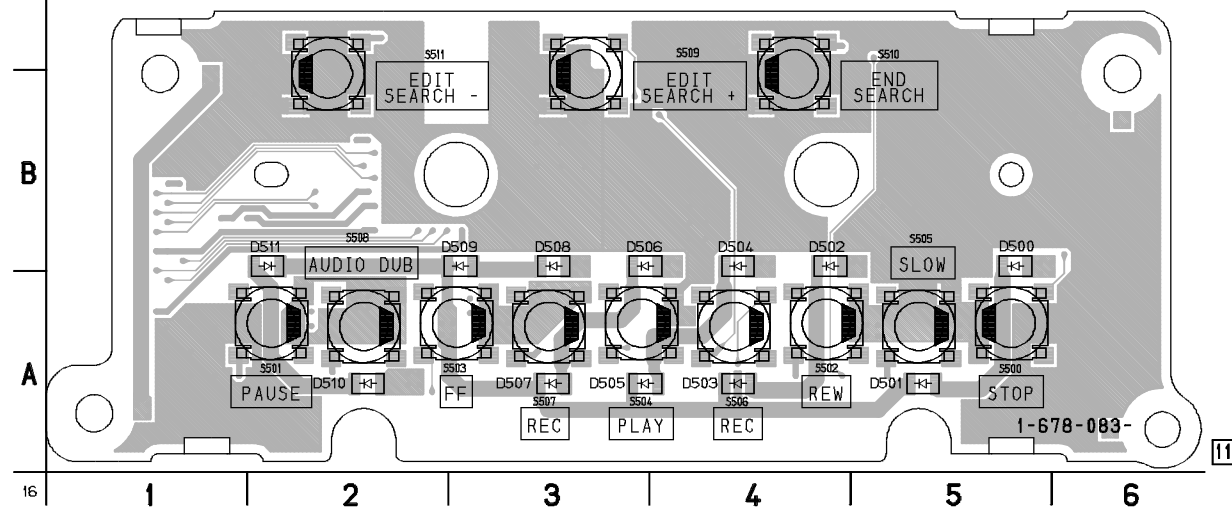
**FK-076 BOARD (SIDE B)**

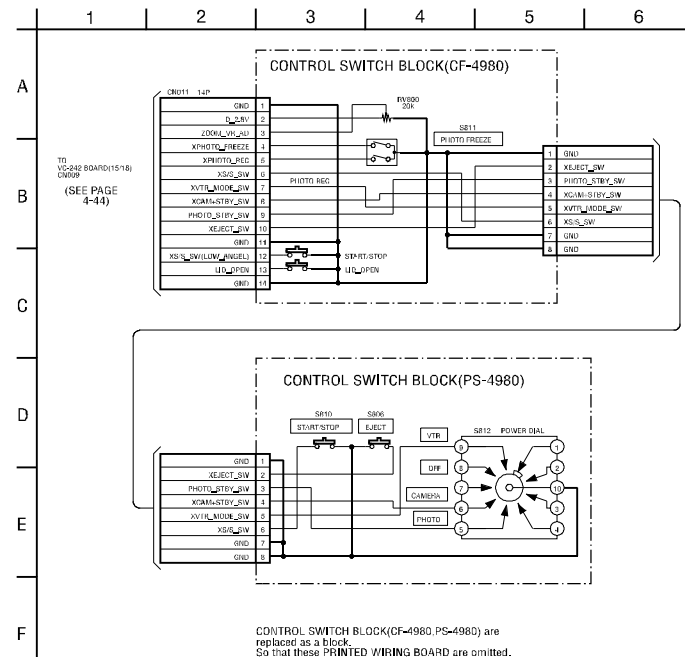

CONTROL SWITCH BLOCK(CF-4980,PS-4980) are replaced as a block.  
So that these PRINTED WIRING BOARD are omitted.






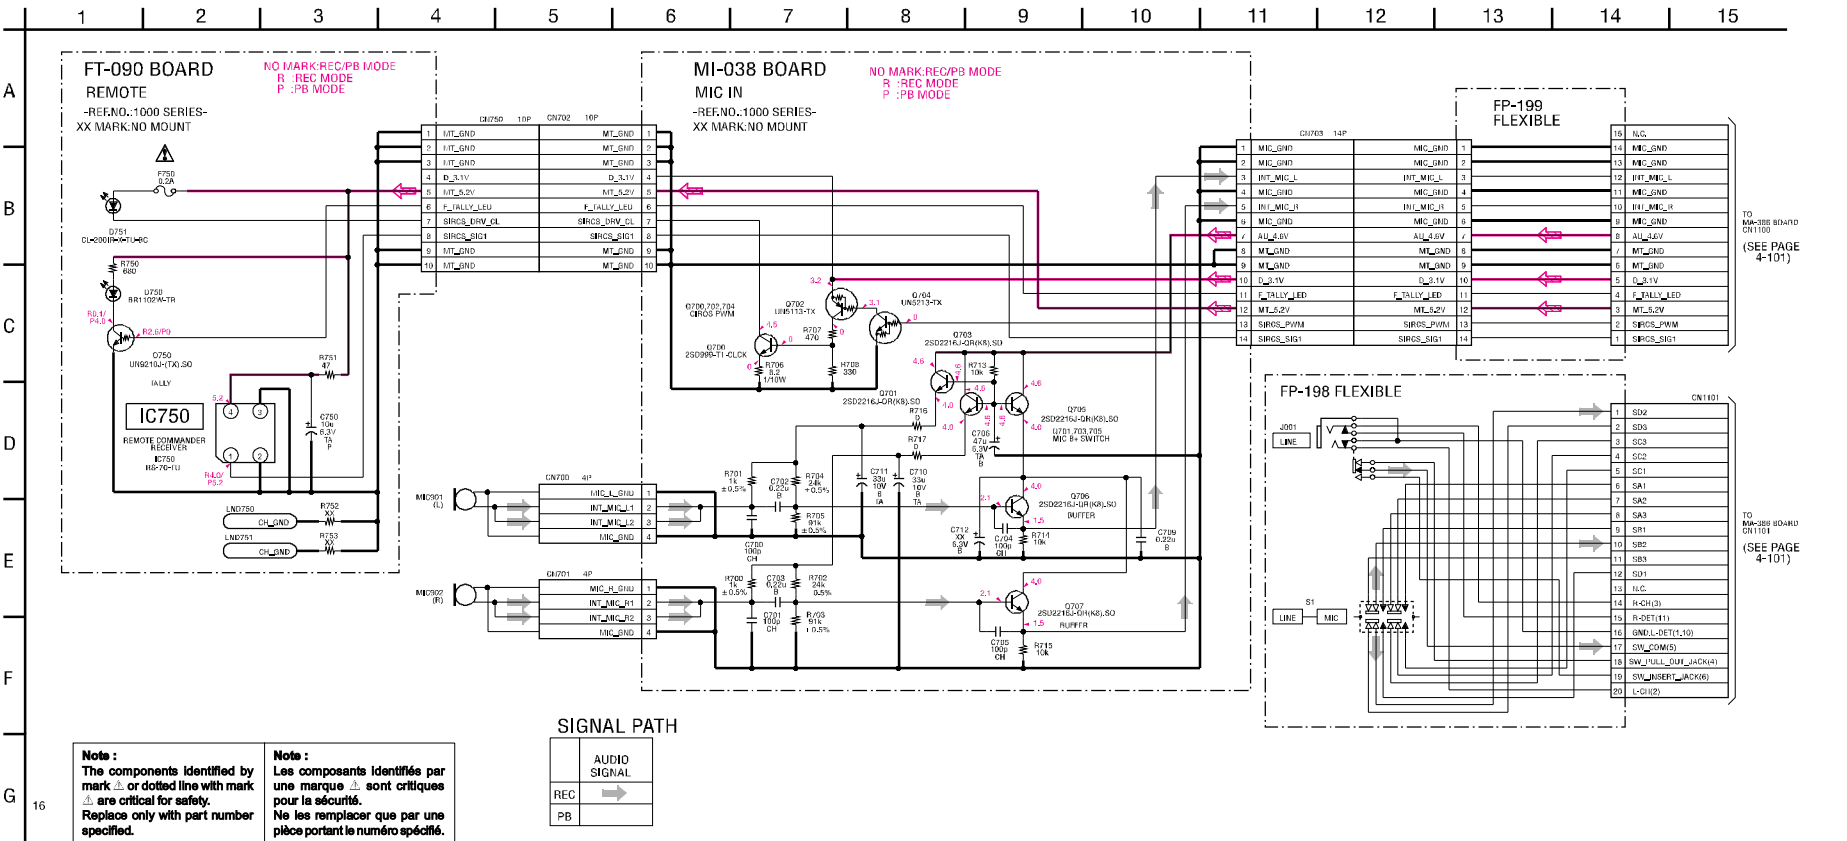


**LB-065 (BACK LIGHT) PRINTED WIRING BOARD**

— Ref. No. LB-065 Board; 1,000 Series —

**LB-065 BOARD  
(SIDE A)**

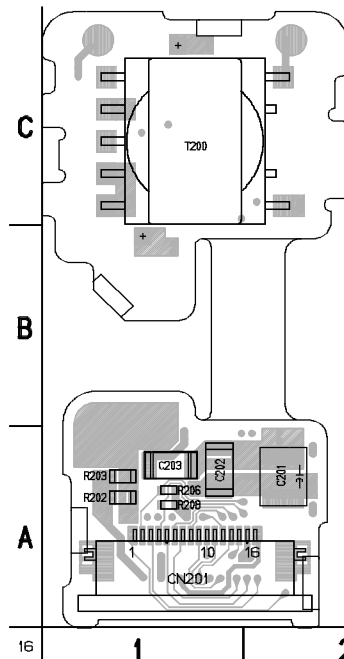


**LB-065 BOARD  
(SIDE B)**

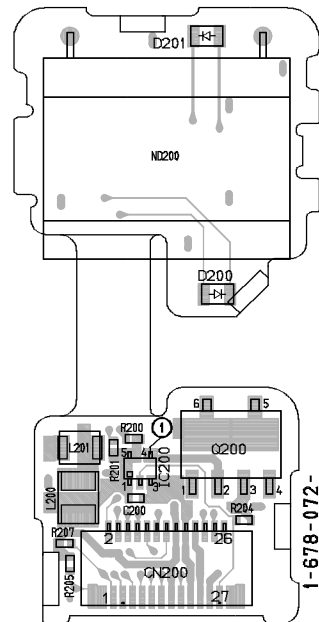


**For printed wiring board**

- Refer to page 4-118 for parts location.
- This board is four-layer print board. However, the patterns of layers two and three have not been included in the diagram.

There are few cases that the part printed on this diagram isn't mounted in this model.

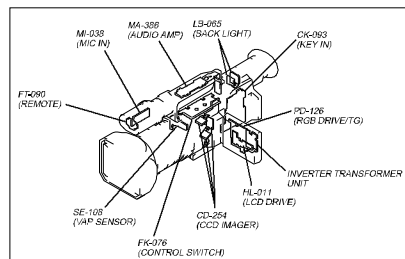

For Schematic Diagram  
• Refer to page 4-109 for waveform.

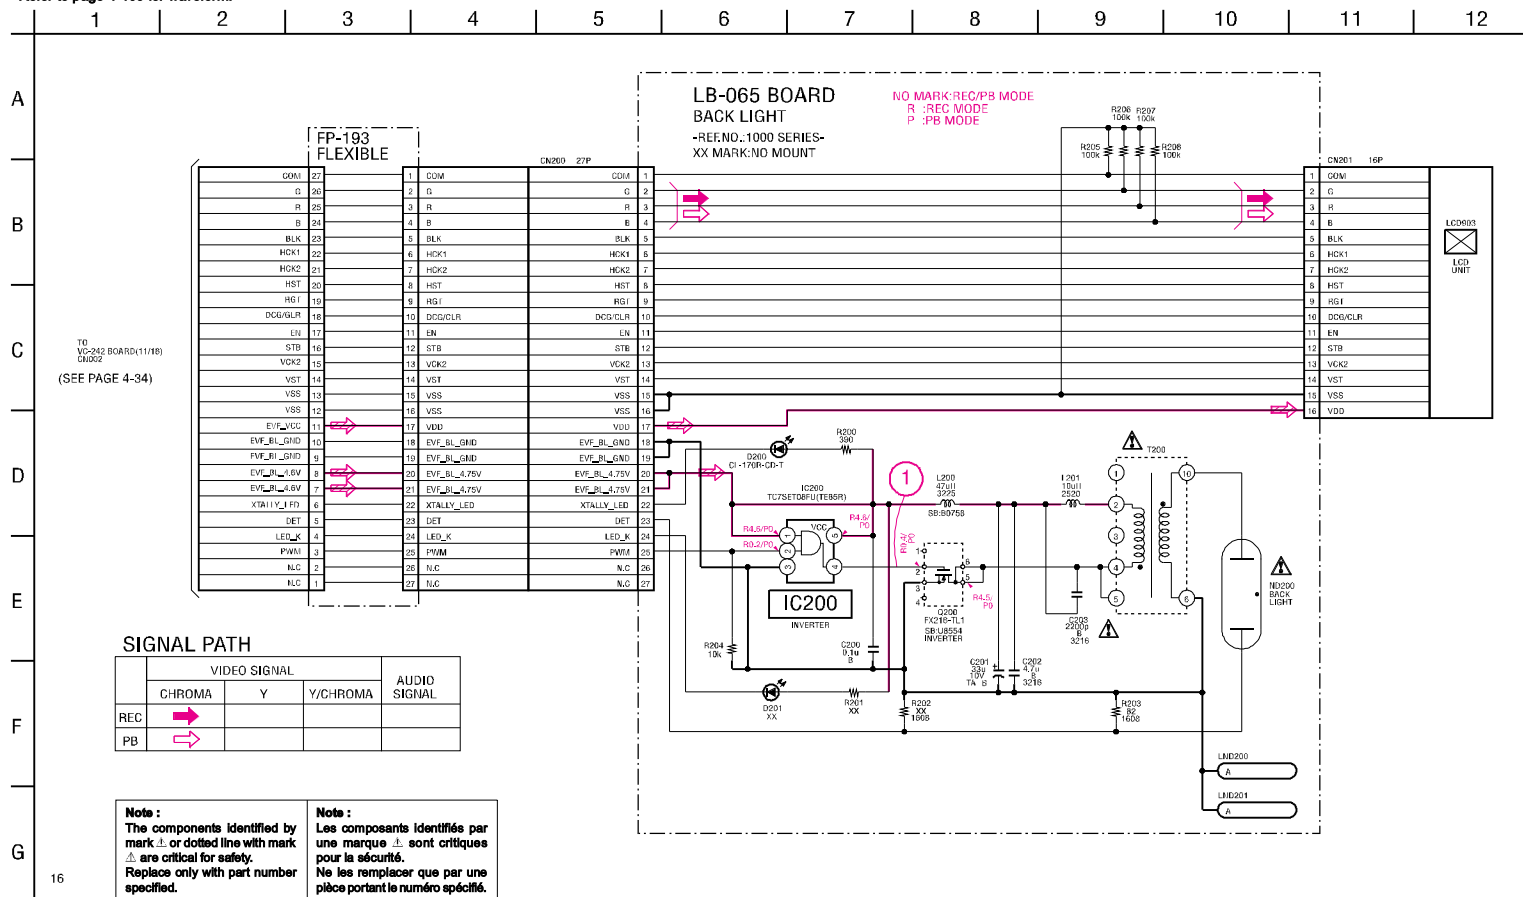

### SIGNAL PATH


	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC	→			
PB	→			

**Note :**  
The components identified by mark 1, or dotted line with mark 1, are critical for safety.  
Replace only with part number specified.

**Note :**  
Les composants identifiés par une marque 1, sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.




**HL-011 (LCD DRIVE) PRINTED WIRING BOARD**

— Ref. No. HL-011 Board; 20,000 Series —

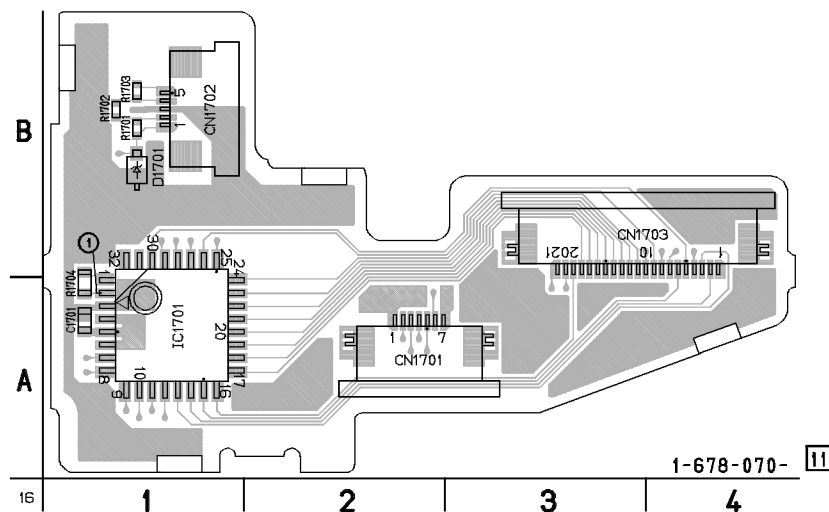
**HL-011 BOARD (SIDE A)****For printed wiring board**

- Refer to page 4-118 for parts location.
- This board is six-layer print board. However, the patterns of layers two to six have not been included in the diagram.

There are few cases that the part printed on this diagram isn't mounted in this model.

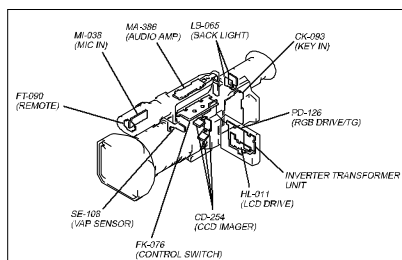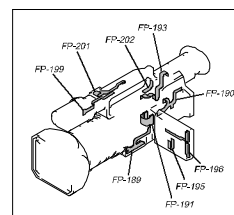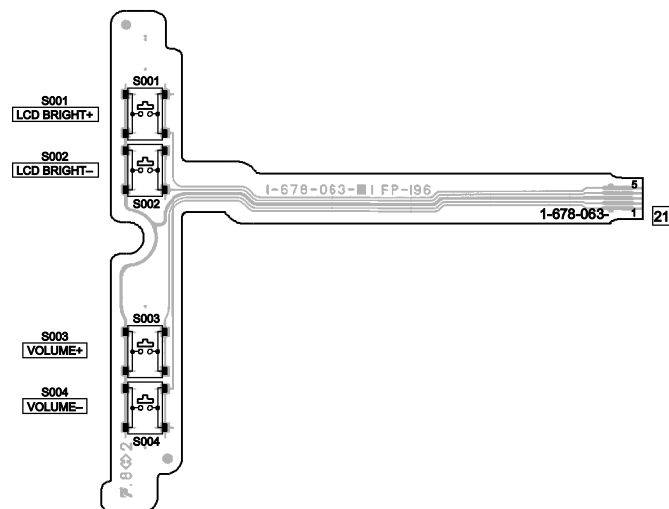**FP-196 FLEXIBLE BOARD**

**For Schematic Diagram**  
• Refer to page 4-110 for waveform.

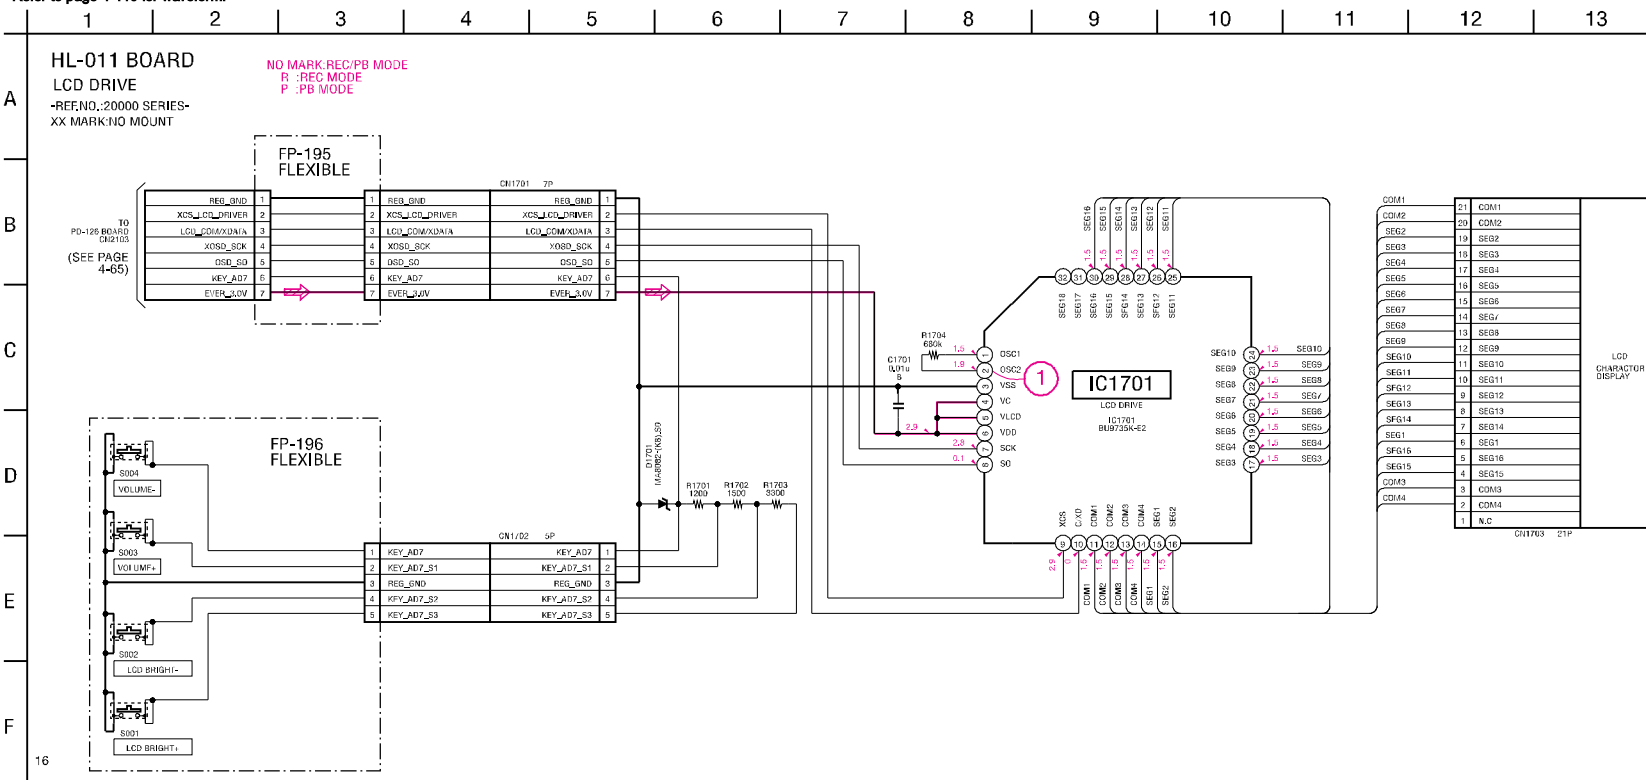



1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18

## MA-386 BOARD

## AUDIO AMP

-REF100,20000 SERIES-  
XX MARK NO MOUNT

NO MARK REC/PB MODE  
R : REC MODE  
P : PB MODE

## SIGNAL PATH



A

B

C

D

E

F

G

H

I

J


K

L

M

N


10

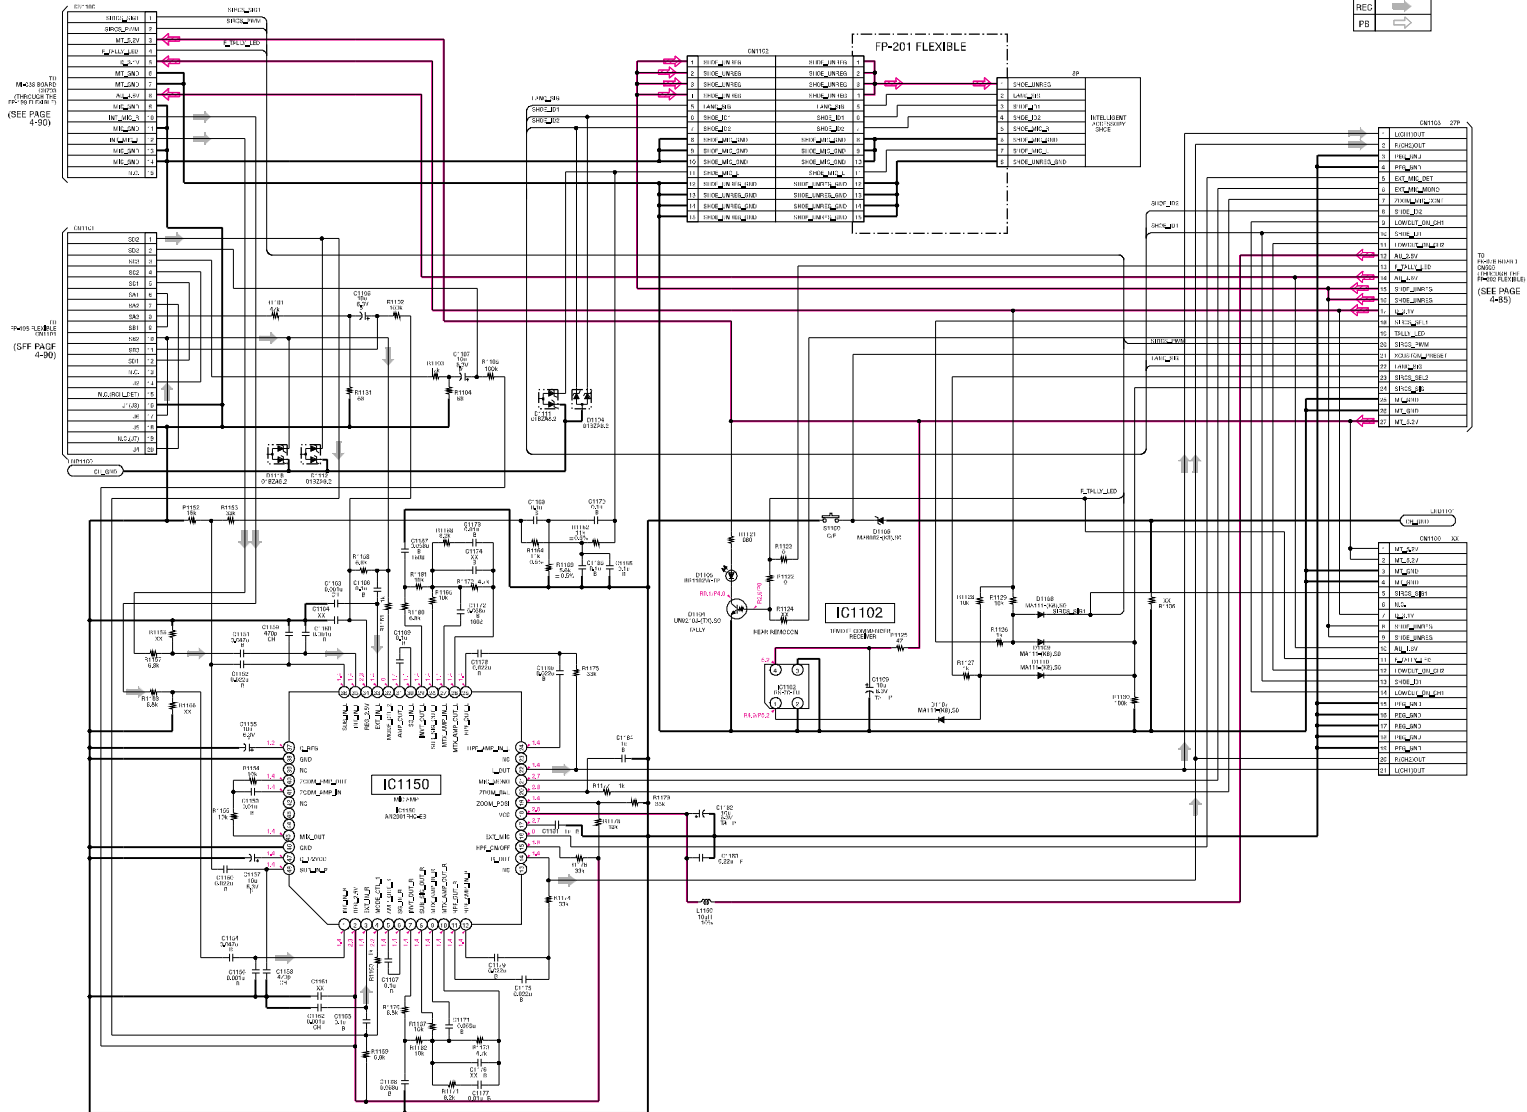









For Schematic Diagram  
• Refer to page 4-110 for waveforms.

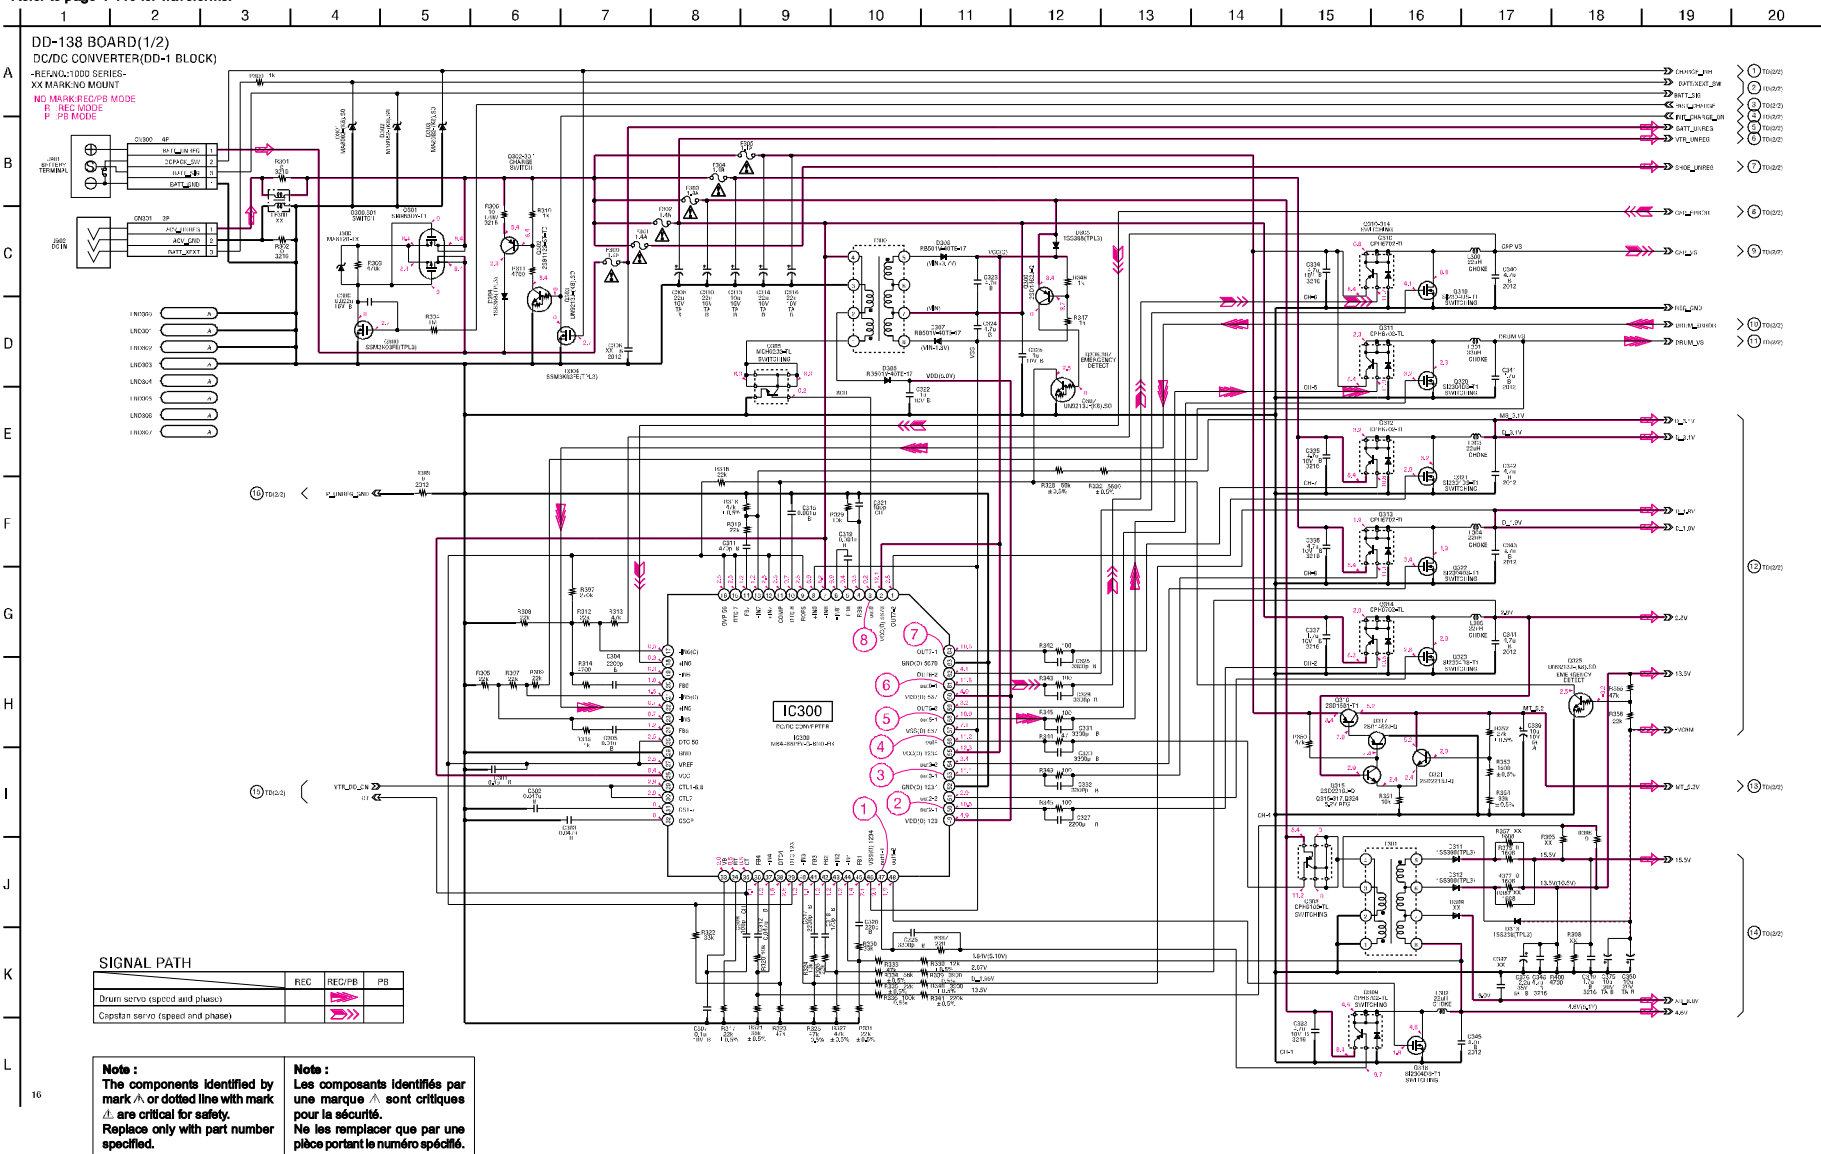


**For Schematic Diagram**  
• Refer to page 4-103 for printed wiring board.

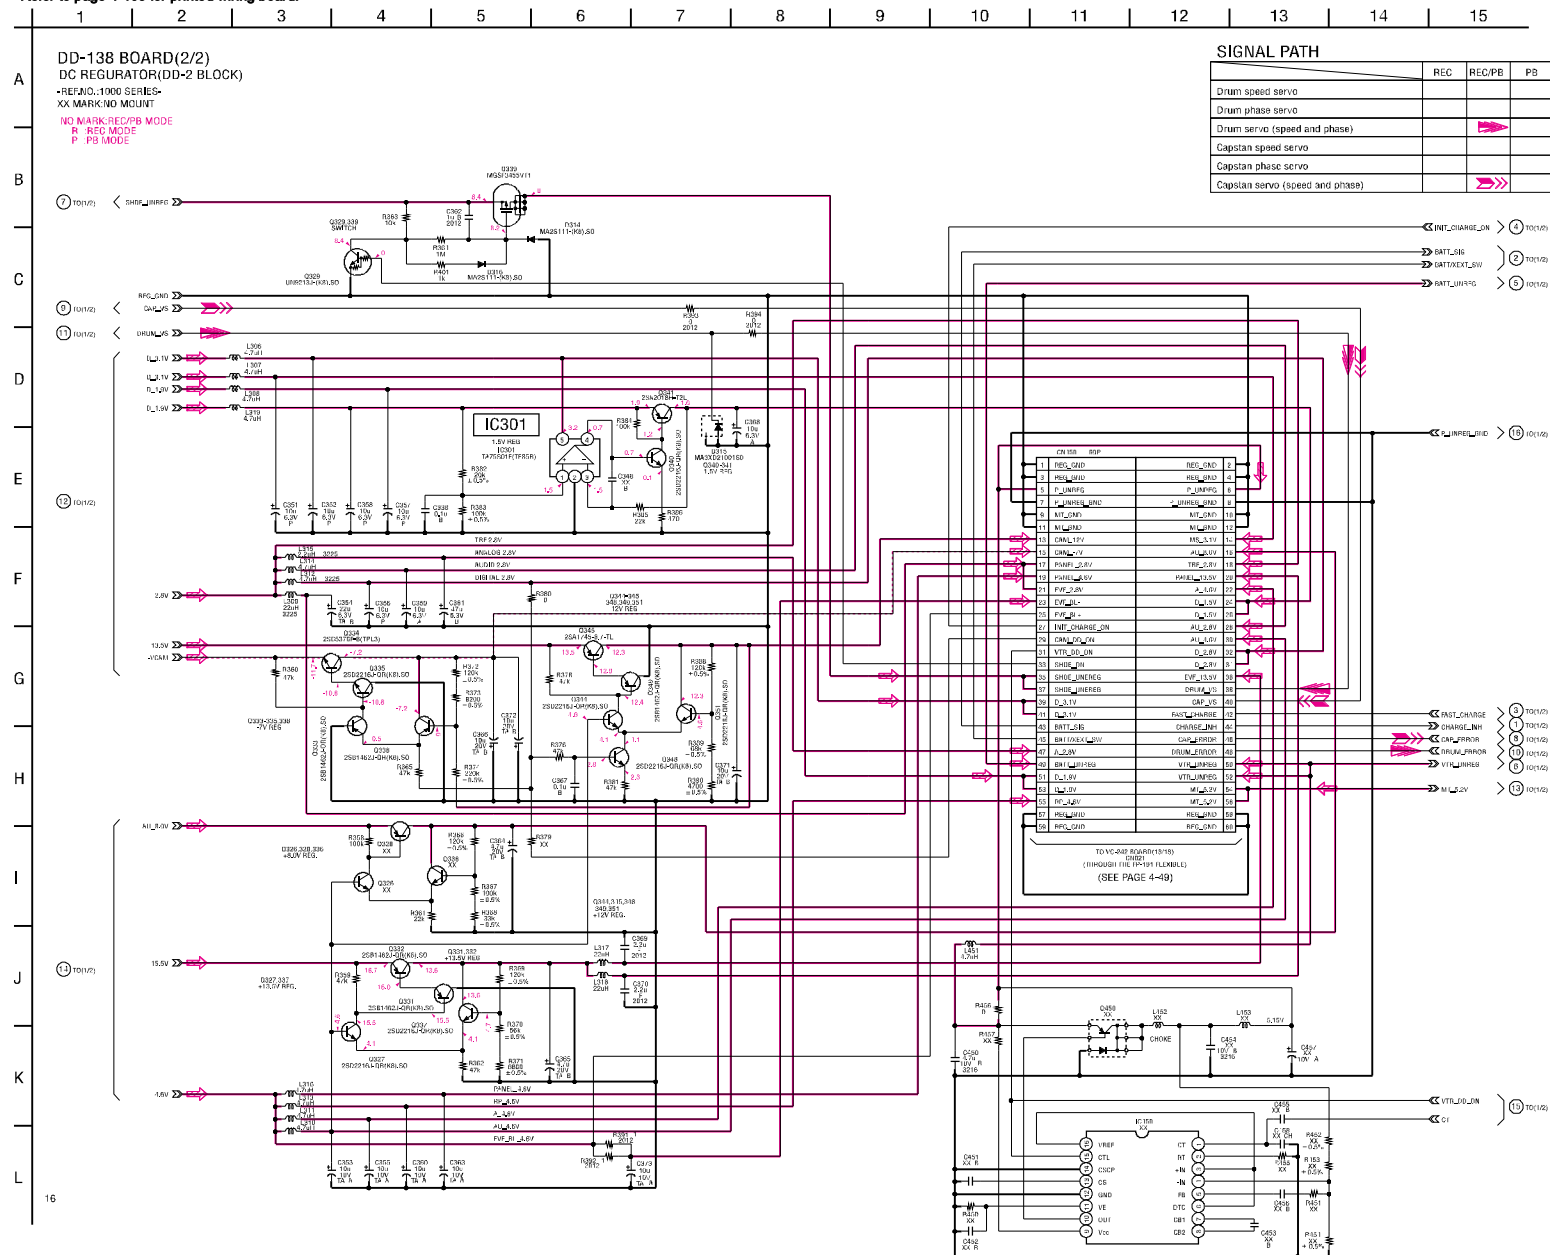


## 4-3. WAVEFORMS

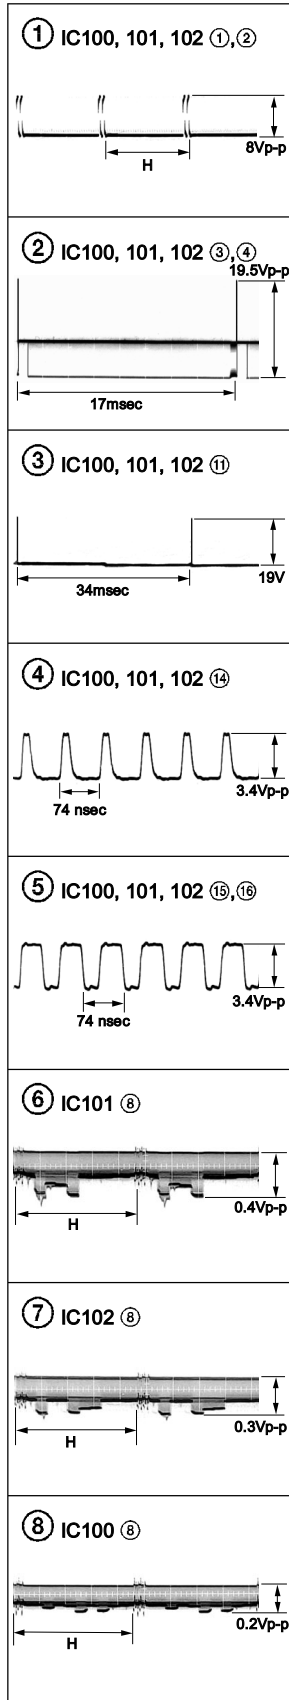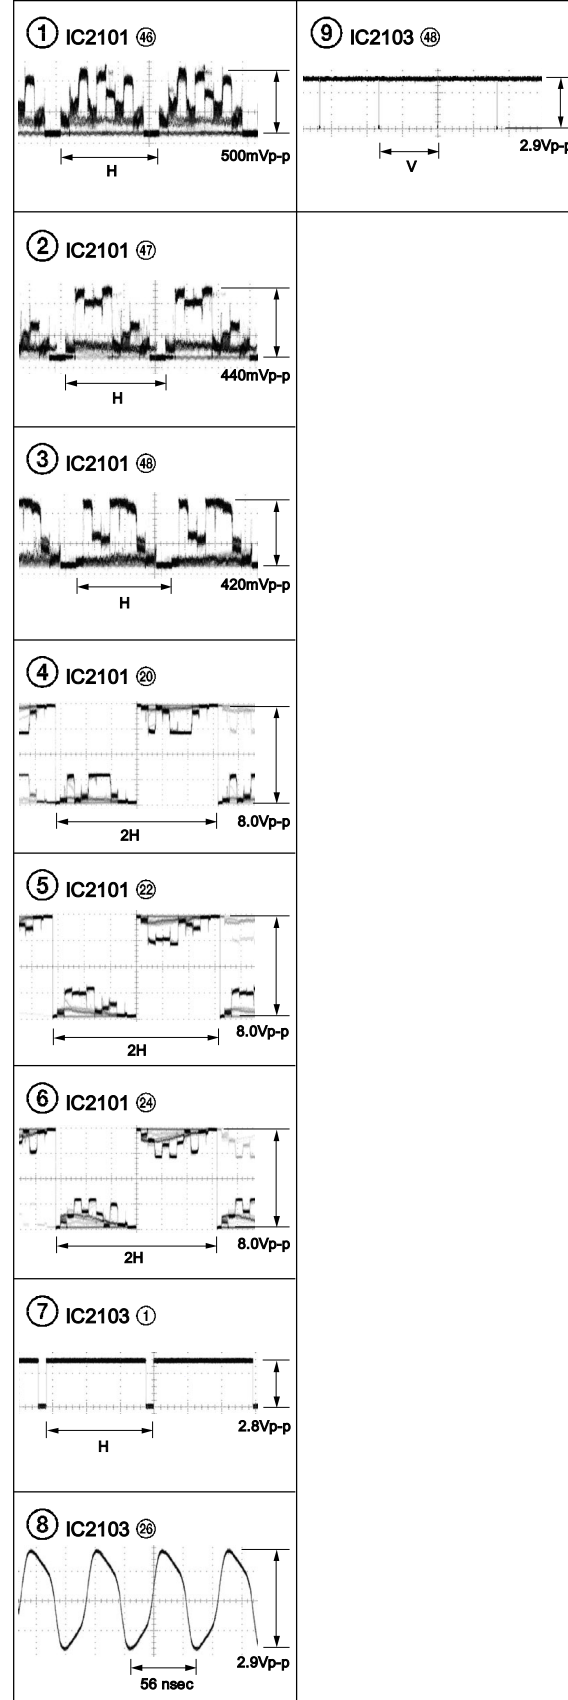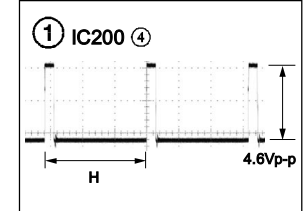**CD-254 BOARD**  
REC**PD-126 BOARD**  
REC/PB**LB-065 BOARD**  
REC/PB

**HL-011 BOARD**  
REC/PB

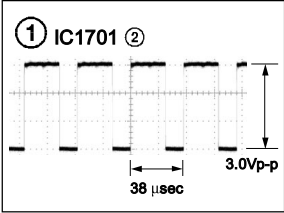

**DD-138 BOARD (1/2)**  
CAMERA REC

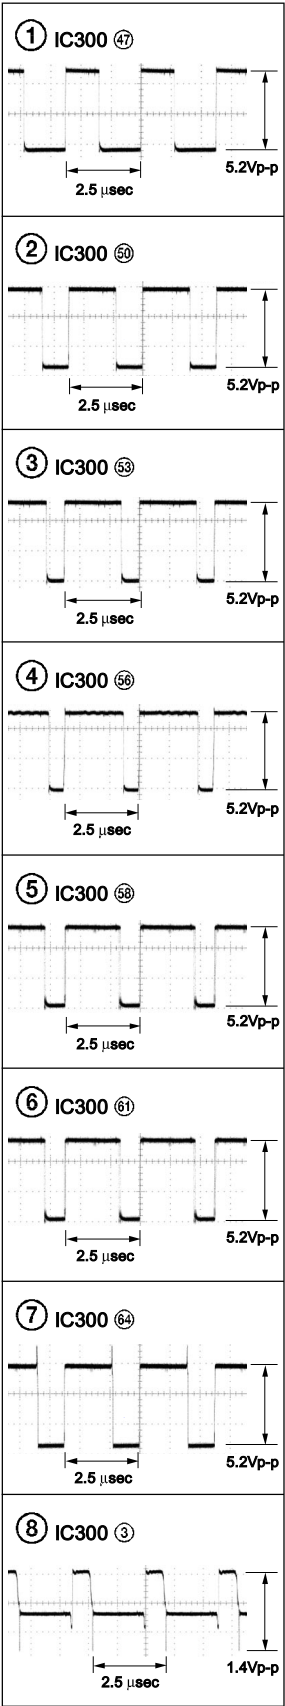

Waveforms and parts location of the VC-242 board are not shown.  
Pages from 4-111 to 4-115 are not shown.

## 4-4. MOUNTED PARTS LOCATION

## CD-254 BOARD (SIDE A)

C100	A-2	L100	A-2
C101	D-1	L101	D-2
C102	A-1	L104	D-1
C103	D-2	L105	G-1
C104	A-2	L106	A-1
C105	D-2	L107	G-1
C108	G-2		
C109	G-1	R100	A-1
C110	G-1	R101	A-1
C111	G-1	R102	D-1
C112	A-1	R103	D-1
C113	A-1	R104	G-1
C114	D-1	R105	G-1
C115	D-1	R106	A-1
C117	A-1	R107	D-2
C118	D-1	R108	D-2
C119	G-1	R109	A-1
C120	G-1	R110	G-2
C130	A-1	R111	G-2
C131	A-1	R112	A-1
C132	D-1	R114	G-2
C133	D-1		
C134	G-1		
C135	G-1		
IC103	A-1		
IC104	D-1		
IC105	G-2		

## CD-254 BOARD (SIDE B)

CN100	E-6
IC100	G-9
IC101	A-9
IC102	D-9

## JK-190 BOARD (SIDE A)

CN300	A-4	J300	D-4
		J301	F-4
D301	E-4	J302	F-1
D303	E-3	J303	D-1
D306	E-4		
		R300	E-3
FB300	E-4	R321	A-3
FB301	E-4		

## JK-190 BOARD (SIDE B)

C301	B-7	R301	C-7
C302	B-7	R302	C-7
C303	B-7	R303	C-7
C304	B-7	R304	B-7
		R305	A-7
		R306	B-7
		R307	B-7
		R308	B-7
		R309	C-7
		R310	C-9
		R311	E-8
		R312	E-9
		R313	E-8
		R314	E-9
		R315	D-9
		R316	D-8
		R317	D-9
		R318	D-9
		R319	D-9
		R320	E-9
		R322	B-7
		R323	C-7
D300	A-7		
D302	B-7		
D304	C-7		
D305	A-7		
D307	B-7		
D308	C-7		
D309	D-9		
D310	D-8		
D311	C-9		
D312	E-9		
D313	E-9		
D314	E-8		
L301	B-7		
L302	B-7		

## CK-093 BOARD (SIDE A)

BT250	C-3	D253	A-2
		D254	A-2
		D255	A-2
CN250	E-3		
CN252	A-5		
CN253	D-4	R250	F-4
CN254	A-2	R251	C-1
CN255	F-1	R252	F-4
CN256	F-2	R253	F-3
		R254	F-4

## CK-093 BOARD (SIDE B)

CN251	B-6	R267	E-8
		R268	E-9
		R269	B-10
D250	F-9		
D251	F-8		
D252	B-10	S250	D-7
		S251	E-7
		S252	E-9
		S253	C-7
		S254	E-9
		S255	D-8
		S256	B-10
		S257	E-8
		S258	D-9
		S259	E-10
		S260	E-10
		S261	E-7
		S262	E-8
		S263	B-9
R255	F-7		
R256	E-9		
R257	D-8		
R258	C-8		
R259	E-10		
R260	D-9		
R261	C-8		
R262	E-10		
R263	D-10		
R264	C-8		
R265	E-9		
R266	B-10		

## PD-126 BOARD (SIDE A)

C2101	C-1	Q2108	B-1
C2102	D-1	Q2109	B-3
C2103	D-1	Q2111	C-2
C2104	C-1	Q2112	B-3
C2105	C-1	Q2181	C-3
C2106	D-1	Q2182	D-3
C2107	C-1	Q2183	B-3
C2108	D-1		
C2109	D-1	R2109	D-1
C2110	C-1	R2110	D-1
C2111	C-2	R2111	D-1
C2112	D-2	R2112	C-1
C2113	C-2	R2113	B-1
C2114	D-2	R2114	D-2
C2115	D-3	R2115	C-2
C2116	C-2	R2116	C-2
C2117	C-2	R2117	C-2
C2118	D-2	R2118	C-2
C2119	D-3	R2119	C-2
C2120	D-2	R2122	C-2
C2121	C-2	R2123	C-3
C2122	C-2	R2124	C-2
C2123	C-3	R2125	C-2
C2124	C-3	R2126	C-3
C2125	C-3	R2127	D-3
C2126	B-3	R2128	C-3
C2127	C-3	R2129	C-2
C2128	B-3	R2134	C-3
C2129	B-2	R2135	C-2
C2130	D-1	R2136	C-2
C2131	C-2	R2137	C-3
C2132	C-1	R2138	C-3
C2133	B-2	R2139	B-2
C2134	D-1	R2140	B-2
C2135	D-1	R2141	B-2
C2136	C-1	R2142	B-2
C2137	D-2	R2144	C-3
C2138	C-3	R2145	C-3
C2181	C-3	R2146	B-1
C2182	B-3	R2147	C-3
C2183	C-3	R2148	C-3
C2184	C-3	R2149	B-2
C2185	C-3	R2150	B-3
C2186	D-3	R2151	C-2
		R2152	B-3
		R2153	B-3
		R2154	B-3
		R2155	A-3
		R2157	B-3
		R2158	C-3
		R2159	B-3
		R2160	B-3
		R2161	B-3
		R2162	B-2
		R2163	C-2
		R2165	B-3
		R2166	B-3
		R2168	D-1
		R2169	D-1
		R2170	C-2
		R2171	D-3
		R2172	B-3
		R2173	D-1
		R2174	D-1
		R2175	C-1
		R2176	C-2
		R2177	B-3
		R2178	C-2
		R2179	C-2
		R2180	C-2
		R2181	D-3
		R2182	D-3
		R2183	A-4
		R2184	B-2
		R2185	D-2
		R2186	D-3
CN2100	C-1		
CN2101	B-1		
CN2103	B-3		
CN2104	B-2		
CN2105	D-3		
D2101	C-1		
D2102	C-2		
D2103	B-2		
D2104	B-2		
D2105	B-3		
D2181	A-3		
IC2101	D-2		
IC2103	B-2		
L2101	C-1		
L2102	C-1		
L2103	D-2		
L2104	C-2		
L2105	B-1		
L2181	C-3		
L2182	C-3		
Q2101	D-3		
Q2102	C-3		
Q2103	C-3		
Q2104	C-3		
Q2105	C-2		
Q2106	B-2		
Q2107	B-1		

**LA-026 BOARD (SIDE A)**

C095	D-4	R067	D-5
C140	C-2	R112	D-4
C141	A-3	R114	D-5
C142	B-3	R118	C-5
C143	A-3	R120	C-5
C144	B-3	R140	D-3
C145	C-4	R141	C-3
C146	C-3	R147	B-3
C147	C-3	R148	A-3
C148	C-2	R149	B-3
C149	C-3	R150	B-3
C150	C-4	R151	C-3
C151	C-4	R152	C-4
C152	B-1	R153	C-3
C153	C-3	R154	C-3
C154	B-1	R155	C-3
C155	B-3	R156	C-3
C156	C-3	R157	C-3
C157	B-3	R158	C-3
C158	C-3	R159	C-4
C159	C-2	R160	C-3
C160	B-3	R161	C-3
C161	B-4	R162	C-3
C162	A-3	R163	C-3
C163	A-2	R164	C-4
C164	B-3	R165	C-3
C165	A-3	R166	C-3
C166	C-3	R167	C-4
C167	B-4	R168	C-2
C168	A-4	R169	C-2
C170	C-3	R170	C-2
		R171	A-3
CN050	A-1	R172	A-3
CN052	A-2	R173	A-3
CN053	E-4	R174	A-3
CN054	A-4	R177	B-3
CN055	D-2	R178	A-2
CN056	B-5	R179	A-4
		R180	A-4
D140	B-3	R181	A-4
		R182	A-4
FB140	A-3	R185	B-4
		R186	A-3
IC140	B-1	R187	B-3
IC141	C-3		
IC142	C-2		
IC143	B-2		
IC144	B-4		
L072	D-5		
L140	B-1		
L141	B-2		
L142	C-3		
L143	C-3		
Q050	B-4		
Q072	D-4		
Q075	D-5		
Q077	C-5		
Q140	D-3		
Q141	D-3		
Q142	B-3		
Q143	C-3		
R050	D-3		
R051	D-3		
R052	D-3		
R053	D-3		
R054	D-3		
R055	D-3		
R060	A-1		
R065	C-5		
R066	E-5		

**LA-026 BOARD (SIDE B)**

C070	A-8	R056	E-8
C071	B-9	R057	E-8
C072	B-8	R058	E-8
C073	B-9	R061	D-6
C074	B-8	R062	D-6
C075	B-9	R063	D-6
C076	B-7	R064	D-6
C077	B-8	R070	B-9
C078	C-7	R071	B-9
C079	C-7	R072	B-8
C080	B-8	R073	B-8
C081	C-9	R074	B-8
C082	C-8	R075	B-8
C083	C-9	R076	B-7
C084	C-8	R077	B-9
C085	C-8	R078	B-9
C086	C-9	R079	B-7
C087	C-9	R080	B-8
C088	C-8	R081	B-9
C089	C-9	R082	B-8
C090	C-9	R083	B-8
C091	C-8	R084	B-7
C092	C-8	R085	B-7
C093	C-8	R086	C-7
C094	C-8	R087	C-7
C096	C-8	R088	B-8
C097	C-8	R089	B-8
C098	B-8	R090	C-8
C099	B-8	R091	C-9
C100	C-8	R092	C-8
C200	B-10	R093	C-9
C201	B-10	R094	C-9
C202	B-10	R095	C-8
C203	B-9	R096	C-8
C204	B-10	R097	C-9
C205	B-9	R098	C-8
C206	C-10	R099	C-9
C207	C-9	R100	C-8
C208	C-10	R101	C-8
C209	C-9	R102	C-8
C210	C-10	R103	C-9
C211	C-9	R104	C-9
C212	C-10	R105	C-8
C213	C-9	R106	B-8
C214	C-10	R107	B-8
C215	C-10	R108	B-8
		R109	B-8
CN051	E-7	R110	D-8
		R111	D-8
D070	B-8	R113	C-7
		R115	C-7
IC070	B-9	R116	C-7
IC071	B-8	R117	C-7
IC072	B-7	R119	C-7
IC073	B-8	R142	A-10
IC074	C-8	R143	A-10
IC075	C-8	R144	A-9
IC076	C-8	R145	A-10
IC200	C-10	R146	A-10
		R200	B-10
L070	C-7	R201	B-9
L071	C-8	R202	B-9
L073	C-8	R203	B-10
L200	C-10	R204	C-10
		R205	C-9
Q070	B-7	R206	C-10
Q071	B-7	R207	C-10
Q073	D-8	R208	C-9
Q074	D-8	R209	C-9
Q076	C-7	R210	C-9
Q078	C-7	R211	C-10
Q200	C-10		
Q201	C-9		

**SE-108 BOARD (SIDE A)**

SE600	B-3
SE601	B-2
SE602	B-2
SE603	B-3

**SE-108 BOARD (SIDE B)**

C600	B-5
C601	B-5
CN600	B-5
L600	B-5

**MS-049 BOARD (SIDE A)**

CN775	C-3
R1001	C-3
R1002	C-3
R1003	C-3
R1004	C-3

**MS-049 BOARD (SIDE B)**

CN776	B-7
-------	-----

**KP-010 BOARD (SIDE A)**

D550	A-2
S550	A-3

**KP-010 BOARD (SIDE B)**

CN550	B-6
-------	-----

**MK-014 BOARD (SIDE A)**

CN001	B-1
D004	B-1
R001	C-1
R007	B-1
S005	C-2

**MK-014 BOARD (SIDE B)**

D003	B-4
R002	A-3
R003	B-3
R004	C-3
R005	C-3
R006	C-3
S001	A-3
S002	B-3
S003	C-3
S004	C-3

**FK-076 BOARD (SIDE A)**

CN500	D-1	R507	E-2
CN501	D-2	R508	E-4
		R509	E-4
D512	D-6	R510	E-5
		R511	E-4
R500	D-6	R512	D-4
R501	D-6	R513	C-5
R502	E-5	R514	E-3
R503	E-6	R515	C-2
R504	E-2	R516	E-2
R505	E-4	R517	D-6
R506	E-4		

**FK-076 BOARD (SIDE B)**

D500	B-5	S500	A-5
D501	A-5	S501	A-2
D502	B-4	S502	A-4
D503	A-4	S503	A-3
D504	B-4	S504	A-3
D505	A-3	S505	A-5
D506	B-3	S506	A-4
D507	A-3	S507	A-3
D508	B-3	S508	A-2
D509	B-3	S509	B-3
D510	A-2	S510	B-4
D511	B-2	S511	B-2



DCR-VX2000/VX2000E

MI-038 BOARD (SIDE A)

C700	D-2	Q704	D-2
C702	D-2	Q705	D-3
C704	D-2	Q706	D-2
C709	D-3		
C711	D-2	R701	D-2
		R704	D-2
CN700	C-2	R705	D-2
CN702	D-1	R706	C-1
CN703	D-3	R707	D-1
		R708	D-1
Q700	D-1	R713	D-3
Q701	D-3	R714	D-2
Q702	D-1	R716	D-2
Q703	D-3		

MI-038 BOARD (SIDE B)

C701	A-2	Q707	A-2
C703	A-2		
C705	A-2	R700	A-2
C706	A-3	R702	A-2
C710	A-3	R703	A-2
C712	A-3	R715	A-2
		R717	A-3
CN701	B-2		

FT-090 BOARD (SIDE A)

C750	B-1		
D750	A-2		
D751	A-2		
F750	A-2		
IC750	A-1		
Q750	A-2		
R751	B-2		
R752	B-1		
R753	B-2		

FT-090 BOARD (SIDE B)

CN750	A-4		
R750	A-4		

LB-065 BOARD (SIDE A)

C201	A-2		
C202	A-1		
C203	A-1		
CN201	A-1		
R202	A-1		
R203	A-1		
R206	A-1		
R208	A-1		
T200	C-1		

LB-065 BOARD (SIDE B)

C200	A-4	ND200	C-4
CN200	A-4	Q200	A-4
D200	B-4	R200	A-4
D201	C-4	R201	A-3
		R204	A-4
IC200	A-4	R205	A-3
		R207	A-3
L200	A-3		
L201	A-3		

HL-011 BOARD (SIDE A)

C1701	A-1		
CN1701	A-2		
CN1702	B-1		
CN1703	B-3		
D1701	B-1		
IC1701	A-1		
R1701	B-1		
R1702	B-1		
R1703	B-1		
R1704	A-1		

MA-386 BOARD (SIDE A)

C1109	D-10	R1121	D-9
		R1122	D-10
CN100	D-1	R1123	D-10
CN1102	D-2	R1124	D-10
CN1103	D-10	R1125	D-10
CN1106	D-4	R1126	D-10
		R1127	C-10
D1104	D-5	R1128	D-10
D1105	D-8	R1129	D-10
D1106	D-9	R1130	D-10
D1107	D-10	R1136	D-9
D1108	D-10	R1156	C-1
D1109	D-10	R1157	C-1
D1110	D-10	R1163	C-2
		R1166	C-2
IC1102	D-8		
		S1100	D-9
Q1104	D-10		

MA-386 BOARD (SIDE B)

C1106	B-1	D1111	A-2
C1107	B-1	D1112	B-2
C1150	A-3	D1116	A-2
C1151	B-2		
C1152	B-2	IC1150	A-3
C1153	A-3		
C1154	A-3	L1150	A-4
C1155	B-3		
C1156	A-3	R1101	A-1
C1157	A-2	R1102	B-2
C1158	A-3	R1103	B-1
C1159	B-3	R1104	B-1
C1160	B-2	R1105	B-2
C1161	A-3	R1131	B-1
C1162	A-3	R1152	A-2
C1163	B-3	R1153	A-2
C1164	B-3	R1154	A-3
C1165	A-3	R1155	A-2
C1166	B-3	R1158	B-2
C1167	A-3	R1159	A-3
C1168	A-2	R1160	A-3
C1169	B-3	R1161	B-3
C1170	A-2	R1162	A-2
C1171	A-3	R1164	A-2
C1172	B-3	R1165	B-3
C1173	B-4	R1167	A-3
C1174	B-3	R1168	B-4
C1175	A-3	R1169	A-2
C1176	A-4	R1170	A-3
C1177	A-4	R1171	A-4
C1178	B-3	R1172	B-3
C1179	A-3	R1173	A-4
C1180	B-3	R1174	A-3
C1181	A-4	R1175	A-3
C1182	A-4	R1176	A-4
C1183	A-3	R1177	B-4
C1184	A-4	R1178	A-4
C1185	A-2	R1179	A-4
C1186	A-2	R1180	B-3
C1187	B-4	R1181	B-3
C1188	A-4	R1182	A-3
CN1101	A-1		

## DD-138 BOARD (SIDE A)

C300	A-4	L312	D-4
C306	A-4	L314	D-4
C308	A-2	L315	D-4
C310	A-2	L317	D-4
C313	A-3	L318	D-4
C314	A-3	L319	B-4
C316	A-3	L451	B-4
C322	B-1	L452	B-3
C323	A-2	L453	B-4
C324	B-2		
C326	A-1	LF300	B-4
C339	A-1		
C346	B-2	Q300	B-3
C347	C-2	Q301	A-3
C349	B-2	Q302	A-2
C350	B-1	Q303	A-2
C351	C-4	Q304	A-3
C352	C-4	Q305	B-1
C354	C-4	Q306	A-2
C356	C-4	Q307	A-2
C357	B-4	Q308	B-2
C358	B-4	Q316	A-2
C359	C-4	Q326	E-4
C361	C-5	Q327	D-4
C364	E-4	Q328	E-4
C365	D-4	Q331	D-4
C369	D-4	Q332	D-4
C370	D-4	Q336	E-4
C375	B-1	Q337	D-4
C376	B-3		
		R300	B-4
CN300	A-4	R301	B-4
CN301	A-4	R302	B-4
		R303	A-3
D300	A-3	R304	A-4
D301	B-4	R306	A-3
D302	A-3	R310	B-2
D303	A-3	R311	B-2
D304	A-3	R346	B-2
D305	A-1	R347	B-2
D306	A-2	R358	E-4
D307	B-1	R359	D-4
D308	A-2	R361	E-4
D309	B-2	R362	D-4
D311	B-2	R366	E-4
D312	B-2	R367	E-4
D313	B-1	R368	E-4
		R369	D-4
F300	A-3	R370	D-4
F301	A-3	R371	D-4
F302	A-2	R380	D-4
F303	A-2	R395	B-2
F304	A-3	R396	B-2
F305	A-3	R398	B-2
		R400	B-2
L300	B-3		
L301	C-3	T300	A-1
L302	C-2	T301	B-2
L303	C-3		
L304	C-3		
L305	C-3		
L306	C-4		
L307	C-4		
L308	C-4		
L309	D-4		

## DD-138 BOARD (SIDE B)

C301	A-8	L310	D-6
C302	A-8	L311	D-6
C303	A-8	L313	D-6
C304	A-8	L316	D-6
C305	A-8		
C307	A-9	Q309	C-8
C309	A-9	Q310	B-7
C311	A-8	Q311	C-7
C312	A-9	Q312	C-7
C315	A-8	Q313	C-7
C317	B-9	Q314	C-7
C318	B-9	Q315	A-9
C319	B-8	Q317	A-9
C320	B-9	Q318	C-8
C321	B-8	Q319	B-7
C325	B-9	Q320	C-7
C327	B-9	Q321	C-7
C328	B-8	Q322	C-7
C329	B-8	Q323	C-7
C330	B-8	Q324	A-9
C331	B-8	Q325	D-6
C332	B-7	Q329	A-6
C333	C-8	Q333	E-6
C334	B-7	Q334	D-6
C335	C-7	Q335	E-6
C336	C-7	Q338	D-6
C337	C-7	Q339	A-6
C338	A-7	Q340	A-7
C340	B-7	Q341	A-7
C341	B-8	Q344	D-6
C342	C-7	Q345	D-6
C343	C-7	Q348	D-6
C344	C-8	Q349	D-6
C345	C-8	Q351	D-6
C348	A-7	Q450	B-7
C353	C-6		
C355	C-6	R305	A-8
C360	C-6	R307	A-8
C362	A-6	R308	A-8
C363	C-6	R309	A-8
C366	D-6	R312	A-8
C367	D-6	R313	A-8
C368	A-7	R314	A-8
C371	D-5	R315	A-8
C372	D-6	R316	A-8
C373	C-5	R317	A-9
C450	B-6	R318	A-7
C451	A-7	R319	A-8
C452	A-7	R320	A-9
C453	A-6	R321	A-9
C454	B-7	R322	A-9
C455	A-9	R323	A-9
C456	A-6	R324	A-9
C457	B-6	R325	A-9
C458	A-6	R326	B-9
		R327	B-9
CN450	C-6	R328	A-7
		R329	B-7
D314	A-6	R330	B-9
D315	C-6	R331	B-9
D316	A-6	R332	A-7
		R333	B-9
IC300	A-8	R334	B-9
IC301	A-7	R335	B-9
IC450	A-7	R336	A-9
		R337	B-9
		R338	B-9
		R339	B-9
		R340	B-9
		R341	A-9
		R342	B-8
		R343	B-8
		R344	B-8
		R345	B-8
		R348	B-8
		R349	B-8
		R350	A-9
		R351	A-9
		R352	A-8
		R353	A-8
		R354	A-8
		R355	D-6
		R356	D-6
		R357	B-8
		R360	E-6
		R363	A-6
		R364	A-6
		R365	D-6
		R372	D-6
		R373	D-6
		R374	D-6
		R375	B-8
		R376	D-6
		R377	B-8
		R378	D-6
		R379	C-6
		R381	D-6
		R382	A-7
		R383	A-7
		R384	A-7
		R385	A-7
		R386	A-7
		R387	B-8
		R388	D-6
		R389	D-6
		R390	D-6
		R391	D-5
		R392	D-6
		R393	B-6
		R394	B-6
		R397	A-8
		R399	B-6
		R401	A-6
		R450	A-7
		R451	A-6
		R452	B-6
		R453	A-6
		R454	A-6
		R455	A-6
		R456	B-6
		R457	B-7

## SECTION 5 ADJUSTMENTS


### 1. Before starting adjustment

#### EVR Data Re-writing Procedure When Replacing Board

The data that is stored in the repair board, is not necessarily correct.  
Perform either procedure 1 or procedure 2 or procedure 3 when replacing board.


##### Procedure 1

Save the EVR data of the machine in which a board is going to be replaced. Download the saved data after a board is replaced.

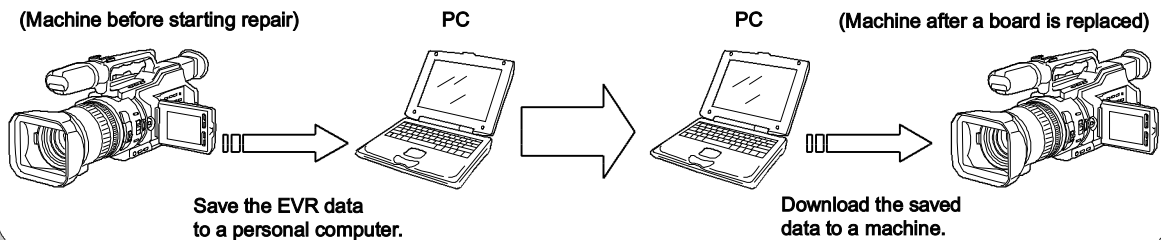


##### Procedure 2

Remove the EEPROM from the board of the machine that is going to be repaired. Install the removed EEPROM to the replaced board.

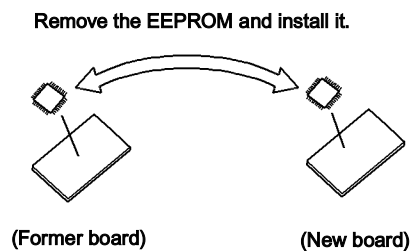

##### Procedure 3

When the data cannot be saved due to defective EEPROM, or when the EEPROM cannot be removed or installed, save the data from the same model of the same destination, and download it.

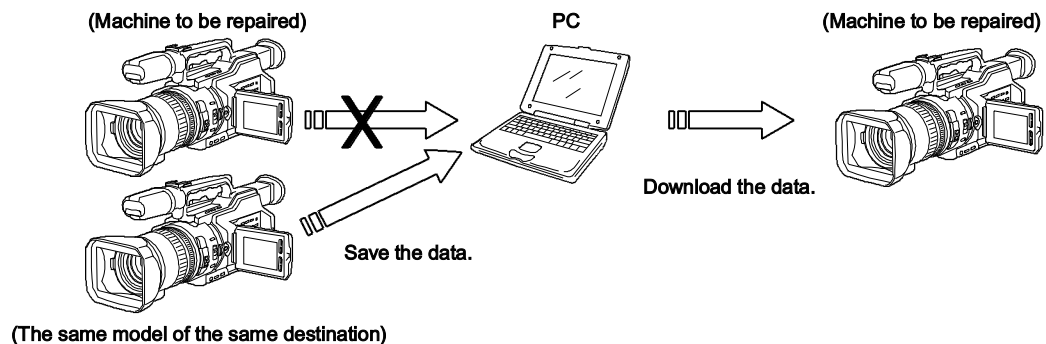

After the EVR data is saved and downloaded, check the respective items of the EVR data.  
(Refer to page 5-3 for the items to be checked.)

# 1-1. Adjusting items when replacing main parts and boards.

## • Adjusting items when replacing main parts

When replacing main parts, adjust the items indicated by ● in the following table.

**Note1:** When replacing the drum assy., reset the data of page: 2, address: A2 to A4 to "00". (Refer to "Record of Use check" of "5-4. SERVICE MODE")

Adjustment Section	Adjustment	Replaced parts																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																										
		Block replacement										Parts replacement																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																
		Lens device	Prism assy (Including 3 CCD imagers)	VAP unit	Mechanism deck	EVF block	LCD902 (LCD panel)	LCD block	LCD901 (LCD panel)	LCD block	ND901 (Fluorescent tube)	LCD block	Inverter unit	Control switch (CF-4980)	Mechanism deck	M901 (Drum motor)	Mechanism deck	M902 (Capstan motor)	FP-594 board	H902 (T reel FG sensor)	SE-108 board	SE600 to 603 (PITCH/YAW sensor)	PD-126 board	IC2101 (RGB driver (LCD))	PD-126 board	IC2103 (Timing generator (LCD))	LB-065 board	ND200 (Fluorescent tube (EVF))	VC-242 board	IC1802 (RGB driver (EVF))	VC-242 board	IC1803 (Timing generator (EVF))	VC-242 board	IC705, X701 (Timing generator)	VC-242 board	IC704 (S/H, AGC)	VC-242 board	IC706 (A/D converter)	VC-242 board	IC802 (Camera micro processor)	VC-242 board	IC1301 (LINE IN/OUT amp)	VC-242 board	IC301 (DV signal process)	VC-242 board	IC101 (EQ, A/D CONV., PLL)	VC-242 board	IC102 (REC/PB amp)	VC-242 board	IC803 (EVR)																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																										
Initialization of B, C, D, E, F, 8 page data	Initialization of C, D, 8 page data																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																											</

Table. 5-1-1(1).

• **Adjusting items when replacing a board or EEPROM**

When replacing a board or EEPROM, adjust the items indicated by ● in the following table.

Adjustment Section	Adjustment	Board replacement						
		CD-252 board	FP-594 board	VC-242 board	SE-108 board	PD-126 board	LB-065 board	VC-242 board
Initialization of B, C, D, E, F, 8 page data	Initialization of C, D, 8 page data		●					●
	Initialization of B page data		●					●
	Initialization of E, F page data		●				●	
	Modification of E page data		●				●	
Camera	27MHz origin oscillation adj.		●				●	
	Zoom key center adj.		●				●	
	HALL adj.		●				●	
	Offset adj.	●	●				●	
	Flange back adj.	●	●				●	
	Pre-white balance data input	●	●				●	
	AWB standard data input	●	●				●	
	MAX GAIN adj.	●	●				●	
	LV standard data input	●	●				●	
	White balance ND filter 1 compensation	●	●				●	
	White balance ND filter 2 compensation	●	●				●	
	Auto white balance adj.	●	●				●	
	Color reproduction adj. (ND filter OFF)	●	●				●	
	Color reproduction adj. (ND filter 1)	●	●				●	
	Color reproduction adj. (ND filter 2)	●	●				●	
	Steady shot adj.		●	●			●	
EVF	VCO adj.		●				●	
	Bright adj.		●				●	
	Contrast adj.		●				●	
	Backlight consumption current adj.		●			●	●	
	White balance adj.		●			●	●	
LCD	VCO adj.		●		●		●	
	Bright adj.		●		●		●	
	Black limit adj.		●		●		●	
	Contrast adj.		●		●		●	
	Center level adj.		●		●		●	
	V COM adj.		●		●		●	
	White balance adj.		●		●		●	
System control	Serial No. input		●				●	
	Battery end adj.		●				●	
Servo, RF	CAP FG duty adj.		●				●	
	T reel FG duty adj.		●				●	
	Switching position adj.		●				●	
	AGC center level adj.		●				●	
	APC & AEQ adj.		●				●	
	PLL f <sub>0</sub> & LPF f <sub>0</sub> adj.		●				●	
Video	Chroma BPF f <sub>0</sub> adj.		●				●	
	S VIDEO OUT Y level adj.		●				●	
	S VIDEO OUT Cr, Cb level adj.		●				●	
Mechanism	Tape path adj.	●						

Table. 5-1-1(2).

## 5-1. CAMERA SECTION ADJUSTMENT

### 1-1. PREPARATIONS BEFORE ADJUSTMENT (CAMERA SECTION)

#### 1-1-1. List of Service Tools

- Oscilloscope
- Color monitor
- Vectorscope
- Regulated power supply
- Digital voltmeter

Ref. No.	Name	Parts Code	Usage
J-1	Filter for color temperature correction (C14)	J-6080-058-A	Auto white balance adjustment/check White balance adjustment/check
J-2	ND filter 1.0	J-6080-808-A	White balance check
	ND filter 0.3	J-6080-818-A	White balance check (2 sheets used)
J-3	Pattern box PTB-450	J-6082-200-A	
J-4	Color chart for pattern box	J-6020-250-A	
J-5	Adjustment remote commander (RM-95 upgraded) (Note1)	J-6082-053-B	
J-6	Siemens star chart	J-6080-875-A	For checking the flange back
J-7	Clear chart for pattern box	J-6080-621-A	
J-8	CPC-13 jig	J-6082-443-A	For adjusting the video section For adjusting the color viewfinder
J-9	Extension cable (50P, 0.5mm)	J-6082-496-A	For extension between the CD-254 board (CN100) and the VC-242 board (CN025)
J-10	Mini pattern box	J-6082-353-B	For adjusting the flange back
J-11	Camera table	J-6082-384-A	For adjusting the flange back

**Note1:** If the micro processor IC in the adjustment remote commander is not the new micro processor (UPD7503G-C56-12), the pages cannot be switched. In this case, replace with the new micro processor (8-759-148-35).

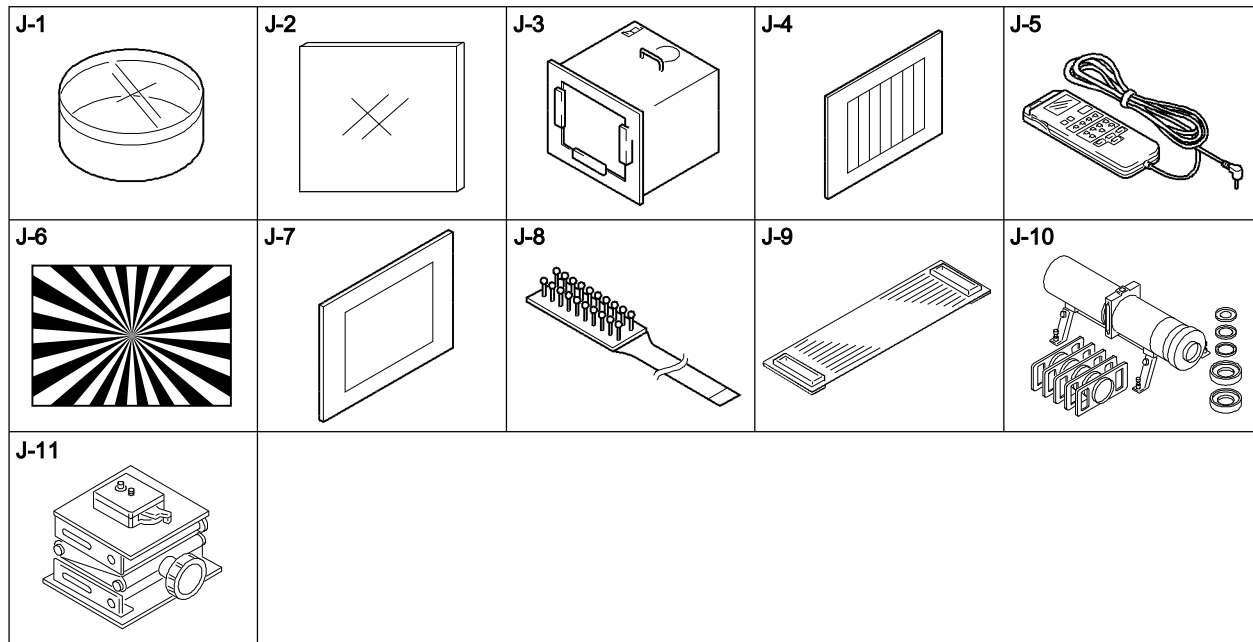


Fig. 5-1-1.

### 1-1-2. Preparations

**Note 1:** For details of how remove the cabinet and boards, refer to “2. DISASSEMBLY”.

**Note 2:** When performing only the adjustments, the lens block and boards need not be disassembled.

1) Connect the equipment for adjustments according to Fig. 5-1-3.

**Note 3:** As removing the cabinet (R) (removing the VC-242 board CN008) means removing the lithium 3V power supply (CK-093 board BT250), data such as date, time, user-set menus will be lost. After completing adjustments, reset these data. If the cabinet (R) has been removed, the self-diagnosis data, data on history of use (total drum rotation time etc. ) will be lost. Before removing, note down the self-diagnosis data and the data on history use (data of page: 2, address: A2 to AA). (Refer to “SELF-DIAGNOSIS FUNCTION” for the self-diagnosis data, and to “5-4.Service Mode” for the data on the history use.)

**Note 4:** Setting the “Forced Camera Power ON” Mode

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: D, address: 10, set data: 01, and press the PAUSE button of the adjustment remote commander.

The above procedure will enable the camera power to be turned on with the control switch block (CF-4980) removed. After completing adjustments, be sure to exit the “Forced Camera Power ON Mode”.

**Note 5:** Exiting the “Forced Camera Power ON” Mode

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: D, address: 10, set data: 00, and press the PAUSE button of the adjustment remote commander.
- 3) Select page: 0, address: 01, and set data: 00.

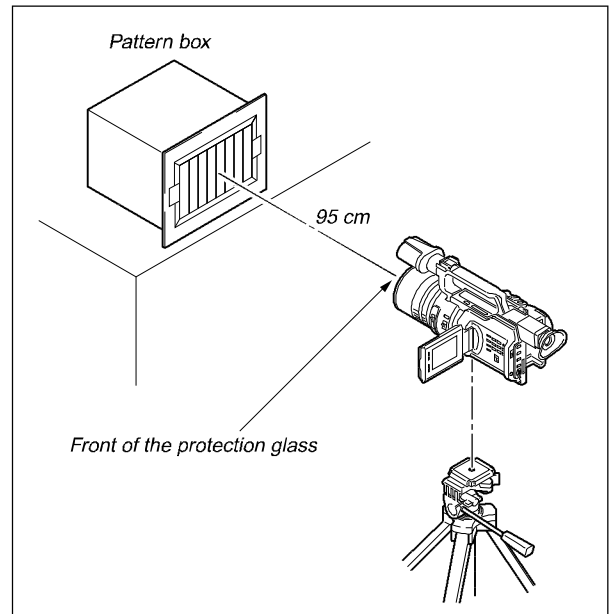


Fig. 5-1-2.

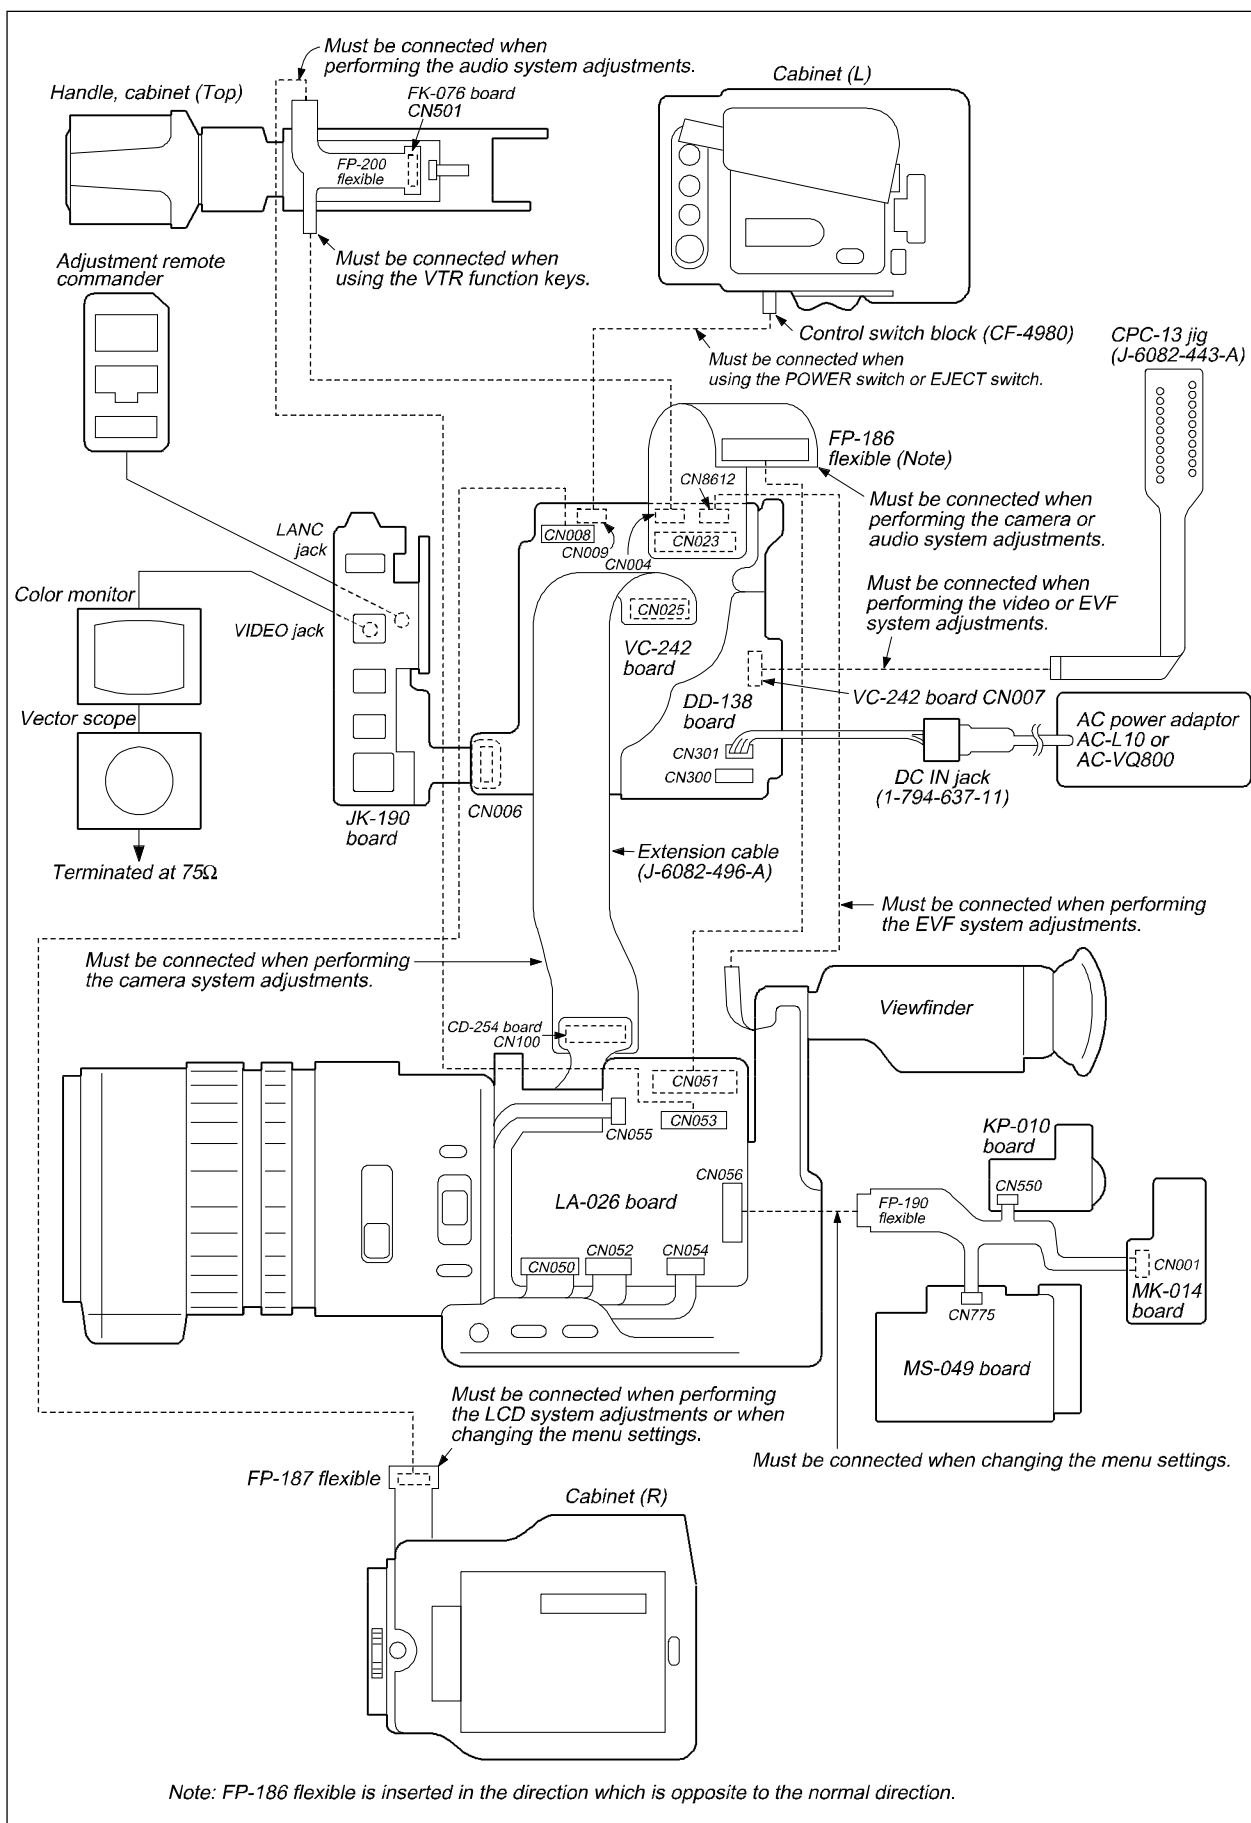


Fig. 5-1-3.



### 1-1-3. Precaution

#### 1. Setting the Switch

Unless otherwise specified, set the switches as follows and perform adjustments without loading cassette.

1. POWER switch (CF-4980 block) .....	CAMERA	10. BACK LIGHT (FP-189 flexible) .....	OFF
2. DEMO MODE (Menu display) .....	OFF	11. SPOT LIGHT (FP-189 flexible) .....	OFF
3. DIGITAL ZOOM (Menu display) .....	OFF	12. PICTURE EFFECT (CK-093 board) .....	OFF
4. STEADY SHOT (Menu display) .....	OFF	13. DIGITAL EFFECT (CK-093 board) .....	OFF
5. DISPLAY (Menu display) .....	V-OUT/LCD	14. ZEBRA (CK-093 board) .....	OFF
6. DISPLAY (CK-093 board) .....	ON	15. 16 : 9 WIDE (Menu display) .....	OFF
7. AUTO LOCK (MK-014 board) .....	AUTO	16. AUTO SHUTTER (Menu display) .....	OFF
8. ND FILTER (Lens block) .....	OFF	17. PROG.SCAN (Menu display) .....	OFF
9. FOCUS switch (FP-188 flexible) .....	MANUAL		

#### 2. Order of Adjustments

Basically carry out adjustments in the order given.

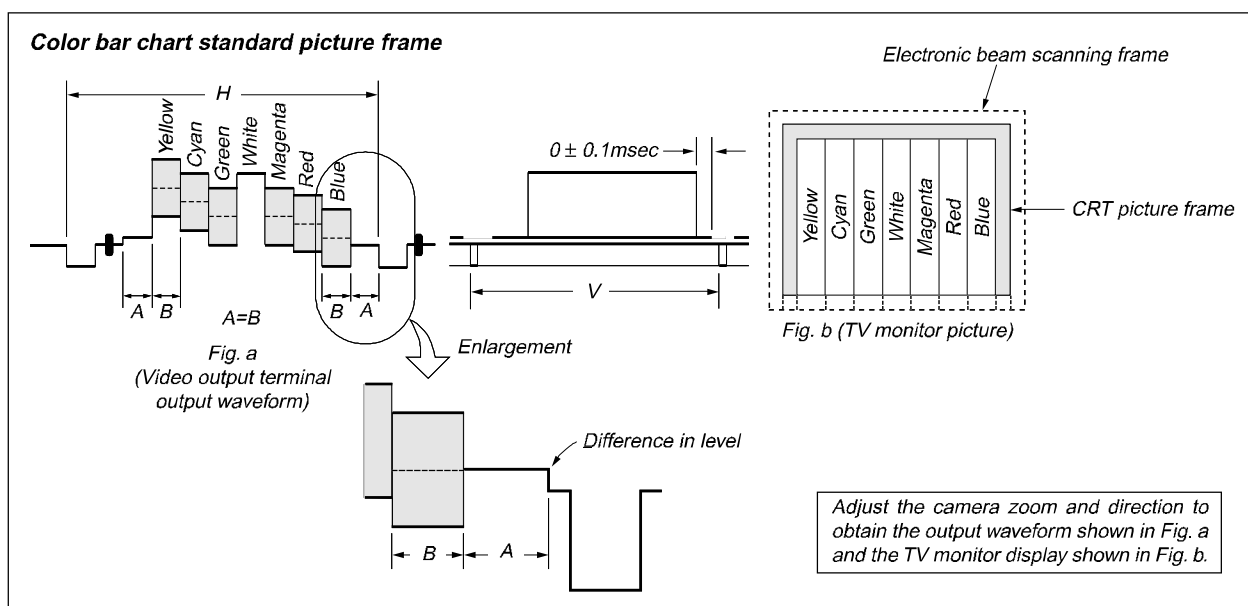


Fig. 5-1-4

#### 3. Subjects

- 1) Color bar chart (Standard picture frame).  
When performing adjustments using the color bar chart, adjust the picture frame as shown in Fig. 5-1-4. (Standard picture frame)
- 2) Clear chart (Standard picture frame)  
Remove the color bar chart from the pattern box and insert a clear chart in its place. (Do not perform zoom operations during this time.)
- 3) Flange back adjustment chart  
Make the chart shown in Fig. 5-1-5 using A0 size (1189 mm × 841 mm) black and white vellum paper.

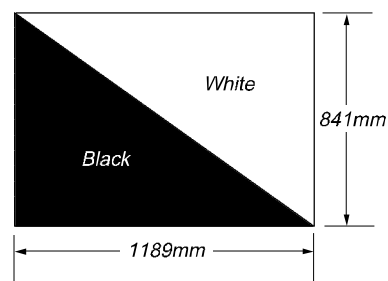


Fig. 5-1-5

**Note:** Use matte vellum paper bigger than A0, and make sure the edges of the black and white paper joined together are not rough.

## 1-2. INITIALIZATION OF B, C, D, E, F, 8 PAGE DATA

### 1-2-1. INITIALIZATION OF C, D, 8 PAGE DATA

#### 1. Initializing the C, D, 8 Page Data

**Note1:** If “Initializing the C, D, 8 Page Data” is performed, all data of the C page, D page and 8 page will be initialized. (It is impossible to initialize a single page.)

**Note2:** If the C, D, 8 page data has been initialized, the following adjustments need to be performed again.

- 1) Modification of C, D, 8 page data
- 2) Serial No. input
- 3) Servo and RF system adjustments
- 4) Video system adjustments
- 5) Color viewfinder system adjustments
- 6) LCD system Adjustments

Adjustment Page	C
Adjustment Address	10 to FF
Adjustment Page	D
Adjustment Address	10 to FF
Adjustment Page	8
Adjustment Address	00 to FF

#### Initializing Method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data
2	3	81		Check that the data is “00”.
3	3	80	0A	Set the data, and press the PAUSE button.
4	3	80		Check that the data changes to “1A”
5				Perform “Modification of C, D, 8 Page Data”.

#### 2. Modification of C, D, 8 Page Data

If the C, D, 8 page data has been initialized, change the data of the “Fixed data-2” address shown in the following tables by manual input.

#### Modifying Method:

- 1) Before changing the data, select page: 0, address: 01, and set data: 01.
- 2) New data for changing are not shown in the tables because they are different in destination. When changing the data, copy the data built in the same model.  
**Note:** If copy the data built in the different model, the camcorder may not operate.
- 3) When changing the data, press the PAUSE button of the adjustment remote commander each time when setting new data to write the data in the non-volatile memory.
- 4) Check that the data of adjustment addresses is the initial value. If not, change the data to the initial value.

#### Processing after Completing Modification of C, D, 8 Page data

Order	Page	Address	Data	Procedure
1	2	00	29	Set the data
2	2	01	29	Set the data, and press the PAUSE button.

**Note:** If the following symptoms occur after completing of the “Modification of C, D, 8 page data”, check that the data of the “Fixed data-2” addresses of D page are same as those of the same model of the same destination.

- 1) The battery end mark on the LCD or viewfinder screen is flashing.
- 2) The power is shut off so that unit cannot operate.

#### 3. C Page Table

**Note:** Fixed data-1: Initialized data. (Refer to “1. Initializing the C, D, 8 Page Data”.)

Fixed data-2: Modified data. (Refer to “2. Modification of C, D, 8 Page Data”.)

Address	Initial value	Remark
00 to 0F		
10	EE	Switching position adj.
11	00	
12	00	
13	00	
14 to 15		Fixed data-1
16	E0	Cap FG duty adj.
17	E0	Treel FG duty adj.
18	2A	AEQ adj.
19	2A	
1A		Fixed data-1
1B	32	AEQ adj.
1C	32	
1D		Fixed data-1
1E	25	AGC center level adj.
1F	3E	PLL fo adj.
20	3E	
21	DC	APC adj.
22	99	LPF fo adj.

Address	Initial value	Remark
23 to 24		Fixed data-1
25	88	S VIDEO out Y level adj.
26	E3	S VIDEO out Cr level adj.
27	A1	S VIDEO out Cb level adj.
28	04	Chroma BPF f <sub>0</sub> adj.
29	20	PLL f <sub>0</sub> fine adj.
2A to 2B		Fixed data-1
2C	03	APC adj.
2D to 41		Fixed data-1
42		Fixed data-2
43 to 81		Fixed data-1
82		Fixed data-2
83 to 85		Fixed data-1
86		Fixed data-2
87		
88		
89		
8A to 9A		Fixed data-1
9B		Fixed data-2
9C		Fixed data-1
9D		Fixed data-2
9E		
9F		
A0		
A1 to A2		Fixed data-1
A3		Fixed data-2
A4		
A5		
A6		
A7		
A8		
A9 to AA		Fixed data-1
AB		Fixed data-2
AC		Fixed data-1
AD		Fixed data-2
AE		Fixed data-1
AF		Fixed data-2
B0		
B1		Fixed data-1
B2		Fixed data-2
B3		
B4		
B5		
B6		
B7		
B8		
B9		
BA to BF		Fixed data-1
C0		Fixed data-2
C1		Fixed data-1
C2		Fixed data-2
C3		
C4		
C5		
C6		
C7		Fixed data-1

Address	Initial value	Remark
C8		Fixed data-2
C9		
CA to E7		Fixed data-1
E8	08	Serial No. input
E9	00	
EA	46	
EB	01	
EC	01	
ED	00	
EE	00	
EF	00	
F0 to F3		Fixed data-1
F4	00	Emergency memory address
F5	00	
F6	00	
F7	00	
F8	00	
F9	00	
FA	00	
FB	00	
FC	00	
FD	00	
FE	00	
FF	00	

Table. 5-1-2.

#### 4. D Page Table

**Note:** Fixed data-1: Initialized data. (Refer to “1. Initializing the C, D, 8 Page Data”.)

Fixed data-2: Modified data. (Refer to “2. Modification of C, D, 8 Page Data”.)

Address	Initial value	Remark
00 to 0F		
10	00	Test mode
11 to 12		Fixed data-1
13		Fixed data-2
14		
15		Fixed data-1
16		Fixed data-2
17		
18		
19		Fixed data-1
1A		Fixed data-2
1B		
1C		
1D		Fixed data-1
1E		Fixed data-2
1F		
20		
21		
22		
23		
24		Fixed data-1
25		Fixed data-2
26		
27		
28		
29		
2A		Fixed data-1
2B		Fixed data-2
2C		
2D		Fixed data-1
2E		Fixed data-2
2F		
30		
31 to 32		Fixed data-1
33		Fixed data-2
34		
35		
36		
37		
38 to 3F		Fixed data-1
40		Fixed data-2
41 to 43		Fixed data-1
44		Fixed data-2
45		
46		Fixed data-1
47		Fixed data-2
48	91	Battery end adj.
49	97	
4A	A8	
4B	BD	
4C	C8	

Address	Initial value	Remark
4D to 4E		Fixed data-1
50		Fixed data-2
51		
52		
53		
54		
55 to 57		Fixed data-1
58		Fixed data-2
59		
5A		
5B		
5C		
5D to 63		Fixed data-1
64		Fixed data-2
65		
66		
67		Fixed data-1
68		Fixed data-2
69		Fixed data-1
6A		Fixed data-2
6B to 7A		Fixed data-1
7B		Fixed data-2
7C to 8F		Fixed data-1
90		Fixed data-2
91		
92	60	VCO adj. (EVF)
93	60	
94		Fixed data-2
95	AC	Bright adj. (EVF)
96		Fixed data-2
97	90	White balance adj. (EVF)
98	80	
99	30	Contrast adj. (EVF)
9A		Fixed data-1
9B		Fixed data-2
9C	F0	Backlight consumption current adj. (EVF)
9D	F0	
9E	11	
9F	1F	
A0		Fixed data-2
A1		
A2	71	VCO adj. (LCD)
A3	71	
A4	9F	V-COM adj. (LCD)
A5	AA	Bright adj.(LCD)
A6	0A	Black limit adj.(LCD)
A7		Fixed data-2
A8	85	White balance adj. (LCD)
A9	75	
AA	40	Contrast adj. (LCD)
AB	30	Center level adj.(LCD)
AC		Fixed data-2
AD		
AE		
AF		
B0		

Address	Remark	
	Initial value	
B1 to B8		Fixed data-1
B9		Fixed data-2
BA		
BB to C3		Fixed data-1
C4		Fixed data-2
C5		Fixed data-1
C6		Fixed data-2
C7 to CF		Fixed data-1
D0		Fixed data-2
D1		
D2 to D5		Fixed data-1
D6		Fixed data-2
D7		
D8 to DA		Fixed data-1
DB		Fixed data-2
DC to FF		Fixed data-1

Table. 5-1-3.

## 5. 8 Page Table

**Note:** Fixed data-1: Initialized data. (Refer to “1. Initializing the C, D, 8 Page Data”.)  
Fixed data-2: Modified data. (Refer to “2. Modification of C, D, 8 Page Data”.)

Address	Remark
00 to 0A	Fixed data-1
0B	Fixed data-2
0C to 98	Fixed data-1
99	Fixed data-2
9A to FF	Fixed data-1

Table. 5-1-4.

### 1-2-2. INITIALIZATION OF B PAGE DATA

**Note:** When reading the B page data, insert a “Memory Stick” into the “Memory Stick” slot.

**Switch setting:**

POWER..... MEMORY

#### 1. Initializing the B Page Data

**Note:** If the B page data has been initialized, the following adjustments need to be performed again.

1) Modification of B page data

Adjustment Page	B
Adjustment Address	00 to FF

#### Initializing Method

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	5	01	F3	Set the data, and press PAUSE button.
3	5	00	01	Set the data, and press PAUSE button.
4	5	01		Wait for three seconds.
5	5	00		Check that the data is “00”.
6	5	02		Check that the data is “00”.
7				Perform “Modification of B Page Data”.

#### 2. Modification of B Page Data

If the B page data has been initialized, change the data of the “Fixed data-2” address shown in the following tables by manual input.

#### Preparations:

Order	Page	Address	Data	Procedure
1	2	8F	00	Set the data, and press PAUSE button.
2	2	8F	03	Set the data, and press PAUSE button.
3	2	8F	00	Set the data, and press PAUSE button.

#### Modifying Method:

- Before changing the data, select page: 0, address: 01, and set data: 01.
- New data for changing are not shown in the tables because they are different in destination. When changing the data, copy the data built in the same model.  
**Note:** If copy the data built in the different model, the camcorder may not operate.
- When changing the data, press the PAUSE button of the adjustment remote commander each time when setting new data to write the data in the non-volatile memory.

#### Processing after Completing Modification of B Page data:

Order	Page	Address	Data	Procedure
1	2	00	29	Set the data.
2	2	01	29	Set the data, and press PAUSE button.

#### 5. B Page Table

**Note:** Fixed data-1: Initialized data. (Refer to “1. or 3. Initializing the B Page Data”.)

Fixed data-2: Modified data. (Refer to “2. or 4. Modification of B Page Data”.)

Address	Remark
00 to 5F	Fixed data-1
60	Fixed data-2
61 to FF	Fixed data-1

Table. 5-1-5.

## 1-2-3. INITIALIZATION OF E, F PAGE DATA

### 1. Initializing the E, F Page Data

**Note1:** If "Initializing the E, F Page Data" is performed, all data of the E page and F page will be initialized. (It is impossible to initialize a single page.)

**Note2:** If the E, F page data has been initialized, following adjustments need to be performed again.

- 1) Modification of E, F page data
- 2) Camera system adjustments

Adjustment Page	F
Adjustment Address	10 to FF
Adjustment Page	E
Adjustment Address	00 to F4 (Note3) 00 to F6 (Note4) 00 to F7 (Note5)

**Note3:** Camera microprocessor ver. 1.0

**Note4:** Camera microprocessor ver. 2.0

**Note5:** Camera microprocessor ver. 3.0

**Switch setting:**

POWER ..... CAMERA

**Initializing Method:**

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	6	01		Set the following data, and press PAUSE button. 2D: DCR-VX2000 (NTSC) 2F: DCR-VX2000E (PAL)
3	6	03	01	Set the data, and press PAUSE button.
4	6	02		Check that the data changes to "01".
5				Perform "Modification of E, F Page Data".

### 2. Modification of E, F Page Data

If the E, F page data has been initialized, change the data of the "Fixed data-2" address shown in the following table by manual input.

**Modifying Method:**

- 1) Before changing the data, select page: 0, address: 01, and set data: 01.
- 2) New data for changing are not shown in the tables because they are different in destination. When changing the data, copy the data built in the same model.  
**Note:** If copy the data built in the different model, the camcorder may not operate.
- 3) When changing the data, press the PAUSE button of the adjustment remote commander each time when setting new data to write the data in the non-volatile memory.
- 4) Check that the data of adjustment addresses is the initial value. If not, change the data to the initial value.

**Processing after Completing Modification of E, F Page data**

- 1) Select page: 0, address: 01, and set data: 00.
- 2) Turn off the power and turn on again.

### 3. Modification of E Page Data

When replacing the camera microprocessor (VC-242 board IC802), change the data shown in the following table by manual input.

**Version check of the camera microprocessor:**

Order	Page	Address	Data	Procedure
1	6	FF		The data shows the version of the camera microprocessor. 01: Ver. 1.0 02: Ver. 2.0 03: Ver. 3.0

**Modifying Method:**

• When replaced with the camera microprocessor ver. 2.0.

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	E	F5	8B	Set the data, and press PAUSE button.
3	E	F6	D0	Set the data, and press PAUSE button.
4	0	01	00	Set the data.
5				Turn off the power and turn on again.

• When replaced with the camera microprocessor ver. 3.0.

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	E	F5	8B	Set the data, and press PAUSE button.
3	E	F6	D0	Set the data, and press PAUSE button.
4	E	F7	25	Set the data, and press PAUSE button.
5	0	01	00	Set the data.
6				Turn off the power and turn on again.

#### 4. F Page Table

**Note1:** Fixed data-1: Initialized data. (Refer to “1. Initializing the E, F Page Data”.)

Fixed data-2: Modified data. (Refer to “2. Modification of E, F Page Data”.)

Address	Initial value		Remark
	NTSC	PAL	
00 to 0F			
10 to 14			Fixed data-1
15			Fixed data-2
16 to 1B			Fixed data-1
1C	80	80	27MHz origin osc. adj.
1D			Fixed data-1
1E	60	60	HALL adj.
1F	40	60	
20	00	00	AWB standard data input
21	15	15	
22	00	00	
23	2E	2E	
24	AE	AE	
25	2B	2B	Flange back adj.
26	44	44	
27	43	43	
28	B2	B2	
29	16	16	
2A	00	00	
2B	00	00	
2C	8B	8B	MAX GAIN adj.
2D to 33			Fixed data-1
34	88	90	Auto white balance adj.
35	6C	8F	
36	D6	D6	Flange back adj.
37	E6	E6	
38	46	46	
39	45	00	
3A	3F	19	
3B	3F	00	
3C	16	27	
3D	A8	A8	LV standard data input
3E	38	38	
3F	76	76	
40			Fixed data-1
41	50	50	Steady shot adj.
42	50	50	
43			Fixed data-1
44	EB	EB	Color reproduction adj. (ND filter OFF)
45	D5	D5	
46	20	20	
47	20	20	
48 to 49			Fixed data-1
4A	00	00	WB ND filter 1 compensation
4B	00	00	
4C to 52			Fixed data-1
53			Fixed data-2
54 to 5C			Fixed data-1
5D	80	80	Zoom key center adj.
5E to 5F			Fixed data-1

Address	Initial value		Remark
	NTSC	PAL	
60			Fixed data-2
61 to 6A			Fixed data-1
6B			Fixed data-2
6C			
6D			
6E			
6F			Fixed data-1
70	89	89	HALL adj.
71 to 7B			Fixed data-1
7C			Fixed data-2
7D			
7E to 80			Fixed data-1
81			Fixed data-2
82			Fixed data-1
83			Fixed data-2
84 to 8D			Fixed data-1
8E			Fixed data-2
8F to 9E			Fixed data-1
9F			Fixed data-2
A0 to A5			Fixed data-1
A6			Fixed data-2
A7			
A8 to B1			Fixed data-1
B2			Fixed data-2
B3 to B9			Fixed data-1
BA			Fixed data-2
BB to C5			Fixed data-1
C6			Fixed data-2
C7			Fixed data-1
C8			Fixed data-2
C9 to CA			Fixed data-1
CB			Fixed data-2
CC			
CD			
CE			
CF			
D0			
D1			
D2			
D3			
D4			
D5			
D6 to DF			Fixed data-1
E0			Fixed data-2
E1 to EC			Fixed data-1
ED			Fixed data-2
EE to F4			Fixed data-1
F5			Fixed data-2
F6			
F7			
F8			Fixed data-1
F9			Fixed data-2
FA to FC			Fixed data-1
FD			Fixed data-2
FE to FF			Fixed data-1

Table. 5-1-6.



## 5. E Page Table

**Note1:** Fixed data-1: Initialized data. (Refer to “1. Initializing the E, F Page Data”.)

Fixed data-2: Modified data. (Refer to “2. Modification of E, F Page Data”.)

**Note2:** Refer to “2. Modification of E, F Page Data” for the camera microprocessor version.

Address	Initial value		Remark
	NTSC	PAL	
00 to 05			Fixed data-1
06			Fixed data-2
07			
08 to 10			Fixed data-1
11			Fixed data-2
12 to 13			Fixed data-1
14			Fixed data-2
15 to 29			Fixed data-1
2A	10	10	Pre-white balance data input
2B	10	10	
2C			Fixed data-1
2D	80	80	Offset adj.
2E	80	80	
2F	80	80	
30 to 47			Fixed data-1
48			Fixed data-2
49			
4A to 51			Fixed data-1
52			Fixed data-2
53			Fixed data-1
54			Fixed data-2
55			Fixed data-1
56			Fixed data-2
57			Fixed data-1
58			Fixed data-2
59			Fixed data-1
5A			Fixed data-2
5B			
5C			Fixed data-1
5D			Fixed data-2
5E			
5F			
60 to 61			Fixed data-1
62	EB	EB	Color reproduction adj. (ND filter 1)
63	D5	D5	
64	20	20	
65	20	20	
66 to 74			Fixed data-1
75			Fixed data-2
76 to 8B			Fixed data-1
8C			Fixed data-2
8D			
8E	00	00	WB ND filter 2 compensation
8F	00	00	
90	EB	EB	Color reproduction adj. (ND filter 2)
91	D5	D5	
92	20	20	
93	20	20	
94			Fixed data-2

Address	Initial value		Remark
	NTSC	PAL	
95 to A0			Fixed data-1
A1			Fixed data-2
A2			
A3 to A7			Fixed data-1
A8			Fixed data-2
A9 to AB			Fixed data-1
AC			Fixed data-2
AD			
AE to B0			Fixed data-1
B1			Fixed data-2
B2			Fixed data-1
B3			Fixed data-2
B4 to B9			Fixed data-1
BA			Fixed data-2
BB to C3			Fixed data-1
C4			Fixed data-2
C5 to CB			Fixed data-1
CC			Fixed data-2
CD			
CE			
CF to D9			Fixed data-1
DA			Fixed data-2
DB			
DC to EB			Fixed data-1
EC			Fixed data-2
ED to F2			Fixed data-1
F3			Fixed data-2
F4			Fixed data-1
F5 (*1)	8B	8B	Refer to “3. Modification of E Page Data”.
F6 (*1)	D0	D0	
F7 (*2)	25	25	

\*1: Only for the camera microprocessor ver. 2.0 or ver. 3.0

\*2: Only for the camera microprocessor ver. 3.0

Table. 5-1-6.

### 1-3. CAMERA SYSTEM ADJUSTMENTS

Before perform the camera system adjustments, check that the specified values of “VIDEO SYSTEM ADJUSTMENT” are satisfied.

#### 1. 27MHz Origin Oscillation Adjustment (VC-242 board)

Set the frequency of the clock for synchronization.

If deviated, the synchronization will be disrupted and the color will become inconsistent.

Subject	Not required
Measurement Point	Pin ④⑦ of IC771 or pin ①④ of IC706
Measuring Instrument	Frequency counter
Adjustment Page	F
Adjustment Address	1C
Specified Value	$f=13500000 \pm 68\text{Hz}$

#### Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	F	1C		Change the data and set the frequency (f) to the specified value.
3	F	1C		Press PAUSE button.
4	0	01	00	Set the data.

#### 2. Zoom Key Center Adjustment

Set the A/D value center of the microprocessor to the center voltage of the zoom key.

If deviated, the zoom lens operates of itself, even if the zoom key is the center position.

Subject	Not required
Measurement Point	Display data of page: 6, address: 50
Measuring Instrument	Adjustment remote commander
Adjustment Page	F
Adjustment Address	5D

**Note:** Don't touch the zoom switch during adjustment.

#### Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	6	50		Read the data, and this data is named D <sub>50</sub> .
3	F	5D	D <sub>50</sub>	Set the data, and press PAUSE button.
4	0	01	00	Set the data.

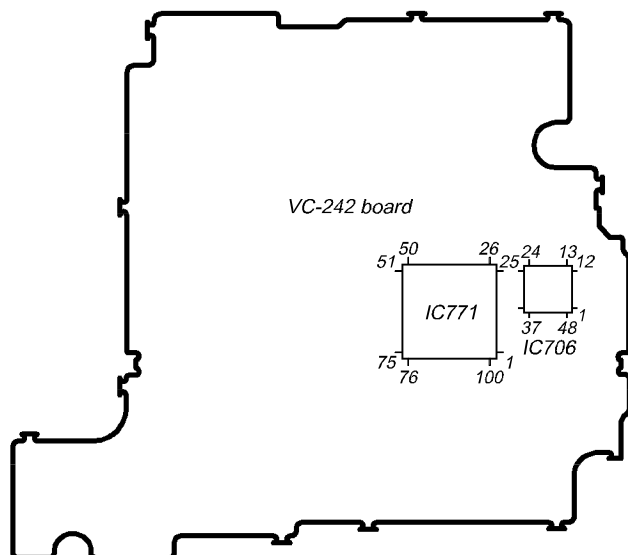


Fig. 5-1-6.

### 3. HALL Adjustment

For detecting the position of the lens iris, adjust AMP gain and offset.

Subject	Not required
Measurement Point	Display data of page 1 (Note1)
Measuring Instrument	Adjustment remote commander
Adjustment Page	F
Adjustment Address	1E, 1F, 70
Specified Value 1	88 to 8C
Specified Value 2	15 to 19

**Note1:** Displayed data of page 1 of the adjustment remote commander.  
1 : XX : XX

IRIS display data

**Note2:** Check that the data of page: 6, address: 02 is "00". If not, to page: 6, address: 01, set data: 00, and press the PAUSE button.

#### Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	6	94	8A	Set the data.
3	6	95	17	Set the data.
4	6	01	6D	Set the data, and press PAUSE button.
5	6	02		Check that the data changes to "01". (Note3)
6	6	01	00	Set the data, and press PAUSE button.

**Note3:** The adjustment data will be automatically input to page: F, address: 1E, 1F, 70.

#### Checking method:

Order	Page	Address	Data	Procedure
1	6	04	03	Set the data.
2	6	01	01	Set the data, and press PAUSE button.
3	1			Check that the IRIS display data (Note1) satisfies the specified value 1.
4	6	01	03	Set the data, and press PAUSE button.
5	1			Check that the IRIS display data (Note1) satisfies the specified value.2.

#### Processing after Completing Adjustments:

Order	Page	Address	Data	Procedure
1	6	01	00	Set the data, and press PAUSE button.
2	6	04	00	Set the data.
3	6	94	00	Set the data.
4	6	95	00	Set the data.
5	0	01	00	Set the data.

### 4. Offset Adjustment

Adjust so that the AGC OUT potential lies within the specified value of the digital clamp.

Subject	Not required
Measurement Point	DDS display data of LCD or TV monitor (Note1)
Measuring Instrument	
Adjustment Page	E
Adjustment Address	2D, 2E, 2F
Specified Value	70 to 90

**Note 1:** DDS display data of LCD or TV monitor.

CA 00 0000

CA 00 00XX

Object data

#### Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	D	11	02	Set the data, and press PAUSE button.
3	6	01	05	Set the data, and press PAUSE button.
4	E	0C	02	Set the data, and press PAUSE button.
5	6	04	1F	Set the data.
6	E	2D		Change the data and adjust the DDS display data (Note 1) to "80". (Rch offset adjustment)
7	E	2D		Press PAUSE button.
8	6	04	20	Set the data.
9	E	2E		Change the data and adjust the DDS display data (Note 1) to "80". (Gch offset adjustment)
10	E	2E		Press PAUSE button.
11	6	04	21	Set the data.
12	E	2F		Change the data and adjust the DDS display data (Note 1) to "80". (Bch offset adjustment)
13	E	2F		Press PAUSE button.

#### Processing after Completing Adjustments

Order	Page	Address	Data	Procedure
1	D	11	00	Set the data, and press PAUSE button.
2	E	0C	00	Set the data, and press PAUSE button.
3	0	01	00	Set the data.
4	6	01	00	Set the data, and press PAUSE button.
5	6	04	00	Set the data.
6				Turn off the power and turn on again.

## 5. Flange Back Adjustment (Using Minipattern Box)

The inner focus lens flange back adjustment is carried out automatically. In whichever case, the focus will be deviated during auto focusing/manual focusing.

Subject	Siemens star chart with ND filter for the minipattern box (Note2)
Measurement Point	Check operation on TV monitor
Measuring Instrument	
Adjustment Page	F
Adjustment Address	24 to 2B, 36 to 3D, 5D

**Note1:** Dark Siemens star chart.

**Note2:** Check that the data of page: 6, address: 02 is "00". If not, to page: 6, address: 01, set data: 00, and press the PAUSE button.

### Switch setting:

ND FILTER ..... OFF  
(The data of page: 6, address: 9D is "00".)

### Preparations:

- 1) The minipattern box is installed as shown in the following figure.  
**Note:** The attachment lenses are not used.
- 2) Install the minipattern box so that the distance between it and the front of the protection glass of the camcorder is less than 3cm. (Remove the lens hood.)
- 3) Make the height of the minipattern box and the camcorder equal.
- 4) Check that the output voltage of the regulated power supply is the specified voltage.
- 5) Check that at both the zoom lens TELE end and WIDE end, the center of the Siemens star chart and center of the exposure screen coincide.

**Specified voltage:** The specified voltage varies according to the minipattern box, so adjust the power supply output voltage to the specified voltage written on the sheet which is supplied with the minipattern box.

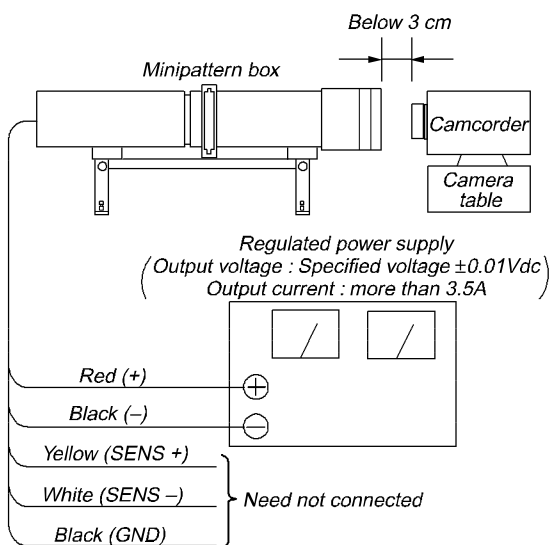


Fig. 5-1-7.

### Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	6	01	13	Set the data, and press PAUSE button. (Note3)
3	6	01	27	Set the data, and press PAUSE button.
4	6	02		Check that the data changes to "01". (Note4)
5	F	2A		Check that the data is "00" to "07".

**Note3:** Don't touch the zoom switch. If you touch the zoom switch, the zoom center adjustment data will be rewritten in the value which isn't correct.

**Note4:** The adjustment data will be automatically input to page: F, address: 24 to 2B, 36 to 3D, 5D.

### Processing after Completing Adjustments:

Order	Page	Address	Data	Procedure
1	6	01	00	Set the data, and press PAUSE button.
2	6	02	00	Set the data.
3	0	01	00	Set the data.
4				Turn off the power and turn on again.
5				Perform "Flange Back Check".

## 6. Flange Back Adjustment (Using Flange Back Adjustment Chart and Subject More Than 500m Away)

The inner focus lens flange back adjustment is carried out automatically. In whichever case, the focus will be deviated during auto focusing/manual focusing.

### 6-1. Flange Back Adjustment (1)

Subject	Flange back adjustment chart (2.0 m from the front of the protection glass) (Luminance: 230 ± 30 lux)
Measurement Point	Check operation on TV monitor
Measuring Instrument	
Adjustment Page	F
Adjustment Address	24 to 2B, 36 to 3D, 5D

**Note1:** Check that the data of page: 6, address: 02 is “00”. If not, to page: 6, address: 01, set data: 00, and press the PAUSE button.

#### Switch setting:

ND FILTER..... OFF  
(The data of page: 6, address: 9D is “00”.)

#### Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	6	01	13	Set the data, and press PAUSE button. (Note2)
3	6	01	15	Set the data, and press PAUSE button.
4	6	02		Check that the data changes to “01”. (Note3)
5	F	2A		Check that the data is “00” to “07”.

**Note2:** Don’t touch the zoom switch. If you touch the zoom switch, the zoom center adjustment data will be rewritten in the value which isn’t correct.

**Note3:** The adjustment data will be automatically input to page: F, address: 24 to 2B, 36 to 3D, 5D.

#### Processing after Completing Adjustments:

Order	Page	Address	Data	Procedure
1	6	01	00	Set the data, and press PAUSE button.
2				Turn off the power and turn on again.
3				Perform “Flange Back Adjustment (2)”

### 6-2. Flange Back Adjustment (2)

Perform this adjustment after performing “Flange Back Adjustment (1)”.

Subject	Subject more than 500m away (Subjects with clear contrast such as buildings, etc.)
Measurement Point	Check operation on TV monitor
Measuring Instrument	
Adjustment Page	F
Adjustment Address	24 to 2B, 36 to 3D, 5D

**Note1:** Check that the data of page: 6, address: 02 is “00”. If not, to page: 6, address: 01, set data: 00, and press the PAUSE button.

#### Preparations:

- 1) Set the zoom lens to the TELE end and expose a subject that is more than 500 m away (subject with clear contrast such as building, etc.). (Nearby subjects less than 500 m away should not be in the screen.)

#### Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	6	01	13	Set the data, and press PAUSE button. (Note2)
				Place a ND filter on the lens so that the optimum image is obtain.
3	6	01	29	Set the data, and press PAUSE button.
4	6	02		Check that the data changes to “01”. (Note3)

**Note2:** Don’t touch the zoom switch. If you touch the zoom switch, the zoom center adjustment data will be rewritten in the value which isn’t correct.

**Note3:** The adjustment data will be automatically input to page: F, address: 24 to 2B, 36 to 3D, 5D.

#### Processing after Completing Adjustments:

Order	Page	Address	Data	Procedure
1	6	01	00	Set the data, and press PAUSE button.
2				Turn off the power and turn on again.
3				Perform “Flange Back Check”.

## 7. Flange Back Check

Subject	Siemens star (2.0m from the front of the protection glass) (Luminance : approx. 300 ± 50 lux)
Measurement Point	Check operation on TV monitor
Measuring Instrument	
Specified Value	Focused at the TELE end and WIDE end.

### Checking method:

- 1) Place the Siemens star 2.0m from the front of the protection glass.
- 2) To open the IRIS, decrease the luminous intensity to the Siemens star up to a point before noise appear on the image.
- 3) Shoot the Siemens star with the zoom TELE end.
- 4) Turn on the auto focus.
- 5) Check that the lens is focused.
- 6) Turn off the auto focus.
- 7) While observe the TV monitor, move the zoom to the WIDE end and check that the lens is focused.

## 8. Picture Frame Setting

Subject	Color bar chart (Color bar standard picture frame) (95cm from the front of the protection glass)
Measurement Point	Video output terminal
Measuring Instrument	Oscilloscope and TV monitor
Specified Value	A=B, C=D, $t=0 \pm 0.1\text{msec}$

### Switch setting:

- 1) ND FILTER ..... OFF  
(The data of page: 6, address: 9D is "00".)
- 2) STEADY SHOT (Menu setting) ..... OFF

### Setting method:

Order	Page	Address	Data	Procedure
1	6	2C	01	Set the data.
2	6	90	28	Set the data.
3	6	91	02	Set the data.
4	6	92	6E	Set the data.
5	6	93	49	Set the data.
6	6	01	79	Set the data, and press PAUSE button.
7				Adjust the camera direction, and set to the specified position.
8				Mark the position of the picture frame on the monitor display, and adjust the picture frame to this position in following adjustments using "Color bar standard frame".
9	6	01	00	Set the data, and press PAUSE button.

### Check on the oscilloscope

#### 1. Horizontal period

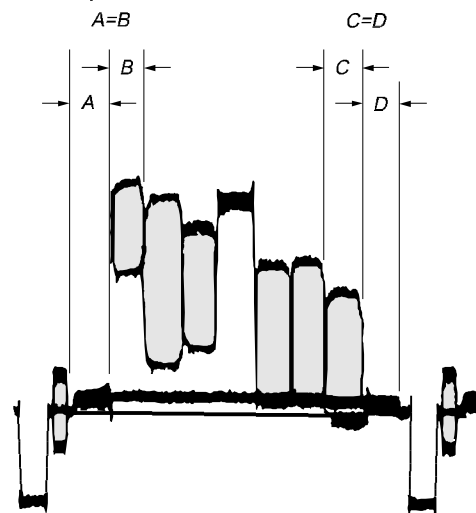


Fig. 5-1-8.

#### 2. Vertical period

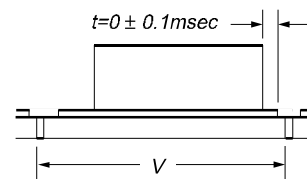


Fig. 5-1-9.

### Color on the TV monitor

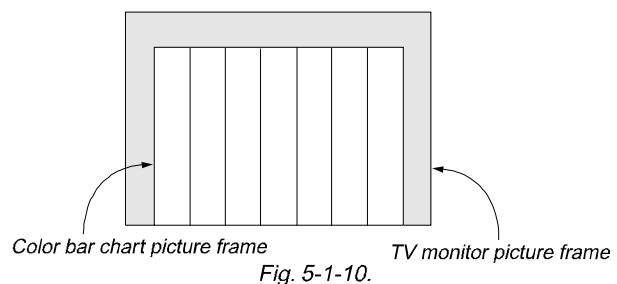


Fig. 5-1-10.

## 9. Pre White Balance Data Input

At 3200k, input the pre white balance standard data.

Subject	Clear chart (Color bar standard picture frame)
Adjustment Page	E
Adjustment Address	2A, 2B

**Note1:** After the power is turned on, this adjustment can be done only once.

### Switch setting:

ND FILTER..... OFF  
(The data of page: 6, address: 9D is "00".)

### Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	6	02	00	Set the data.
3	F	20	00	Set the data, and press PAUSE button.
4	F	21	15	Set the data, and press PAUSE button.
5	F	22	00	Set the data, and press PAUSE button.
6	F	23	2E	Set the data, and press PAUSE button.
7	6	01	7F	Set the data, and press PAUSE button.
8	6	01	7D	Set the data, and press PAUSE button. (Note)
9	6	02		Check that the data changes to "01".

**Note:** The adjustment data will be automatically input to page: E, address: 2A and 2B.

### Processing after Completing Adjustments

Order	Page	Address	Data	Procedure
1	6	01	00	Set the data, and press PAUSE button.
2	6	02	00	Set the data.
3	0	01	00	Set the data.
4				Perform "Auto White Balance Standard Data Input".

## 10. Auto White Balance Standard Data Input

At 3200K, input the white balance standard data.

Subject	Clear chart (Color bar standard picture frame)
Adjustment Page	F
Adjustment Address	20 to 23

**Note1:** After the power is turned on, this adjustment can be done only once.

**Note2:** Check that the data of page: 6, address: 02 is "00". If not, to page: 6, address: 01, set data: 00, and press the PAUSE button.

### Switch setting:

ND FILTER..... OFF  
(The data of page: 6, address: 9D is "00".)

### Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	6	01	11	Set the data, and press PAUSE button.
3	6	01	0B	Set the data, and press PAUSE button. (Note)
4	6	02		Check that the data changes to "01".

**Note:** The adjustment data will be automatically input to page: F, address: 20 to 23.

### Processing after Completing Adjustments

Order	Page	Address	Data	Procedure
1	6	01	00	Set the data, and press PAUSE button.
2	6	02	00	Set the data.
3	0	01	00	Set the data.

## 11. MAX GAIN Adjustment

Setting the minimum illumination.

If it is not consistent, the image level required for taking subjects in low illuminance will not be produced (dark).

Subject	Clear chart (Color bar standard picture frame)
Adjustment Page	F
Adjustment Address	2C

### Switch setting:

ND FILTER..... OFF  
(The data of page: 6, address: 9D is "00".)

### Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	6	02	00	Set the data.
3	6	96	00	Set the data.
4	6	97	5C	Set the data.
5	6	01	6F	Set the data, and press PAUSE button. (Note)
6	6	02		Check that the data changes to "01".

**Note:** The adjustment data will be automatically input to page: F, address: 2C.

### Processing after Completing Adjustments

Order	Page	Address	Data	Procedure
1	6	96	00	Set the data.
2	6	97	00	Set the data.
3	6	01	00	Set the data, and press PAUSE button.
4	6	02	00	Set the data.
5	0	01	00	Set the data.

## 12. LV Standard Data Input

Adjust the normal coefficient of the light value.

Subject	Clear chart (Color bar standard picture frame)
Measurement Point	Display data of page 1 (Note2)
Measuring Instrument	Adjustment remote commander
Adjustment Page	F
Adjustment Address	3E, 3F
Specified Value	0FE0 to 1020

**Note1:** Check that the data of page: 6, address: 02 is "00". If not, turn the power of the unit OFF/ON.

**Note2:** Displayed data of page 1 of the adjustment remote commander.  
1 : XX : XX

————— LV data

### Switch setting:

ND FILTER..... OFF  
(The data of page: 6, address: 9D is "00".)

### Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	F	15	40	Set the data, and press PAUSE button.
3				Wait for 5 seconds.
4	6	01	0D	Set the data, and press PAUSE button. (Note3)
5	6	02		Check that the data changes to "01".
6	6	04	1E	Set the data.
7	1			Check that the LV data (Note2) satisfies the specified value. If not, repeat from step 2.

**Note3:** The adjustment data will be automatically input to page: F, address: 3E and 3F.

### Processing after Completing Adjustments

Order	Page	Address	Data	Procedure
1	6	01	00	Set the data, and press PAUSE button.
2	6	02	00	Set the data.
3	6	04	00	Set the data.
4	F	15	44	Set the data, and press PAUSE button.
5	0	01	00	Set the data.



### 13. White Balance ND Filter 1 Compensation

Compensate the white balance deviation when ND FILTER switch is "1".

Subject	Clear chart (Color bar standard picture frame)
Adjustment Page	F
Adjustment Address	4A, 4B

**Note1:** After the power is turned on, this adjustment can be done only once.

**Note2:** Check that the data of page: 6, address: 02 is "00". If not, to page: 6, address: 01, set data: 00, and press the PAUSE button.

#### Switch setting:

ND FILTER..... 1  
(The data of page: 6, address: 9D is "01".)

#### Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	6	01	11	Set the data, and press PAUSE button.
3	6	01	09	Set the data, and press PAUSE button. (Note)
4	6	02		Check that the data changes to "01".

**Note:** The adjustment data will be automatically input to page: F, address: 4A and 4B.

#### Processing after Completing Adjustments

Order	Page	Address	Data	Procedure
1	6	01	00	Set the data, and press PAUSE button.
2	6	02	00	Set the data.
3	0	01	00	Set the data.

### 14. White Balance ND Filter 2 Compensation

Compensate the white balance deviation when ND FILTER switch is "2".

Subject	Clear chart (Color bar standard picture frame)
Adjustment Page	E
Adjustment Address	8E, 8F

**Note1:** After the power is turned on, this adjustment can be done only once.

**Note2:** Check that the data of page: 6, address: 02 is "00". If not, to page: 6, address: 01, set data: 00, and press the PAUSE button.

#### Switch setting:

ND FILTER..... 2  
(The data of page: 6, address: 9D is "02".)

#### Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	6	01	CF	Set the data, and press PAUSE button.
3	6	01	CD	Set the data, and press PAUSE button. (Note)
4	6	02		Check that the data changes to "01".

**Note:** The adjustment data will be automatically input to page: E, address: 8E and 8F.

#### Processing after Completing Adjustments

Order	Page	Address	Data	Procedure
1	6	01	00	Set the data, and press PAUSE button.
2	6	02	00	Set the data.
3	0	01	00	Set the data.
4				Set ND FILTER switch to "OFF".

### 15. Auto White Balance Adjustment

Adjust to the proper auto white balance output data.

If it is not correct, auto white balance and color reproducibility will be poor.

Subject	Clear chart (Color bar standard picture frame)
Filter	Filter C14 for color temperature correction
Adjustment Page	F
Adjustment Address	34, 35

**Note1:** After the power is turned on, this adjustment can be done only once.

**Note2:** Check that the data of page: 6, address: 02 is "00". If not, to page: 6, address: 01, set data: 00, and press the PAUSE button.

#### Switch setting:

ND FILTER..... OFF  
(The data of page: 6, address: 9D is "00".)

#### Adjusting method:

Order	Page	Address	Data	Procedure
1				Place the C14 filter for color temperature correction on the lens.
2	0	01	01	Set the data.
3	6	02	00	Set the data.
4	6	01	83	Set the data, and press PAUSE button.
5	6	01	81	Set the data, and press PAUSE button. (Note)
6	6	02		Check that the data changes to "01".

**Note:** The adjustment data will be automatically input to page: F, address: 34 and 35.

#### Processing after Completing Adjustments

Order	Page	Address	Data	Procedure
1	6	01	00	Set the data, and press PAUSE button.
2	6	02	00	Set the data.
3	0	01	00	Set the data.

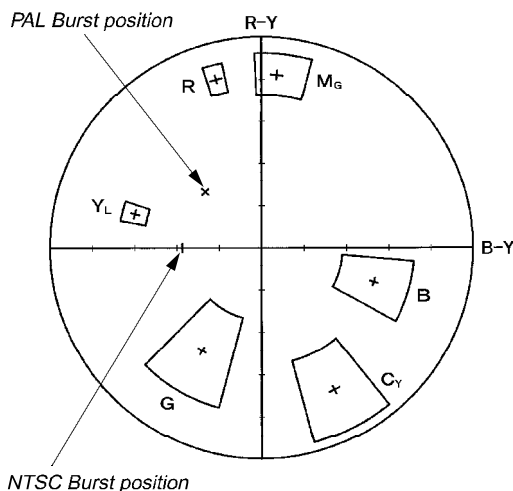


Fig. 5-1-11.

### 16. Color Reproduction Adjustment (ND Filter OFF)

When the ND FILTER switch is "OFF", adjust the color difference matrix coefficient so that proper color reproduction is produced.

Subject	Color bar chart (Color bar standard picture frame)
Measurement Point	Video output terminal
Measuring Instrument	Vectorscope
Adjustment Page	F
Adjustment Address	44, 45, 46, 47
Specified Value	All color luminance points should settle within each color reproduction frame. (Fig. 5-1-11)

**Note1:** After the power is turned on, this adjustment can be done only once.

**Note2:** Check that the data of page: 6, address: 02 is "00". If not, to page: 6, address: 01, set data: 00, and press the PAUSE button.

#### Switch setting:

ND FILTER..... OFF  
(The data of page: 6, address: 9D is "00".)

#### Adjusting method:

Order	Page	Address	Data	Procedure
1				Check that the picture frame is set to the specified position. (Refer to "8. Picture Frame Setting".)
2	0	01	01	Set the data.
3	F	5E	2D	Set the data, and press PAUSE button.
4	F	44	00	Set the data, and press PAUSE button.
5	F	45	00	Set the data, and press PAUSE button.
6	F	46	20	Set the data, and press PAUSE button.
7	F	47	20	Set the data, and press PAUSE button.
8	6	01	AB	Set the data, and press PAUSE button.
9	6	01	A9	Set the data, and press PAUSE button. (Note)
10	6	02		Check that the data changes to "01".
11				Adjust the GAIN and PHASE of the vectorscope, and adjust the burst luminance point to the burst position of the color reproduction frame. (Fig. 5-1-11)
12				Check that all color luminance points settle within each color reproduction frame. (Fig. 5-1-11)

**Note:** The adjustment data will be automatically input to page: F, address: 44 to 47.

#### Processing after Completing Adjustments

Order	Page	Address	Data	Procedure
1	6	01	00	Set the data, and press PAUSE button.
2	6	02	00	Set the data.
3	F	5E	1D	Set the data, and press PAUSE button.
3	0	01	00	Set the data.

### 17. Color Reproduction Adjustment (ND Filter 1)

When the ND FILTER switch is "1", adjust the color difference matrix coefficient so that proper color reproduction is produced.

Subject	Color bar chart (Color bar standard picture frame)
Measurement Point	Video output terminal
Measuring Instrument	Vectorscope
Adjustment Page	E
Adjustment Address	62, 63, 64, 65
Specified Value	All color luminance points should settle within each color reproduction frame. (Fig. 5-1-11)

**Note1:** After the power is turned on, this adjustment can be done only once.

**Note2:** Check that the data of page: 6, address: 02 is "00". If not, to page: 6, address: 01, set data: 00, and press the PAUSE button.

#### Switch setting:

- 1) ND FILTER ..... 1  
(The data of page: 6, address: 9D is "01".)

#### Adjusting method:

Order	Page	Address	Data	Procedure
1				Check that the picture frame is set to the specified position. (Refer to "8. Picture Frame Setting".)
2	0	01	01	Set the data.
3	F	5E	2D	Set the data, and press PAUSE button.
4	E	62	00	Set the data, and press PAUSE button.
5	E	63	00	Set the data, and press PAUSE button.
6	E	64	20	Set the data, and press PAUSE button.
7	E	65	20	Set the data, and press PAUSE button.
8	6	01	C3	Set the data, and press PAUSE button.
9	6	01	C1	Set the data, and press PAUSE button. (Note)
10	6	02		Check that the data changes to "01".
11				Adjust the GAIN and PHASE of the vectorscope, and adjust the burst luminance point to the burst position of the color reproduction frame. (Fig. 5-1-11)
12				Check that all color luminance points settle within each color reproduction frame. (Fig. 5-1-11)

**Note:** The adjustment data will be automatically input to page: E, address: 62 to 65.

#### Processing after Completing Adjustments

Order	Page	Address	Data	Procedure
1	6	01	00	Set the data, and press PAUSE button.
2	6	02	00	Set the data.
3	F	5E	1D	Set the data, and press PAUSE button.
3	0	01	00	Set the data.

### 18. Color Reproduction Adjustment (ND Filter 2)

When the ND FILTER switch is "2", adjust the color difference matrix coefficient so that proper color reproduction is produced.

Subject	Color bar chart (Color bar standard picture frame)
Measurement Point	Video output terminal
Measuring Instrument	Vectorscope
Adjustment Page	E
Adjustment Address	90, 91, 92, 93
Specified Value	All color luminance points should settle within each color reproduction frame. (Fig. 5-1-11)

**Note1:** After the power is turned on, this adjustment can be done only once.

**Note2:** Check that the data of page: 6, address: 02 is "00". If not, to page: 6, address: 01, set data: 00, and press the PAUSE button.

#### Switch setting:

- 1) ND FILTER ..... 2  
(The data of page: 6, address: 9D is "02".)

#### Adjusting method:

Order	Page	Address	Data	Procedure
1				Check that the picture frame is set to the specified position. (Refer to "8. Picture Frame Setting".)
2	0	01	01	Set the data.
3	F	5E	2D	Set the data, and press PAUSE button.
4	E	90	00	Set the data, and press PAUSE button.
5	E	91	00	Set the data, and press PAUSE button.
6	E	92	20	Set the data, and press PAUSE button.
7	E	93	20	Set the data, and press PAUSE button.
8	6	01	CB	Set the data, and press PAUSE button.
9	6	01	C9	Set the data, and press PAUSE button. (Note)
10	6	02		Check that the data changes to "01".
11				Adjust the GAIN and PHASE of the vectorscope, and adjust the burst luminance point to the burst position of the color reproduction frame. (Fig. 5-1-11)
12				Check that all color luminance points settle within each color reproduction frame. (Fig. 5-1-11)

**Note:** The adjustment data will be automatically input to page: E, address: 90 to 93.

#### Processing after Completing Adjustments

Order	Page	Address	Data	Procedure
1	6	01	00	Set the data, and press PAUSE button.
2	6	02	00	Set the data.
3	F	5E	1D	Set the data, and press PAUSE button.
4	0	01	00	Set the data.
5				Set ND FILTER switch to "OFF".

## 19. White Balance Check

Subject	Clear chart (Color bar standard picture frame)
Filter	Filter C14 for color temperature correction ND filter 1.0 and 0.3 (2 sheets)
Measurement Point	Video output terminal
Measuring Instrument	Vectorscope
Specified Value	Fig. 5-1-12. A to B

### Switch setting:

ND FILTER ..... OFF  
(The data of page: 6, address: 9D is "00".)

### Checking method:

Order	Page	Address	Data	Procedure
				<b>Indoor white balance check</b>
1				Check that the lens is not covered with either filter.
2	6	01	0F	Set the data, and press PAUSE button.
3				Check that the center of the white luminance point is within the circle shown Fig. 5-1-12. A.
				<b>Outdoor white balance check</b>
4				Place the C14 filter on the lens.
5	6	01	3F	Set the data, and press PAUSE button.
6				Check that the center of the white luminance point is within the circle shown Fig. 5-1-12. B.
7				Remove the C14 filter.
				<b>Indoor white balance data check</b>
8				Place the ND filter 1.6 (1.0+0.3+0.3) on the lens.
9	6	01	0F	Set the data, and press PAUSE button.
10				Wait for 2 seconds.
11	0	01	01	Set the data.
12	F	10	A1	Set the data, and press PAUSE button.
13	F	11	04	Set the data, and press PAUSE button.
14	1			Check that the second digit of the display data (Note) is an odd number. Specified value: 1 : XX : <u>XX</u> Odd number
15	6	04	C6	Set the data.
16	1			Check that the display data (Note) satisfies the specified value. Specified value: 0000 to 0C50

**Note:** Displayed data of the adjustment remote commander.

1 : XX : XX  
                    Display data

### Processing after Completing Adjustments

Order	Page	Address	Data	Procedure
1	6	01	00	Set the data, and press PAUSE button.
2	6	04	00	Set the data.
3	F	10	00	Set the data, and press PAUSE button.
4	F	11	00	Set the data, and press PAUSE button.
5	0	01	00	Set the data.

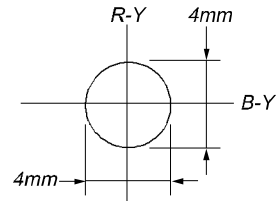


Fig. 5-1-12. (A)

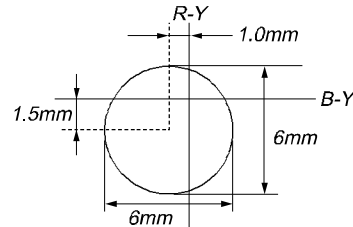


Fig. 5-1-12. (B)

## 20. Steady Shot Adjustment

- This adjustment is performed only when replacing the angular velocity sensor.

Although this adjustment need not be performed when the circuit is damaged, etc., check the operations.

- Note down the sensitivity displayed on the angular velocity sensor of the repair parts. At this time, note down also to which board it was attached to.

Be sure to check because if attached incorrectly, the screen will vibrate up and down or left and right during hand-shake correction operations.

### Precautions on the Parts Replacement

There are two types of repair parts.

Type A: ENC03JA

Type B: ENC03JB

Replace the broken sensor with a same type sensor. If replace with other type parts, the image will vibrate up and down or left and right during hand-shake correction operations. After replacing, re-adjust according to the adjusting method after replacement.

### Precautions on Angular Velocity Sensor

The sensor incorporates a precision oscillator. Handle it with care as if it dropped, the balance of the oscillator will be disrupted and operations will not be performed properly.


#### Switch setting:

STEADY SHOT (Menu) ..... ON  
DIGITAL ZOOM (Menu) ..... OFF

## 20-1. Steady Shot Adjustment (1)

Subject	Pattern A (1.5m from the front of the lens)
Measurement Point	Video output terminal
Measuring Instrument	Oscilloscope (V period)
Adjustment Page	F
Adjustment Address	41

Pattern A

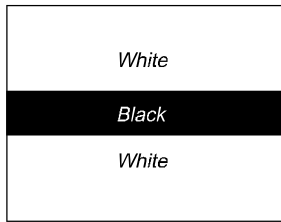

A4 size (297mm × 210mm)

Fig. 5-1-13.

### Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: F, address: EA, set data: 76, and press the PAUSE button of the adjustment remote commander.
- 3) Expose pattern A with the zoom TELE end.
- 4) Adjust the focus.
- 5) Measure the vertical position SV1 (msec) of the falling edge of the waveform. (Oscilloscope is V period)
- 6) Select page: F, address: EA, set data: 8A, and press the PAUSE button.
- 7) Measure the vertical position SV2 (msec) of the falling edge of the waveform. (Oscilloscope is V period)
- 8) Obtain D<sub>41</sub>' using the following equation (decimal calculation).

$$\text{NTSC model} \quad D_{41}' = \frac{1.53}{SV1 - SV2} \times \frac{0.6}{\text{PITCH sensor sensitivity}} \times 99$$

PAL model

$$D_{41}' = \frac{1.84}{SV1 - SV2} \times \frac{0.6}{\text{PITCH sensor sensitivity}} \times 99$$

**Note:** PITCH sensor sensitivity (SE601 or SE602 of SE-108 board) is written only on the repair parts.

- 9) Convert D<sub>41</sub>' to hexadecimal notation, and obtain D<sub>41</sub>. (Round off to one decimal place)  
(Refer to Table 5-4-1. "Hexadecimal notation-Decimal notation conversion table" of "5-4. Service Mode".)
- 10) Select page: F, address: 41, set data: D<sub>41</sub>, and press the PAUSE button.

### Processing after Completing Adjustments

- 1) Select page: F, address: EA, set data: 80, and press the PAUSE button of the adjustment remote commander.
- 2) Select page: 0, address: 01, and set data: 00.
- 3) Check that the steady shot operation is performed normally.

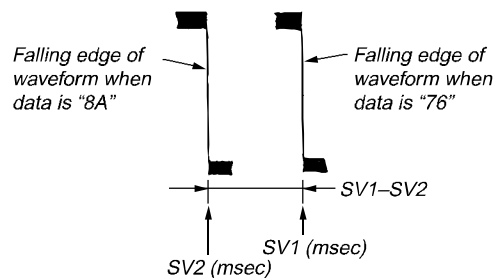
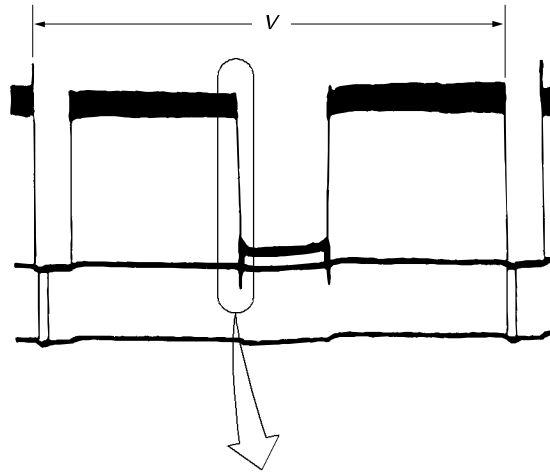


Fig. 5-1-14.

## 20-2. Steady Shot Adjustment (2)

Subject	Pattern B (1.5m from the front of the lens)
Measurement Point	Video output terminal
Measuring Instrument	Oscilloscope (H period)
Adjustment Page	F
Adjustment Address	42

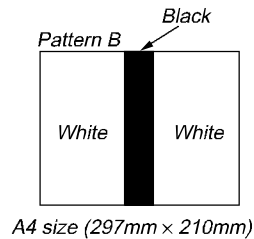


Fig. 5-1-15.

### Adjusting method:

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: F, address: EB, set data: 76, and press the PAUSE button of the adjustment remote commander.
- 3) Expose pattern B with the zoom TELE end.
- 4) Adjust the focus.
- 5) Measure the horizontal position SH1 ( $\mu$  sec) of the falling edge of the waveform. (Oscilloscope is H period)
- 6) Select page: F, address: EB, set data: 8A, and press the PAUSE button.
- 7) Measure the horizontal position SH2 ( $\mu$  sec) of the falling edge of the waveform. (Oscilloscope is H period)
- 8) Obtain D42' using the following equation (decimal calculation).

$$D_{42}' = \frac{3.90}{SH1 - SH2} \times \frac{0.6}{\text{YAW sensor sensitivity}} \times 99$$

**Note:** YAW sensor sensitivity (SE600 or SE603 of SE-108 board) is written only on the repair parts.

- 9) Convert D42' to hexadecimal notation, and obtain D42. (Round off to one decimal place)  
(Refer to Table 5-4-1. "Hexadecimal notation-Decimal notation conversion table" of "5-4. Service Mode".)
- 10) Select page: F, address: 42, set data: D42, and press the PAUSE button.

### Processing after Completing Adjustments

- 1) Select page: F, address: EB, set data: 80, and press the PAUSE button of the adjustment remote commander.
- 2) Select page: 0, address: 01, and set data: 00.
- 3) Check that the steady shot operation is performed normally.

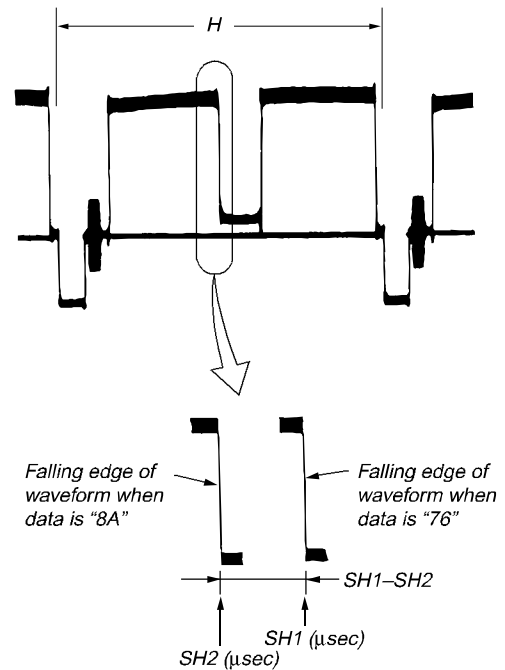


Fig. 5-1-16.

## 1-4. COLOR ELECTRONIC VIEWFINDER SYSTEM ADJUSTMENT

**Note1:** The back light (fluorescent tube) is driven by a high voltage AC power supply. Therefore, do not touch the back light holder to avoid electrical shock.

**Note2:** When replacing the LCD unit, be careful to prevent damages caused by static electricity.

**Note3:** As the PANEL CLOSE switch is attached to the cabinet (R), this cabinet must be attached when performing adjustments. If you perform the adjustments with cabinet (R) removed, set the following data.

1) Select page: 2, address: 0E, and set data: 67.

2) Select page: 2, address: 0F, and set data: 01.

Reset the data after completing adjustment.

1) Select page: 2, address: 0E, and set data: 00.

2) Select page: 2, address: 0F, and set data: 00.

### [Adjusting connector]

Most of the measuring points for adjusting the viewfinder system are concentrated in CN007 of the VC-242 board.

Connect the Measuring Instruments via the CPC-13 jig (J-6082-433-A).

The following table shows the Pin No. and signal name of CN007.

Pin No.	Signal Name	Pin No.	Signal Name
1	GND	11	H START
2	RF MON	12	XHD/PSIG
3	SWP	13	EVF VB
4	RF IN/LANC JACK IN	14	EVF VR
5	TDO	15	EVF VCO
6	GND	16	GND
7	TCK	17	EVF BL -
8	TDI	18	EVF VG
9	PANEL COM	19	LANC SIG
10	TMS	20	EVF BL +

Table 5-1-7.

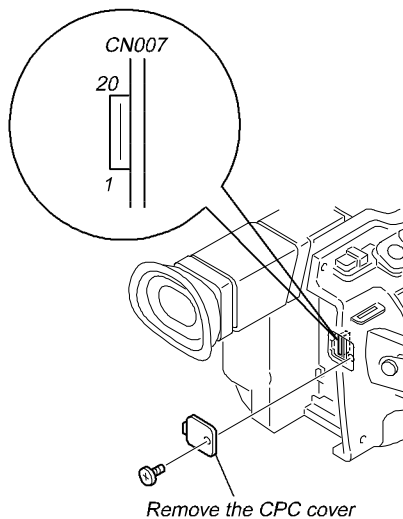


Fig. 5-1-17.

## 1. VCO Adjustment (VC-242 board)

Set the VCO free-run frequency. If deviated, the EVF screen will be blurred.

Mode	Camera
Subject	Arbitrary
Measurement Point	Pin ① of CN007 (EVF VCO)
Measuring Instrument	Frequency counter
Adjustment Page	D
Adjustment Address	92, 93
Specified Value	f = 15734 ± 30Hz (NTSC) f = 15625 ± 30Hz (PAL)

**Note1:** NTSC: DCR-VX2000

PAL: DCR-VX2000E

### Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	D	92		Change the data and set the VCO frequency (f) to the specified value.
3	D	92		Press PAUSE button.
4	D	92		Read the data, and this data is named D <sub>92</sub> .
5				Convert D <sub>92</sub> to decimal notation, and obtain D <sub>92</sub> '. (Note2)
6				Calculate D <sub>93</sub> ' using following equations (Decimal calculation) NTSC model: When D <sub>92</sub> ' ≤ 226 D <sub>93</sub> ' = D <sub>92</sub> ' + 29 When D <sub>92</sub> ' > 226 D <sub>93</sub> ' = 255 PAL model: When D <sub>92</sub> ' ≥ 29 D <sub>93</sub> ' = D <sub>92</sub> ' - 29 When D <sub>92</sub> ' < 29 D <sub>93</sub> ' = 00
7				Convert D <sub>93</sub> ' to a hexadecimal number, and obtain D <sub>93</sub> . (Note2)
8	D	93	D <sub>93</sub>	Set the data, and press PAUSE button.
9	0	01	00	Set the data.

**Note2:** Refer to "Table 5-4-1. Hexadecimal-decimal Conversion Table".



## 2. Bright Adjustment (VC-242 board)

Set the D range of the RGB decoder used to drive the LCD to the specified value. If deviated, the LCD screen will become blackish or saturated (whitish).

Mode	Camera
Subject	Arbitrary
Measurement Point	Pin ⑩ of CN007 (EVF VG)
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	95
Specified Value	$A = 7.30 \pm 0.05V$

### Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	D	95		Change the data and set the voltage (A) between the reversed waveform pedestal and non-reversed waveform pedestal to the specified value.
3	D	95		Press PAUSE button.
4	0	01	00	Set the data.

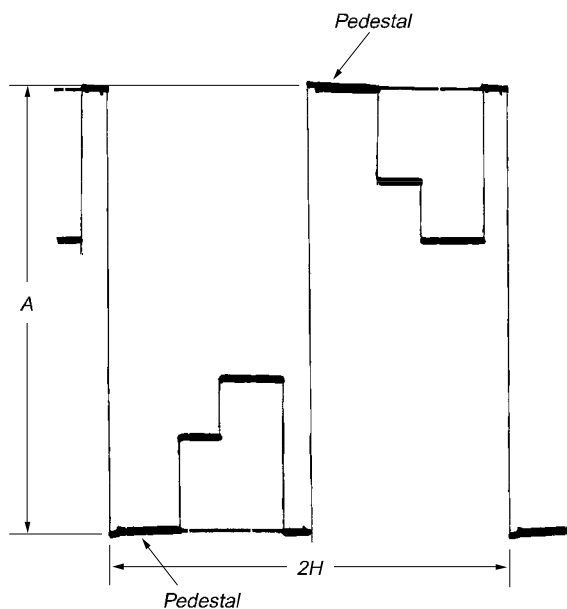


Fig. 5-1-18.

## 3. Contrast Adjustment (VC-242 board)

Set the level of the VIDEO signal for driving the LCD to the specified value. If deviated, the screen image will be blackish or saturated (whitish).

Mode	Camera
Subject	Arbitrary
Measurement Point	Pin ⑩ of CN007 (EVF VG)
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	99
Specified Value	$A=2.45 \pm 0.05V$

### Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	D	99		Change the data and set the voltage (A) between the 3 steps peak and pedestal to the specified value. (The data should be "00" to "7F".)
3	D	99		Press PAUSE button.
4	0	01	00	Set the data.

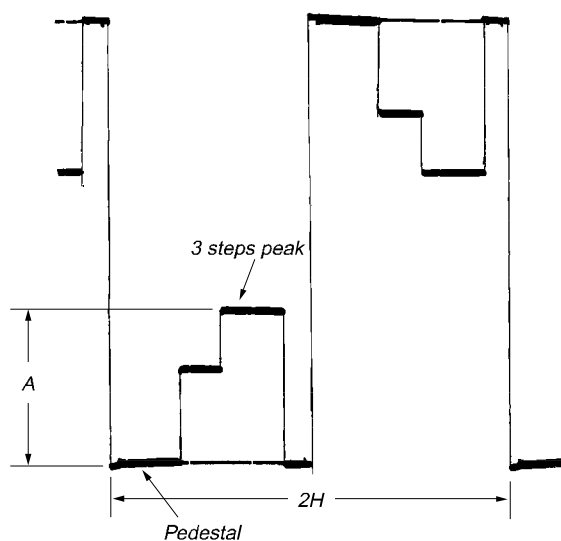


Fig. 5-1-19.

#### 4. Backlight Consumption Current Adjustment (VC-242 board)

Set the backlight luminance and color temperature.  
If deviated, the image may become dark or bright.

Mode	Camera
Subject	Arbitrary
Measurement Point	+ Probe: Pin ⑳ of CN007 (EVF BL+) – Probe: Pin ⑰ of CN007 (EVF BL–)
Measuring Instrument	Digital voltmeter
Adjustment Page	D
Adjustment Address	9C, 9D, 9E, 9F
Specified Value	BRIGHT mode : $A=37.0 \pm 1.5\text{mVdc}$ NORMAL mode : $A=22.0 \pm 1.5\text{mVdc}$

**Note1:** Perform the adjustment in the following order.

**Note2:** Adjust 30 seconds after running on the power supply.

##### Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	D	9C	F0	Set the data, and press PAUSE button.
3	D	9D	F0	Set the data, and press PAUSE button.
4	D	9E	11	Set the data, and press PAUSE button.
5	D	9F	1F	Set the data, and press PAUSE button.
6	D	9D		Change the data and set the voltage difference (A) between Pin ⑳ and Pin ⑰ to the specified value of BRIGHT mode. (The data should be “C0” to “FF”.)
7	D	9D		Press PAUSE button.
8	D	9C		Set the same data as address: 9D.
9	D	9C		Press PAUSE button.
10	D	9E		Change the data and set the voltage difference (A) between Pin ⑳ and Pin ⑰ to the specified value of NORMAL mode. (The data should be “00” to “1F”.)
11	D	9E		Press PAUSE button.
12	0	01	00	Set the data.

#### 5. White Balance Adjustment (VC-242 board)

Correct the white balance.

If deviated, the reproduction of the EVF screen may degenerate.

Mode	Camera
Subject	Arbitrary
Measurement Point	Check on EVF screen
Measuring Instrument	
Adjustment Page	D
Adjustment Address	97, 98
Specified Value	The EVF screen should not be colored.

**Note1:** Check the white balance only when replacing the following parts.  
If necessary, adjust them.

1. LCD panel
2. Light induction plate
3. IC1802

**Note2:** Use the AC power adaptor.

##### Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	D	97	90	Set the data, and press PAUSE button.
3	D	98	80	Set the data, and press PAUSE button.
4	D	98		Check that the EVF screen is not colored. If not colored, proceed to step 10.
5	D	97		Change the data so that the EVF screen is not colored.
6	D	97		Press PAUSE button.
7	D	98		Change the data so that the EVF screen is not colored.
8	D	98		Press PAUSE button.
9	D	98		If the EVF screen is colored, repeat steps 5 to 9.
10	0	01	00	Set the data.

## 1-5. LCD SYSTEM ADJUSTMENT

**Note 1:** The back light (fluorescent tube) is driven by a high voltage AC power supply. Therefore, do not touch the back light holder to avoid electrical shock.

**Note 2:** When replacing the LCD unit, be careful to prevent damages caused by static electricity.

### [Adjusting connector]

Most of the measuring points for adjusting the LCD system are concentrated in CN2105 of the PD-126 board. The following table shows the Pin No. and signal name of CN2105.

Pin No.	Signal Name
1	VG
2	COM
3	GND
4	PSIG
5	HSY

Table 5-1-8.

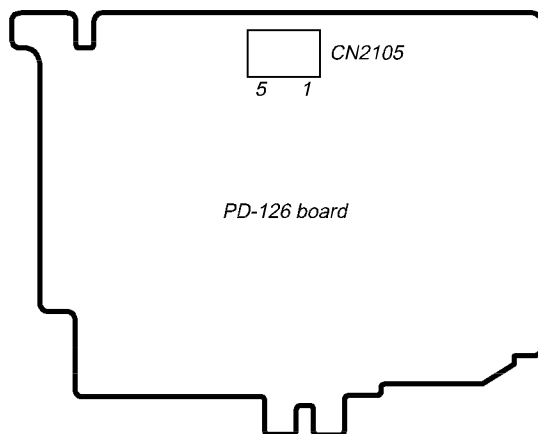


Fig. 5-1-20.

## 1. VCO Adjustment (PD-126 board)

Set the VCO free-run frequency. If deviated, the LCD screen will be blurred.

Mode	VTR stop
Signal	No signal
Measurement Point	Pin ⑤ of CN2105 (HSY)
Measuring Instrument	Frequency counter
Adjustment Page	D
Adjustment Address	A2, A3
Specified Value	f = 15734 ± 30Hz (NTSC) f = 15625 ± 30Hz (PAL)

**Note1:** NTSC: DCR-VX2000  
PAL: DCR-VX2000E

### Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	D	A2		Change the data and set the VCO frequency (f) to the specified value.
3	D	A2		Press PAUSE button.
4	D	A2		Read the data, and this data is named D <sub>A2</sub> .
5				Convert D <sub>A2</sub> to decimal notation, and obtain D <sub>A2</sub> '. (Note2)
6				Calculate D <sub>A3</sub> ' using following equations (Decimal calculation) NTSC model: When D <sub>A2</sub> ' ≤ 221 D <sub>A3</sub> ' = D <sub>A2</sub> ' + 34 When D <sub>A2</sub> ' > 221 D <sub>A3</sub> ' = 255 PAL model: When D <sub>A2</sub> ' ≥ 34 D <sub>A3</sub> ' = D <sub>A2</sub> ' - 34 When D <sub>A2</sub> ' < 34 D <sub>A3</sub> ' = 00
7				Convert D <sub>A3</sub> ' to a hexadecimal number, and obtain D <sub>A3</sub> . (Note2)
8	D	A3	D <sub>A3</sub>	Set the data, and press PAUSE button.
9	0	01	00	Set the data.

**Note2:** Refer to "Table 5-4-1. Hexadecimal-decimal Conversion Table".

## 2. Bright Adjustment (PD-126 board)

Set the D range of the RGB decoder used to drive the LCD to the specified value. If deviated, the LCD screen will become blackish or saturated (whitish).

Mode	VTR stop
Signal	No signal
Measurement Point	Pin ① of CN2105 (VG)
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	A5
Specified Value	$A = 7.8 \pm 0.05V$

### Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	D	A5		Change the data and set the voltage (A) between the reversed waveform pedestal and non-reversed waveform pedestal to the specified value.
3	D	A5		Press PAUSE button.
4	0	01	00	Set the data.

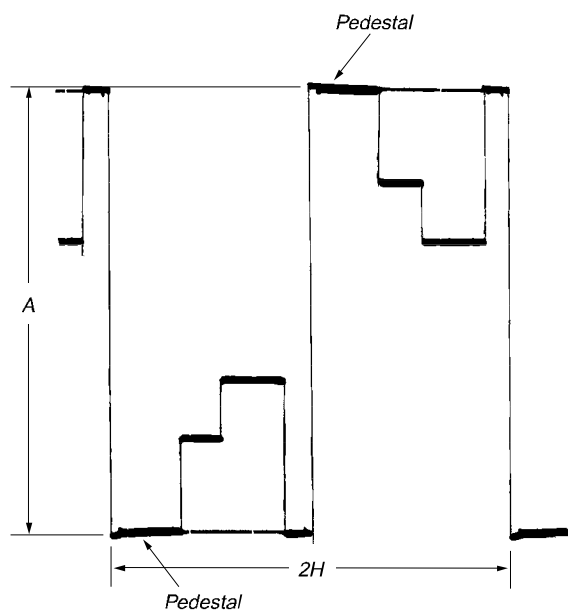


Fig. 5-1-21.

## 3. Black Limit Adjustment (PD-126 board)

Set the dynamic range of the LCD driver to an appropriate level. If deviated, the LCD screen will become blackish or saturated (whitish).

Mode	VTR stop
Signal	No signal
Measurement Point	Pin ④ of CN2105 (PSIG)
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	A6
Specified Value	$A = 8.50 \pm 0.05V$

### Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	2	0E	61	Set the data.
3	2	0F		Set the following data. 5B: DCR-VX2000 (NTSC) 53: DCR-VX2000E (PAL)
4	D	A6		Change the data and set the PSIG signal amplitude (A) to the specified value. (The data should be "00" to "0F".)
5	D	A6		Press PAUSE button.
6	2	0E	00	Set the data.
7	2	0F	00	Set the data.
8	0	01	00	Set the data.

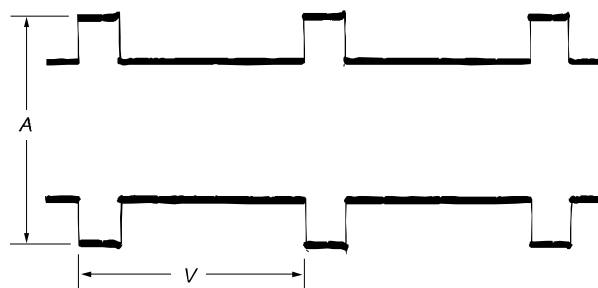


Fig. 5-1-22.

#### 4. Contrast Adjustment (PD-126 board)

Set the level of the VIDEO signal for driving the LCD to the specified value. If deviated, the screen image will be blackish or saturated (whitish).

Mode	VTR stop
Signal	No signal
Measurement Point	Pin ① of CN2105 (VG)
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	AA
Specified Value	$A = 3.10 \pm 0.05V$

##### Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	D	AA		Change the data and set the voltage (A) between the 3 steps peak and pedestal to the specified value. (The data should be "00" to "7F".)
3	D	AA		Press PAUSE button.
4	0	01	00	Set the data.
5				Check that the specified value of "Bright Adjustment" is satisfied.

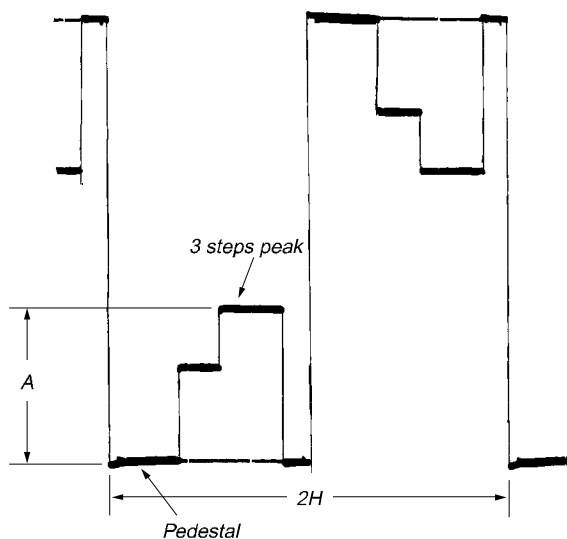


Fig. 5-1-23.

#### 5. Center Level Adjustment (PD-126 board)

Set the video signal center level of LCD panel to an appropriate level.

Mode	VTR stop
Signal	No signal
Measurement Point	Pin ① of CN2105 (VG)
Measuring Instrument	Digital voltmeter
Adjustment Page	D
Adjustment Address	AB
Specified Value	$A = 7.00 \pm 0.05V_{dc}$

##### Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	3	0C	60	Set the data, and press PAUSE button.
3	3	22	08	Set the data, and press PAUSE button.
4	D	AB		Change the data and set the DC voltage (A) to the specified value. (The data should be "00" to "7F".)
5	D	AB		Press PAUSE button.
6	3	0C	00	Set the data, and press PAUSE button.
7	3	22	00	Set the data, and press PAUSE button.
8	0	01	00	Set the data.

## 6. V-COM Adjustment (PD-126 board)

Set the DC bias of the common electrode drive signal of LCD to the specified value.

If deviated, the LCD display will move, producing flicker and conspicuous vertical lines.

Mode	VTR stop
Signal	No signal
Measurement Point	Check on LCD display
Measuring Instrument	
Adjustment Page	D
Adjustment Address	A4
Specified Value	The brightness difference between the section A and section B is minimum.

**Note:** Perform "Bright Adjustment", "Black Limit Adjustment", "Contrast Adjustment" and "Center Level Adjustment" before this adjustment.

### Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	D	B0		Write down the data.
3	D	B0	CA	Set the data, and press PAUSE button.
4	D	A4		Change the data so that the brightness of the section A and that of the section B is equal. (The data should be "80" to "BF".)
5	D	A4		Subtract 2 from the data.
6	D	A4		Press PAUSE button.
7	D	B0		Write the data that was written down in the step 2.
8	D	B0		Press PAUSE button.
9	0	01	00	Set the data.

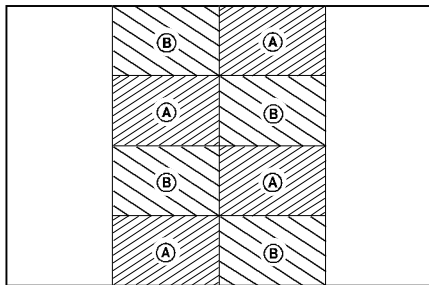


Fig. 5-1-24.

## 7. White Balance Adjustment (PD-126 board)

Correct the white balance.

If deviated, the reproduction of the LCD screen may degenerate.

Mode	VTR stop
Signal	No signal
Measurement Point	Check on LCD screen
Measuring Instrument	
Adjustment Page	D
Adjustment Address	A8, A9
Specified Value	The LCD screen should not be colored.

**Note1:** Check the white balance only when replacing the following parts. If necessary, adjust them.

1. LCD panel
2. Light induction plate
3. IC2101

**Note2:** Use the AC power adaptor.

### Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	D	A8	85	Set the data, and press PAUSE button.
3	D	A9	75	Set the data, and press PAUSE button.
4	D	A9		Check that the LCD screen is not colored. If not colored, proceed to step 10.
5	D	A8		Change the data so that the LCD screen is not colored.
6	D	A8		Press PAUSE button.
7	D	A9		Change the data so that the LCD screen is not colored.
8	D	A9		Press PAUSE button.
9	D	A9		If the LCD screen is colored, repeat steps 5 to 9.
10	0	01	00	Set the data.

## 5-2. MECHANISM SECTION ADJUSTMENT

### On the mechanism section adjustment

For details of mechanism section adjustments, checks, and replacement of mechanism parts, refer to the separate volume "DV MECHANICAL ADJUSTMENT MANUAL IV [C Mechanism]".

### 2-1. HOW TO ENTER RECORD MODE WITHOUT CASSETTE

- 1) Connect the adjustment remote commander to the LANC jack.
- 2) Turn the HOLD switch of the adjustment remote commander to the ON position.
- 3) Close the cassette compartment without the cassette.
- 4) Select page: 3, address: 01, set data: 0C, and press the PAUSE button of the adjustment remote commander.  
(The mechanism enters the record mode automatically.)  
**Note:** The function buttons become inoperable.
- 5) To quit the record mode, select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjustment remote commander. (Whenever you want to quit the record mode, be sure to quit following this procedure.)

### 2-2. HOW TO ENTER PLAYBACK MODE WITHOUT CASSETTE

- 1) Connect the adjustment remote commander to the LANC jack.
- 2) Turn the HOLD switch of the adjustment remote commander to the ON position.
- 3) Close the cassette compartment without the cassette.
- 4) Select page: 3, address: 01, set data: 0B, and press the PAUSE button of the adjustment remote commander.  
(The mechanism enters the playback mode automatically.)  
**Note:** The function buttons become inoperable.
- 5) To quit the playback mode, select page: 3, address: 01, set data: 00, and press the PAUSE button of the adjustment remote commander. (Whenever you want to quit the playback mode, be sure to quit following this procedure.)

## 2-3. TAPE PATH ADJUSTMENT

### 1. Preparation for Adjustment

- 1) Clean the tape running side (tape guide, drum, capstan shaft, pinch roller, etc.).
  - 2) Connect the adjustment remote commander to the LANC jack.
  - 3) Turn the HOLD switch of the adjustment remote commander to the ON position.
  - 4) Connect an oscilloscope to VC-242 board CN007 via the CPC-13 jig (J-6082-443-A).  
Channel 1: VC-242 board, CN007 Pin ② (Note)  
External trigger: VC-242 board, CN007 Pin ③  
**Note:** Connect a 75  $\Omega$  resistor between pins ② of CN007 and ① (GND).  
75  $\Omega$  resistor (Parts code: 1-247-804-11)
  - 5) Playback the alignment tape for tracking. (XH2-1)
  - 6) Select page: 3, address: 33, and set data: 08.
  - 7) Select page: 3, address: 26, and set data: 31.
  - 8) Check that the oscilloscope RF waveform is normal at the entrance and exit.
- If not normal, adjust according to the separate volume "DV MECHANICAL ADJUSTMENT MANUAL IV [C Mechanism]".

### CN007 of VC-242 board

Pin No.	Signal Name	Pin No.	Signal Name
1	GND	11	H START
2	RF MON	12	XHD/PSIG
3	SWP	13	EVF VB
4	RF IN/LANC JACK IN	14	EVF VR
5	TDO	15	EVF VCO
6	GND	16	GND
7	TCK	17	EVF BL -
8	TDI	18	EVF VG
9	PANEL COM	19	LANC SIG
10	TMS	20	EVF BL +

### 2. Procedure after operations

- 1) Connect the adjustment remote commander to the LANC jack and set the HOLD switch to the ON position.
- 2) Select page: 3, address: 26, and set data: 00.
- 3) Select page: 3, address: 33, and set data: 00.

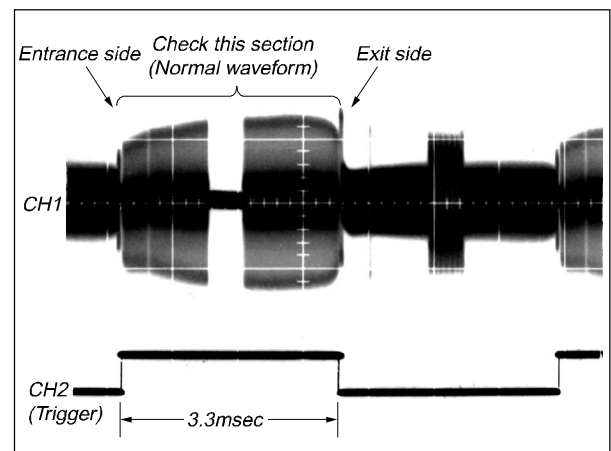


Fig. 5-2-1.

## 5-3. VIDEO SECTION ADJUSTMENTS

**NTSC model : DCR-VX2000**

**PAL model : DCR-VX2000E**

### 3-1. PREPARATIONS BEFORE ADJUSTMENTS

Use the following measuring instruments for video section adjustments.

#### 3-1-1. Equipment Required

- 1) TV monitor
- 2) Oscilloscope (dual-phenomenon, band above 30 MHz with delay mode) (Unless specified otherwise, use a 10 : 1 probe.)
- 3) Frequency counter
- 4) Pattern generator with video output terminal.
- 5) Digital voltmeter
- 6) Audio generator
- 7) Audio level meter
- 8) Audio distortion meter
- 9) Audio attenuator
- 10) Regulated power supply
- 11) Alignment tapes
  - Tracking standard (XH2-1)  
Parts code: 8-967-997-01
  - SW/OL standard (XH2-3)  
Parts code: 8-967-997-11
  - Audio operation check for NTSC (XH5-3)  
Parts code: 8-967-997-51
  - System operation check for NTSC (XH5-5)  
Parts code: 8-967-997-61
  - BIST check for NTSC (XH5-6)  
Parts code: 8-967-997-71
  - Audio operation check for PAL (XH5-3P)  
Parts code: 8-967-997-55
  - System operation check for PAL (XH5-5P)  
Parts code: 8-967-997-66
  - BIST check for PAL (XH5-6P)  
Parts code: 8-967-997-76
- 12) Adjustment remote commander (J-6082-053-B)
- 13) CPC-13 jig (J-6082-443-A)
- 14) Extension cable (50P, 0.5 mm)  
For extension between the CD-254 board (CN100) and the VC-242 board (CN025) (J-6082-496-A)



### 3-1-2. Precautions on Adjusting

- 1) The adjustments of this unit are performed in the VTR mode or camera mode.  
To set to the VTR mode, set the power switch to "VCR" (or "PLAYER") or set the "Forced VTR Power ON mode" using the adjustment remote commander (Note 1).  
To set to the Camera mode, set the power switch to "CAMERA" or set the "Forced Camera Power ON mode" using the adjustment remote commander (Note 2).  
After completing adjustments, be sure to exit the "Forced VTR Power ON Mode" or "Forced Camera Power ON Mode". (Note 3)
- 2) The handle block (Microphone unit, Microphone amplifier, remote commander receiver, VTR function key) need not be connected except during "Battery End Adjustment" and "Audio adjustments". To remove, disconnect the following connector.  
FK-076 board CN501 (36P, 0.8mm)
- 3) By setting the "Forced VTR Power ON mode" or "Forced Camera Power ON mode", the video section can be operate even if the cabinet (L) (Control switch block (CF-4980)) has been removed. When removing the cabinet (L) disconnect the following connector.  
VC-242 board CN009 (14P, 0.5mm)
- 4) Cabinet (R) (CK-93board, LCD block) need not be connected. But removing the cabinet (R) (removing the VC-242 board CN008) means removing the lithium 3V power supply (CK-093 board, BT250) , data such as date, time, user-set menus will be lost. After completing adjustments, reset these data. If the cabinet (R) has been removed, the self-diagnosis data, data on history of use (total drum rotation time etc.) will be lost. Before removing, note down the self-diagnosis data and the data on the history use (data of page: 2, address: A2 to AA). (Refer to "SELF-DIAGNOSIS FUNCTION" for the self-diagnosis data, and to "5-4. Service Mode" for the data on the history use.)  
To remove the cabinet (R), disconnect the following connector.  
VC-242 board CN008 (50P, 0.5mm)
- 5) The viewfinder (LB-065 board) is need not be connected. To remove it, disconnect the following connector.  
VC-242 board CN8612 (27P, 0.3mm)
- 6) The FP-200 (flexible) is need not be connected. To remove it, disconnect the following connectors.  
VC-242 board CN004 (10P, 0.5mm)  
LA-026 board CN053 (27P, 0.5mm)
- 7) The LA-026 board is need not be connected. To remove it, disconnect the following connectors.  
VC-242 board CN023 (80P, 0.5mm)
- 8) The CD-254 board of the lens block is need not be connected. To remove it, disconnect the following connectors.  
VC-242 board CN025 (50P, 0.5mm)

#### Note 1: Setting the "Forced VTR Power ON" mode (VTR mode)

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: D, address: 10, set data: 02, and press the PAUSE button of the adjustment remote commander.

The above procedure will enable the VTR power to be turned on with the control switch block (CF-4980) removed.

After completing adjustments, be sure to exit the "Forced Power ON mode".

#### Note 2: Setting the "Forced Camera Power ON" mode (Camera mode)

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: D, address: 10, set data: 01, and press the PAUSE button of the adjustment remote commander.

The above procedure will enable the camera power to be turned on with the control switch block (CF-4980) removed.

After completing adjustments, be sure to exit the "Forced Power ON mode".

#### Note 3: Setting the "Forced Memory Power ON" mode (Memory mode)

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: D, address: 10, set data: 05, and press the PAUSE button of the adjustment remote commander.

The above procedure will enable the memory power to be turned on with the control switch block (CF-4980) removed.

After completing adjustments, be sure to exit the "Forced Power ON mode".

#### Note 4: Exiting the "Forced Power ON" mode

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: D, address: 10, set data: 00, and press the PAUSE button of the adjustment remote commander.
- 3) Select page: 0, address: 01, and set data: 00.

### 3-1-3. Adjusting Connectors

Some of the adjusting points of the video section are concentrated at VC-242 board CN007. Connect the measuring instruments via the CPC-13 jig (J-6082-443-A). The following table lists the pin numbers and signal names of CN007.

Pin No.	Signal Name	Pin No.	Signal Name
1	GND	11	H START
2	RF MON	12	XHD/PSIG
3	SWP	13	EVF VB
4	RF IN/LANC JACK IN	14	EVF VR
5	TDO	15	EVF VCO
6	GND	16	GND
7	TCK	17	EVF BL –
8	TDI	18	EVF VG
9	PANEL COM	19	LANC SIG
10	TMS	20	EVF BL +

Table 5-3-1.

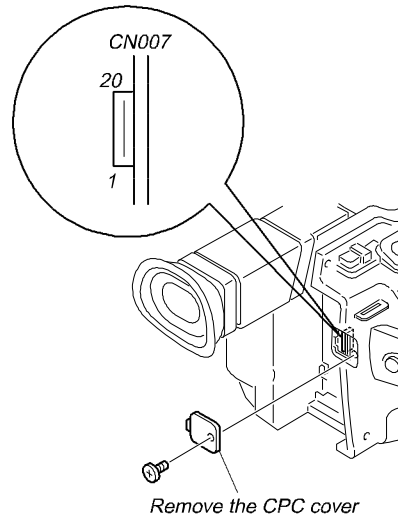


Fig. 5-3-1

### 3-1-4. Connecting the Equipment

Connect the measuring instruments as shown in Fig. 5-3-2, and perform the adjustments.

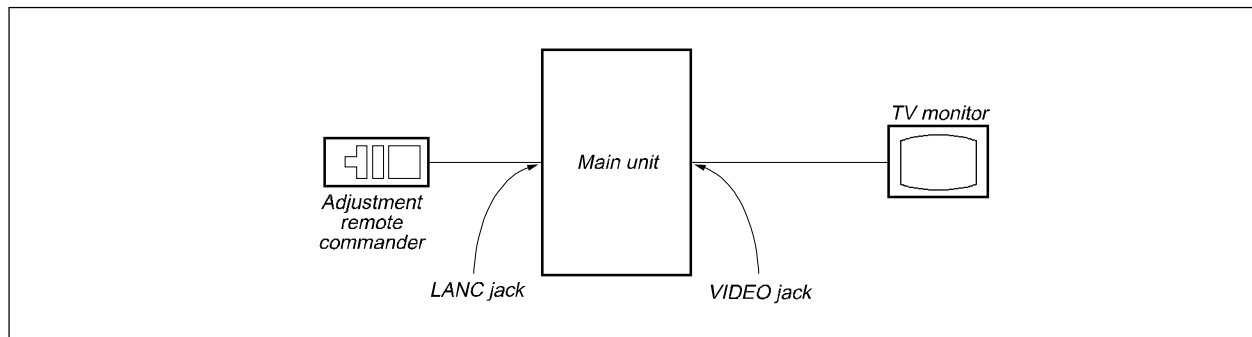


Fig. 5-3-2.

### 3-1-5. Alignment Tapes

Use the alignment tapes shown in the following table.

Use tapes specified in the signal column of each adjustment.

Name	Use
Tracking standard (XH2-1)	Tape path adjustment
SW/OL standard (XH2-3)	Switching position adjustment
Audio operation check (XH5-3 (NTSC), XH5-3P (PAL))	Audio system adjustment
System operation check (XH5-5 (NTSC), XH5-5P (PAL))	Operation check
BIST check (XH5-6 (NTSC), XH5-6P (PAL))	BIST check

Fig. 5-3-3 shows the 75% color bar signals recorded on the alignment tape for Audio Operation Check.

**Note:** Measure with video terminal (Terminated at 75  $\Omega$ )

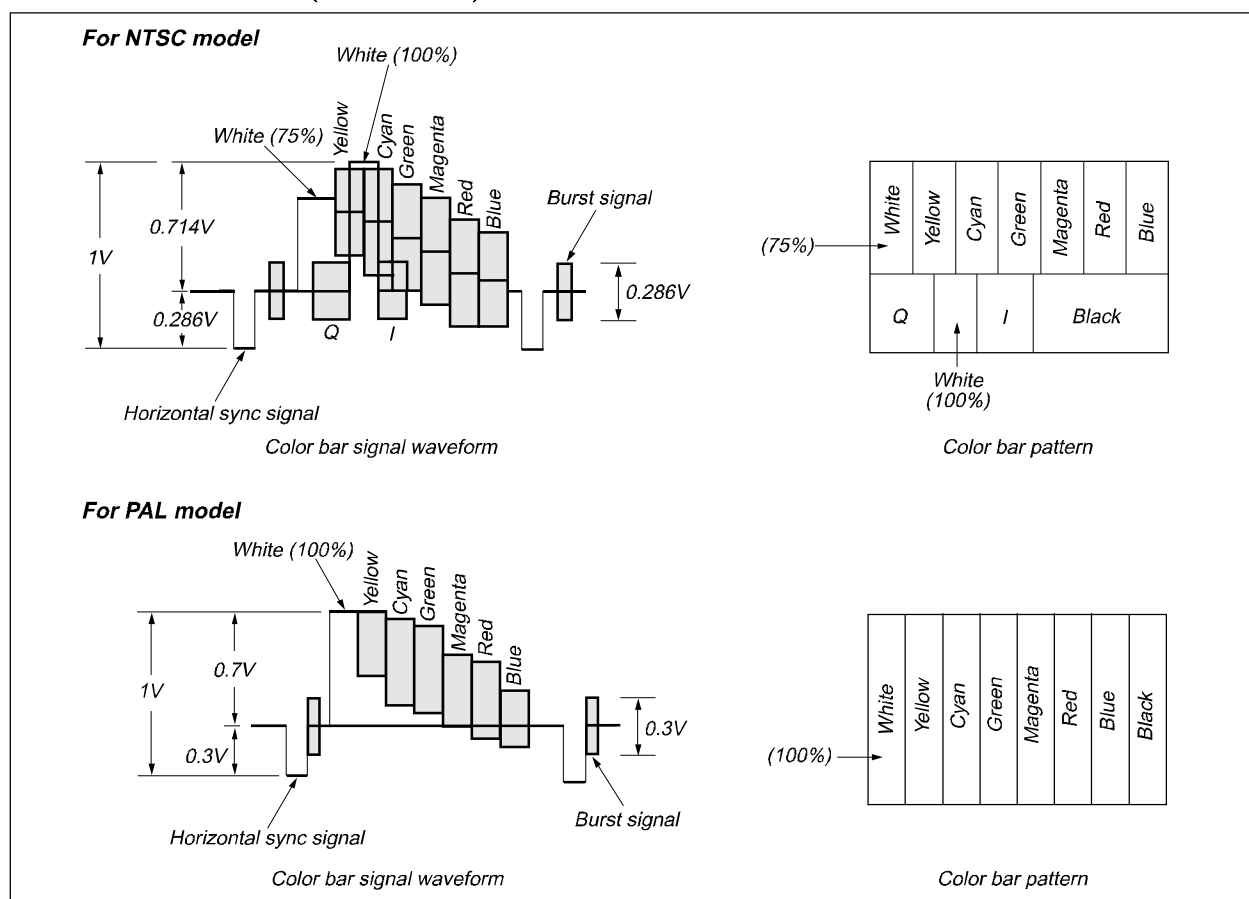


Fig. 5-3-3. Color bar signal of alignment tapes

### 3-1-6. Input/Output Level and Impedance

#### Video input/output

Phono jack

Video signal: 1 Vp-p, 75  $\Omega$  unbalanced, sync negative

#### S video input/output

4-pin mini DIN

Luminance signal: 1 Vp-p, 75  $\Omega$  unbalanced, sync negative

Chrominance signal: 0.286 Vp-p, 75  $\Omega$  unbalanced (NTSC)  
: 0.300 Vp-p, 75  $\Omega$  unbalanced (PAL)

#### Audio input/output

Phono jack

Input level: 327mV

Input impedance: More than 47k $\Omega$

Output level: 327 mV (at load impedance 47 k $\Omega$ )

Output impedance: Below 2.2 k $\Omega$

## 3-2. SYSTEM CONTROL SYSTEM ADJUSTMENT

### 1. Initialization of B, C, D, E, F, 8 Page Data

If the B, C, D, E, F, 8 page data is erased due to some reason, perform “1-2. INITIALIZATION OF B, C, D, E, F, 8 PAGE DATA”, of “5-1. CAMERA SECTION ADJUSTMENT”

### 2. Serial No. Input

#### 2-1. Company ID Input

Write the company ID in the EEPROM (nonvolatile memory).

Page	C
Address	E8, E9, EA, EB, EC

#### Input method:

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Input the following data to page: C, addresses: E8 to EC.  
**Note:** Press the PAUSE button of the adjustment remote commander each time to set the data.

Address	Data
E8	08
E9	00
EA	46
EB	01
EC	01

- 3) Select page: 0, address: 01, and set data: 00.

### 2-2. Serial No. Input

Write the serial No. and model code in the EEPROM (nonvolatile memory). Convert the serial No. on the name plate from decimal to hexadecimal, and write in the EEPROM.

Page	C
Address	ED, EE, EF

#### Input method:

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Read the serial No. on the name plate, and take it as D<sub>1</sub>.  
Example: If the serial No. is 77881.  
D<sub>1</sub>=77881
- 3) Obtain D<sub>2</sub> and H<sub>1</sub> corresponding to D<sub>1</sub> from Table 5-3-2.  
Example: If D<sub>1</sub> is “77881”.  
D<sub>2</sub>=D<sub>1</sub>-65536=12345  
H<sub>1</sub>=FE

D <sub>1</sub> (Decimal)	D <sub>2</sub> (Decimal)	H <sub>1</sub> (Hexadecimal) (Service model code)
000001 to 065535	D <sub>1</sub>	FE
065536 to 131071	D <sub>1</sub> -65536	FE
131072 to 196607	D <sub>1</sub> -131072	FE

Table 5-3-2.

- 4) Input H<sub>1</sub> to page: C, address: ED. (Model code input)  
Example: If H<sub>1</sub> is “FE”.  
Select page: C, address: ED, set data: FE, and press the PAUSE button.
- 5) Obtain the maximum decimal not exceeding D<sub>2</sub> from Table 5-3-3, and take this as D<sub>3</sub>.  
Example: If D<sub>2</sub> is “12345”.  
D<sub>3</sub>=12288
- 6) Obtain the hexadecimal corresponding to D<sub>3</sub> from Table 5-3-3, and take this as H<sub>3</sub>.  
Example: If D<sub>3</sub> is “12288”.  
H<sub>3</sub>=3000
- 7) Obtain the difference D<sub>4</sub> between D<sub>2</sub> and D<sub>3</sub>. (Decimal calculation,  $0 \leq D_4 \leq 255$ )  
D<sub>4</sub>=D<sub>2</sub>-D<sub>3</sub>  
Example: If D<sub>2</sub> is “12345” and D<sub>3</sub> is “12288”.  
D<sub>4</sub>=12345-12288=57
- 8) Convert D<sub>4</sub> to hexadecimal, and take this as H<sub>4</sub>.  
(Refer to “Hexadecimal-decimal conversion table” in “5-4. Service Mode”.)  
Example: If D<sub>4</sub> is “57”.  
H<sub>4</sub>=39
- 9) Input the upper 2 digits of H<sub>3</sub> to page: C, address: EE.  
Example: If H<sub>3</sub> is “3000”.  
Select page: C, address: EE, set data: 30, and press the PAUSE button.
- 10) Input H<sub>4</sub> to page: C, address: EF.  
Example: If H<sub>4</sub> is “39”.  
Select page: C, address: EF, set data: 39, and press the PAUSE button.
- 11) Select page: 0, address: 01, and set data: 00.

Decimal (D <sub>3</sub> )	Hexa- decimal (H <sub>3</sub> )	Decimal (D <sub>3</sub> )	Hexa- decimal (H <sub>3</sub> )	Decimal (D <sub>3</sub> )	Hexa- decimal (H <sub>3</sub> )	Decimal (D <sub>3</sub> )	Hexa- decimal (H <sub>3</sub> )	Decimal (D <sub>3</sub> )	Hexa- decimal (H <sub>3</sub> )	Decimal (D <sub>3</sub> )	Hexa- decimal (H <sub>3</sub> )	Decimal (D <sub>3</sub> )	Hexa- decimal (H <sub>3</sub> )	Decimal (D <sub>3</sub> )	Hexa- decimal (H <sub>3</sub> )
0	0000	8192	2000	16384	4000	24576	6000	32768	8000	40960	A000	49152	C000	57344	E000
256	0100	8448	2100	16640	4100	24832	6100	33024	8100	41216	A100	49408	C100	57600	E100
512	0200	8704	2200	16896	4200	25088	6200	33280	8200	41472	A200	49664	C200	57856	E200
768	0300	8960	2300	17152	4300	25344	6300	33536	8300	41728	A300	49920	C300	58112	E300
1024	0400	9216	2400	17408	4400	25600	6400	33792	8400	41984	A400	50176	C400	58368	E400
1280	0500	9472	2500	17664	4500	25856	6500	34048	8500	42240	A500	50432	C500	58624	E500
1536	0600	9728	2600	17920	4600	26112	6600	34304	8600	42496	A600	50688	C600	58880	E600
1792	0700	9984	2700	18176	4700	26368	6700	34560	8700	42752	A700	50944	C700	59136	E700
2048	0800	10240	2800	18432	4800	26624	6800	34816	8800	43008	A800	51200	C800	59392	E800
2304	0900	10496	2900	18688	4900	26880	6900	35072	8900	43264	A900	51456	C900	59648	E900
2560	0A00	10752	2A00	18944	4A00	27136	6A00	35328	8A00	43520	AA00	51712	CA00	59904	EA00
2816	0B00	11008	2B00	19200	4B00	27392	6B00	35584	8B00	43776	AB00	51968	CB00	60160	EB00
3072	0C00	11264	2C00	19456	4C00	27648	6C00	35840	8C00	44032	AC00	52224	CC00	60416	EC00
3328	0D00	11520	2D00	19712	4D00	27904	6D00	36096	8D00	44288	AD00	52480	CD00	60672	ED00
3584	0E00	11776	2E00	19968	4E00	28160	6E00	36352	8E00	44544	AE00	52736	CE00	60928	EE00
3840	0F00	12032	2F00	20224	4F00	28416	6F00	36608	8F00	44800	AF00	52992	CF00	61184	EF00
4096	1000	12288	3000	20480	5000	28672	7000	36864	9000	45056	B000	53248	D000	61440	F000
4352	1100	12544	3100	20736	5100	28928	7100	37120	9100	45312	B100	53504	D100	61696	F100
4608	1200	12800	3200	20992	5200	29184	7200	37376	9200	45568	B200	53760	D200	61952	F200
4864	1300	13056	3300	21248	5300	29440	7300	37632	9300	45824	B300	54016	D300	62208	F300
5120	1400	13312	3400	21504	5400	29696	7400	37888	9400	46080	B400	54272	D400	62464	F400
5376	1500	13568	3500	21760	5500	29952	7500	38144	9500	46336	B500	54528	D500	62720	F500
5632	1600	13824	3600	22016	5600	30208	7600	38400	9600	46592	B600	54784	D600	62976	F600
5888	1700	14080	3700	22272	5700	30464	7700	38656	9700	46848	B700	55040	D700	63232	F700
6144	1800	14336	3800	22528	5800	30720	7800	38912	9800	47104	B800	55296	D800	63488	F800
6400	1900	14592	3900	22784	5900	30976	7900	39168	9900	47360	B900	55552	D900	63744	F900
6656	1A00	14848	3A00	23040	5A00	31232	7A00	39424	9A00	47616	BA00	55808	DA00	64000	FA00
6912	1B00	15104	3B00	23296	5B00	31488	7B00	39680	9B00	47872	BB00	56064	DB00	64256	FB00
7168	1C00	15360	3C00	23552	5C00	31744	7C00	39936	9C00	48128	BC00	56320	DC00	64512	FC00
7424	1D00	15616	3D00	23808	5D00	32000	7D00	40192	9D00	48384	BD00	56576	DD00	64768	FD00
7680	1E00	15872	3E00	24064	5E00	32256	7E00	40448	9E00	48640	BE00	56832	DE00	65024	FE00
7936	1F00	16128	3F00	24320	5F00	32512	7F00	40704	9F00	48896	BF00	57088	DF00	65280	FF00

Table 5-3-3.

### 3. Battery End Adjustment

Set the battery end voltage.

If the voltage is incorrect, the life of the battery will shorten.

The image at the battery end will also be rough.

Mode	Camera recording
Subject	Arbitrary
Measurement Point	Display data of page: 2, address: 5D
Measuring Instrument	Adjustment remote commander
Adjustment Page	D
Adjustment Address	48 to 4C

#### Switch setting

- 1) AUTO FOCUS ..... OFF

#### Connection:

- 1) Connect the regulated power supply and the digital voltmeter to the battery terminal as shown in Fig. 5-3-4.

#### Preparations before adjustments:

- 1) Adjust the output voltage of the regulated power supply so that the digital voltmeter display is  $6.1 \pm 0.1\text{Vdc}$ .
- 2) Turn off the power supply.
- 3) Turn on the HOLD switch of the adjustment remote commander.
- 4) Turn on the power supply.
- 5) Load a cassette, and set to the camera recording mode.

#### Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2				Decrease the output voltage of the regulated power supply so that the digital voltmeter display is $5.50 \pm 0.01\text{Vdc}$ .
3	2	5D		Read the data, and this data is named Dref.
4	D	48	Dref	Set the data, and press PAUSE button.
5				Convert Dref to decimal notation, and obtain Dref. (Note1)
6				Calculate $D_{49}'$ , $D_{4A}'$ , $D_{4B}'$ and $D_{4C}'$ using following equations. (decimal calculation) $D_{49}' = \text{Dref} + 7$ $D_{4A}' = \text{Dref} + 25$ $D_{4B}' = \text{Dref} + 29$ $D_{4C}' = \text{Dref} + 37$
7				Convert $D_{49}'$ , $D_{4A}'$ , $D_{4B}'$ and $D_{4C}'$ to decimal notation, and obtain $D_{49}$ , $D_{4A}$ , $D_{4B}$ and $D_{4C}$ . (Note1)
8	D	49	$D_{49}$	Set the data, and press PAUSE button.
9	D	4A	$D_{4A}$	Set the data, and press PAUSE button.
10	D	4B	$D_{4B}$	Set the data, and press PAUSE button.
11	D	4C	$D_{4C}$	Set the data, and press PAUSE button.
12	0	01	00	Set the data.

**Note1:** Refer to Table 5-4-1. "Hexadecimal-decimal conversion table" of "5-4.Service mode".

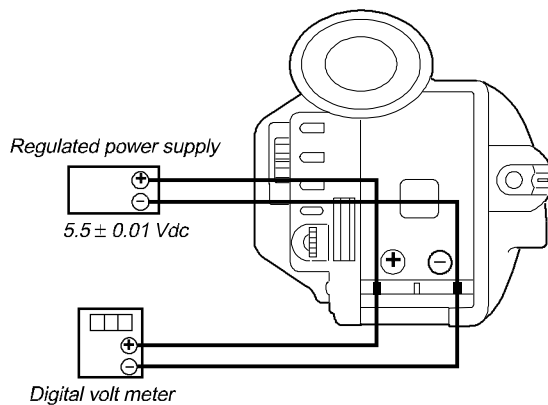


Fig. 5-3-4.

### 3-3. SERVO AND RF SYSTEM ADJUSTMENT

Before perform the servo and RF system adjustments, check that the specified value of “27 MHz Origin Oscillation Adjustment” of “CAMERA SYSTEM ADJUSTMENT” is satisfied.

#### Adjusting Procedure:

1. Cap FG duty adjustment
2. T-reel FG duty adjustment
3. PLL  $f_0$  & LPF  $f_0$  adjustment
4. Switching position adjustment
5. AGC center level
6. APC & AEQ adjustment
7. PLL  $f_0$  & LPF  $f_0$  final adjustment

#### 1. Cap FG Duty Adjustment (VC-242 Board)

Set the Cap FG signal duty cycle to 50% to establish an appropriate capstan servo. If deviated, the uneven rotation of capstan and noise can occur.

Measurement Point	Display data of page: 3, address: 03
Measuring Instrument	Adjustment remote commander
Adjustment Page	C
Adjustment Address	16
Specified Value	00

#### Adjusting method:

Order	Page	Address	Data	Procedure
1				Close the cassette compartment without inserting a cassette.
2	0	01	01	Set the data.
3	3	01	1B	Set the data, and press PAUSE button.
4	3	02		Check that the data changes in the following order. “1B” → “2B” → “00”
5	3	03		Check that the data is “00”. (Note)
6	0	01	00	Set the data.

**Note:** If the data is “01”, adjustment has errors or the mechanism deck is defective.

#### 2. T reel FG Duty Adjustment (VC-242 Board)

Adjust the take-up reel FG signal duty cycle to an appropriate value so that the correct T-reel FG signal is obtained.

Measurement Point	Display data of page: 3, address: 03
Measuring Instrument	Adjustment remote commander
Adjustment Page	C
Adjustment Address	17
Specified Value	00

#### Adjusting method:

Order	Page	Address	Data	Procedure
1				Close the cassette compartment without inserting a cassette.
2	0	01	01	Set the data.
3	3	01	1C	Set the data, and press PAUSE button.
4	3	02		Check that the data changes in the following order. “1C” → “2C” → “00”
5	3	03		Check that the data is “00”. (Note)
6	0	01	00	Set the data.

**Note:** If the data is “02”, adjustment has errors or the mechanism deck is defective.

#### 3. PLL $f_0$ & LPF $f_0$ Adjustment (VC-242 Board)

Mode	VTR stop
Measurement Point	Display data of page: 3, address: 03
Measuring Instrument	Adjustment remote commander
Adjustment Page	C
Adjustment Address	1F, 20, 22, 29
Specified Value	Bit2, bit3 and bit6 are “0”

#### Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	3	01	30	Set the data, and press PAUSE button.
3	3	02		Check that the data changes to “00”.
4	3	03		Check that the data is “00”. (Note)
5	0	01	00	Set the data.

**Note:** If the data is other than “00”, there are errors.  
For the error contents, see the following table. (For the bit values, refer to “5-4. SERVICE MODE”, “4-3. 3. Bit value discrimination”.)

Bit value of page: 3, address: 03 data	Error contents
bit 4 = 1	PLL $f_0$ even channel is defective
bit 5 = 1	PLL $f_0$ odd channel is defective
bit 6 = 1	LPF $f_0$ is defective
bit 3 = 1	PLL $f_0$ final adjustment is defective
bit 2 = 1	PLL $f_0$ final adjustment time-out

#### 4. Switching Position Adjustment (VC-242 Board)

Mode	VTR playback
Signal	SW/OL reference tape (XH2-3)
Measurement Point	Display data of page: 3, address: 03
Measuring Instrument	Adjustment remote commander
Adjustment Page	C
Adjustment Address	10, 11, 12, 13
Specified Value	00

##### Adjusting method:

Order	Page	Address	Data	Procedure
1				Insert the SW/OL reference tape and enter the VTR STOP mode.
2	0	01	01	Set the data.
3	3	21		Check that the data is "02". (Note1)
4	3	01	0D	Set the data, and press PAUSE button.
5	3	02		Check that the data changes to "00".
6	3	03		Check that the data is "00". (Note2)
7	0	01	00	Set the data.

**Note1:** If the data of page: 3, address: 21 is "72", the tape top being played. After playing the tape for 1 to 2 seconds, stop it, perform step 4 and higher.

**Note2:** If bit 0 of the data is "1", the even channel is defective. If bit 1 is "1", the odd channel is defective. Contents of the defect is written into page: C, addresses: 10 and 12. See the following table. (For the bit values, refer to "5-4. SERVICE MODE", "4-3. 3. Bit value discrimination".)

##### When the even channel is defective

Data of page: C, address: 10	Contents of defect
EE	Writing into EEPROM (IC502) is defective
E8	Adjustment data is out of range
E7	No data is returned from IC301 (CAIN)

##### When the odd channel is defective

Data of page: C, address: 12	Contents of defect
EE	Writing into EEPROM (IC502) is defective
E8	Adjustment data is out of range
E7	No data is returned from IC301 (CAIN)

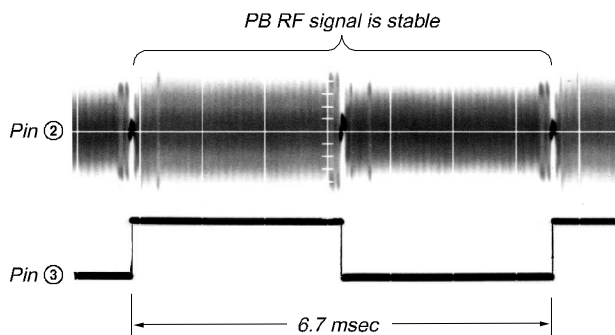


Fig. 5-3-5.

#### 5. AGC Center Level and APC & AEQ Adjustment

##### 5-1. Preparations before adjustments

Mode	Camera recording
Subject	Arbitrary

##### Adjusting method:

Order	Page	Address	Data	Procedure
1	2	30	40	Set the data.
2				Record the camera signal for three minutes.

##### 5-2. AGC Center Level Adjustment (VC-242 Board)

Mode	Playback
Signal	Recorded signal at "Preparations before adjustments"
Measurement Point	Pin ② of CN007 (RF MON) (Note 1) Ext. trigger: Pin ③ of CN007 (SWP)
Measuring Instrument	Oscilloscope
Adjustment Page	C
Adjustment Address	1E
Specified Value	The data of page: 3, address: 03 is "00"

**Note 1:** Connect a 75Ω resistor between Pin ② and Pin ① (GND) of CN007.

75Ω resistor (Parts code: 1-247-804-11)

##### Adjusting method:

Order	Page	Address	Data	Procedure
1				Playback the recorded signal at "Preparations before adjustments"
2	0	01	01	Set the data.
3	3	33	08	Set the data.
4				Confirm that the playback RF signal is stable. (Fig. 5-3-5.)
5	3	01	23	Set the data, and press PAUSE button.
6	3	02		Check that the data is "00".
7	3	03		Check that the data is "00". (Note2)
8				Perform "APC & AEQ Adjustment".

**Note2:** If the data of page: 3, address: 03 is other than "00", adjustment has errors. (Take an appropriate remedial measures according to the errors referring to the following table.)

Data	Contents of defect
20	Perform re-adjustment. (Note 3)
30	The machine is defective
40	Perform re-adjustment. (Note 3)
50	The machine is defective

**Note 3:** If this data is displayed twice successively, the machine is defective.



### 5-3. APC & AEQ Adjustment (VC-242 Board)

Mode	Playback
Signal	Recorded signal at "Preparations before adjustments"
Measurement Point	Pin ② of CN007 (RF MON) (Note 1) Ext. trigger: Pin ③ of CN007 (SWP)
Measuring Instrument	Oscilloscope
Adjustment Page	C
Adjustment Address	18, 19, 1B, 1C, 21, 2C
Specified Value	The data of page: 3, address: 03 is "00"

**Note 1:** Connect a 75Ω resistor between Pin ② and Pin ① (GND) of CN007.

75Ω resistor (Parts code: 1-247-804-11)

**Note 2:** The "AGC Center Level Adjustment" must have already been completed before starting this adjustment.

#### Adjusting method:

Order	Page	Address	Data	Procedure
1				Playback the recorded signal at "Preparations before adjustments"
2	0	01	01	Set the data.
3	3	33	08	Set the data.
4				Confirm that the playback RF signal is stable. (Fig. 5-3-6.)
5	3	01	07	Set the data, and press PAUSE button.
6	3	02		Check that the data changes from "07" to "00" in about 20 seconds after pressing PAUSE button.
7	3	03		Check that the data is "00". (Note3)
8				Perform "Processing after Completing Adjustments".

**Note3:** If the data is other than "00", adjustment has errors. Take an appropriate remedial measures according to the errors referring to the following table.

Data	Contents of defect
20	Perform re-adjustment. (Note 4)
30	The machine is defective
50	Perform re-adjustment. (Note 4)
60	The machine is defective
80	The machine is defective

**Note 4:** If this data is displayed twice successively, the machine is defective.

### 5-4. Processing after Completing Adjustments

Order	Page	Address	Data	Procedure
1	2	30	00	Set the data.
2	3	33	00	Set the data.
3	0	01	00	Set the data.

### 6. PLL f<sub>0</sub> & LPF f<sub>0</sub> Final Adjustment (VC-242 Board)

Mode	VTR stop
Signal	Arbitrary
Measurement Point	Display data of page: 3, address: 03
Measuring Instrument	Adjustment remote commander
Adjustment Page	C
Adjustment Address	1F, 20, 22, 29
Specified Value	Bit2, bit3 and bit6 are "0"

#### Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	3	01	30	Set the data, and press PAUSE button.
3	3	02		Check that the data changes to "00".
4	3	03		Check that bit2, bit3 and bit6 of the data are "0". (Note)
5	0	01	00	Set the data.

**Note:** If bit2, bit3 or bit 6 of the data is "1", there are errors.

For the error contents, see the following table. (For the bit values, refer to "5-4. SERVICE MODE", "4-3. 3. Bit value discrimination".)

Bit value of page: 3, address: 03	Error contents
bit 4 = 1	PLL f <sub>0</sub> even channel is defective
bit 5 = 1	PLL f <sub>0</sub> odd channel is defective
bit 6 = 1	LPF f <sub>0</sub> is defective
bit 3 = 1	PLL f <sub>0</sub> final adjustment is defective
bit 2 = 1	PLL f <sub>0</sub> final adjustment time-out

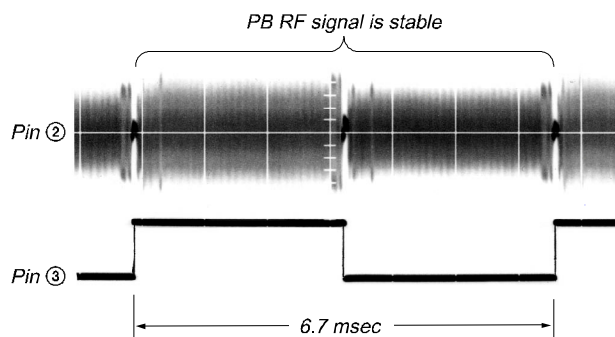


Fig. 5-3-6.

### 3-4. VIDEO SYSTEM ADJUSTMENTS

Before perform the video system adjustments, check that the specified value of “27MHz Origin Oscillation Adjustment” of “CAMERA SYSTEM ADJUSTMENT” is satisfied.

#### 3-4-1. Base Band Block Adjustments

##### 1. Chroma BPF $f_0$ Adjustment (VC-242 Board)


Set the center frequency of IC1301 chroma band-pass filter.

Mode	Camera
Subject	All black (Cover the lens with the lens cap)
Measurement Point	CH1: Chroma signal terminal of S VIDEO jack (75 $\Omega$ terminated) CH2: Y signal terminal of S VIDEO jack (75 $\Omega$ terminated)
Measuring Instrument	Oscilloscope
Adjustment Page	C
Adjustment Address	28
Specified Value	A = 100mVp-p or less B = 200mVp-p or more

Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2				Check that the burst signal (B) is output to the chroma signal terminal of S VIDEO jack.
3	3	0C	04	Set the data, and press PAUSE button.
4	C	28		Change the data for minimum amplitude of the burst signal level (A). (The data should be “00” to “07”.)
5	C	28		Press PAUSE button.
6	3	0C	00	Set the data, and press PAUSE button.
7				Check that the burst signal level (B) satisfies the specified value.
8	0	01	00	Set the data.

When the data of page: 3, address: 0C, is 04:

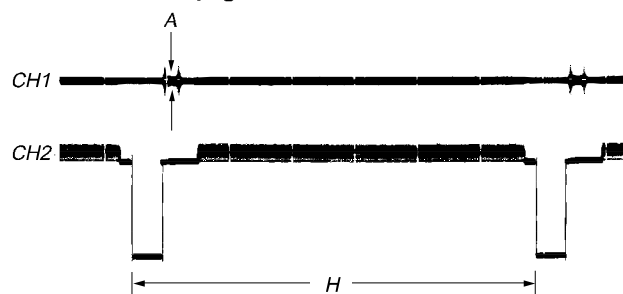

When the data of page: 3, address: 0C, is 00:

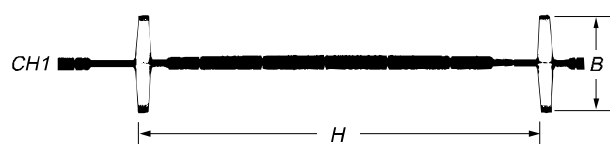


Fig. 5-3-7.

##### 2. S VIDEO OUT Y Level Adjustment (VC-242 Board)

Mode	Camera
Subject	Arbitrary
Measurement Point	Y signal terminal of S VIDEO jack (75 $\Omega$ terminated)
Measuring Instrument	Oscilloscope
Adjustment Page	C
Adjustment Address	25
Specified Value	A = 1000 $\pm$ 14mV

Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	2	35		Note down the data.
3	2	35	01	Set the data.
4	3	0C	02	Set the data, and press PAUSE button.
5	C	25		Change the data and set the Y signal level (A) to the specified value.
6	C	25		Press PAUSE button.
7	3	0C	00	Set the data, and press PAUSE button.
8	2	35		Set the data that is noted down at step 2.
9	0	01	00	Set the data.

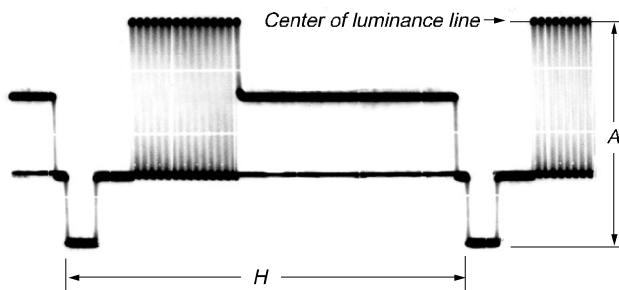


Fig. 5-3-8.

### 3. S VIDEO OUT Chroma Level Adjustment (VC-242 Board)

Mode	Camera
Subject	Arbitrary
Measurement Point	Chroma signal terminal of S VIDEO jack (75Ω terminated) External trigger: Y signal terminal of S VIDEO jack
Measuring Instrument	Oscilloscope
Adjustment Page	C
Adjustment Address	26, 27
Specified Value	Cr level: A = 714 ± 14mV(NTSC) A = 700 ± 14mV(PAL) Cb level: B = 714 ± 14mV(NTSC) B = 700 ± 14mV(PAL) Burst level: C = 286 ± 6mV(NTSC) C = 300 ± 6mV(PAL)

#### Adjusting method:

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	2	35		Note down the data.
3	2	35	01	Set the data.
4	3	0C	02	Set the data, and press PAUSE button.
5	C	26		Change the data and set the Cr signal level (A) to the specified value.
6	C	26		Press PAUSE button.
7	C	27		Change the data and set the Cb signal level (B) to the specified value.
8	C	27		Press PAUSE button.
9				Check that the burst signal level (C) is satisfied the specified value.
10	3	0C	00	Set the data, and press PAUSE button.
11	2	35		Set the data that is noted down at step 2.
12	0	01	00	Set the data.

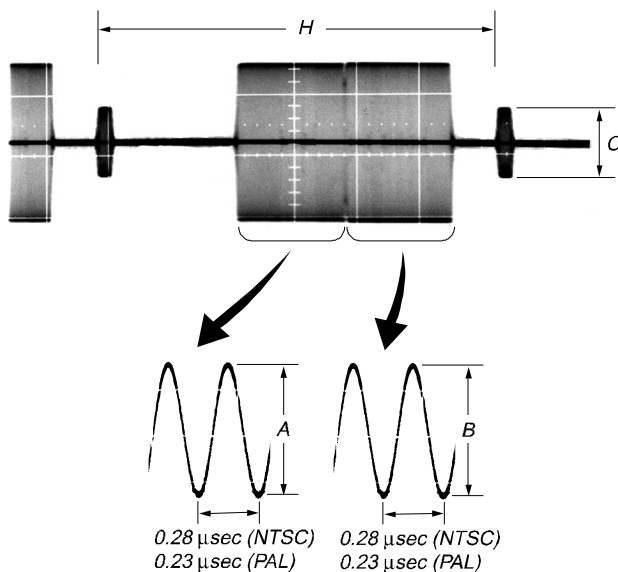


Fig. 5-3-9.

### 4. VIDEO OUT Y, Chroma Level Check (VC-242 Board)

Mode	Camera
Subject	Arbitrary
Measurement Point	VIDEO jack (75Ω terminated)
Measuring Instrument	Oscilloscope
Specified Value	Sync level: A = 286 ± 18mV(NTSC) A = 300 ± 18mV(PAL) Burst level: B = 286 ± 18mV(NTSC) B = 300 ± 18mV(PAL)

#### Adjusting method:

Order	Page	Address	Data	Procedure
1	2	35		Note down the data.
2	2	35	01	Set the data.
3	3	0C	02	Set the data, and press PAUSE button.
4				Check that the sync signal level (A) satisfies the specified value.
5				Check that the burst signal level (B) satisfies the specified value.
6	3	0C	00	Set the data, and press PAUSE button.
7	2	35		Set the data that is noted down at step 1.
8	0	01	00	Set the data.

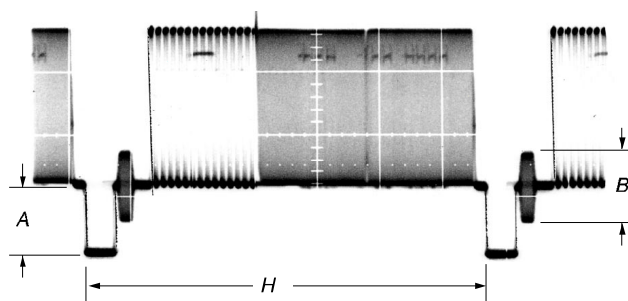


Fig. 5-3-10.

### 3-4-2. BIST Check

Switch setting:

LCD panel ..... Open

#### 1. Playback System Check

##### 1-1. Preparations for Playback

Order	Page	Address	Data	Procedure
1				Set the POWER switch to VCR position.
2				Connect the adjustment remote commander and set the HOLD switch to ON (SERVICE) position.
3	0	01	01	Set the data.
4	C	42	00	Set the data, and press PAUSE button.
5				Playback the BIST check tape. (XH5-6 (NTSC), XH5-6P (PAL))

**Note1:** Perform the following checks in the playback mode.

**Note2:** Use the AC power adaptor or the battery (Info LITHIUM L series).

##### 1-2. IC301 TRX (RF) PB BIST Check

Order	Page	Address	Data	Procedure
1	3	70	04	Set the data, and press PAUSE button.
2	3	70	00	Set the data, and press PAUSE button.
3	3	73		Check that the data is equal to either of the following values. And memorize the case number of the value. NTSC model: 63 (Case1), C5 (Case2), 75 (Case3), D3 (Case4), 59 (Case5), FF (Case6) PAL model: 86 (Case1), AA (Case2), 90 (Case3)
4	3	74		Check that the data is equal to the following value which case number is equal to that of address 73. NTSC model: 84 (Case1), 55 (Case2), 07 (Case3), D6 (Case4), 01 (Case5), D0 (Case6) PAL model: 35 (Case1), 33 (Case2), B6 (Case3)
5	3			If the data of address 73 and address 74 are correct, IC301 TRX (RF) playback system is normal.

### 1-3. IC301 AUD (ABUS) PB BIST Check

Order	Page	Address	Data	Procedure
1	3	11	04	Set the data, and press PAUSE button.
2	3	12	08	Set the data, and press PAUSE button.
3	3	12	00	Set the data, and press PAUSE button.
4	3	13	03	Set the data, and press PAUSE button.
5	3	14		Check that the data is the following value. NTSC model: 41 PAL model: 2D
6	3	15		Check that the data is the following value. NTSC model: 81 PAL model: 7C
7	3			If the data of address 14 and address 15 are correct, IC301 AUD (ABUS) playback system is normal.

##### 1-4. IC301 VFD PB BIST Check

###### • EXY BIST Check

Order	Page	Address	Data	Procedure
1	3	12	10	Set the data, and press PAUSE button.
2	3	12	00	Set the data, and press PAUSE button.
3	3	13	04	Set the data, and press PAUSE button.
4	3	14		Check that the data is the following value. NTSC model: FB PAL model: 54
5	3	15		Check that the data is the following value. NTSC model: F4 PAL model: ED
6	3			If the data of address 14 and address 15 are correct, IC301 EX Y playback system is normal.

• **EVF Y BIST Check**

Order	Page	Address	Data	Procedure
1	3	10	88	Set the data, and press PAUSE button.
2	3	12	10	Set the data, and press PAUSE button.
3	3	12	00	Set the data, and press PAUSE button.
4	3	13	04	Set the data, and press PAUSE button.
5	3	14		Check that the data is the following value. NTSC model: 9B PAL model: 20
6	3	15		Check that the data is the following value. NTSC model: C3 PAL model: F8
7	3			If the data of address 14 and address 15 are correct, IC301 EVF Y playback system is normal.

• **EVF Cb BIST Check**

Order	Page	Address	Data	Procedure
1	3	10	8A	Set the data, and press PAUSE button.
2	3	12	10	Set the data, and press PAUSE button.
3	3	12	00	Set the data, and press PAUSE button.
4	3	13	04	Set the data, and press PAUSE button.
5	3	14		Check that the data is the following value. NTSC model: A9 PAL model: AA
6	3	15		Check that the data is the following value. NTSC model: 39 PAL model: 03
7	3			If the data of address 14 and address 15 are correct, IC301 EVF Cb playback system is normal.

• **EVF Cr BIST Check**

Order	Page	Address	Data	Procedure
1	3	10	89	Set the data, and press PAUSE button.
2	3	12	10	Set the data, and press PAUSE button.
3	3	12	00	Set the data, and press PAUSE button.
4	3	13	04	Set the data, and press PAUSE button.
5	3	14		Check that the data is the following value. NTSC model: 2E PAL model: 33
6	3	15		Check that the data is the following value. NTSC model: 34 PAL model: DD
7	3			If the data of address 14 and address 15 are correct, IC301 EVF Cr playback system is normal.

• **PANEL Y BIST Check**

Order	Page	Address	Data	Procedure
1	3	10	98	Set the data, and press PAUSE button.
2	3	12	10	Set the data, and press PAUSE button.
3	3	12	00	Set the data, and press PAUSE button.
4	3	13	04	Set the data, and press PAUSE button.
5	3	14		Check that the data is the following value. NTSC model: 9B PAL model: 20
6	3	15		Check that the data is the following value. NTSC model: C3 PAL model: F8
7	3			If the data of address 14 and address 15 are correct, IC301 PANEL Y playback system is normal.

• **PANEL Cr BIST Check**

Order	Page	Address	Data	Procedure
1	3	10	99	Set the data, and press PAUSE button.
2	3	12	10	Set the data, and press PAUSE button.
3	3	12	00	Set the data, and press PAUSE button.
4	3	13	04	Set the data, and press PAUSE button.
5	3	14		Check that the data is the following value. NTSC model: 2E PAL model: 33
6	3	15		Check that the data is the following value. NTSC model: 34 PAL model: DD
7	3			If the data of address 14 and address 15 are correct, IC301 PANEL Cr playback system is normal.

• **PANEL Cb BIST Check**

Order	Page	Address	Data	Procedure
1	3	10	9A	Set the data, and press PAUSE button.
2	3	12	10	Set the data, and press PAUSE button.
3	3	12	00	Set the data, and press PAUSE button.
4	3	13	04	Set the data, and press PAUSE button.
5	3	14		Check that the data is the following value. NTSC model: A9 PAL model: AA
6	3	15		Check that the data is the following value. NTSC model: 39 PAL model: 03
7	3			If the data of address 14 and address 15 are correct, IC301 PANEL Cb playback system is normal.

**1-5. IC301 ENCODER BIST Check**

• **Preparations**

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	8	21	0F	Set the data, and press PAUSE button.

• **ENCODER Ya BIST Check**

Order	Page	Address	Data	Procedure
1	3	10	8B	Set the data, and press PAUSE button.
2	3	12	10	Set the data, and press PAUSE button.
3	3	12	00	Set the data, and press PAUSE button.
4	3	13	04	Set the data, and press PAUSE button.
5	3	14		Check that the data is the following value. NTSC model: FD PAL model: 58
6	3	15		Check that the data is the following value. NTSC model: 3E PAL model: BE
7	3			If the data of address 14 and address 15 are correct, IC301 ENCODER Ya playback system is normal.

• **ENCODER Yb BIST Check**

Order	Page	Address	Data	Procedure
1	3	10	8C	Set the data, and press PAUSE button.
2	3	12	10	Set the data, and press PAUSE button.
3	3	12	00	Set the data, and press PAUSE button.
4	3	13	04	Set the data, and press PAUSE button.
5	3	14		Check that the data is the following value. NTSC model: 94 PAL model: A1
6	3	15		Check that the data is the following value. NTSC model: D6 PAL model: ED
7	3			If the data of address 14 and address 15 are correct, IC301 ENCODER Yb playback system is normal.

• **ENCODER Ca BIST Check**

Order	Page	Address	Data	Procedure
1	3	10	8D	Set the data, and press PAUSE button.
2	3	12	10	Set the data, and press PAUSE button.
3	3	12	00	Set the data, and press PAUSE button.
4	3	13	04	Set the data, and press PAUSE button.
5	3	14		Check that the data is equal to either of the following values. And memorize the case number of the value. NTSC model: 11 (Case1), 4E (Case2) PAL model: E8 (Case1), 7B (Case2)
6	3	15		Check that the data is equal to the following value which case number is equal to that of address 14. NTSC model: FD (Case1), 3B (Case2) PAL model: 62 (Case1), B0 (Case2)
7	3			If the data of address 14 and address 15 are correct, IC301 ENCODER Ca playback system is normal.

**1-6. Processing after Completing Playback System Check**

Order	Page	Address	Data	Procedure
1	0	01	01	Set the data.
2	C	42	0A	Set the data, and press PAUSE button.
3	8	21	03	Set the data, and press PAUSE button.
4	0	01	00	Set the data.
5				Turn off the power and turn on again.

• **ENCODER Cb BIST Check**

Order	Page	Address	Data	Procedure
1	3	10	8E	Set the data, and press PAUSE button.
2	3	12	10	Set the data, and press PAUSE button.
3	3	12	00	Set the data, and press PAUSE button.
4	3	13	04	Set the data, and press PAUSE button.
5	3	14		Check that the data is equal to either of the following values. And memorize the case number of the value. NTSC model: 5C (Case1), BC (Case2) PAL model: 96 (Case1), 35 (Case2)
6	3	15		Check that the data is equal to the following value which case number is equal to that of address 14. NTSC model: 20 (Case1), A8 (Case2) PAL model: 79 (Case1), 7C (Case2)
7	3			If the data of address 14 and address 15 are correct, IC301 ENCODER Cb playback system is normal.

## 2. Recording System Check

### 2-1. Preparations for recording

Order	Page	Address	Data	Procedure
1				Playback the BIST check tape. (XH5-6(NTSC), XH5-6P(PAL))
2	3	10	C0	Set the data, and press PAUSE button.
3	3	11	07	Set the data, and press PAUSE button.
4				Enter the stop mode.
5				While keep the HOLD switch of the adjustment remote commander at ON (SERVICE) position, eject the BIST check tape.
6				Close the cassette compartment without inserting a cassette.
7				Set the power switch to "CAMERA".
8	3	01	0C	Set the data, and press PAUSE button.

### 2-2. IC301 TRX (RF) REC BIST Check

Order	Page	Address	Data	Procedure
1	3	70	04	Set the data, and press PAUSE button.
2	3	70	00	Set the data, and press PAUSE button.
3	3	71		Check that the data is equal to either of the following values. And memorize the case number of the value. NTSC model: 26 (Case1), 5E (Case2) PAL model: 53 (Case1), 77 (Case2)
4	3	72		Check that the data is equal to the following value which case number is equal to that of address 71. NTSC model: 95 (Case1), E3 (Case2) PAL model: DF (Case1), D5 (Case2)
5	3			If the data of address 71 and address 72 are correct, IC301 TRX (RF) recording system is normal.

### 2-3. Processing after Completing Recording System Check

Order	Page	Address	Data	Procedure
1	3	01	00	Set the data, and press PAUSE button.
2				Turn off the power and turn on again.



### 3-5. AUDIO SYSTEM ADJUSTMENTS

**Switch setting:**

MIC/LINE ..... MIC

MIC LEVEL (Menu) ..... AUTO

**[Connection of Audio System Measuring Devices]**

Connect the audio system measuring devices as shown in Fig. 5-3-11.

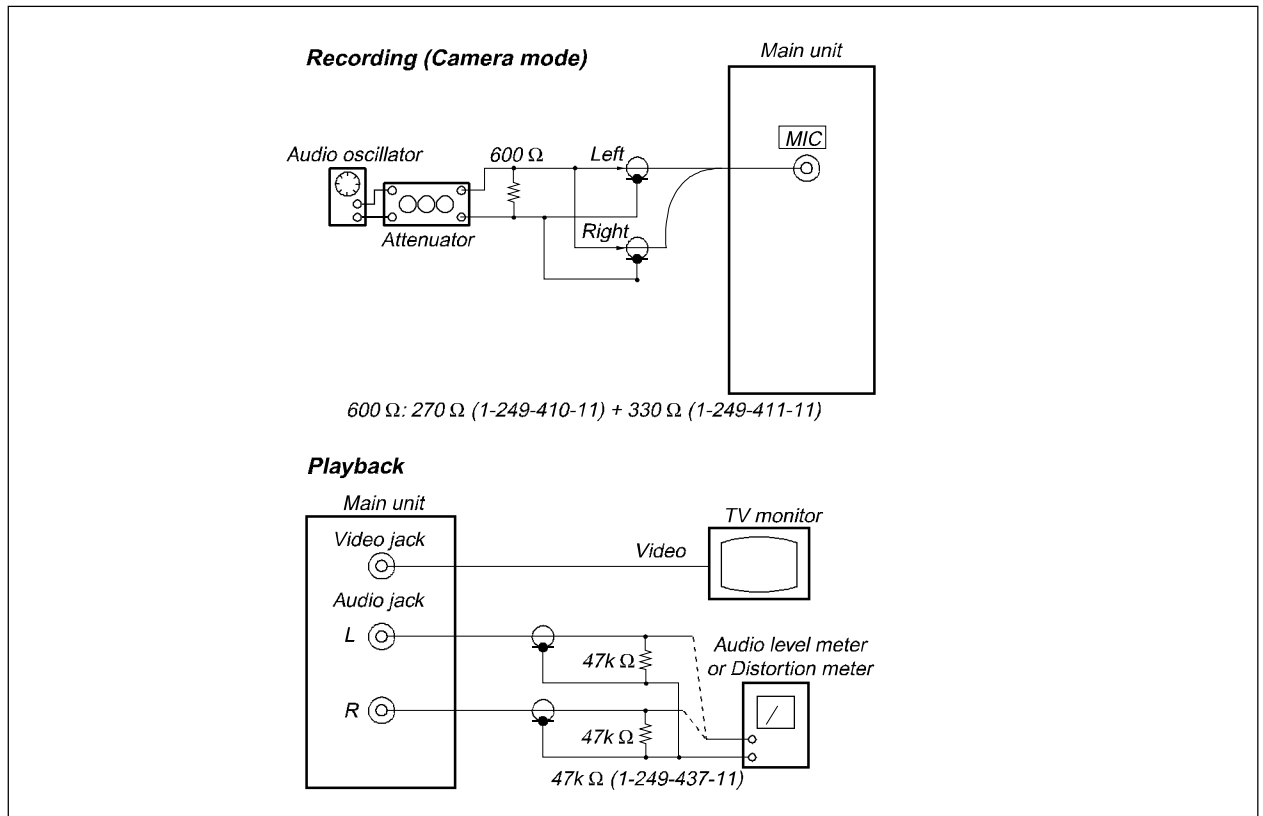


Fig. 5-3-11.

### 1. Playback Level Check

Mode	VTR playback
Signal	Alignment tape: For audio operation check (XH5-3 (NTSC)) (XH5-3P (PAL))
Measurement Point	Audio left or right terminal of AUDIO jack
Measuring Instrument	Audio level meter and frequency counter
Specified Value	32 kHz mode: 1 kHz, $+2.2 \pm 2.0$ dBs 48 kHz mode: 1 kHz, $+2.2 \pm 2.0$ dBs 44.1 kHz mode: The 7.35kHz signal level during EMP OFF is $+2.2 \pm 2.0$ dBs. The 7.35kHz signal level during EMP ON is $-6.2 \pm 2$ dB from the signal level during EMP OFF.

#### Checking Method:

- 1) Check that the playback signal level is the specified value.

### 2. Overall Level Characteristics Check

Mode	Camera recording and playback
Signal	400Hz, -66 dBs signal: MIC jack left and right
Measurement Point	Audio left or right terminal of AUDIO jack
Measuring Instrument	Audio level meter
Specified Value	$-7.5 \pm 3.0$ dBs

#### Checking Method:

- 1) Input the 400Hz, -66dBs signal in the MIC jack.
- 2) Record in the camera mode.
- 3) Playback the recorded section.
- 4) Check that the 400Hz signal level is the specified value.

### 3. Overall Distortion Check

Mode	Camera recording and playback
Signal	400Hz, -66dBs signal: MIC jack left and right
Measurement Point	Audio left or right terminal of AUDIO jack
Measuring Instrument	Audio distortion meter
Specified Value	Below 0.4% (200Hz to 6kHz BPF ON)

#### Checking Method:

- 1) Input the 400Hz, -66dBs signal in the MIC jack.
- 2) Record in the camera mode.
- 3) Playback the recorded section.
- 4) Check that the distortion is the specified value.

### 4. Overall Noise Level Check

Mode	Camera recording and playback
Signal	No signal: Insert a shorting plug in the MIC jack
Measurement Point	Audio left or right terminal of AUDIO jack
Measuring Instrument	Audio level meter
Specified Value	Below -45dBs (IHF-A filter ON, 20kHz LPF ON)

#### Checking Method:

- 1) Insert a shorting plug in the MIC jack.
- 2) Record in the camera mode.
- 3) Playback the recorded section.
- 4) Check that the noise level is the specified value.

### 5. Overall Separation Check

Mode	Camera recording and playback
Signal	400Hz, -66dBs signal: MIC jack <right> [left] (Connect the MIC jack <left> [right] to GND)
Measurement Point	Audio <left> [right] terminal of AUDIO jack
Measuring Instrument	Audio level meter
Specified Value	Below -40dBs (IHF-A filter ON)

< > : Left channel check

[ ] : Right channel check

#### Checking Method:

- 1) Input the 400Hz, -66dBs signal in the <right> [left] terminal of the MIC jack only.
- 2) Record in the camera mode.
- 3) Playback the recorded section.
- 4) Check that the signal level of the audio <left> [right] terminal is the specified value.

## 5-4. SERVICE MODE

### 4-1. ADJUSTMENT REMOTE COMMANDER

The adjustment remote commander is used for changing the calculation coefficient in signal processing, EVR data, etc. The adjustment remote commander performs bi-directional communication with the unit using the remote commander signal line (LANC). The resultant data of this bi-directional communication is written in the non-volatile memory.

#### 1. Using the adjustment remote commander

- 1) Connect the adjustment remote commander to the LANC terminal.
- 2) Set the HOLD switch of the adjustment remote commander to "HOLD" (SERVICE position). If it has been properly connected, the LCD on the adjustment remote commander will display as shown in Fig. 5-4-1.

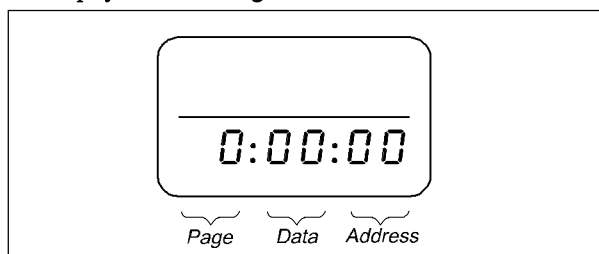


Fig. 5-4-1

- 3) Operate the adjustment remote commander as follows.
  - Changing the page  
The page increases when the EDIT SEARCH+ button is pressed, and decreases when the EDIT SEARCH- button is pressed. There are altogether 16 pages, from 0 to F.

<b>Hexadecimal notation</b>	0 1 2 3 4 5 6 7 8 9 A B C D E F
<b>LCD Display</b>	0 1 2 3 4 5 6 7 8 9 a b c d e f
<b>Decimal notation conversion value</b>	0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15

- Changing the address  
The address increases when the FF (▶▶) button is pressed, and decreases when the REW (◀◀) button is pressed. There are altogether 256 addresses, from 00 to FF.
  - Changing the data (Data setting)  
The data increases when the PLAY (▶) button is pressed, and decreases when the STOP (■) button is pressed. There are altogether 256 data, from 00 to FF.
  - Writing the adjustment data  
The PAUSE button must be pressed to write the adjustment data (B, C, D, F, 8 page) in the nonvolatile memory. (The new adjusting data will not be recorded in the nonvolatile memory if this step is not performed.)
- 4) After completing all adjustments, turn off the main power supply once.

#### 2. Precautions upon using

##### the adjustment remote commander

Mishandling of the adjustment remote commander may erase the correct adjustment data at times. To prevent this, it is recommended that all adjustment data be noted down before beginning adjustments and new adjustment data after each adjustment.

## 4-2. DATA PROCESS

The calculation of the DDS display and the adjustment remote commander display data (hexadecimal notation) are required for obtaining the adjustment data of some adjustment items. In this case, after converting the hexadecimal notation to decimal notation, calculate and convert the result to hexadecimal notation, and use it as the adjustment data. Indicates the hexadecimal-decimal conversion table.

**Hexadecimal-decimal Conversion Table**

②

Lower digit of hexadecimal Upper digit of hexadecimal	0	1	2	3	4	5	6	7	8	9	A (H)	B (b)	C (c)	D (d)	E (E)	F (F)
0	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
1	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
2	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47
3	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63
4	64	65	66	67	68	69	70	71	72	73	74	77	76	77	78	79
5	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95
6	96	97	98	99	100	101	102	103	104	105	106	107	108	109	110	111
7	112	113	114	115	116	117	118	119	120	121	122	123	124	125	126	127
8	128	129	130	131	132	133	134	135	136	137	138	139	140	141	142	143
9	144	145	146	147	148	149	150	151	152	153	154	155	156	157	158	159
A (H)	160	161	162	163	164	165	166	167	168	169	170	171	172	173	174	175
① B (b)	176	177	178	179	180	181	182	183	184	185	186	187	188	189	190	191
C (c)	192	193	194	195	196	197	198	199	200	201	202	203	204	205	206	207
D (d)	208	209	210	211	212	213	214	215	216	217	218	219	220	221	222	223
E (E)	224	225	226	227	228	229	230	231	232	233	234	235	236	237	238	239
F (F)	240	241	242	243	244	245	246	247	248	249	250	251	252	253	254	255

**Note:** The characters shown in the parenthesis ( ) shown the display on the adjustment remote commander.

**(Example)** If the DDS display or the adjustment remote commander shows BD (b d);

Because the upper digit of the adjustment number is B (b), and the lower digit is D (d), the meeting point “189” of ① and ② in the above table is the corresponding decimal number.

Table. 5-4-1.

## 4-3. SERVICE MODE

### 1. Setting the Test Mode

Page D	Address 10
--------	------------

Data	Function
00	Normal
01	Forced camera power ON
02	Forced VTR power ON
03	Forced camera + VTR power ON
05	Forced memory power ON

- Before setting the data, select page: 0, address: 01, and set data: 01.
- For page D, the data set is recorded in the non-volatile memory by pressing the PAUSE button of the adjustment remote commander. In this case, take note that the test mode will not be exited even when the main power is turned off.
- After completing adjustments/repairs, be sure to return the data of this address to 00, and press the PAUSE button of the adjustment remote commander.  
Select page: 0, address: 01, and set data: 00.

### 2. Emergence Memory Address

Page C	Address F4 to FF
--------	------------------

Address	Contents
F4	EMG code when first error occurs
F6	Upper: MSW code when shift starts when first error occurs Lower: MSW code when first error occurs
F7	Lower: MSW code to be moved when first error occurs
F8	EMG code when second error occurs
FA	Upper: MSW code when shift starts when second error occurs Lower: MSW code when second error occurs
FB	Lower: MSW code to be moved when second error occurs
FC	EMG code when last error occurs
FE	Upper: MSW code when shift starts when last error occurs Lower: MSW code when last error occurs
FF	Lower: MSW code to be moved when last error occurs

When no error occurs in this unit, data "00" is written in the above addresses (F4 to FF). when first error occurs in the unit, the data corresponding to the error is written in the first emergency address (F4 to F7). In the same way, when the second error occurs, the data corresponding to the error is written in the second emergency address (F8 to FB). Finally, when the last error occurs, the data corresponding to the error is written in the last emergency address (FC to FF).

**Note:** After completing adjustments, be sure to initialize the data of addresses F4 to FF to "00".

#### Initializing method:

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: 3, address: 01, set data: 37, and press the PAUSE button.
- 3) Select page: 0, address: 01, and set data: 00.

### 2-1. EMG Code (Emergency Code)

Codes corresponding to the errors which occur are written in addresses F4, F8 and FC. The type of error indicated by the code are shown in the following table.

Code	Emergency Type
00	No error
10	Loading motor emergency during loading
11	Loading motor emergency during unloading
22	T reel emergency during normal rotation
23	S reel emergency during normal rotation
24	T reel emergency (Short circuit between S reel terminal and T reel terminal)
30	FG emergency at the start up of the capstan
40	FG emergency at the start up of the drum
42	FG emergency during normal rotation of the drum

## 2-2. MSW Code

### MSW when errors occur:

Information on MSW (mode SW) when errors occur


### MSW when movement starts:

Information on MSW when movements starts when the mechanism position is moved (When the L motor is moved)

### MSW of target of movement:

Information on target MSW of movement when the mechanism position is moved

#### Mechanical Position

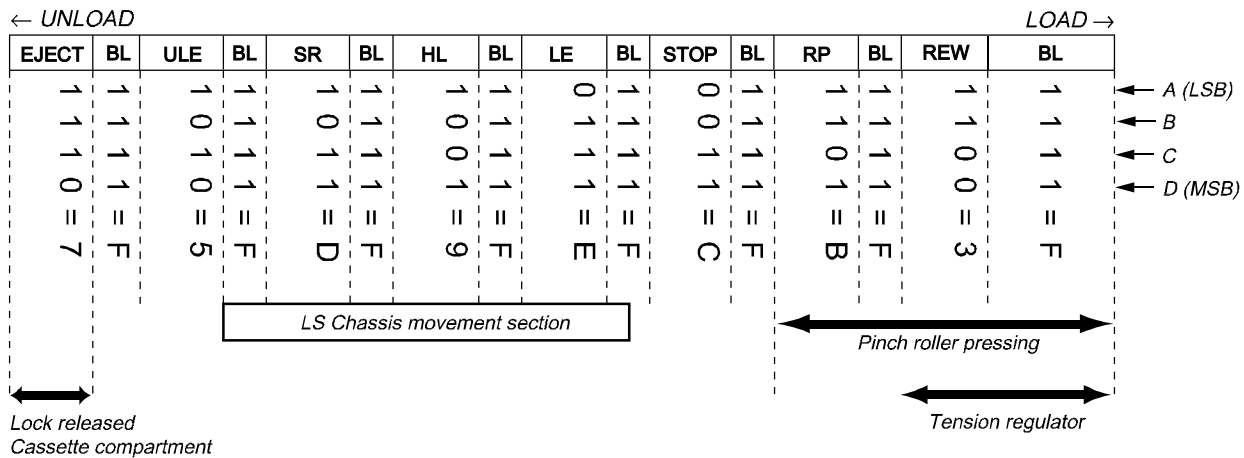


Position	Code	Contents
EJECT	7	Position at which the cassette component lock is released, at the farthest unload side mechanically at which the mechanism can move no further in the UNLOAD direction.
BL	F	BLANK code, at the boundary between codes.
USE	5	EJECT completion position. When the cassette is ejected, the mechanism will stop at this position. Cassette IN standby. The guide will start protruding out as the mechanism moves towards the LOAD position.
SR	D	Code during loading.
HL	9	Guide loading are performed here.
LE	E	Current limiter turned off.
STOP	C	Stop position in the loading state. The pinch roller separates, the tension regulator returns, and the brake is imposed on both reels.
RP	B	PB, REC, CUE, PAUSE positions. When pinch roller is pressed, and the tension regulator is ON, the mechanism is operating at this position in modes in which normal images are shown.
REW	3	REW position. The tension regulator is half on. This position is not used except for the REW mode.

### 3. Bit value discrimination

Bit values must be discriminated using the display data of the adjustment remote commander for following items. Use the table below to discriminate if the bit value is “1” or “0”.

Display on the adjustment remote commander

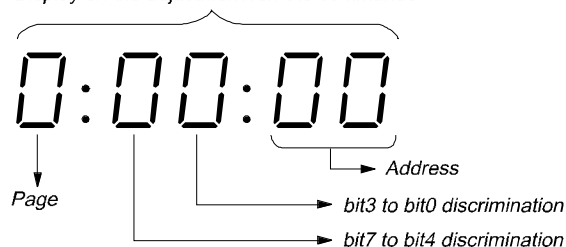

Display on the adjustment remote commander	Bit values			
	bit3 or bit7	bit2 or bit6	bit1 or bit5	bit0 or bit4
0	0	0	0	0
1	0	0	0	1
2	0	0	1	0
3	0	0	1	1
4	0	1	0	0
5	0	1	0	1
6	0	1	1	0
7	0	1	1	1
8	1	0	0	0
9	1	0	0	1
A (F)	1	0	1	0
B (b)	1	0	1	1
C (c)	1	1	0	0
D (d)	1	1	0	1
Ⓑ E (E)	1	1	1	0
F (F)	1	1	1	1

**Example:** If “8E” is displayed on the adjustment remote commander, the bit values for bit7 to bit4 are shown in the (A) column, and the bit values for bit3 to bit0 are shown in the (B) column.

### 4. Switch check (1)

Page 2	Address 43
--------	------------

Bit	Function	When bit value=1	When bit value=0
0	VTR MODE SW (CF-4980 block)	OFF	ON
1	CAM STBY SW (CF-4980 block)	OFF	ON
2	START/STOP SW (CF-4980 block)	OFF	ON
3	EJECT SW (CF-4980 block)	OFF	ON
4	CC DOWN SW (Mechanism chassis)	OFF (UP)	ON (DOWN)
5	PHOTO FREEZE SW (CF-4980 block)	OFF	ON
6	PHOTO STBY SW (CF-4980 block)	OFF	ON
7			

**Using method:**

- 1) Select page: 2, address: 43.
- 2) By discriminating the bit value of display data, the state of the switch can be discriminated.

## 5. Switch check (2)

Page 2	Address 5F to 67
--------	------------------

### Using method:

- 1) Select page: 2, address: 5F to 67.
- 2) By discriminating the display data, the pressed key can be discriminated.

Address	Data						
	00 (00 to 0A)	19 (0B to 24)	32 (25 to 44)	59 (45 to 6E)	85 (6F to 9F)	B8 (A0 to D4)	EE (D5 to FF)
5F (KEY AD8) (IC1104 92)	PHOTO (PHOTO REC) (CF-4980)	CUSTOM PRESET (MA-386) (S1100)	EXECUTE (KP-010) (S550)				No key input
60 (KEY AD0) (IC1104 93)	STOP (FK-076) (S500)	REW (FK-076) (S502)	PLAY (FK-076) (S504)	REC (FK-076) (S506,507)	EDIT SEARCH+ (FK-076)(S509)	EDIT SEARCH- (FK-076) (S511)	No key input
61 (KEY AD1) (IC1104 94)	PAUSE (FK-076) (S501)	FF (FK-076) (S503)	SLOW (FK-076) (S505)	AUDIO DUB (FK-076) (S508)	END SEARCH (FK-076) (S510)		No key input
62 (KEY AD2) (IC1104 95)	FADER (FP-189)	BACK LIGHT (FP-189)	SPOT LIGHT (FP-189)	INDEX (FP-188)	FOCUS (INFINITY) (FP-188)	FOCUS (AUTO) (PUSH AUTO) (FP-188)	FOCUS (MANUAL) (FP-188)
63 (KEY AD3) (IC1104 96)	REC LEVEL (MK-014) (S001)	WHITE BALANCE (MK-014)(S002)	SHUTTER (MK-014) (S003)	PROGRAM AE (MK-014) (S004)	AUTO LOCK (HOLD) (MK-014)(S005)	AUTO LOCK (AUTO LOCK) (MK-014)(S005)	AUTO LOCK (OFF) (MK-014)(S005)
64 (KEY AD4) (IC1104 97)	TITLE (CK-093) (S250)	DIGITAL EFFECT (CK-093)(S255)	PICTURE EFFECT (CK-093)(S258)	MEMORY MIX (CK-093) (S260)	ZEBRA (100%) (CK-093) (S263)	ZEBRA (OFF) (CK-093) (S263)	ZEBRA (70%) (CK-093) (S263)
65 (KEY AD5) (IC1104 98)	DISPLAY (CK-093) (S251)	SELF TIMER (CK-093) (S253)	EXPOSURE (ED-4980)	MENU (FP-194)	DATA CODE (CK-093) (S261)	PANEL CLOSE (FP-197)	PANEL OPEN (FP-197)
66 (KEY AD6) (IC1104 99)	MEMORY INDEX (CK-093)(S252)	MEMORY + (CK-093) (S254)	MEMORY - (CK-093) (S257)	MEMORY DELETE (CK-093)(S259)	MEMORY PLAY (CK-093)(S262)	PANEL REVERSE (FP-197)	PANEL NORMAL (FP-197)
67 (KEY AD7) (IC1104 100)	VOLUME - (FP-196)	VOLUME + (FP-196)	LCD BRIGHT (FP-196)	LCD BRIGHT + (FP-196)			No key input

## 6. Record of Use check

**Note:** When replacing the drum assembly, initialize the data of address: A2 to AA.

Page 2	Address A2 to AA
--------	------------------

Address	Function		Remarks
A2	Drum rotation counted time (BCD code)	Minutes	
A3		Hour (L)	10th place digit and 1st place digit of counted time (decimal digit)
A4		Hour (H)	1000th place digit and 100th place digit of counted time (decimal digit)
A5	User initial power on date (BCD code)	Year	After setting the clock, set the date of power on next.
A6		Month	
A7		Day	
A8	Final condensation occurrence date (BCD code)	Year	
A9		Month	
AA		Day	

### Using method:

- 1) The record of use data is displayed at page: 2, addresses: A2 to AA.  
**Note:** This data will be erased (reset) when the cabinet (R) assy (CK-093 board) is removed.

### Initializing method:

- 1) Using the adjustment remote commander, select the object address and set data: 00.



## 7. Record of Self-diagnosis check

Page 2	Address B0 to C6
--------	------------------

Address	Self-diagnosis code
B0	"Repaired by" code (Occurred 1st time) *1
B1	"Block function" code (Occurred 1st time)
B2	"Detailed" code (Occurred 1st time)
B4	"Repaired by" code (Occurred 2nd time) *1
B5	"Block function" code (Occurred 2nd time)
B6	"Detailed" code (Occurred 2nd time)
B8	"Repaired by" code (Occurred 3rd time) *1
B9	"Block function" code (Occurred 3rd time)
BA	"Detailed" code (Occurred 3rd time)
BC	"Repaired by" code (Occurred 4th time) *1
BD	"Block function" code (Occurred 4th time)
BE	"Detailed" code (Occurred 4th time)
C0	"Repaired by" code (Occurred 5th time) *1
C1	"Block function" code (Occurred 5th time)
C2	"Detailed" code (Occurred 5th time)
C4	"Repaired by" code (Occurred the last time) *1
C5	"Block function" code (Occurred the last time)
C6	"Detailed" code (Occurred the last time)

\*1 : "01" → "C", "03" → "E"

### Using method:

- 1) The past self-diagnosis codes are displayed at page: 2, addresses: BC to C6. Refer to "SELF-DIAGNOSIS FUNCTION" for detail of the self-diagnosis code.

**Note:** This data will be erased (reset) when the cabinet (R) assy (CK-093 board) is removed.

## SECTION 6 REPAIR PARTS LIST

### 6-1. EXPLODED VIEWS

#### NOTE:


- -XX, -X mean standardized parts, so they may have some differences from the original one.
- Items marked "\*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.

- Abbreviation  
AUS: Australian model  
JE: Tourist model  
CND: Canadian model  
CN: Chinese model  
HK: Hong Kong model

The components identified by mark  $\triangle$  or dotted line with mark  $\triangle$  are critical for safety. Replace only with part number specified.


Les composants identifiés par une marque  $\triangle$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

#### 6-1-1. OVERALL SECTION-1

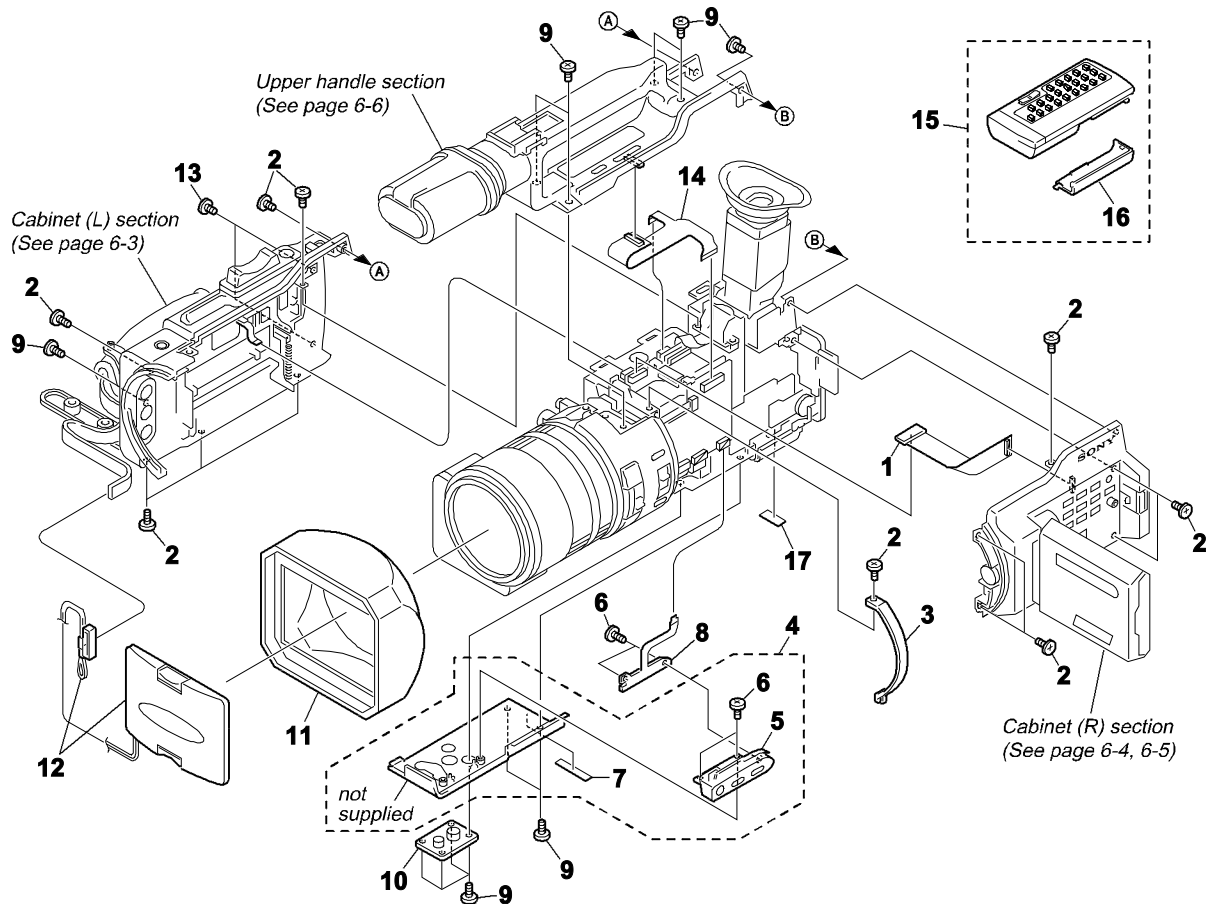


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
1	1-678-055-21	FP-187 FLEXIBLE BOARD		10	3-963-940-02	TABLE, TRIPOD	
2	3-053-121-21	BOLT(M2), SPRING		11	X-3950-590-1	HOOD ASSY, LENS	
3	3-060-683-01	PLATE, CF ORNAMENTAL		12	X-3950-568-1	CAP ASSY, HOOD	
4	X-3950-595-1	BOTTOM (D) ASSY, CABINET		13	3-053-121-31	BOLT(M2), SPRING	
5	X-3950-728-1	COVER ASSY, FBS (SERVICE)		14	1-678-067-21	FP-200 FLEXIBLE BOARD	
6	3-948-339-61	TAPPING		15	1-475-950-21	REMOTE COMMANDER (RMT-811)	
7	3-062-455-01	FOOT(B), RUBBER		16	3-053-056-01	LID, BATTERY CASE (FOR RMT-811)	
8	1-678-057-21	FP-189 FLEXIBLE BOARD		* 17	3-704-367-01	LABEL (VX2000:US,CND)	
9	3-053-121-41	BOLT(M2), SPRING					

## 6-1-2. OVERALL SECTION-2

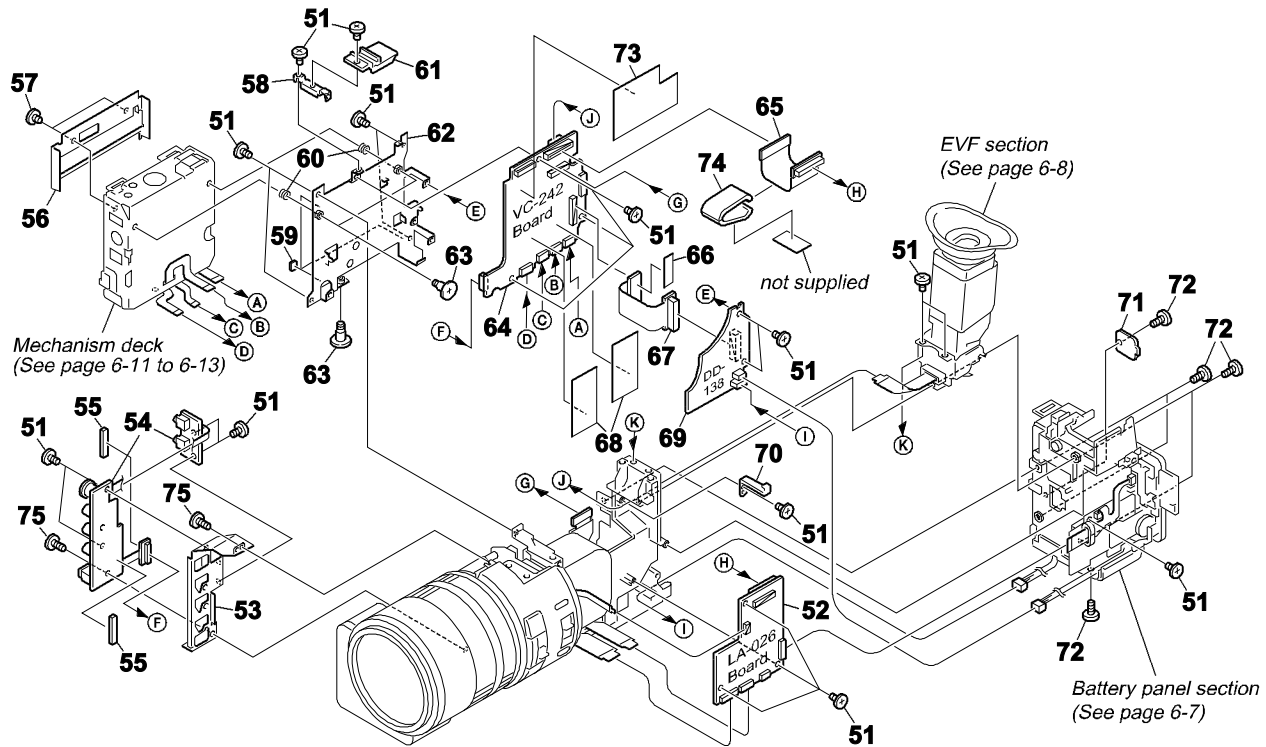


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
51	3-053-121-11	BOLT(M2), SPRING		64	A-7096-157-A	VC-242 BOARD, COMPLETE (SERVICE)	
52	A-7074-401-A	LA-026 BOARD, COMPLETE		65	1-678-054-21	FP-186 FLEXIBLE BOARD	
53	3-060-682-01	FRAME, JK		66	3-061-053-01	SHEET, FP191	
54	A-7074-402-A	JK-190 BOARD, COMPLETE		67	1-678-059-21	FP-191 FLEXIBLE BOARD	
* 55	3-053-354-01	CUSHION, CD FLEXIBLE		68	3-061-516-01	SHEET, RF FLEXIBLE	
56	3-060-673-01	LID, LD OUTER		69	A-7074-405-A	DD-138 BOARD, COMPLETE	
57	3-056-233-11	SCREW (M2), LOCK ACE, P2		70	3-060-787-01	CLAMP, FLEXIBLE	
58	3-060-684-01	JOINT, LA		71	3-060-677-01	COVER, CPC	
59	3-975-921-01	SHEET, VIBRATION PROOF		72	3-053-121-41	BOLT(M2), SPRING	
60	3-061-679-01	SPRING, MD GROUND		* 73	3-062-779-01	SHEET (VC)	
61	3-060-789-01	RETAINER, FLEXIBLE		74	1-469-830-11	FILTER, EMI (VX2000)	
62	X-3950-571-1	FRAME ASSY, MD		75	3-053-121-21	BOLT(M2), SPRING	
63	3-988-464-01	SCREW (M2), STEP					

### 6-1-3. CABINET (L) SECTION

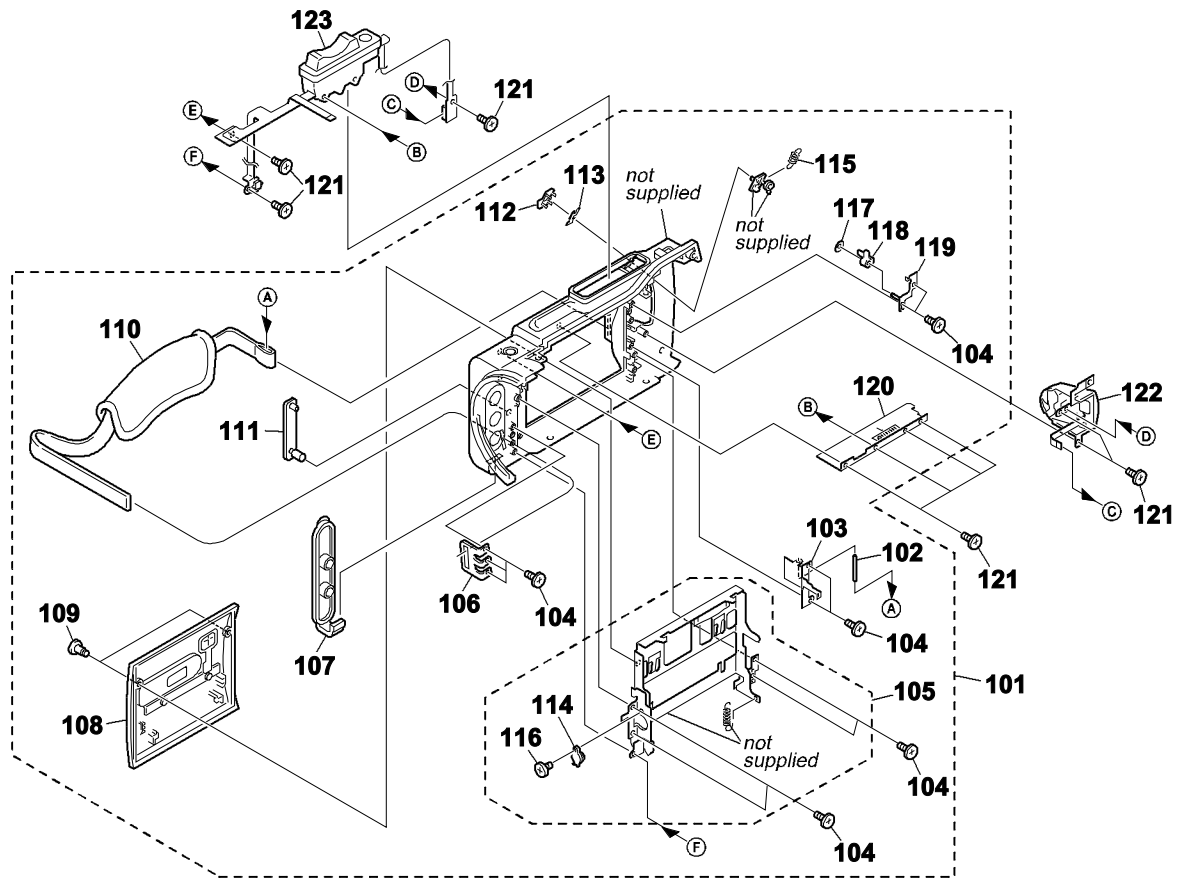

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
101	X-3950-678-1	CABINET (L) ASSY (VX2000)		112	3-060-551-01	KNOB, EJECT	
101	X-3950-688-1	CABINET (L) ASSY (VX2000E)		113	3-060-549-01	SHEET, EJECT	
102	3-703-357-08	PIN(DIA. 1.6 SERISE)		114	4-634-290-11	DAMPER	
103	3-060-550-01	BRACKET (REAR), GRIP		115	3-060-554-01	SPRING, TENSION	
104	3-948-339-01	SCREW, TAPPING		116	3-968-729-81	SCREW (M2), LOCK ACE, P2	
105	X-3950-561-1	CS ASSY		117	3-669-465-01	WASHER (1.5), STOPPER	
106	3-051-871-01	BRACKET (FRONT), BELT		118	3-060-553-01	LEVER, EJECT	
107	3-060-540-01	COVER (AV), JACK		119	X-3950-585-1	SHEET METAL ASSY, EJECT	
108	X-3950-679-1	LID ASSY, CASSETTE		120	X-3950-562-1	SLIDER ASSY	
109	3-060-790-01	SCREW (M2 STEP)		121	3-948-339-61	TAPPING	
110	3-060-548-01	BELT, GRIP		122	1-476-075-21	SWITCH BLOCK, CONTROL (PS-4980)	
111	3-060-541-01	COVER (L), JACK		123	1-476-025-21	SWITCH BLOCK, CONTROL (CF-4980)	

## 6-1-4. CABINET (R) SECTION-1

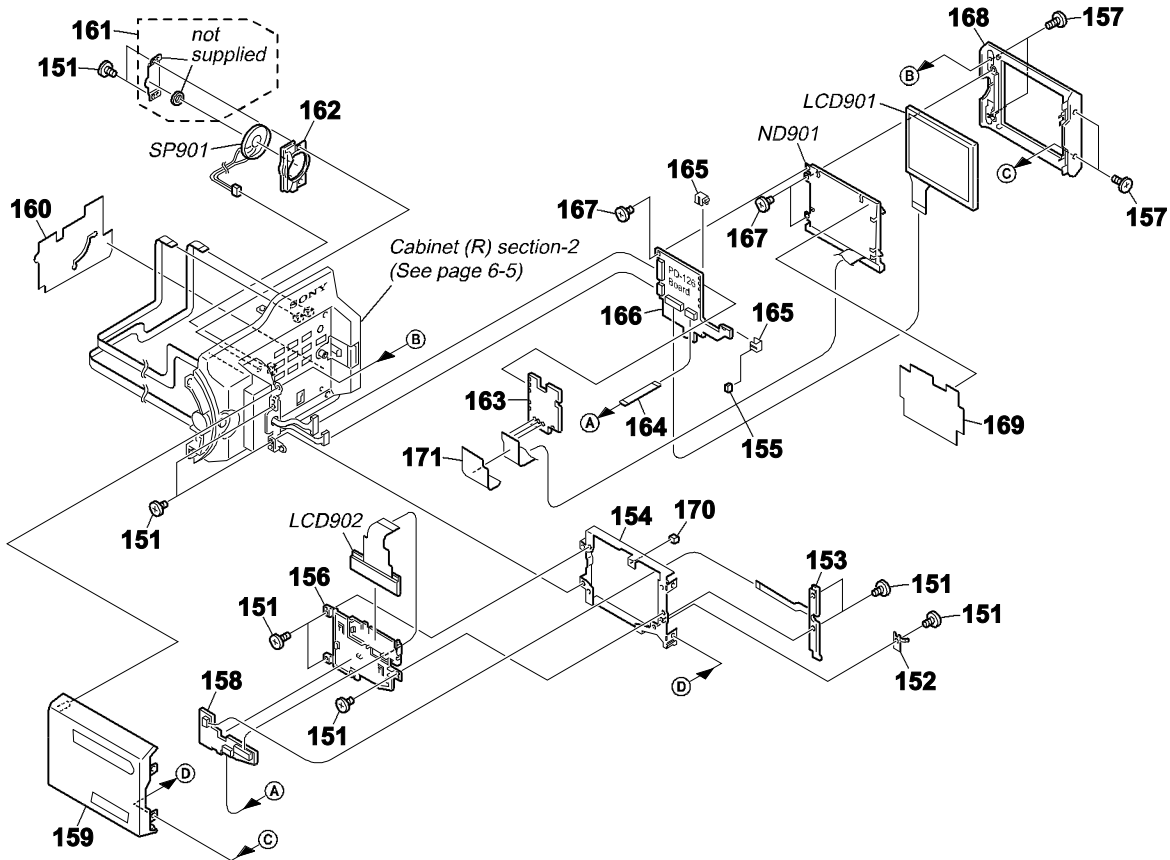


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
151	3-053-121-11	BOLT (M2), SPRING		△ 163	1-418-876-11	TRANSFORMER UNIT, INVERTER	
* 152	3-060-698-01	RETAINER, BL		164	1-678-062-11	FP-195 FLEXIBLE BOARD	
153	1-678-063-21	FP-196 FLEXIBLE BOARD		* 165	3-051-232-01	CLIP, PCB	
* 154	3-060-688-01	FRAME, LCD		166	A-7096-158-A	PD-126 BOARD, COMPLETE (SERVICE)	
155	3-061-509-01	PAD(RIGHT), PD		167	3-989-735-11	SCREW (M1.7), LOCK ACE, P2	
* 156	3-060-687-01	HOLDER, PANEL		168	X-3950-597-1	CABINET (M) ASSY, P	
157	3-053-121-41	BOLT (M2), SPRING		169	3-060-704-01	SHEET (N), BL SHIELD	
158	A-7074-414-A	HL-011 BOARD, COMPLETE		170	3-061-510-01	PAD(UPPER), PD	
159	X-3950-683-1	CABINET (C) ASSY, P (VX2000/VX2000E:E,HK,AUS,CN,JE)		* 171	3-062-196-01	SHEET, BL INSULATING	
159	X-3950-689-1	CABINET (C) ASSY, P (VX2000E:AEF,UK)		LCD901	8-753-050-52	ACX300CK-J	
160	3-060-796-01	SHEET, R FLEXIBLE PROTECTION		LCD902	A-7096-156-A	PANEL BLOCK ASSY, INDICATION	
* 161	X-3950-577-1	PLATE ASSY, SP RETAINER		△ ND901	1-517-931-11	TUBE, FLUORESCENT,COLD CATHODE	
* 162	3-060-686-01	HOLDER, SPEAKER		SP901	1-529-590-11	SPEAKER (2.0CM)	

**Note :**  
The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

**Note :**  
Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.


## 6-1-5. CABINET (R) SECTION-2

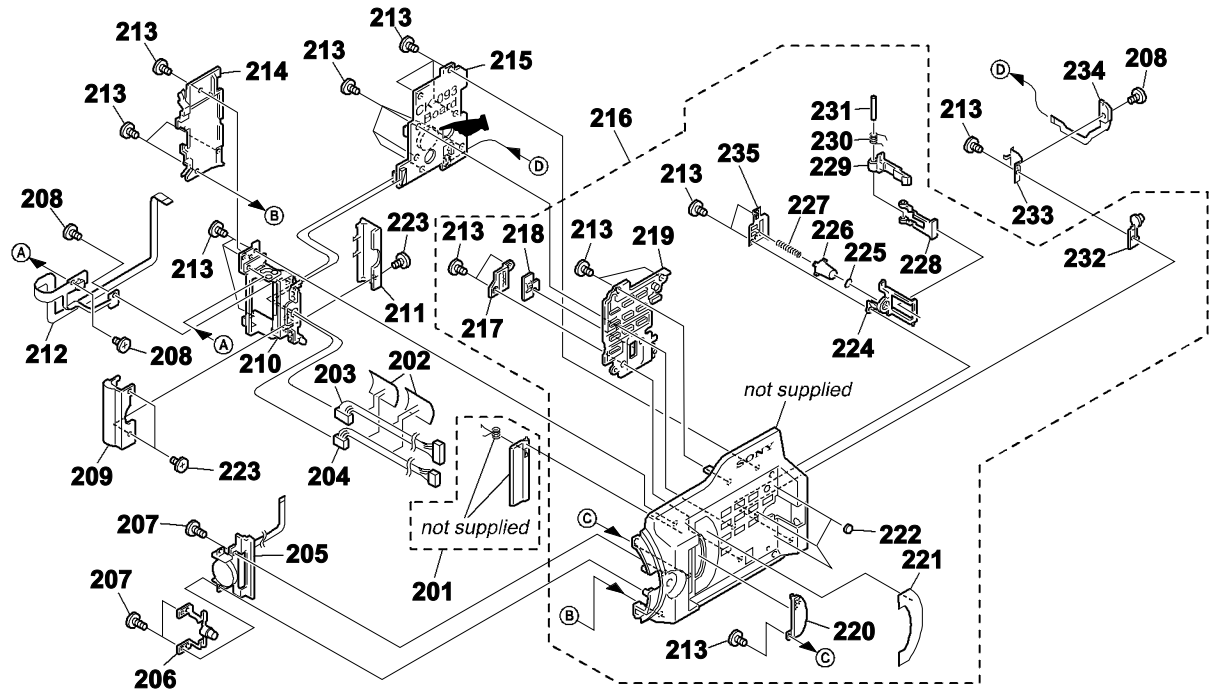

 : BT250 (Lithium battery) CK board on the mount position.(See page 4-59)


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
201	X-3950-599-1	DOOR (D) ASSY, BLIND		219	3-060-636-01	BUTTON, R	
202	3-060-795-01	TAPE, HARNESS FIXED		220	3-060-637-01	GRILLE, SPEAKER	
203	1-960-558-11	HARNESS (CP-094) 14P		221	3-060-639-01	SHEET, PROTECTION	
204	1-960-557-11	HARNESS (CP-093) 8P		222	3-052-521-01	CUSHION (2), PANEL	
205	1-476-183-11	SWITCH BLOCK, CONTROL (ED-4980)		223	3-989-735-01	SCREW (M1.7), LOCK ACE, P2	
206	3-060-689-01	BUTTON, BRIGHT		224	3-060-630-01	BASE, PANEL LOCK	
207	3-053-121-21	BOLT (M2), SPRING		225	3-060-641-01	PAD, PANEL (POP) UP	
208	3-989-735-11	SCREW (M1.7), LOCK ACE, P2		226	3-060-632-01	UP, PANEL (POP)	
209	3-060-693-01	COVER (FRONT), HINGE		227	3-060-633-01	SPRING, COMPRESSION	
210	X-3950-576-1	HINGE ASSY		228	3-060-638-01	KNOB, PANEL LOCK	
211	3-060-694-11	COVER (REAR), HINGE		229	3-060-643-01	CLAW, PANEL LOCK	
212	1-678-064-21	FP-197 FLEXIBLE BOARD		230	3-060-634-01	SPRING, PANEL LOCK	
213	3-053-121-11	BOLT (M2), SPRING		231	3-060-635-01	SHAFT, PANEL LOCK	
* 214	3-060-690-01	LID, HINGE		232	3-060-642-01	BUTTON, MENU	
215	A-7074-403-A	CK BOARD, COMPLETE		* 233	3-060-691-01	BRACKET, MENU BUTTON	
216	X-3950-682-1	CABINET (R) ASSY		234	1-678-061-21	FP-194 FLEXIBLE BOARD	
* 217	3-060-640-01	COVER, ZEBRA KNOB		* 235	3-060-631-01	BRACKET, PANEL LOCK	
218	3-060-644-01	KNOB, ZEBRA					

## 6-1-6. UPPER HANDLE SECTION

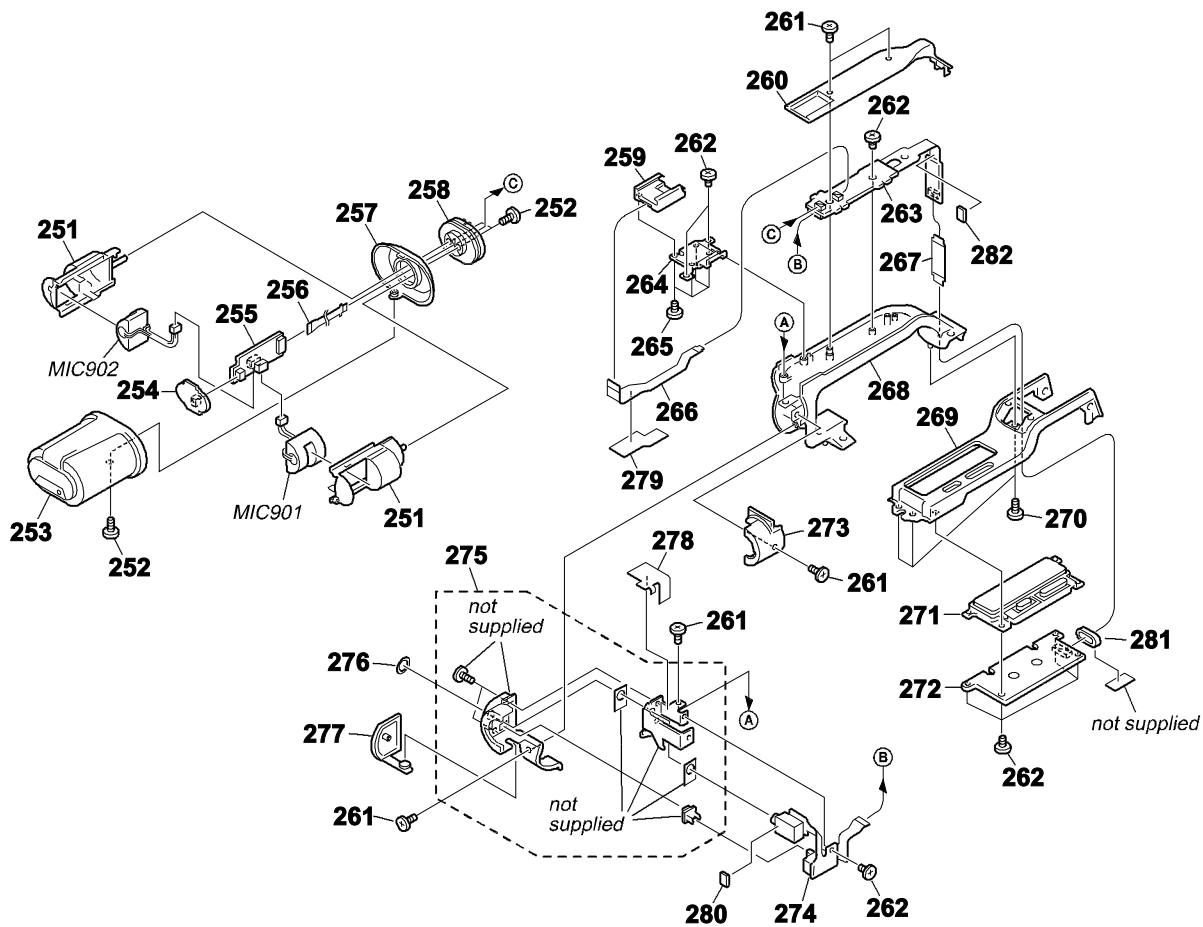

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
251	3-963-968-01	CASE, MICROPHONE		268	X-3950-685-1	HANDLE ASSY	
252	3-948-339-01	SCREW, TAPPING		269	3-060-786-11	CABINET (UPPER)	
253	X-3950-579-1	MASK ASSY, MICROPHONE		270	3-053-121-21	BOLT (M2), SPRING	
254	A-7074-413-A	FT-090 BOARD, COMPLETE		271	X-3950-600-1	FRAME (D) ASSY, FK	
255	A-7074-411-A	MI-038 BOARD, COMPLETE		272	A-7074-412-A	FK-076 BOARD, COMPLETE	
256	1-678-066-11	FP-199 FLEXIBLE BOARD		273	3-060-708-01	CABINET (L), MICROPHONE	
257	3-060-706-01	COVER, MICROPHONE		274	1-678-065-21	FP-198 FLEXIBLE BOARD	
258	X-3945-076-1	NECK ASSY, RUBBER		275	X-3950-684-1	CABINET (R) ASSY, MICROPHONE	
259	1-785-594-11	CONNECTOR (HOT SHOE), OUTER		276	3-061-234-01	NUT(M6X0.5)	
260	X-3950-582-1	COVER ASSY, HANDLE		277	3-060-707-01	COVER, MJ	
261	3-053-121-41	BOLT (M2), SPRING		* 278	3-061-544-01	SHEET, MICROPHONE	
262	3-053-121-11	BOLT (M2), SPRING		* 279	3-061-626-01	SHEET, MA SHIELD	
263	A-7074-410-A	MA-386 BOARD, COMPLETE		* 280	3-061-511-01	SPACER, MICROPHONE	
264	3-060-709-01	SHEET METAL (F), STRAP		281	1-469-829-11	CORE, FERRITE (VX2000)	
265	3-989-735-11	SCREW (M1.7), LOCK ACE, P2		* 282	3-062-543-01	CUSHION, MA FLEXIBLE	
266	1-678-068-11	FP-201 FLEXIBLE BOARD		MIC901	1-542-263-11	MICROPHONE UNIT	
267	1-678-049-11	FP-202 FLEXIBLE BOARD		MIC902	1-542-263-11	MICROPHONE UNIT	


## 6-1-7. BATTERY PANEL SECTION

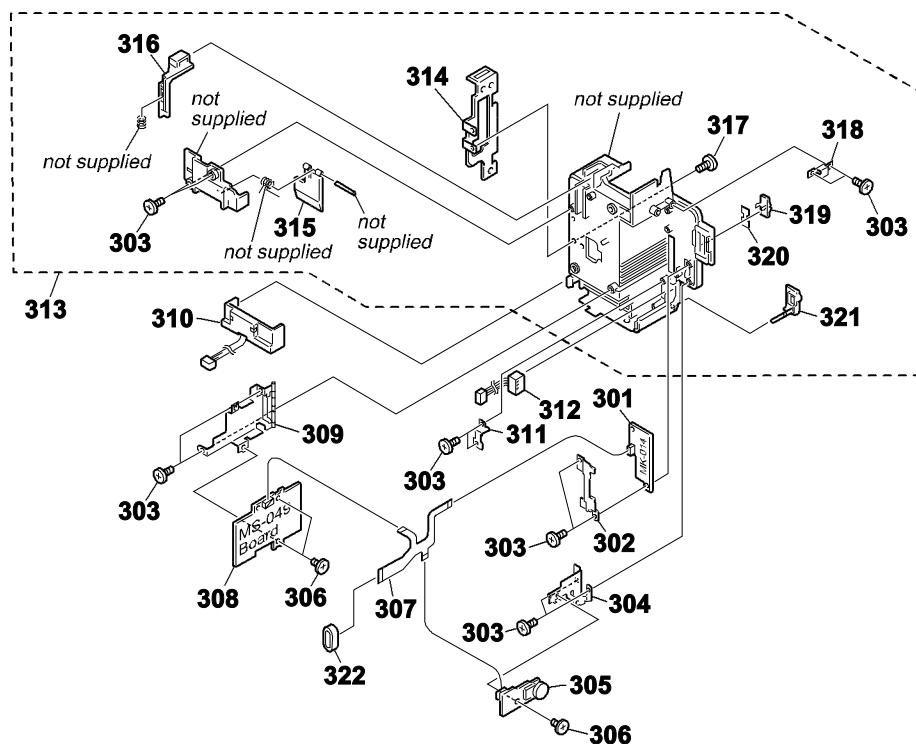

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
301	A-7074-408-A	MK-014 BOARD, COMPLETE		312	1-794-637-11	CONNECTOR, DC-IN	
* 302	3-060-678-01	RETAINER, MK		313	X-3950-680-1	PANEL ASSY, BATTERY	
303	3-948-339-61	TAPPING		314	3-060-592-01	BRACKET (R), S BELT	
* 304	3-060-679-01	HOLDER, KP		315	3-060-595-01	CLAW, BT LOCK	
305	A-7074-406-A	KP-010 BOARD, COMPLETE		316	3-060-594-01	LEVER, BT RELEASE	
306	3-053-121-11	BOLT (M2), SPRING		317	3-053-121-41	BOLT (M2), SPRING	
307	1-678-058-11	FP-190 FLEXIBLE BOARD		* 318	3-060-774-01	JOINT, BT-R	
308	A-7074-407-A	MS-049 BOARD, COMPLETE		319	3-060-598-01	BUTTON, AL	
309	X-3950-589-1	HOLDER ASSY, MS		320	3-060-776-01	SHEET, AL	
310	1-694-411-11	TERMINAL BOARD, BATTERY		321	3-060-773-01	COVER, DC JACK	
* 311	3-060-680-01	RETAINER, DC JACK		322	1-469-829-11	CORE, FERRITE (VX2000)	




6-1-8. EVF SECTION

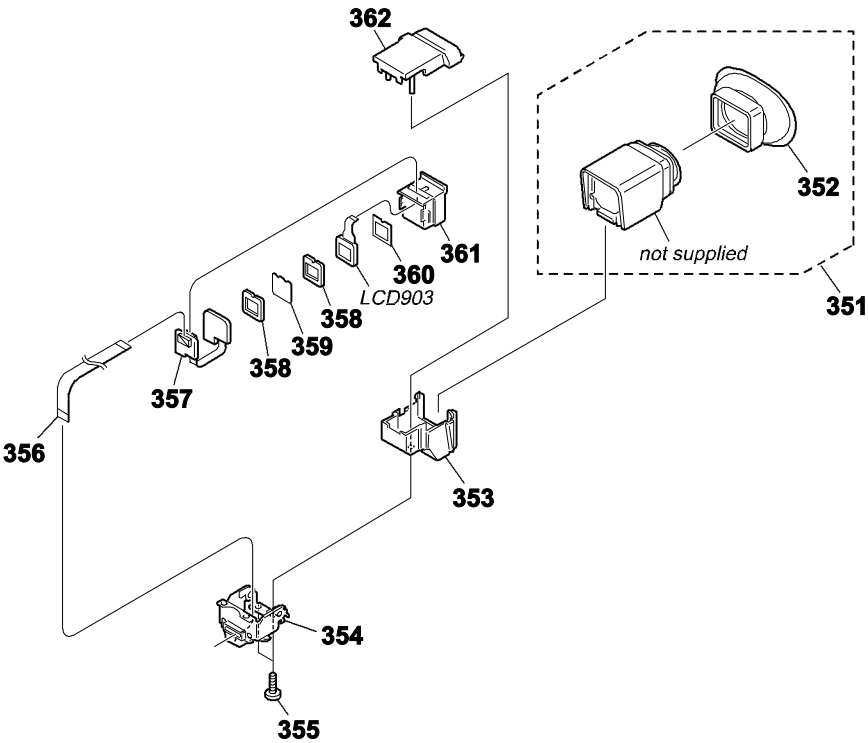


<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>
351	X-3950-563-1	CABINET ASSY, EVF REAR		358	3-060-702-01	CUSHION (498), LCD	
352	3-060-573-01	CUP, EYE		359	3-060-701-01	ILLUMINATOR (498)	
353	X-3950-564-1	CABINET (LOWER) ASSY, EVF FRONT		360	3-060-788-01	SHEET, LIGHT INTERCEPTION	
354	X-3950-565-1	HINGE ASSY, VF		361	X-3950-584-1	HOLDER ASSY, LCD	
355	3-713-791-21	SCREW (M1.7X8), TAPPING, P2		362	3-060-674-01	CABINET (UPPER), EVF FRONT	
356	1-678-060-11	FP-193 FLEXIBLE BOARD		LCD903	8-753-026-77	LCX033AK-J	
357	A-7074-409-A	LB-065 BOARD, COMPLETE					

## 6-1-9. CENTER FRAME SECTION

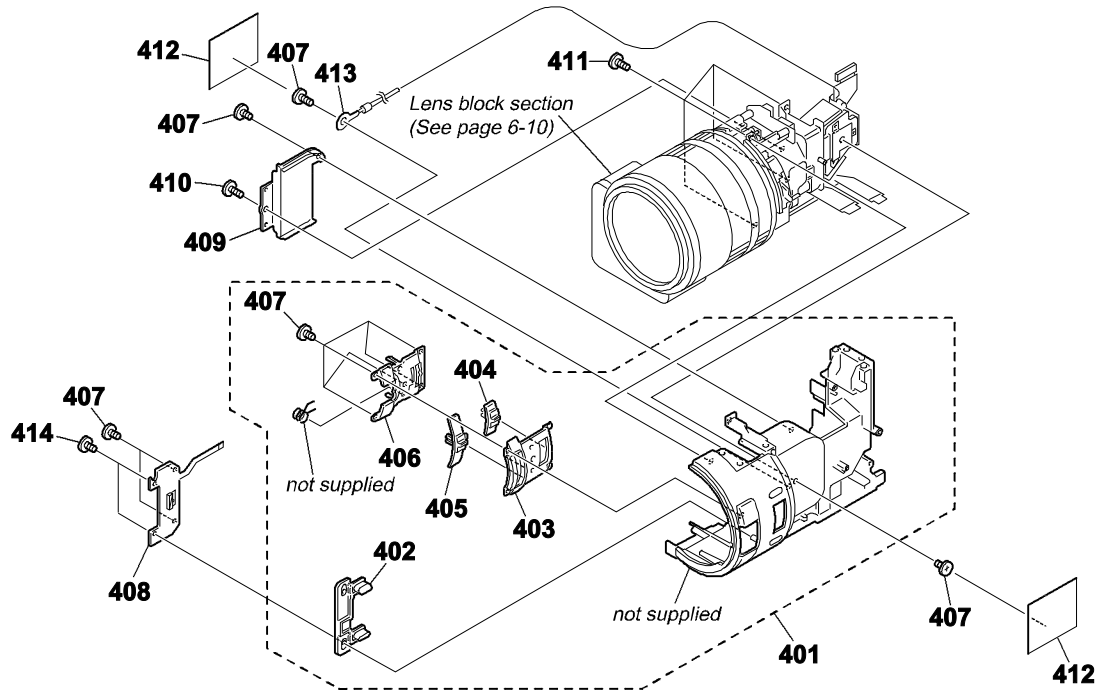

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>
401	X-3950-681-1	FRAME ASSY, CENTER		408	1-678-056-21	FP-188 FLEXIBLE BOARD	
402	3-060-620-01	BUTTON, IP		409	3-060-685-01	COVER, CCD	
403	3-060-621-01	ESCUTCHEON		410	3-948-339-61	TAPPING	
404	3-060-622-01	KNOB, MF		411	3-053-121-21	BOLT (M2), SPRING	
405	3-060-619-01	KNOB, ND		412	3-060-795-01	TAPE, HARNESS FIXED	
406	3-060-623-01	COVER, BUTTON		413	1-960-654-11	HARNESS, CJ-064	
407	3-053-121-11	BOLT (M2), SPRING		414	3-968-729-91	SCREW(M2), LOCK ACE, P2	


6-1-10. LENS BLOCK SECTION

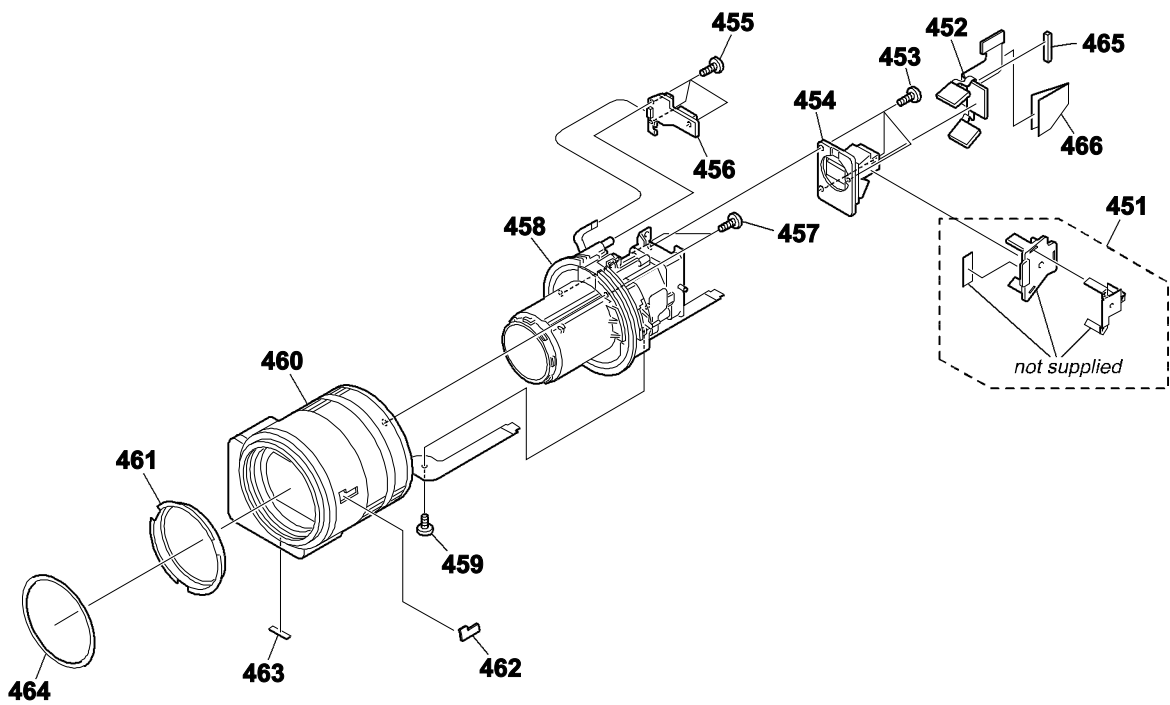

Be sure to read "Precautions upon replacing CCD imager" on page 4-9 when changing the CCD imager.

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>
451	X-3950-586-1	COVER ASSY, PRISM		458	3-709-596-01	LENS ASSY, ZOOM	
452	A-7074-398-A	CD-254 BOARD, COMPLETE		459	3-713-791-91	SCREW (M1.7)	
453	3-713-791-61	SCREW (M1.7X7), TAPPING, P2		460	3-709-595-01	VAP ASSY (B114A)	
454	A-7031-100-A	PRISM ASSY (SERVICE) (INCLUDING 3CCD)		461	3-709-594-01	RING ASSY, ORNAMENTAL	
		(VX2000)		462	3-963-933-01	EMBLEM, CCD	
454	A-7031-101-A	PRISM ASSY (SERVICE) (INCLUDING 3CCD)		463	3-062-454-01	FOOT (A), RUBBER	
		(VX2000E)		464	3-060-681-01	RING, NAME	
455	3-948-339-61	TAPPING		* 465	3-053-354-01	CUSHION, CD FLEXIBLE	
456	A-7074-399-A	SE-108 BOARD, COMPLETE		* 466	3-062-778-01	SHEET (CD)	
457	3-948-339-31	SCREW, TAPPING P2					


## 6-1-11. CASSETTE COMPARTMENT, DRUM AND REEL TABLE ASSEMBLY

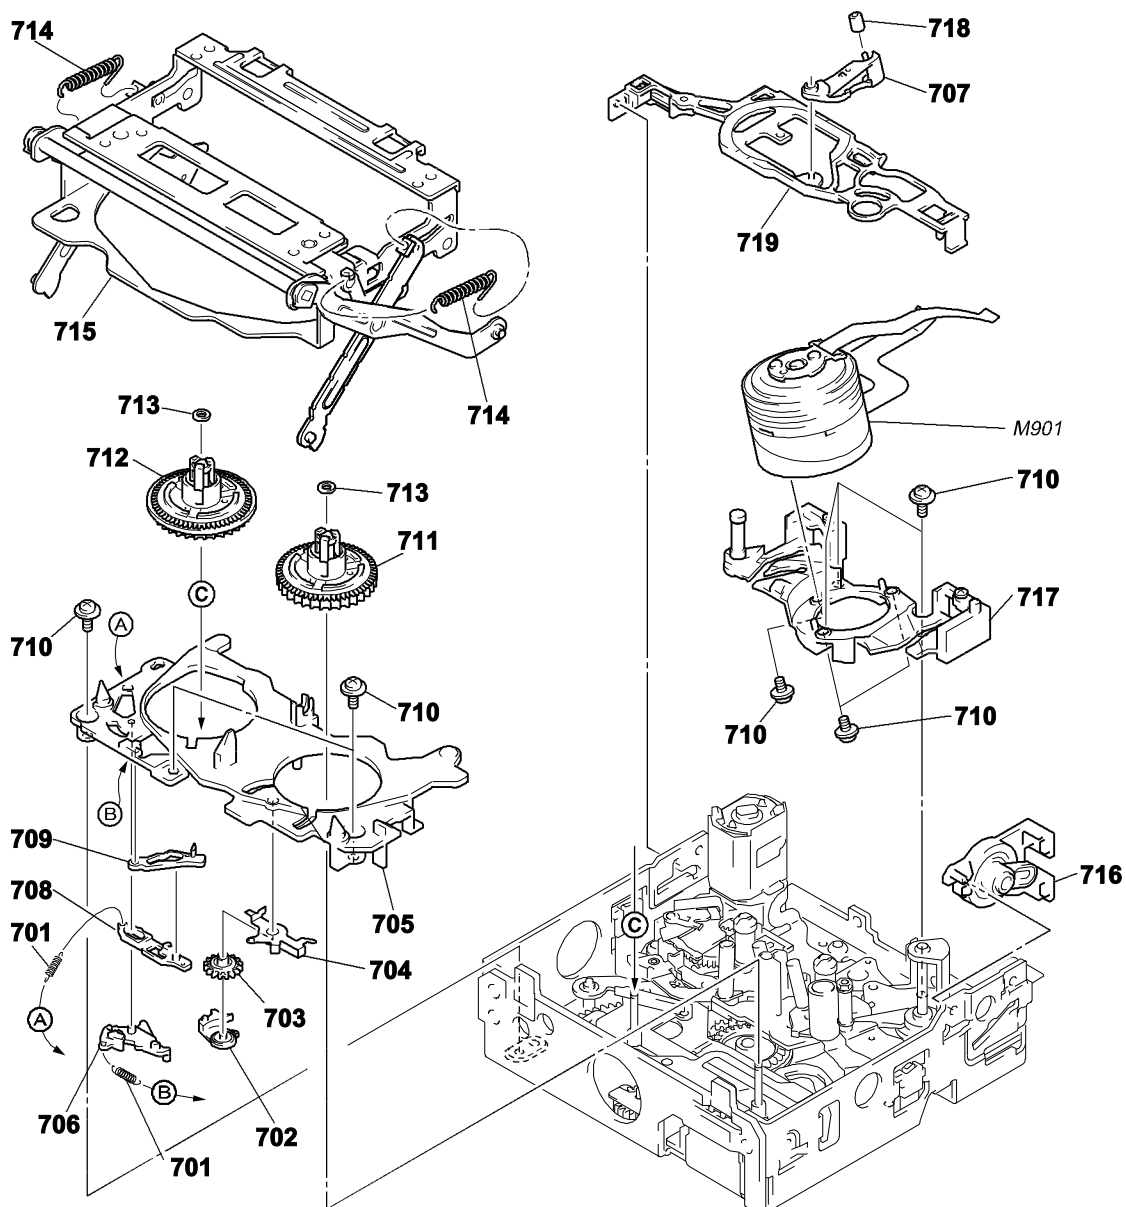

Ref. No.	Part No.	Description
701	3-988-312-01	SPRING, EXTENSION
702	3-988-220-01	BRAKE (T)
703	3-988-221-01	GEAR (T), BRAKE
704	3-988-222-01	SPRING (T), BRAKE
705	3-988-215-02	BASE, CASSETTE
706	3-988-217-01	ARM(S), RESET
707	3-988-281-02	ARM, HC
708	3-988-219-01	RACK (S), BRAKE
709	3-988-218-01	BRAKE (S)
710	3-947-503-01	SCREW (M1.4)


Ref. No.	Part No.	Description	Remarks
711	X-3948-445-1	TABLE (T) ASSY, REEL	
712	X-3948-444-1	TABLE (S) ASSY, REEL	
713	3-989-465-01	WASHER, STOPPER	
714	3-988-298-01	SPRING EXTENSION	
715	X-3948-441-9	CASSETTE COMPARTMENT ASSY	
716	X-3948-443-2	DAMPER ASSY	
717	A-7093-612-A	DRUM BASE BLOCK ASSY	
718	3-988-282-01	ROLLER, HC	
719	3-988-283-01	STOPPER, TAPE FALL	
M901	A-4900-079-A	DRUM ASSY (DEH-11B/J-RP)	

## 6-1-12. TAPE GUIDE, PINCH SLIDER ASSEMBLY AND BRAKE SLIDER ASSEMBLY

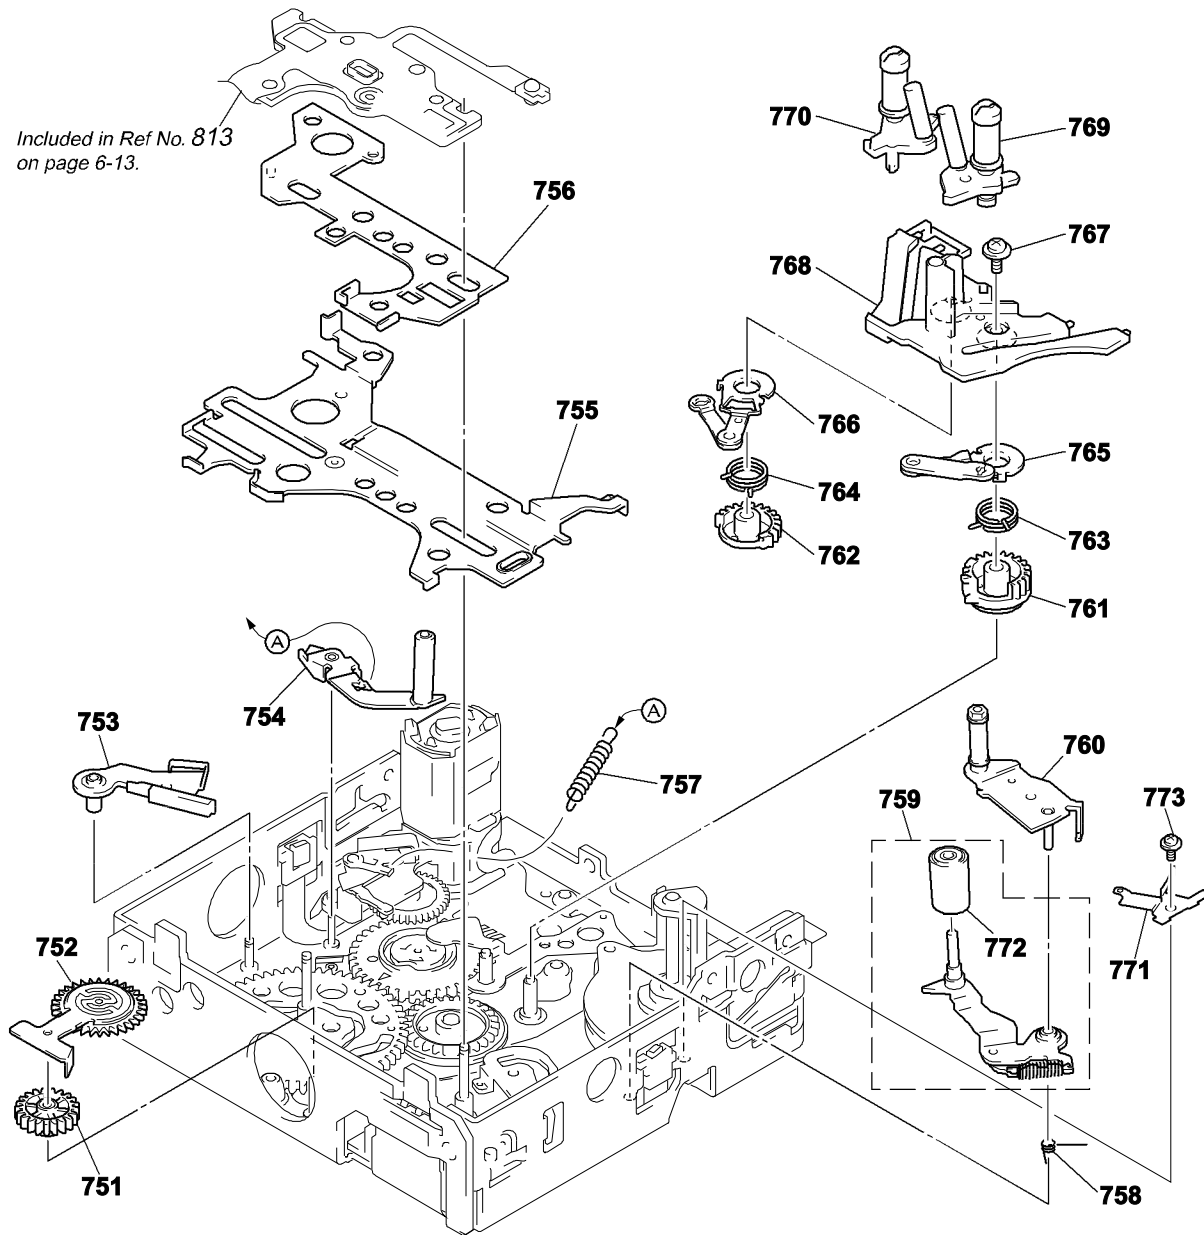

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
751	3-988-263-01	GEAR, RELAY		763	3-988-258-01	SPRING (GLT), TORSION	
752	X-3948-442-2	GEAR ASSY, GOOSENECK		764	3-988-253-01	SPRING (GLS), TORSION	
753	X-3948-435-2	PLATE ASSY, TG1 ADJUSTMENT		765	X-3948-440-1	ARM(T) ASSY, GL	
754	X-3948-434-1	ARM ASSY, TG1		766	X-3948-439-2	ARM(S) ASSY, GL	
755	X-3948-428-2	SLIDER ASSY, PINCH		767	3-947-503-01	SCREW (M1.4)	
756	X-3948-766-1	SLIDER ASSY, BRAKE		768	3-988-242-01	RAIL, GUIDE	
757	3-988-270-01	SPRING (TG1), TENSION COIL		769	X-3948-438-3	COASTER (T) ASSY	
758	3-988-233-01	SPRING (TG7LD), TORSION		770	X-3948-934-4	COASTER (S2) ASSY	
759	X-3948-433-2	ARM ASSY, PINCH		771	3-988-690-02	SPRING, TG7 RETAINER	
760	A-7093-501-A	ARM BLOCK ASSY, TG7		772	X-3748-630-2	ROLLER ASSY (DIA.5.6), PINCH	
761	3-988-257-01	GEAR (T), GL		773	3-053-083-01	SCREW	
762	3-988-252-02	GEAR (S), GL					

## 6-1-13. EACH GEARS AND LOADING/CAPSTAN MOTOR ASSEMBLY

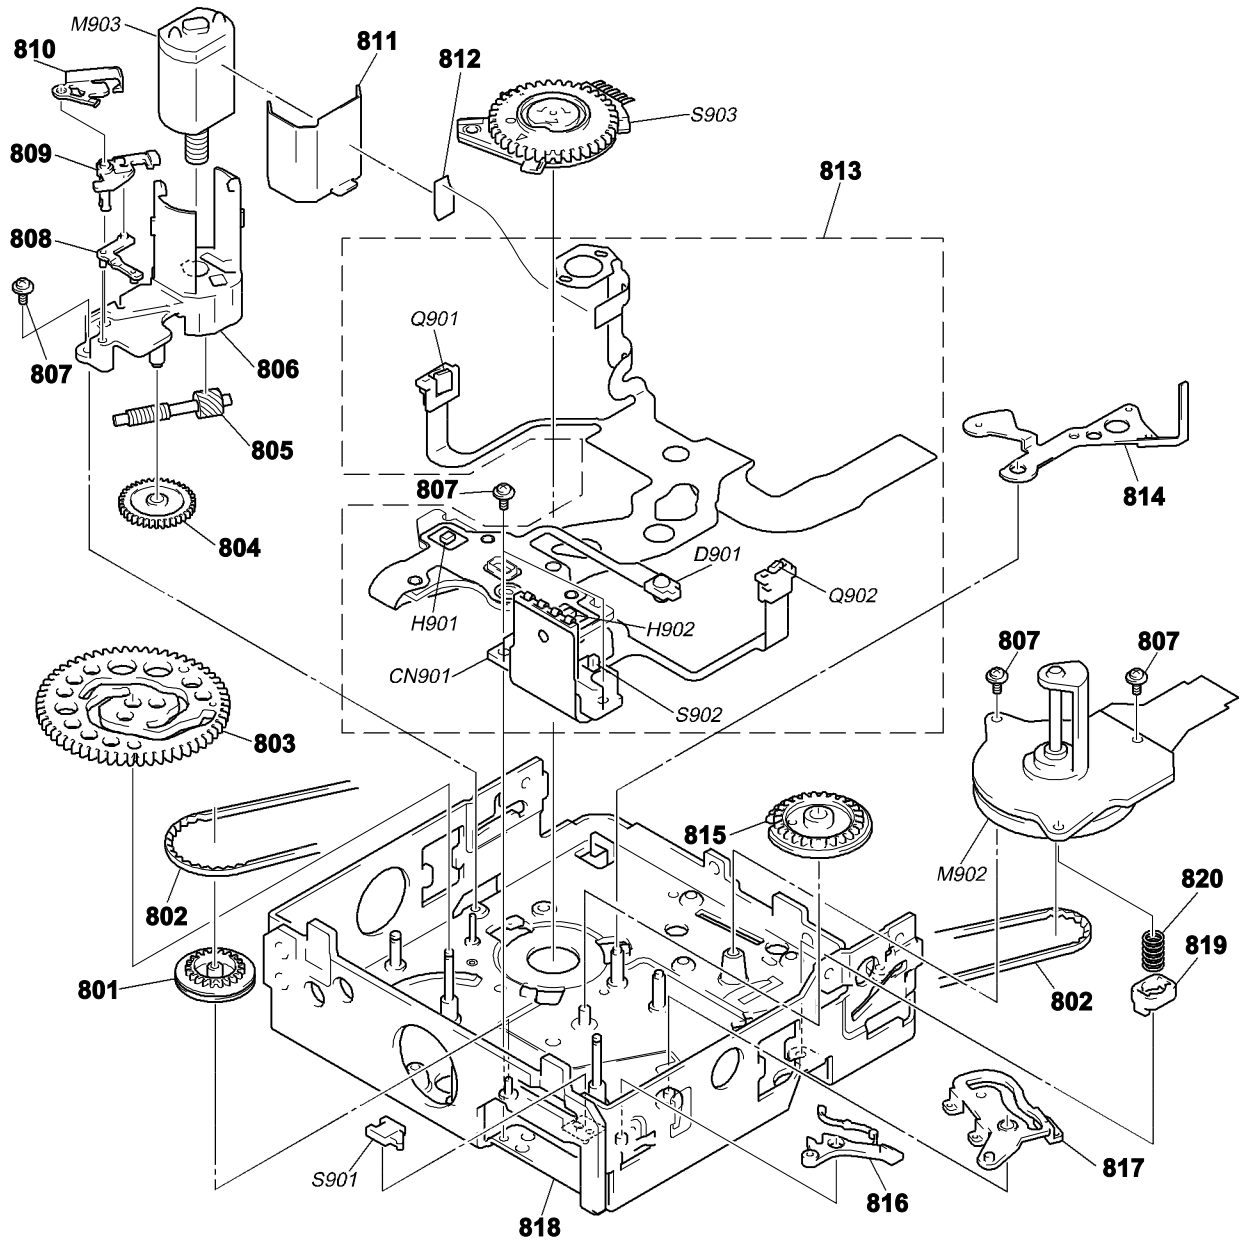



Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
801	3-988-274-01	PULLEY, CONVERSION		817	3-988-224-01	ARM, PINCH PRESS	
802	3-988-276-02	BELT, TIMING		818	X-3948-431-2	CHASSIS ASSY	
803	3-988-216-01	GEAR, CAM		819	3-050-170-01	HOLDER	
804	3-988-211-01	GEAR, DECELERATION		820	3-051-787-01	SPRING (CAP), COMPRESSION COIL	
805	3-988-210-01	SHAFT, WORM		CN901	1-784-723-11	PIN, CONNECTOR 4P	
806	3-988-207-01	HOLDER, MOTOR		D901	8-719-067-13	DIODE GL453K	
807	3-947-503-01	SCREW (M1.4)		H901	8-719-061-28	DIODE HW-105C-FT-V (S REEL)	
808	3-988-303-01	ARM, SPRING HOOK DRIVING		H902	8-719-061-28	DIODE HW-105C-FT-V (T REEL)	
809	3-988-271-01	BASE, SPRING HOOK FULCRUM		M902	8-835-606-01	MOTOR, DC SCD15A/C-NP (CAPSTAN)	
810	3-988-302-01	HOOK, TG1 SPRING		M903	X-3948-346-1	MOTOR ASSY, LOADING	
811	3-988-208-01	SHIELD, MOTOR		Q901	8-729-907-25	PHOTO TRANSISTOR PT4850F (TAPE END)	
812	1-657-785-11	FP-248 FLEXIBLE BOARD (DEW SENSOR)		Q902	8-729-907-25	PHOTO TRANSISTOR PT4850F (TAPE TOP)	
813	A-7073-418-A	FP-594 FLEXIBLE BOARD, COMPLETE		S901	1-771-039-51	SWITCH, PUSH (CASSETTE IN)	
814	3-988-280-03	ARM, HC DRIVING		S902	1-572-719-32	SWITCH, PUSH (1 KEY) (REC PROOF)	
815	3-988-239-01	GEAR, GL DRIVING		S903	1-771-325-11	ENCODER, ROTARY (SWITCH) (MODE)	
816	3-988-223-01	ARM, EJECT					


## 6-2. ELECTRICAL PARTS LIST

**NOTE:**

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked "\*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- CAPACITORS:  
uF:  $\mu\text{F}$
- COILS  
uH:  $\mu\text{H}$
- RESISTORS  
All resistors are in ohms.  
METAL: metal-film resistor  
METAL OXIDE: Metal Oxide-film resistor  
F: nonflammable
- SEMICONDUCTORS  
In each case, u:  $\mu$ , for example:  
uA...:  $\mu\text{A}$ ..., uPA...,  $\mu\text{PA}$ ...,  
uPB...,  $\mu\text{PB}$ ..., uPC...,  $\mu\text{PC}$ ...,  
uPD...,  $\mu\text{PD}$ ...
- Abbreviation  
AUS: Australian model  
JE: Tourist model  
CND: Canadian model

**When indicating parts by reference number, please include the board name.**

The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.

**Les composants identifiés par une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.**

CN: Chinese model  
HK: Hong Kong model  
KR: Korea model

Ref. No.	Part No.	Description				Remarks	Ref. No.	Part No.	Description				Remarks
	A-7074-398-A	CD-254 BOARD, COMPLETE *****							< COIL >				
		(Ref.No.;1000Series)					L100	1-412-963-11	INDUCTOR	100uH			
		(IC100,101,102 are not included in this completed board)					L101	1-412-963-11	INDUCTOR	100uH			
							L104	1-412-963-11	INDUCTOR	100uH			
		< CAPACITOR >					L105	1-412-963-11	INDUCTOR	100uH			
							L106	1-412-963-11	INDUCTOR	100uH			
C100	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V								
C101	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V		L107	1-412-963-11	INDUCTOR	100uH			
C102	1-119-751-11	TANTAL. CHIP	22uF	20%	16V								
C103	1-119-751-11	TANTAL. CHIP	22uF	20%	16V				< RESISTOR >				
C104	1-127-760-91	CERAMIC CHIP	4.7uF	10%	6.3V								
							R100	1-218-962-11	RES-CHIP	5.6K	5%	1/16W	
C105	1-127-760-91	CERAMIC CHIP	4.7uF	10%	6.3V		R101	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	
C108	1-117-919-11	TANTAL. CHIP	10uF	20%	6.3V		R102	1-218-962-11	RES-CHIP	5.6K	5%	1/16W	
C109	1-107-686-11	TANTAL. CHIP	4.7uF	20%	16V		R103	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	
C110	1-127-760-91	CERAMIC CHIP	4.7uF	10%	6.3V		R104	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	
C111	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V								
							R105	1-218-962-11	RES-CHIP	5.6K	5%	1/16W	
C112	1-107-686-11	TANTAL. CHIP	4.7uF	20%	16V		R106	1-218-953-11	RES-CHIP	1K	5%	1/16W	
C113	1-117-919-11	TANTAL. CHIP	10uF	20%	6.3V		R107	1-218-940-11	RES-CHIP	82	5%	1/16W	
C114	1-107-686-11	TANTAL. CHIP	4.7uF	20%	16V		R108	1-218-953-11	RES-CHIP	1K	5%	1/16W	
C115	1-117-919-11	TANTAL. CHIP	10uF	20%	6.3V		R109	1-218-940-11	RES-CHIP	82	5%	1/16W	
C117	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V								
							R110	1-218-953-11	RES-CHIP	1K	5%	1/16W	
C118	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V		R111	1-218-940-11	RES-CHIP	82	5%	1/16W	
C119	1-119-751-11	TANTAL. CHIP	22uF	20%	16V		R112	1-220-210-11	RES-CHIP	200K	5%	1/16W	
C120	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V		R113	1-220-210-11	RES-CHIP	200K	5%	1/16W	
C130	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V		R114	1-220-210-11	RES-CHIP	200K	5%	1/16W	
C131	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V								
C132	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V			A-7074-403-A	CK-093 BOARD, COMPLETE *****				
C133	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V								
C134	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V								(Ref.No.;1000Series)
C135	1-107-826-91	CERAMIC CHIP	0.1uF	10%	16V								
		< CONNECTOR >						3-051-919-01	SHEET,LI PROTECTION				
									< BATTERY >				
CN100	1-778-078-21	CONNECTOR, BOARD TO BOARD 50P					BT250	1-528-724-21	BATTERY, V/L RICHARGEABL				
		< IC >											
									< CONNECTOR >				
IC103	8-759-561-46	IC AD8014ART-REEL7											
IC104	8-759-561-46	IC AD8014ART-REEL7					CN250	1-784-995-21	CONNECTOR, BOARD TO BOARD 50P				
IC105	8-759-561-46	IC AD8014ART-REEL7					CN251	1-794-378-21	PIN, CONNECTOR 14P				
							CN252	1-794-377-21	PIN, CONNECTOR 8P				
							CN253	1-794-057-21	PIN, CONNECTOR (PC BOARD) 2P				
							CN254	1-766-335-21	CONNECTOR, FFC/FPC 5P				
							CN255	1-779-327-11	CONNECTOR, FFC/FPC 6P				
							CN256	1-779-327-11	CONNECTOR, FFC/FPC 6P				

**Be sure to read “Precautions upon replacing CCD imager” on page 4-9 when changing the CCD imager.**

Ref. No.	Part No.	Description	Remarks			Ref. No.	Part No.	Description	Remarks		
< DIODE >						C311	1-164-935-11	CERAMIC CHIP	470PF	10%	16V
D250	8-719-064-61	DIODE 01BZA8.2(TE85L)				C312	1-119-923-81	CERAMIC CHIP	0.047uF	10%	10V
D251	8-719-064-61	DIODE 01BZA8.2(TE85L)				C313	1-104-913-11	TANTAL. CHIP	10uF	20%	16V
D252	8-719-073-03	DIODE MA8082-(K8).S0				C314	1-119-751-11	TANTAL. CHIP	22uF	20%	16V
D253	8-719-064-61	DIODE 01BZA8.2(TE85L)				C315	1-164-937-11	CERAMIC CHIP	0.001uF	10%	16V
D254	8-719-064-61	DIODE 01BZA8.2(TE85L)				C316	1-119-751-11	TANTAL. CHIP	22uF	20%	16V
D255	8-719-064-61	DIODE 01BZA8.2(TE85L)				C317	1-164-939-11	CERAMIC CHIP	0.0022uF	10%	16V
< RESISTOR >						C318	1-164-935-11	CERAMIC CHIP	470PF	10%	16V
R255	1-218-954-11	RES-CHIP	1.2K	5%	1/16W	C319	1-164-937-11	CERAMIC CHIP	0.001uF	10%	16V
R256	1-218-954-11	RES-CHIP	1.2K	5%	1/16W	C320	1-164-933-11	CERAMIC CHIP	220PF	10%	16V
R257	1-218-954-11	RES-CHIP	1.2K	5%	1/16W	C321	1-164-874-11	CERAMIC CHIP	100PF	5%	16V
R258	1-218-955-11	RES-CHIP	1.5K	5%	1/16W	C322	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
R259	1-218-955-11	RES-CHIP	1.5K	5%	1/16W	C323	1-127-760-91	CERAMIC CHIP	4.7uF	10%	6.3V
R260	1-218-955-11	RES-CHIP	1.5K	5%	1/16W	C324	1-127-760-91	CERAMIC CHIP	4.7uF	10%	6.3V
R261	1-218-959-11	RES-CHIP	3.3K	5%	1/16W	C325	1-164-940-11	CERAMIC CHIP	0.0033uF	10%	16V
R262	1-218-959-11	RES-CHIP	3.3K	5%	1/16W	C326	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
R263	1-218-959-11	RES-CHIP	3.3K	5%	1/16W	C327	1-164-939-11	CERAMIC CHIP	0.0022uF	10%	16V
R264	1-218-963-11	RES-CHIP	6.8K	5%	1/16W	C328	1-164-940-11	CERAMIC CHIP	0.0033uF	10%	16V
R265	1-218-963-11	RES-CHIP	6.8K	5%	1/16W	C329	1-164-940-11	CERAMIC CHIP	0.0033uF	10%	16V
R266	1-218-963-11	RES-CHIP	6.8K	5%	1/16W	C330	1-164-940-11	CERAMIC CHIP	0.0033uF	10%	16V
R267	1-218-969-11	RES-CHIP	22K	5%	1/16W	C331	1-164-940-11	CERAMIC CHIP	0.0033uF	10%	16V
R268	1-218-969-11	RES-CHIP	22K	5%	1/16W	C332	1-164-940-11	CERAMIC CHIP	0.0033uF	10%	16V
R269	1-218-969-11	RES-CHIP	22K	5%	1/16W	C333	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V
< SWITCH >						C334	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V
S250	1-771-138-61	SWITCH, KEY BOARD(TITLE)				C337	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V
S251	1-771-138-61	SWITCH, KEY BOARD(DISPLAY)				C338	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
S252	1-771-138-61	SWITCH, KEY BOARD(MEMORY INDEX)				C339	1-104-851-11	TANTAL. CHIP	10uF	20%	10V
S253	1-771-138-61	SWITCH, KEY BOARD(TC/U-BIT)				C340	1-127-760-91	CERAMIC CHIP	4.7uF	10%	6.3V
S254	1-771-138-61	SWITCH, KEY BOARD(MEMORY +)				C341	1-127-760-91	CERAMIC CHIP	4.7uF	10%	6.3V
S255	1-771-138-61	SWITCH, KEY BOARD(DIGITAL EFFECT)				C342	1-127-760-91	CERAMIC CHIP	4.7uF	10%	6.3V
S256	1-771-138-61	SWITCH, KEY BOARD(RESET)				C343	1-127-760-91	CERAMIC CHIP	4.7uF	10%	6.3V
S257	1-771-138-61	SWITCH, KEY BOARD(MEMORY -)				C344	1-127-760-91	CERAMIC CHIP	4.7uF	10%	6.3V
S258	1-771-138-61	SWITCH, KEY BOARD(MENU)				C345	1-127-760-91	CERAMIC CHIP	4.7uF	10%	6.3V
S259	1-771-138-61	SWITCH, KEY BOARD(MEMORY DELETE)				C346	1-127-820-91	CERAMIC	4.7uF		16V
S260	1-771-138-61	SWITCH, KEY BOARD(MEMORY MIX)				C349	1-127-820-91	CERAMIC	4.7uF		16V
S261	1-771-138-61	SWITCH, KEY BOARD(DATA CODE)				C350	1-113-985-11	TANTAL. CHIP	10uF	20%	20V
S262	1-771-138-61	SWITCH, KEY BOARD(MEMORY PLAY)				C351	1-117-919-11	TANTAL. CHIP	10uF	20%	6.3V
S263	1-762-648-21	SWITCH, SLIDE(ZEBRA/OFF/70/100)				C352	1-117-919-11	TANTAL. CHIP	10uF	20%	6.3V
						C353	1-104-851-11	TANTAL. CHIP	10uF	20%	10V
						C354	1-104-852-11	TANTAL. CHIP	22uF	20%	6.3V
A-7074-405-A	DD-138 BOARD, COMPLETE					C355	1-104-851-11	TANTAL. CHIP	10uF	20%	10V
*****						C356	1-117-919-11	TANTAL. CHIP	10uF	20%	6.3V
(Ref.No.;1000Series)						C357	1-117-919-11	TANTAL. CHIP	10uF	20%	6.3V
< CAPACITOR >						C358	1-117-919-11	TANTAL. CHIP	10uF	20%	6.3V
C300	1-107-819-11	CERAMIC CHIP	0.022uF	10%	16V	C359	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C301	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C360	1-104-851-11	TANTAL. CHIP	10uF	20%	10V
C302	1-119-923-81	CERAMIC CHIP	0.047uF	10%	10V	C361	1-110-569-11	TANTAL. CHIP	47uF	20%	6.3V
C303	1-119-923-81	CERAMIC CHIP	0.047uF	10%	10V	C362	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C304	1-164-939-11	CERAMIC CHIP	0.0022uF	10%	16V	C363	1-104-851-11	TANTAL. CHIP	10uF	20%	10V
C305	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C365	1-135-214-21	TANTAL. CHIP	4.7uF	20%	20V
C307	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C366	1-113-985-11	TANTAL. CHIP	10uF	20%	20V
C308	1-119-751-11	TANTAL. CHIP	22uF	20%	16V	C367	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C309	1-164-874-11	CERAMIC CHIP	100PF	5%	16V	C368	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C310	1-119-751-11	TANTAL. CHIP	22uF	20%	16V	C369	1-164-505-11	CERAMIC CHIP	2.2uF		16V
						C370	1-164-505-11	CERAMIC CHIP	2.2uF		16V
						C371	1-113-985-11	TANTAL. CHIP	10uF	20%	20V
						C372	1-113-985-11	TANTAL. CHIP	10uF	20%	20V
						C373	1-104-851-11	TANTAL. CHIP	10uF	20%	10V



# DD-138

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
C375	1-113-985-11	TANTAL. CHIP	10uF 20% 20V	< TRANSISTOR >			
C376	1-135-212-21	TANTAL. CHIP	2.2uF 20% 35V	Q300	8-729-047-68	TRANSISTOR	SSM3K03FE(TPL3)
C450	1-115-566-11	CERAMIC CHIP	4.7uF 10% 10V	Q301	8-729-046-77	TRANSISTOR	SI4963DY-T1
< CONNECTOR >				Q302	8-729-804-41	TRANSISTOR	2SB1122-ST-TD
CN300	1-573-290-21	PIN, CONNECTOR (1.5MM) (SMD) 4P		Q303	8-729-037-74	TRANSISTOR	UN9213J-(K8).SO
CN301	1-691-550-11	PIN, CONNECTOR (1.5MM) (SMD) 3P		Q304	8-729-047-68	TRANSISTOR	SSM3K03FE(TPL3)
CN450	1-778-084-11	CONNECTOR, BOARD TO BOARD 60P		Q305	8-729-050-24	TRANSISTOR	MCH6202-TL
< DIODE >				Q306	8-729-037-53	TRANSISTOR	2SB1462J-QR(K8).SO
D300	8-719-158-49	DIODE MA8120-TX		Q307	8-729-037-74	TRANSISTOR	UN9213J-(K8).SO
D301	8-719-073-03	DIODE MA8082-(K8).SO		Q308	8-729-043-60	TRANSISTOR	CPH6102-TL
D302	8-719-073-03	DIODE MA8082-(K8).SO		Q309	8-729-046-98	TRANSISTOR	CPH6702-TL
D303	8-719-073-03	DIODE MA8082-(K8).SO		Q310	8-729-046-98	TRANSISTOR	CPH6702-TL
D304	8-719-056-48	DIODE 1SS388(TPL3)		Q311	8-729-046-98	TRANSISTOR	CPH6702-TL
D305	8-719-058-24	DIODE RB501V-40TE-17		Q312	8-729-046-98	TRANSISTOR	CPH6702-TL
D306	8-719-058-24	DIODE RB501V-40TE-17		Q313	8-729-046-98	TRANSISTOR	CPH6702-TL
D307	8-719-058-24	DIODE RB501V-40TE-17		Q314	8-729-046-98	TRANSISTOR	CPH6702-TL
D308	8-719-056-48	DIODE 1SS388(TPL3)		Q315	8-729-037-52	TRANSISTOR	2SD2216J-QR(K8).SO
D311	8-719-056-48	DIODE 1SS388(TPL3)		Q316	8-729-017-61	TRANSISTOR	2SB1581-T1
D312	8-719-056-48	DIODE 1SS388(TPL3)		Q317	8-729-037-53	TRANSISTOR	2SB1462J-QR(K8).SO
D313	8-719-056-48	DIODE 1SS388(TPL3)		Q318	8-729-044-58	TRANSISTOR	SI2304DS-T1
D314	8-719-056-23	DIODE MA2S111-(K8).SO		Q319	8-729-044-58	TRANSISTOR	SI2304DS-T1
D315	8-719-075-12	DIODE MA3XD21001S0		Q320	8-729-044-58	TRANSISTOR	SI2304DS-T1
D316	8-719-056-23	DIODE MA2S111-(K8).SO		Q321	8-729-044-58	TRANSISTOR	SI2304DS-T1
< FUSE >				Q322	8-729-044-58	TRANSISTOR	SI2304DS-T1
△ F300	1-576-286-21	FUSE, MICRO(1.4A)		Q323	8-729-044-58	TRANSISTOR	SI2304DS-T1
△ F301	1-576-286-21	FUSE, MICRO(1.4A)		Q324	8-729-037-52	TRANSISTOR	2SD2216J-QR(K8).SO
△ F302	1-576-286-21	FUSE, MICRO(1.4A)		Q325	8-729-037-74	TRANSISTOR	UN9213J-(K8).SO
△ F303	1-576-286-21	FUSE, MICRO(1.4A)		Q327	8-729-037-52	TRANSISTOR	2SD2216J-QR(K8).SO
△ F304	1-576-286-21	FUSE, MICRO(1.4A)		Q329	8-729-037-74	TRANSISTOR	UN9213J-(K8).SO
△ F305	1-576-286-21	FUSE, MICRO(1.4A)		Q331	8-729-037-53	TRANSISTOR	2SB1462J-QR(K8).SO
< IC >				Q332	8-729-037-53	TRANSISTOR	2SB1462J-QR(K8).SO
IC300	8-759-491-09	IC MB4488PFV-G-BND-ER		Q333	8-729-037-53	TRANSISTOR	2SB1462J-QR(K8).SO
IC301	8-759-075-66	IC TA75S01F(TE85R)		Q334	8-729-049-25	TRANSISTOR	2SC5376F-B(TPL3)
< COIL >				Q335	8-729-037-52	TRANSISTOR	2SD2216J-QR(K8).SO
L300	1-416-669-11	INDUCTOR 22uH		Q337	8-729-037-52	TRANSISTOR	2SD2216J-QR(K8).SO
L301	1-416-670-11	INDUCTOR 33uH		Q338	8-729-037-53	TRANSISTOR	2SB1462J-QR(K8).SO
L302	1-416-669-11	INDUCTOR 22uH		Q339	8-729-042-56	TRANSISTOR	MGSF3455VT1
L303	1-416-669-11	INDUCTOR 22uH		Q340	8-729-037-52	TRANSISTOR	2SD2216J-QR(K8).SO
L304	1-416-669-11	INDUCTOR 22uH		Q341	8-729-049-91	TRANSISTOR	2SA2018H-T2L
L305	1-416-669-11	INDUCTOR 22uH		Q344	8-729-037-52	TRANSISTOR	2SD2216J-QR(K8).SO
L306	1-412-056-11	INDUCTOR 4.7uH		Q345	8-729-034-59	TRANSISTOR	2SA1745-6.7-TL
L307	1-414-770-91	INDUCTOR CHIP 4.7uH		Q348	8-729-037-52	TRANSISTOR	2SD2216J-QR(K8).SO
L308	1-412-056-11	INDUCTOR 4.7uH		Q349	8-729-037-53	TRANSISTOR	2SB1462J-QR(K8).SO
L309	1-414-400-11	INDUCTOR 22uH		Q351	8-729-037-52	TRANSISTOR	2SD2216J-QR(K8).SO
L310	1-414-770-91	INDUCTOR CHIP 4.7uH		< RESISTOR >			
L311	1-414-770-91	INDUCTOR CHIP 4.7uH		R300	1-218-953-11	RES-CHIP	1K 5% 1/16W
L312	1-412-056-11	INDUCTOR 4.7uH		R301	1-216-296-91	SHORT	0
L313	1-414-770-91	INDUCTOR CHIP 4.7uH		R302	1-216-296-91	SHORT	0
L314	1-414-770-91	INDUCTOR CHIP 4.7uH		R303	1-218-985-11	RES-CHIP	470K 5% 1/16W
L315	1-414-394-11	INDUCTOR 2.2uH		R304	1-218-989-11	RES-CHIP	1M 5% 1/16W
L316	1-414-770-91	INDUCTOR CHIP 4.7uH		R305	1-218-969-11	RES-CHIP	22K 5% 1/16W
L317	1-469-058-11	INDUCTOR CHIP 22uH		R306	1-216-150-91	RES-CHIP	10 5% 1/8W
L318	1-469-058-11	INDUCTOR CHIP 22uH		R307	1-218-969-11	RES-CHIP	22K 5% 1/16W
L319	1-414-770-91	INDUCTOR CHIP 4.7uH		R308	1-218-969-11	RES-CHIP	22K 5% 1/16W
L451	1-414-770-91	INDUCTOR CHIP 4.7uH		R309	1-218-969-11	RES-CHIP	22K 5% 1/16W

**Note :**  
The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

**Note :**  
Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description			Remarks	Ref. No.	Part No.	Description			Remarks
R310	1-218-953-11	RES-CHIP	1K	5%	1/16W	R376	1-218-973-11	RES-CHIP	47K	5%	1/16W
R311	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R377	1-216-864-11	METAL CHIP	0	5%	1/16W
R312	1-218-969-11	RES-CHIP	22K	5%	1/16W	R378	1-218-973-11	RES-CHIP	47K	5%	1/16W
R313	1-218-973-11	RES-CHIP	47K	5%	1/16W	R380	1-218-990-11	SHORT	0		
R314	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R381	1-218-973-11	RES-CHIP	47K	5%	1/16W
R315	1-218-953-11	RES-CHIP	1K	5%	1/16W	R382	1-218-878-11	METAL CHIP	20K	0.5%	1/16W
R316	1-218-969-11	RES-CHIP	22K	5%	1/16W	R383	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R317	1-208-715-11	METAL CHIP	22K	0.5%	1/16W	R384	1-218-977-11	RES-CHIP	100K	5%	1/16W
R318	1-208-927-11	METAL CHIP	47K	0.5%	1/16W	R385	1-218-969-11	RES-CHIP	22K	5%	1/16W
R319	1-218-969-11	RES-CHIP	22K	5%	1/16W	R386	1-218-949-11	RES-CHIP	470	5%	1/16W
R320	1-218-965-11	RES-CHIP	10K	5%	1/16W	R388	1-218-978-11	METAL CHIP	120K	0.5%	1/16W
R321	1-208-719-11	METAL CHIP	33K	0.5%	1/16W	R389	1-208-931-11	METAL CHIP	68K	0.5%	1/16W
R322	1-218-971-11	RES-CHIP	33K	5%	1/16W	R390	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W
R323	1-218-973-11	RES-CHIP	47K	5%	1/16W	R391	1-217-671-11	METAL CHIP	1	5%	1/10W
R324	1-218-965-11	RES-CHIP	10K	5%	1/16W	R392	1-217-671-11	METAL CHIP	1	5%	1/10W
R325	1-208-927-11	METAL CHIP	47K	0.5%	1/16W	R393	1-216-295-91	SHORT	0		
R326	1-218-969-11	RES-CHIP	22K	5%	1/16W	R394	1-216-295-91	SHORT	0		
R327	1-208-927-11	METAL CHIP	47K	0.5%	1/16W	R396	1-218-990-11	SHORT	0		
R328	1-208-931-11	METAL CHIP	68K	0.5%	1/16W	R397	1-218-982-11	RES-CHIP	270K	5%	1/16W
R329	1-218-965-11	RES-CHIP	10K	5%	1/16W	R399	1-216-295-91	SHORT	0		
R330	1-218-971-11	RES-CHIP	33K	5%	1/16W	R400	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R331	1-208-715-11	METAL CHIP	22K	0.5%	1/16W	R401	1-218-953-11	RES-CHIP	1K	5%	1/16W
R332	1-208-701-11	METAL CHIP	5.6K	0.5%	1/16W	R456	1-218-990-11	SHORT	0		
R333	1-208-927-11	METAL CHIP	47K	0.5%	1/16W						
R334	1-218-974-11	METAL CHIP	56K	0.5%	1/16W			< TRANSFORMER >			
R335	1-208-715-11	METAL CHIP	22K	0.5%	1/16W	T300	1-435-456-21	TRANSFORMER, DC-DC CONVERTER			
R336	1-208-935-11	METAL CHIP	100K	0.5%	1/16W	T301	1-435-518-21	TRANSFORMER, DC-DC CONVERTER			
R337	1-218-945-11	RES-CHIP	220	5%	1/16W						
R338	1-208-709-11	METAL CHIP	12K	0.5%	1/16W						
R339	1-208-697-11	METAL CHIP	3.9K	0.5%	1/16W						
R340	1-208-697-11	METAL CHIP	3.9K	0.5%	1/16W						
R341	1-208-943-11	METAL CHIP	220K	0.5%	1/16W						
R342	1-218-941-11	RES-CHIP	100	5%	1/16W						
R343	1-218-941-11	RES-CHIP	100	5%	1/16W						
R344	1-218-937-11	RES-CHIP	47	5%	1/16W						
R345	1-218-941-11	RES-CHIP	100	5%	1/16W						
R346	1-218-953-11	RES-CHIP	1K	5%	1/16W						
R347	1-218-953-11	RES-CHIP	1K	5%	1/16W						
R348	1-218-941-11	RES-CHIP	100	5%	1/16W						
R349	1-218-941-11	RES-CHIP	100	5%	1/16W						
R350	1-218-973-11	RES-CHIP	47K	5%	1/16W						
R351	1-218-965-11	RES-CHIP	10K	5%	1/16W						
R352	1-218-970-11	METAL CHIP	27K	0.5%	1/16W						
R353	1-208-687-11	METAL CHIP	1.5K	0.5%	1/16W						
R354	1-208-719-11	METAL CHIP	33K	0.5%	1/16W						
R355	1-218-973-11	RES-CHIP	47K	5%	1/16W						
R356	1-218-969-11	RES-CHIP	22K	5%	1/16W						
R359	1-218-973-11	RES-CHIP	47K	5%	1/16W						
R360	1-218-973-11	RES-CHIP	47K	5%	1/16W						
R362	1-218-973-11	RES-CHIP	47K	5%	1/16W						
R363	1-218-965-11	RES-CHIP	10K	5%	1/16W						
R364	1-218-989-11	RES-CHIP	1M	5%	1/16W						
R365	1-218-973-11	RES-CHIP	47K	5%	1/16W						
R369	1-218-978-11	METAL CHIP	120K	0.5%	1/16W						
R370	1-218-974-11	METAL CHIP	56K	0.5%	1/16W						
R371	1-208-703-11	METAL CHIP	6.8K	0.5%	1/16W						
R372	1-218-978-11	METAL CHIP	120K	0.5%	1/16W						
R373	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W						
R374	1-208-943-11	METAL CHIP	220K	0.5%	1/16W						
R375	1-216-864-11	METAL CHIP	0	5%	1/16W						

**FK-076****FP-594****FT-090****HL-011****JK-190**

Ref. No.	Part No.	Description	Remarks
R512	1-218-963-11	RES-CHIP 6.8K 5%	1/16W
R513	1-218-963-11	RES-CHIP 6.8K 5%	1/16W
R514	1-218-950-11	RES-CHIP 560 5%	1/16W
R515	1-218-969-11	RES-CHIP 22K 5%	1/16W
R516	1-218-950-11	RES-CHIP 560 5%	1/16W

&lt; SWITCH &gt;

S500	1-771-138-61	SWITCH, KEY BOARD(STOP)
S501	1-771-138-61	SWITCH, KEY BOARD(PAUSE)
S502	1-771-138-61	SWITCH, KEY BOARD(REW)
S503	1-771-138-61	SWITCH, KEY BOARD(FF)
S504	1-771-138-61	SWITCH, KEY BOARD(PLAY)
S505	1-771-138-61	SWITCH, KEY BOARD(SLOW)
S506	1-771-138-61	SWITCH, KEY BOARD(REC)
S507	1-771-138-61	SWITCH, KEY BOARD(REC)
S508	1-771-138-61	SWITCH, KEY BOARD(AUDIO DUB)
S509	1-771-138-61	SWITCH, KEY BOARD(EDIT SEARCH +)
S510	1-771-138-61	SWITCH, KEY BOARD(EDIT SEARCH -)
S511	1-771-138-61	SWITCH, KEY BOARD(EDIT SEARCH -)

A-7073-418-A FP-594 FLEXIBLE BOARD

\*\*\*\*\*

(Ref.No.;9000Series)

&lt; CONNECTOR &gt;

CN901	1-784-723-11	PIN, CONNECTOR 4P
-------	--------------	-------------------

&lt; DIODE &gt;

D901	8-719-067-13	DIODE GL453K
------	--------------	--------------

&lt; HOLE ELEMENT &gt;

H901	8-719-061-28	DIODE HW-105-FT-V (S REEL)
H902	8-719-061-28	DIODE HW-105-FT-V (T REEL)

&lt; TRANSISTOR &gt;

Q901	8-729-907-25	PHOTO TRANSISTOR PT4850F (TAPE END)
Q902	8-729-907-25	PHOTO TRANSISTOR PT4850F (TAPE TOP)

&lt; SWITCH &gt;

S901	8-711-039-51	SWITCH, PUSH (C IN SW)
S902	8-572-719-32	SWITCH, PUSH (1KEY)(REC PROOF)
S903	8-771-325-11	ENCODER, ROTARY (SWITCH)(MODE)

A-7074-413-A FT-090 BOARD, COMPLETE

\*\*\*\*\*

(Ref.No.;1000Series)

&lt; CAPACITOR &gt;

C750	1-117-919-11	TANTAL. CHIP 10uF 20% 6.3V
------	--------------	----------------------------

&lt; CONNECTOR &gt;

* CN750	1-573-984-11	CONNECTOR, BOARD TO BOARD 10P
---------	--------------	-------------------------------

&lt; DIODE &gt;

D750	8-719-951-20	DIODE BR1102W-TR
D751	8-719-052-25	DIODE CL-2001R-X-TU-BC

Ref. No.	Part No.	Description	Remarks
		< FUSE >	

△ F750	1-533-874-11	FUSE, MICRO(0.2A)
--------	--------------	-------------------

&lt; IC &gt;

IC750	8-749-013-13	IC RS-70-TU
-------	--------------	-------------

&lt; TRANSISTOR &gt;

Q750	8-729-037-71	TRANSISTOR UN9210J-(TX).SO
------	--------------	----------------------------

&lt; RESISTOR &gt;

R750	1-218-951-11	RES-CHIP 680 5%	1/16W
R751	1-218-937-11	RES-CHIP 47 5%	1/16W

A-7074-414-A HL-011 BOARD, COMPLETE

\*\*\*\*\*

(Ref.No.;2000Series)

&lt; CAPACITOR &gt;

C1701	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V
-------	--------------	-----------------------------

&lt; CONNECTOR &gt;

CN1701	1-766-337-21	CONNECTOR, FFC/FPC 7P
CN1702	1-778-711-11	CONNECTOR, FFC/FPC (ZIF) 5P
CN1703	1-573-930-11	CONNECTOR, FFC/FPC (ZIF) 21P

&lt; DIODE &gt;

D1701	8-719-073-03	DIODE MA8082-(K8).SO
-------	--------------	----------------------

&lt; IC &gt;

IC1701	8-759-573-02	IC BU9735K-E2
--------	--------------	---------------

&lt; RESISTOR &gt;

R1701	1-218-954-11	RES-CHIP 1.2K 5%	1/16W
R1702	1-218-955-11	RES-CHIP 1.5K 5%	1/16W
R1703	1-218-959-11	RES-CHIP 3.3K 5%	1/16W
R1704	1-216-855-11	METAL CHIP 680K 5%	1/16W

A-7074-402-A JK-190 BOARD, COMPLETE

\*\*\*\*\*

(Ref.No.;2000Series)

&lt; CAPACITOR &gt;

C301	1-164-937-11	CERAMIC CHIP 0.001uF 10% 16V
C302	1-164-937-11	CERAMIC CHIP 0.001uF 10% 16V
C303	1-164-937-11	CERAMIC CHIP 0.001uF 10% 16V
C304	1-164-937-11	CERAMIC CHIP 0.001uF 10% 16V

&lt; CONNECTOR &gt;

CN300	1-785-828-11	CONNECTOR, SQUARE TYPE 4P
CN301	1-785-433-21	CONNECTOR, BOARD TO BOARD 40P

**Note :**

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

**Note :**

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

JK-190

KP-010

LA-026

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
		< DIODE >		A-7074-406-A	KP-010 BOARD, COMPLETE ***** (Ref.No.:1000Series)		
D300	8-719-062-16	DIODE 01ZA8.2(TPL3)			< CONNECTOR >		
D301	8-719-073-03	DIODE MA8082-(K8).S0		CN550	1-766-336-21	CONNECTOR, FFC/FPC 6P	
D302	8-719-062-16	DIODE 01ZA8.2(TPL3)			< DIODE >		
D303	8-719-062-16	DIODE 01ZA8.2(TPL3)		D550	8-719-064-61	DIODE 01BZA8.2(TE85L)	
D304	8-719-062-16	DIODE 01ZA8.2(TPL3)			< SWITCH >		
D305	8-719-073-03	DIODE MA8082-(K8).S0		S550	1-771-025-41	SWITCH, ROTARY (ENCODER) (SEL/PUSH EXEC)	
D306	8-719-062-16	DIODE 01ZA8.2(TPL3)					
D307	8-719-073-03	DIODE MA8082-(K8).S0			A-7074-401-A LA-026 BOARD, COMPLETE ***** (Ref.No.:20000Series)		
D308	8-719-073-03	DIODE MA8082-(K8).S0			< CAPACITOR >		
D309	8-719-072-91	DIODE MAZJ200D0LS0		C070	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V	
D310	8-719-062-16	DIODE 01ZA8.2(TPL3)		C071	1-107-826-91	CERAMIC CHIP 0.1uF 10% 16V	
D311	8-719-422-70	DIODE MA8075-TX		C072	1-107-826-91	CERAMIC CHIP 0.1uF 10% 16V	
D312	8-719-062-16	DIODE 01ZA8.2(TPL3)		C073	1-164-942-11	CERAMIC CHIP 0.0068uF 10% 16V	
D313	8-719-062-16	DIODE 01ZA8.2(TPL3)		C074	1-164-942-11	CERAMIC CHIP 0.0068uF 10% 16V	
D314	8-719-073-03	DIODE MA8082-(K8).S0		C075	1-107-823-11	CERAMIC CHIP 0.47uF 10% 16V	
		< FERRITE BEAD >		C076	1-125-837-91	CERAMIC CHIP 1uF 10% 6.3V	
FB300	1-500-444-11	FERRITE 0UH		C077	1-107-823-11	CERAMIC CHIP 0.47uF 10% 16V	
FB301	1-500-444-11	FERRITE 0UH		C078	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V	
		< JACK >		C079	1-125-926-91	TANTAL. CHIP 4.7uF 20% 6.3V	
J300	1-694-713-11	TERMINAL BOARD(VIDEO/L/R)		C080	1-117-919-11	TANTAL. CHIP 10uF 20% 6.3V	
J301	1-566-850-31	CONNECTOR, (S) TERMINAL 4P(S-VIDEO)		C085	1-115-467-11	CERAMIC CHIP 0.22uF 10% 10V	
J302	1-563-282-21	JACK, SMALL TYPE (♂)		C086	1-115-467-11	CERAMIC CHIP 0.22uF 10% 10V	
J303	1-793-995-11	JACK, SUPER SMALL TYPE(♂LANC)		C087	1-119-923-81	CERAMIC CHIP 0.047uF 10% 10V	
		< COIL >		C088	1-119-923-81	CERAMIC CHIP 0.047uF 10% 10V	
L301	1-412-963-11	INDUCTOR 100uH		C089	1-164-940-11	CERAMIC CHIP 0.0033uF 10% 16V	
L302	1-412-963-11	INDUCTOR 100uH		C090	1-107-819-11	CERAMIC CHIP 0.022uF 10% 16V	
		< RESISTOR >		C091	1-107-819-11	CERAMIC CHIP 0.022uF 10% 16V	
R300	1-216-864-11	METAL CHIP 0 5% 1/16W		C092	1-164-940-11	CERAMIC CHIP 0.0033uF 10% 16V	
R301	1-216-864-11	METAL CHIP 0 5% 1/16W		C093	1-117-919-11	TANTAL. CHIP 10uF 20% 6.3V	
R302	1-216-864-11	METAL CHIP 0 5% 1/16W		C094	1-117-919-11	TANTAL. CHIP 10uF 20% 6.3V	
R303	1-216-864-11	METAL CHIP 0 5% 1/16W		C095	1-127-895-91	TANTAL. CHIP 22uF 20% 4V	
R304	1-216-864-11	METAL CHIP 0 5% 1/16W		C096	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V	
R305	1-216-864-11	METAL CHIP 0 5% 1/16W		C097	1-125-926-91	TANTAL. CHIP 4.7uF 20% 6.3V	
R306	1-216-864-11	METAL CHIP 0 5% 1/16W		C098	1-125-838-91	CERAMIC CHIP 2.2uF 10% 6.3V	
R307	1-216-864-11	METAL CHIP 0 5% 1/16W		C099	1-125-838-91	CERAMIC CHIP 2.2uF 10% 6.3V	
R308	1-216-864-11	METAL CHIP 0 5% 1/16W		C100	1-127-760-91	CERAMIC CHIP 4.7uF 10% 6.3V	
R309	1-216-864-11	METAL CHIP 0 5% 1/16W		C140	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V	
R311	1-216-864-11	METAL CHIP 0 5% 1/16W		C141	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V	
R312	1-216-864-11	METAL CHIP 0 5% 1/16W		C142	1-164-941-11	CERAMIC CHIP 0.0047uF 10% 16V	
R313	1-216-864-11	METAL CHIP 0 5% 1/16W		C143	1-115-156-11	CERAMIC CHIP 1uF 10V	
R314	1-216-864-11	METAL CHIP 0 5% 1/16W		C145	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V	
R315	1-216-864-11	METAL CHIP 0 5% 1/16W		C146	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V	
R316	1-216-864-11	METAL CHIP 0 5% 1/16W		C147	1-164-935-11	CERAMIC CHIP 470PF 10% 16V	
R317	1-218-990-11	SHORT 0		C148	1-164-489-11	CERAMIC CHIP 0.22uF 10% 16V	
R318	1-216-864-11	METAL CHIP 0 5% 1/16W					
R319	1-218-990-11	SHORT 0					
R320	1-216-864-11	METAL CHIP 0 5% 1/16W					
R321	1-216-864-11	METAL CHIP 0 5% 1/16W					

# LA-026

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
C149	1-164-937-11	CERAMIC CHIP	0.001uF 10% 16V	IC075	8-759-478-92	IC TC7SET04FU(TE85R)	
C150	1-107-823-11	CERAMIC CHIP	0.47uF 10% 16V	IC076	8-759-478-92	IC TC7SET04FU(TE85R)	
C151	1-164-943-11	CERAMIC CHIP	0.01uF 10% 16V	IC140	8-759-637-96	IC uPD16877MA-6A5-E2	
C152	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	IC141	8-759-444-87	IC NJM324V(TE2)	
C153	1-164-939-11	CERAMIC CHIP	0.0022uF 10% 16V	IC142	8-759-075-66	IC TA75S01F(TE85R)	
C154	1-104-851-11	TANTAL. CHIP	10uF 20% 10V	IC143	8-759-327-33	IC BU9241FS-E2	
C155	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	IC144	8-759-327-33	IC BU9241FS-E2	
C156	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	IC200	8-759-489-19	IC uPC6756GR-8JG-E2	
C157	1-127-895-91	TANTAL. CHIP	22uF 20% 4V	< COIL >			
C158	1-127-895-91	TANTAL. CHIP	22uF 20% 4V	L070	1-412-951-11	INDUCTOR	10uH
C159	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	L071	1-412-963-11	INDUCTOR	100uH
C160	1-164-866-11	CERAMIC CHIP	47PF 5% 16V	L072	1-414-754-11	INDUCTOR	10uH
C161	1-164-866-11	CERAMIC CHIP	47PF 5% 16V	L073	1-414-771-91	INDUCTOR CHIP	10uH
C162	1-115-467-11	CERAMIC CHIP	0.22uF 10% 10V	L140	1-414-754-11	INDUCTOR	10uH
C163	1-115-467-11	CERAMIC CHIP	0.22uF 10% 10V	L141	1-414-754-11	INDUCTOR	10uH
C164	1-164-935-11	CERAMIC CHIP	470PF 10% 16V	L142	1-414-754-11	INDUCTOR	10uH
C165	1-164-935-11	CERAMIC CHIP	470PF 10% 16V	L143	1-414-754-11	INDUCTOR	10uH
C166	1-127-895-91	TANTAL. CHIP	22uF 20% 4V	L200	1-414-754-11	INDUCTOR	10uH
C167	1-164-935-11	CERAMIC CHIP	470PF 10% 16V	< TRANSISTOR >			
C168	1-164-935-11	CERAMIC CHIP	470PF 10% 16V	Q050	8-729-037-72	TRANSISTOR	UN9211J-(K8).SO
C170	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	Q070	8-729-037-53	TRANSISTOR	2SB1462J-QR(K8).SO
C200	1-127-895-91	TANTAL. CHIP	22uF 20% 4V	Q071	8-729-037-53	TRANSISTOR	2SB1462J-QR(K8).SO
C201	1-127-895-91	TANTAL. CHIP	22uF 20% 4V	Q072	8-729-037-74	TRANSISTOR	UN9213J-(K8).SO
C202	1-164-677-11	CERAMIC CHIP	0.033uF 10% 16V	Q073	8-729-037-53	TRANSISTOR	2SB1462J-QR(K8).SO
C203	1-164-677-11	CERAMIC CHIP	0.033uF 10% 16V	Q074	8-729-037-74	TRANSISTOR	UN9213J-(K8).SO
C204	1-107-819-11	CERAMIC CHIP	0.022uF 10% 16V	Q075	8-729-037-53	TRANSISTOR	2SB1462J-QR(K8).SO
C205	1-107-819-11	CERAMIC CHIP	0.022uF 10% 16V	Q076	8-729-013-31	TRANSISTOR	2SA1588-OY-TE85L
C206	1-107-819-11	CERAMIC CHIP	0.022uF 10% 16V	Q077	8-729-037-53	TRANSISTOR	2SB1462J-QR(K8).SO
C207	1-107-819-11	CERAMIC CHIP	0.022uF 10% 16V	Q078	8-729-037-74	TRANSISTOR	UN9213J-(K8).SO
C208	1-110-569-11	TANTAL. CHIP	47uF 20% 4V	Q140	8-729-037-53	TRANSISTOR	2SB1462J-QR(K8).SO
C209	1-110-569-11	TANTAL. CHIP	47uF 20% 4V	Q141	8-729-037-74	TRANSISTOR	UN9213J-(K8).SO
C210	1-110-569-11	TANTAL. CHIP	47uF 20% 4V	Q142	8-729-037-52	TRANSISTOR	2SD2216J-QR(K8).SO
C211	1-110-569-11	TANTAL. CHIP	47uF 20% 4V	Q143	8-729-037-52	TRANSISTOR	2SD2216J-QR(K8).SO
C214	1-127-895-91	TANTAL. CHIP	22uF 20% 4V	Q200	8-729-013-31	TRANSISTOR	2SA1588-OY-TE85L
C215	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	Q201	8-729-037-74	TRANSISTOR	UN9213J-(K8).SO
< CONNECTOR >				< RESISTOR >			
CN050	1-784-423-21	CONNECTOR, FFC/FPC (ZIF) 39P		R051	1-218-954-11	RES-CHIP	1.2K 5% 1/16W
CN051	1-778-086-21	CONNECTOR, BOARD TO BOARD 80P		R052	1-218-955-11	RES-CHIP	1.5K 5% 1/16W
CN052	1-784-421-11	CONNECTOR, FFC/FPC (ZIF) 27P		R053	1-218-959-11	RES-CHIP	3.3K 5% 1/16W
CN053	1-766-843-21	CONNECTOR, FFC/FPC 27P		R054	1-218-963-11	RES-CHIP	6.8K 5% 1/16W
CN054	1-766-336-21	CONNECTOR, FFC/FPC 6P		R055	1-218-969-11	RES-CHIP	22K 5% 1/16W
CN055	1-766-336-21	CONNECTOR, FFC/FPC 6P		R058	1-216-295-91	SHORT	0
CN056	1-766-350-21	CONNECTOR, FFC/FPC 20P		R063	1-216-295-91	SHORT	0
< DIODE >				R065	1-216-864-11	METAL CHIP	0 5% 1/16W
D070	8-719-064-61	DIODE 01BZA8.2(TE85L)		R066	1-218-990-11	SHORT	0
D140	8-719-056-23	DIODE MA2S111-(K8).SO		R067	1-216-864-11	METAL CHIP	0 5% 1/16W
< FERRITE BEAD >				R070	1-208-885-11	METAL CHIP	820 0.5% 1/16W
FB140	1-414-445-11	FERRITE 0UH		R071	1-208-703-11	METAL CHIP	6.8K 0.5% 1/16W
< IC >				R072	1-208-885-11	METAL CHIP	820 0.5% 1/16W
IC070	8-759-359-49	IC NJM3414AV(TE2)		R073	1-208-703-11	METAL CHIP	6.8K 0.5% 1/16W
IC071	8-759-359-49	IC NJM3414AV(TE2)		R074	1-208-707-11	METAL CHIP	10K 0.5% 1/16W
IC072	8-759-823-51	IC LB1830M-TLM		R075	1-208-707-11	METAL CHIP	10K 0.5% 1/16W
IC073	8-759-444-87	IC NJM324V(TE2)		R076	1-208-707-11	METAL CHIP	10K 0.5% 1/16W
IC074	8-759-058-45	IC NJM3403AV(TE2)		R077	1-208-935-11	METAL CHIP	100K 0.5% 1/16W
				R078	1-208-707-11	METAL CHIP	10K 0.5% 1/16W
				R079	1-208-707-11	METAL CHIP	10K 0.5% 1/16W

Ref. No.	Part No.	Description			Remarks	Ref. No.	Part No.	Description			Remarks
R080	1-208-935-11	METAL CHIP	100K	0.5%	1/16W	R162	1-218-953-11	RES-CHIP	1K	5%	1/16W
R081	1-208-711-11	METAL CHIP	15K	0.5%	1/16W	R163	1-218-947-11	RES-CHIP	330	5%	1/16W
R082	1-208-707-11	METAL CHIP	10K	0.5%	1/16W	R164	1-218-969-11	RES-CHIP	22K	5%	1/16W
R083	1-208-711-11	METAL CHIP	15K	0.5%	1/16W	R165	1-218-953-11	RES-CHIP	1K	5%	1/16W
R084	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R166	1-218-965-11	RES-CHIP	10K	5%	1/16W
R085	1-216-134-00	METAL CHIP	2.2	5%	1/8W	R167	1-218-973-11	RES-CHIP	47K	5%	1/16W
R086	1-218-973-11	RES-CHIP	47K	5%	1/16W	R168	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R087	1-218-973-11	RES-CHIP	47K	5%	1/16W	R169	1-208-713-11	METAL CHIP	18K	0.5%	1/16W
R088	1-208-927-11	METAL CHIP	47K	0.5%	1/16W	R170	1-208-675-11	METAL CHIP	470	0.5%	1/16W
R089	1-208-927-11	METAL CHIP	47K	0.5%	1/16W	R171	1-218-965-11	RES-CHIP	10K	5%	1/16W
R091	1-208-935-11	METAL CHIP	100K	0.5%	1/16W	R172	1-218-965-11	RES-CHIP	10K	5%	1/16W
R092	1-208-935-11	METAL CHIP	100K	0.5%	1/16W	R173	1-218-953-11	RES-CHIP	1K	5%	1/16W
R093	1-208-943-11	METAL CHIP	220K	0.5%	1/16W	R174	1-218-953-11	RES-CHIP	1K	5%	1/16W
R095	1-208-943-11	METAL CHIP	220K	0.5%	1/16W	R177	1-218-974-11	RES-CHIP	56K	5%	1/16W
R096	1-208-707-11	METAL CHIP	10K	0.5%	1/16W	R178	1-218-950-11	RES-CHIP	560	5%	1/16W
R097	1-208-707-11	METAL CHIP	10K	0.5%	1/16W	R179	1-218-965-11	RES-CHIP	10K	5%	1/16W
R098	1-208-935-11	METAL CHIP	100K	0.5%	1/16W	R180	1-218-965-11	RES-CHIP	10K	5%	1/16W
R099	1-208-935-11	METAL CHIP	100K	0.5%	1/16W	R181	1-218-953-11	RES-CHIP	1K	5%	1/16W
R100	1-218-969-11	RES-CHIP	22K	5%	1/16W	R182	1-218-953-11	RES-CHIP	1K	5%	1/16W
R101	1-218-969-11	RES-CHIP	22K	5%	1/16W	R185	1-218-974-11	RES-CHIP	56K	5%	1/16W
R102	1-218-969-11	RES-CHIP	22K	5%	1/16W	R186	1-218-950-11	RES-CHIP	560	5%	1/16W
R103	1-218-969-11	RES-CHIP	22K	5%	1/16W	R187	1-216-295-91	SHORT	0		
R104	1-218-969-11	RES-CHIP	22K	5%	1/16W	R200	1-218-969-11	RES-CHIP	22K	5%	1/16W
R105	1-218-969-11	RES-CHIP	22K	5%	1/16W	R201	1-218-969-11	RES-CHIP	22K	5%	1/16W
R106	1-218-975-11	RES-CHIP	68K	5%	1/16W	R202	1-218-969-11	RES-CHIP	22K	5%	1/16W
R107	1-218-977-11	RES-CHIP	100K	5%	1/16W	R203	1-218-969-11	RES-CHIP	22K	5%	1/16W
R108	1-218-975-11	RES-CHIP	68K	5%	1/16W	R204	1-218-965-11	RES-CHIP	10K	5%	1/16W
R109	1-218-977-11	RES-CHIP	100K	5%	1/16W	R205	1-218-965-11	RES-CHIP	10K	5%	1/16W
R110	1-218-953-11	RES-CHIP	1K	5%	1/16W	R206	1-218-989-11	RES-CHIP	1M	5%	1/16W
R111	1-218-973-11	RES-CHIP	47K	5%	1/16W	R209	1-218-989-11	RES-CHIP	1M	5%	1/16W
R112	1-218-953-11	RES-CHIP	1K	5%	1/16W	R210	1-218-953-11	RES-CHIP	1K	5%	1/16W
R113	1-218-977-11	RES-CHIP	100K	5%	1/16W	R211	1-218-965-11	RES-CHIP	10K	5%	1/16W
R114	1-218-965-11	RES-CHIP	10K	5%	1/16W						
R115	1-218-965-11	RES-CHIP	10K	5%	1/16W						
R116	1-218-953-11	RES-CHIP	1K	5%	1/16W	A-7074-409-A	LB-065 BOARD, COMPLETE ***** (Ref.No.;1000Series)				
R117	1-218-953-11	RES-CHIP	1K	5%	1/16W						
R118	1-218-953-11	RES-CHIP	1K	5%	1/16W						
R119	1-218-973-11	RES-CHIP	47K	5%	1/16W	< CAPACITOR >					
R120	1-218-965-11	RES-CHIP	10K	5%	1/16W						
R140	1-218-953-11	RES-CHIP	1K	5%	1/16W	C200	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
R141	1-218-965-11	RES-CHIP	10K	5%	1/16W	C201	1-113-682-11	TANTAL. CHIP	33uF	20%	10V
R142	1-218-975-11	RES-CHIP	68K	5%	1/16W	C202	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V
R143	1-218-975-11	RES-CHIP	68K	5%	1/16W	△ C203	1-115-464-91	CERAMIC CHIP	0.0022uF	10%	630V
R144	1-218-975-11	RES-CHIP	68K	5%	1/16W	< CONNECTOR >					
R145	1-218-975-11	RES-CHIP	68K	5%	1/16W	CN200	1-784-421-11	CONNECTOR, FFC/FPC (ZIF) 27P			
R146	1-218-975-11	RES-CHIP	68K	5%	1/16W	CN201	1-691-380-21	CONNECTOR, FFC/FPC 16P			
R147	1-216-295-91	SHORT	0								
R148	1-218-973-11	RES-CHIP	47K	5%	1/16W	< DIODE >					
R150	1-218-953-11	RES-CHIP	1K	5%	1/16W						
R151	1-218-989-11	RES-CHIP	1M	5%	1/16W	D200	8-719-018-51	DIODE	CL-170R-CD-T		
R152	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	< IC >					
R153	1-218-965-11	RES-CHIP	10K	5%	1/16W						
R154	1-218-981-11	RES-CHIP	220K	5%	1/16W	IC200	8-759-485-79	IC	TC7SET08FU(TE85R)		
R155	1-218-985-11	RES-CHIP	470K	5%	1/16W	< COIL >					
R156	1-218-985-11	RES-CHIP	470K	5%	1/16W						
R157	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	L200	1-412-031-11	INDUCTOR CHIP	47uH		
R158	1-218-967-11	RES-CHIP	15K	5%	1/16W	L201	1-469-525-91	INDUCTOR	10uH		
R159	1-218-969-11	RES-CHIP	22K	5%	1/16W						
R160	1-218-985-11	RES-CHIP	470K	5%	1/16W						
R161	1-218-953-11	RES-CHIP	1K	5%	1/16W						

**LB-065****MA-386**

Ref. No.	Part No.	Description	Remarks			
		< FLUORESCENT INDICATOR >				
ND200	1-517-933-31	FLUORESCENT TUBE (0.44)				
		< TRANSISTOR >				
Q200	8-729-039-24	TRANSISTOR	FX216-TL1			
		< RESISTOR >				
R200	1-218-948-11	RES-CHIP	390	5%	1/16W	
R203	1-216-808-11	METAL CHIP	82	5%	1/16W	
R204	1-218-965-11	RES-CHIP	10K	5%	1/16W	
R205	1-218-977-11	RES-CHIP	100K	5%	1/16W	
R206	1-218-977-11	RES-CHIP	100K	5%	1/16W	
R207	1-218-977-11	RES-CHIP	100K	5%	1/16W	
R208	1-218-977-11	RES-CHIP	100K	5%	1/16W	
		< TRANSFORMER >				
△ T200	1-435-225-21	TRANSFORMER, INVERTER				
A-7074-410-A	MA-386 BOARD, COMPLETE					
	*****					
	(Ref.No.:20000Series)					
		< CAPACITOR >				
C1106	1-117-919-11	TANTAL. CHIP	10uF	20%	6.3V	
C1107	1-117-919-11	TANTAL. CHIP	10uF	20%	6.3V	
C1109	1-117-919-11	TANTAL. CHIP	10uF	20%	6.3V	
C1150	1-107-819-11	CERAMIC CHIP	0.022uF	10%	16V	
C1151	1-119-923-81	CERAMIC CHIP	0.047uF	10%	10V	
C1152	1-107-819-11	CERAMIC CHIP	0.022uF	10%	16V	
C1153	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	
C1154	1-119-923-81	CERAMIC CHIP	0.047uF	10%	10V	
C1155	1-117-919-11	TANTAL. CHIP	10uF	20%	6.3V	
C1156	1-164-937-11	CERAMIC CHIP	0.001uF	10%	16V	
C1157	1-117-919-11	TANTAL. CHIP	10uF	20%	6.3V	
C1158	1-164-935-11	CERAMIC CHIP	470PF	10%	16V	
C1159	1-164-935-11	CERAMIC CHIP	470PF	10%	16V	
C1160	1-164-937-11	CERAMIC CHIP	0.001uF	10%	16V	
C1162	1-164-937-11	CERAMIC CHIP	0.001uF	10%	16V	
C1163	1-164-937-11	CERAMIC CHIP	0.001uF	10%	16V	
C1165	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C1166	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C1167	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C1168	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C1169	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C1170	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C1171	1-110-563-11	CERAMIC CHIP	0.068uF	10%	16V	
C1172	1-110-563-11	CERAMIC CHIP	0.068uF	10%	16V	
C1173	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
C1175	1-107-819-11	CERAMIC CHIP	0.022uF	10%	16V	
C1177	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
C1178	1-107-819-11	CERAMIC CHIP	0.022uF	10%	16V	
C1179	1-107-819-11	CERAMIC CHIP	0.022uF	10%	16V	
C1180	1-107-819-11	CERAMIC CHIP	0.022uF	10%	16V	

Ref. No.	Part No.	Description	Remarks		
C1181	1-109-982-11	CERAMIC CHIP 1uF	10%	10V	
C1182	1-117-919-11	TANTAL. CHIP 10uF	20%	6.3V	
C1183	1-165-128-11	CERAMIC CHIP 0.22uF		16V	
C1184	1-125-837-91	CERAMIC CHIP 1uF	10%	6.3V	
C1185	1-125-777-11	CERAMIC CHIP 0.1uF	10%	10V	
C1186	1-125-777-11	CERAMIC CHIP 0.1uF	10%	10V	
C1187	1-110-563-11	CERAMIC CHIP 0.068uF	10%	16V	
C1188	1-110-563-11	CERAMIC CHIP 0.068uF	10%	16V	
< CONNECTOR >					
CN1100	1-784-419-11	CONNECTOR, FFC/FPC (ZIF) 15P			
CN1101	1-766-350-21	CONNECTOR, FFC/FPC 20P			
CN1102	1-784-419-11	CONNECTOR, FFC/FPC (ZIF) 15P			
CN1103	1-784-421-11	CONNECTOR, FFC/FPC (ZIF) 27P			
< DIODE >					
D1104	8-719-064-61	DIODE 01BZA8.2(TE85L)			
D1105	8-719-951-20	DIODE BR1102W-TR			
D1106	8-719-073-03	DIODE MA8082-(K8).S0			
D1107	8-719-073-01	DIODE MA111-(K8).S0			
D1108	8-719-073-01	DIODE MA111-(K8).S0			
D1109	8-719-073-01	DIODE MA111-(K8).S0			
D1110	8-719-073-01	DIODE MA111-(K8).S0			
D1111	8-719-064-61	DIODE 01BZA8.2(TE85L)			
D1112	8-719-064-61	DIODE 01BZA8.2(TE85L)			
D1116	8-719-064-61	DIODE 01BZA8.2(TE85L)			
< IC >					
IC1102	8-749-013-13	IC RS-70-TU			
IC1150	8-759-638-50	IC AN2901FHQ-EB			
< COIL >					
L1150	1-414-754-11	INDUCTOR 10uH			
< TRANSISTOR >					
Q1104	8-729-037-71	TRANSISTOR UN9210J-(TX).S0			
< RESISTOR >					
R1101	1-218-973-11	RES-CHIP 47K	5%	1/16W	
R1102	1-218-977-11	RES-CHIP 100K	5%	1/16W	
R1104	1-218-939-11	RES-CHIP 68	5%	1/16W	
R1105	1-218-977-11	RES-CHIP 100K	5%	1/16W	
R1121	1-218-951-11	RES-CHIP 680	5%	1/16W	
R1122	1-218-990-11	SHORT 0			
R1123	1-218-990-11	SHORT 0			
R1125	1-218-937-11	RES-CHIP 47	5%	1/16W	
R1126	1-218-953-11	RES-CHIP 1K	5%	1/16W	
R1127	1-218-953-11	RES-CHIP 1K	5%	1/16W	
R1128	1-218-965-11	RES-CHIP 10K	5%	1/16W	
R1129	1-218-965-11	RES-CHIP 10K	5%	1/16W	
R1130	1-218-977-11	RES-CHIP 100K	5%	1/16W	
R1131	1-218-939-11	RES-CHIP 68	5%	1/16W	
R1152	1-218-968-11	RES-CHIP 18K	5%	1/16W	

**Note :**

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

**Note :**

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

**MA-386****MI-038****MK-014****MS-049**

Ref. No.	Part No.	Description			Remarks
R1153	1-218-971-11	RES-CHIP	33K	5%	1/16W
R1154	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1155	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1157	1-218-963-11	RES-CHIP	6.8K	5%	1/16W
R1158	1-218-963-11	RES-CHIP	6.8K	5%	1/16W
R1159	1-218-963-11	RES-CHIP	6.8K	5%	1/16W
R1160	1-218-953-11	RES-CHIP	1K	5%	1/16W
R1161	1-218-953-11	RES-CHIP	1K	5%	1/16W
R1162	1-208-912-11	METAL CHIP	11K	0.5%	1/16W
R1163	1-218-963-11	RES-CHIP	6.8K	5%	1/16W
R1164	1-208-912-11	METAL CHIP	11K	0.5%	1/16W
R1168	1-218-964-11	RES-CHIP	8.2K	5%	1/16W
R1169	1-208-701-11	METAL CHIP	5.6K	0.5%	1/16W
R1170	1-218-963-11	RES-CHIP	6.8K	5%	1/16W
R1171	1-218-964-11	RES-CHIP	8.2K	5%	1/16W
R1172	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R1173	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R1174	1-218-971-11	RES-CHIP	33K	5%	1/16W
R1175	1-218-971-11	RES-CHIP	33K	5%	1/16W
R1176	1-218-971-11	RES-CHIP	33K	5%	1/16W
R1177	1-218-953-11	RES-CHIP	1K	5%	1/16W
R1178	1-218-968-11	RES-CHIP	18K	5%	1/16W
R1179	1-218-971-11	RES-CHIP	33K	5%	1/16W
R1180	1-218-963-11	RES-CHIP	6.8K	5%	1/16W
R1181	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1182	1-218-965-11	RES-CHIP	10K	5%	1/16W
< SWITCH >					
S1100	1-572-473-11	SWITCH, TACTIL			
A-7074-411-A MI-038 BOARD, COMPLETE					
*****					
(Ref.No.;1000Series)					
< CAPACITOR >					
C700	1-164-874-11	CERAMIC CHIP	100PF	5%	16V
C701	1-164-874-11	CERAMIC CHIP	100PF	5%	16V
C702	1-164-489-11	CERAMIC CHIP	0.22uF	10%	16V
C703	1-164-489-11	CERAMIC CHIP	0.22uF	10%	16V
C704	1-164-874-11	CERAMIC CHIP	100PF	5%	16V
C705	1-164-874-11	CERAMIC CHIP	100PF	5%	16V
C706	1-110-569-11	TANTAL. CHIP	47uF	20%	6.3V
C709	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V
C710	1-113-682-11	TANTAL. CHIP	33uF	20%	10V
C711	1-113-682-11	TANTAL. CHIP	33uF	20%	10V
< CONNECTOR >					
* CN700	1-580-057-11	PIN, CONNECTOR (SMD) 4P			
* CN701	1-580-057-11	PIN, CONNECTOR (SMD) 4P			
CN702	1-573-990-21	CONNECTOR, BOARD TO BOARD 10P			
* CN703	1-750-339-21	CONNECTOR, FFC/FPC (ZIF) 14P			
< TRANSISTOR >					
Q700	8-729-140-75	TRANSISTOR	2SD999-T1-CLCK		
Q701	8-729-037-52	TRANSISTOR	2SD2216J-QR(K8).SO		
Q702	8-729-403-35	TRANSISTOR	UN5113-TX		
Q703	8-729-037-52	TRANSISTOR	2SD2216J-QR(K8).SO		
Q704	8-729-402-42	TRANSISTOR	UN5213-TX		

Ref. No.	Part No.	Description			Remarks
Q705	8-729-037-52	TRANSISTOR	2SD2216J-QR(K8).SO		
Q706	8-729-037-52	TRANSISTOR	2SD2216J-QR(K8).SO		
Q707	8-729-037-52	TRANSISTOR	2SD2216J-QR(K8).SO		
< RESISTOR >					
R700	1-218-847-11	METAL CHIP	1K	0.5%	1/16W
R701	1-218-847-11	METAL CHIP	1K	0.5%	1/16W
R702	1-218-880-11	METAL CHIP	24K	0.5%	1/16W
R703	1-218-894-11	METAL CHIP	91K	0.5%	1/16W
R704	1-218-880-11	METAL CHIP	24K	0.5%	1/16W
R705	1-218-894-11	METAL CHIP	91K	0.5%	1/16W
R706	1-216-313-00	METAL CHIP	8.2	5%	1/10W
R707	1-218-949-11	RES-CHIP	470	5%	1/16W
R708	1-218-947-11	RES-CHIP	330	5%	1/16W
R713	1-218-965-11	RES-CHIP	10K	5%	1/16W
R714	1-218-965-11	RES-CHIP	10K	5%	1/16W
R715	1-218-965-11	RES-CHIP	10K	5%	1/16W
R716	1-218-990-11	SHORT	0		
R717	1-218-990-11	SHORT	0		
A-7074-408-A MK-014 BOARD, COMPLETE					
*****					
(Ref.No.;1000Series)					
< CONNECTOR >					
CN001	1-779-327-11	CONNECTOR, FFC/FPC 6P			
< DIODE >					
D003	8-719-061-82	DIODE	TLSU1002(TPX1,SONY)		
D004	8-719-073-03	DIODE	MA8082-(K8).SO		
< RESISTOR >					
R001	1-218-950-11	RES-CHIP	560	5%	1/16W
R006	1-218-969-11	RES-CHIP	22K	5%	1/16W
< SWITCH >					
S001	1-771-138-61	SWITCH, KEY BOARD(GAIN)			
S002	1-771-138-61	SWITCH, KEY BOARD(SHUTTER SPEED)			
S003	1-771-138-61	SWITCH, KEY BOARD(WHT BAL)			
S004	1-771-138-61	SWITCH, KEY BOARD(AE SHIFT)			
S005	1-762-648-21	SWITCH, SLIDE(AUTOLOCK/HOLD)			
A-7074-407-A MS-049 BOARD, COMPLETE					
*****					
(Ref.No.;20000Series)					
< CONNECTOR >					
CN775	1-766-644-21	CONNECTOR, FFC/FPC 8P			
CN776	1-793-641-11	CONNECTOR, MEMORY STICK			
< RESISTOR >					
R1001	1-216-295-91	SHORT	0		
R1002	1-216-864-11	METAL CHIP	0	5%	1/16W
R1003	1-218-990-11	SHORT	0		
R1004	1-216-864-11	METAL CHIP	0	5%	1/16W



# PD-126

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
	A-7096-158-A	PD-126 BOARD, COMPLETE (SERVICE)				< COIL >	
		*****					
		(Ref.No.:20000Series)		L2101	1-414-755-11	INDUCTOR	22uH
		< CAPACITOR >		L2102	1-414-754-11	INDUCTOR	10uH
C2101	1-119-750-11	TANTAL. CHIP	22uF 20% 6.3V	L2103	1-414-754-11	INDUCTOR	10uH
C2102	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	L2104	1-410-998-31	INDUCTOR	2.7uH
C2103	1-164-943-11	CERAMIC CHIP	0.01uF 10% 16V	L2181	1-412-056-11	INDUCTOR	4.7uH
C2104	1-117-919-11	TANTAL. CHIP	10uF 20% 6.3V	L2182	1-414-757-11	INDUCTOR	100uH
C2105	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V			< TRANSISTOR >	
C2107	1-107-826-91	CERAMIC CHIP	0.1uF 10% 16V	Q2101	8-729-427-74	TRANSISTOR	XP4601-TXE
C2108	1-164-943-11	CERAMIC CHIP	0.01uF 10% 16V	Q2102	8-729-037-74	TRANSISTOR	UN9213J-(TX).SO
C2109	1-164-943-11	CERAMIC CHIP	0.01uF 10% 16V	Q2103	8-729-427-74	TRANSISTOR	XP4601-TXE
C2110	1-164-943-11	CERAMIC CHIP	0.01uF 10% 16V	Q2104	8-729-041-23	TRANSISTOR	NDS356AP
C2111	1-164-739-11	CERAMIC CHIP	560PF 5% 50V	Q2109	8-729-037-53	TRANSISTOR	2SB1462J-QR(K8).SO
C2112	1-125-838-91	CERAMIC CHIP	2.2uF 10% 6.3V	Q2111	8-729-037-52	TRANSISTOR	2SD2216J-QR(K8).SO
C2113	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V	Q2112	8-729-048-77	TRANSISTOR	XP4313-(TX).SO
C2114	1-164-943-11	CERAMIC CHIP	0.01uF 10% 16V	Q2181	8-729-042-72	TRANSISTOR	UN9214J-(K8).SO
C2115	1-107-687-11	TANTAL. CHIP	3.3uF 20% 20V	Q2182	8-729-037-53	TRANSISTOR	2SA1832F-Y/GR(TPL3)
C2116	1-164-937-11	CERAMIC CHIP	0.001uF 10% 16V	Q2183	8-729-042-59	TRANSISTOR	UN9112J-(K8).SO
C2117	1-164-874-11	CERAMIC CHIP	100PF 5% 16V			< RESISTOR >	
C2118	1-125-838-91	CERAMIC CHIP	2.2uF 10% 6.3V	R2111	1-218-985-11	RES-CHIP	470K 5% 1/16W
C2119	1-125-838-91	CERAMIC CHIP	2.2uF 10% 6.3V	R2112	1-218-985-11	RES-CHIP	470K 5% 1/16W
C2120	1-125-838-91	CERAMIC CHIP	2.2uF 10% 6.3V	R2113	1-218-990-11	SHORT	0
C2123	1-107-687-11	TANTAL. CHIP	3.3uF 20% 20V	R2114	1-218-967-11	RES-CHIP	15K 5% 1/16W
C2124	1-164-943-11	CERAMIC CHIP	0.01uF 10% 16V	R2115	1-218-958-11	RES-CHIP	2.7K 5% 1/16W
C2125	1-163-021-91	CERAMIC CHIP	0.01uF 10% 50V	R2116	1-218-973-11	RES-CHIP	47K 5% 1/16W
C2126	1-115-566-11	CERAMIC CHIP	4.7uF 10% 10V	R2117	1-218-975-11	RES-CHIP	68K 5% 1/16W
C2127	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	R2118	1-218-969-11	RES-CHIP	22K 5% 1/16W
C2128	1-107-725-11	CERAMIC CHIP	0.1uF 10% 16V	R2119	1-218-975-11	RES-CHIP	68K 5% 1/16W
C2129	1-216-295-91	SHORT	0 (Note)	R2122	1-218-989-11	RES-CHIP	1M 5% 1/16W
C2130	1-164-943-11	CERAMIC CHIP	0.01uF 10% 16V	R2123	1-218-990-11	SHORT	0
C2133	1-109-982-11	CERAMIC CHIP	1uF 10% 10V	R2124	1-218-977-11	RES-CHIP	100K 5% 1/16W
C2181	1-119-751-11	TANTAL. CHIP	22uF 20% 16V	R2129	1-218-990-11	SHORT	0
C2182	1-164-943-11	CERAMIC CHIP	0.01uF 10% 16V	R2134	1-218-929-11	RES-CHIP	10 5% 1/16W
C2183	1-119-751-11	TANTAL. CHIP	22uF 20% 16V	R2136	1-218-929-11	RES-CHIP	10 5% 1/16W
C2184	1-164-943-11	CERAMIC CHIP	0.01uF 10% 16V	R2137	1-218-929-11	RES-CHIP	10 5% 1/16W
C2185	1-117-919-11	TANTAL. CHIP	10uF 20% 6.3V	R2138	1-218-941-11	RES-CHIP	100 5% 1/16W
C2186	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	R2143	1-218-965-11	RES-CHIP	10K 5% 1/16W
		< CONNECTOR >		R2144	1-218-985-11	RES-CHIP	470K 5% 1/16W
CN2100	1-794-378-21	PIN, CONNECTOR 14P		R2146	1-218-990-11	SHORT	0
CN2101	1-794-377-21	PIN, CONNECTOR 8P		R2147	1-218-990-11	SHORT	0
* CN2103	1-778-155-11	CONNECTOR, FFC/FPC (ZIF) 7P		R2148	1-218-965-11	RES-CHIP	10K 5% 1/16W
* CN2104	1-778-172-11	CONNECTOR, FFC/FPC (ZIF) 24P		R2153	1-218-990-11	SHORT	0
CN2105	1-764-704-21	CONNECTOR, FFC/FPC (LIF) 5P		R2157	1-218-989-11	RES-CHIP	1M 5% 1/16W
		< DIODE >		R2158	1-218-975-11	RES-CHIP	68K 5% 1/16W
D2101	8-719-073-01	DIODE MA111-TX		R2159	1-218-979-11	RES-CHIP	150K 5% 1/16W
D2102	8-713-102-80	DIODE 1T369-01-T8A		R2160	1-218-988-11	RES-CHIP	820K 5% 1/16W
D2104	8-719-050-42	DIODE RD3.3UM-T1B		R2162	1-218-990-11	SHORT	0
D2181	8-719-059-47	DIODE PG1111R-TR		R2163	1-218-990-11	SHORT	0
		< IC >		R2165	1-218-990-11	SHORT	0
IC2101	8-759-660-93	IC RB5P004AM1		R2166	1-218-965-11	RES-CHIP	10K 5% 1/16W
IC2103	8-752-403-84	IC CXD3505R-T4		R2168	1-218-990-11	SHORT	0
				R2169	1-218-990-11	SHORT	0
				R2170	1-218-977-11	RES-CHIP	100K 5% 1/16W
				R2172	1-218-990-11	SHORT	0

Note : Resistor is mounted to the location where C2129 is printed.

**PD-126****SE-108****VC-242**

Ref. No.	Part No.	Description	Remarks			
R2173	1-218-990-11	SHORT	0			
R2174	1-218-990-11	SHORT	0			
R2175	1-218-990-11	SHORT	0			
R2176	1-218-990-11	SHORT	0			
R2177	1-218-977-11	RES-CHIP	100K	5%	1/16W	
R2178	1-218-977-11	RES-CHIP	100K	5%	1/16W	
R2179	1-218-977-11	RES-CHIP	100K	5%	1/16W	
R2180	1-218-977-11	RES-CHIP	100K	5%	1/16W	
R2181	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	
R2182	1-218-953-11	RES-CHIP	1K	5%	1/16W	
R2183	1-218-941-11	RES-CHIP	100	5%	1/16W	
R2184	1-218-990-11	SHORT	0			
A-7074-399-A		SE-108 BOARD, COMPLETE				
		*****				
		(Ref.No.;1000Series)				
< CAPACITOR >						
C600	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C601	1-127-895-91	TANTAL. CHIP	22uF	20%	4V	
< CONNECTOR >						
CN600	1-766-336-21	CONNECTOR, FFC/FPC 6P				
< COIL >						
L600	1-414-754-11	INDUCTOR	10uH			
< SENSOR >						
SE600	1-803-042-31	SENSOR, ANGULAR VELOCITY				
SE601	1-803-042-41	SENSOR, ANGULAR VELOCITY				

Ref. No.	Part No.	Description	Remarks
	A-7096-157-A	VC-242 BOARD, COMPLETE (SERVICE)	
		*****	
		(Ref.No.;1000Series)	

**Electrical parts list of the VC-242 board  
are not shown.  
pages 6-27 to 6-36 are not shown.**

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
		MISCELLANEOUS *****				ACCESSORIES & PACKING MATERIALS *****	
1	1-678-055-21	FP-187 FLEXIBLE BOARD		△	1-475-599-11	ADAPTOR, AC (VX2000:US,CND,E,HK,JE/VX2000E:AEP,UK,E,HK,AUS,JE)	
8	1-678-057-21	FP-189 FLEXIBLE BOARD		△	1-475-599-71	ADAPTOR, AC (VX2000:KR)	
14	1-678-067-21	FP-200 FLEXIBLE BOARD		△	1-475-599-81	ADAPTOR, AC (VX2000E:CN)	
15	1-475-950-21	REMOTE COMMANDER (RMT-811)		△	1-475-950-21	REMOTECOMMANDER (RMT-811)	
65	1-678-054-21	FP-186 FLEXIBLE BOARD		△	1-569-007-11	ADAPTOR, CONVERSION 2P (VX2000:JE/VX2000E:JE)	
67	1-678-059-21	FP-191 FLEXIBLE BOARD					
74	1-469-830-11	FILTER, EMI (VX2000)		△	1-569-008-21	ADAPTOR, CONVERSION 2P (VX2000:E,HK/VX2000E:E,HK)	
122	1-476-075-21	SWITCH BLOCK, CONTROL (PS-4980)			1-573-291-11	CONNECTOR, CONVERSION (21Pin) (VX2000E:AEP,UK)	
123	1-476-025-21	SWITCH BLOCK, CONTROL (CF-4980)					
153	1-678-063-21	FP-196 FLEXIBLE BOARD			1-575-334-11	CORD,CONNECTION (A/V)(1.5m)	
△ 163	1-418-876-11	TRANSFORMER UNIT, INVERTER		△	1-690-827-11	CORDSET, POWER (VX2000E:AEP)	
164	1-678-062-11	FP-195 FLEXIBLE BOARD		△	1-696-819-21	CORD,POWER (VX2000E:AUS)	
203	1-960-558-11	HARNESS (CP-094) 14P					
204	1-960-557-11	HARNESS (CP-093) 8P		△	1-769-608-11	CORD,POWER (VX2000:E/VX2000E:E)	
205	1-476-183-11	SWITCH BLOCK, CONTROL (ED-4980)		△	1-775-843-21	CORD,POWER (WITH FILTER)(VX2000E:UK)	
212	1-678-064-21	FP-197 FLEXIBLE BOARD		△	1-776-985-11	CORD,POWER (VX2000:KR)	
234	1-678-061-21	FP-194 FLEXIBLE BOARD		△	1-782-476-11	CORD,POWER (VX2000E:CN)	
256	1-678-066-11	FP-199 FLEXIBLE BOARD		△	1-783-374-11	CORD,POWER (VX2000:HK/VX2000E:HK)	
259	1-785-594-11	CONNECTOR (HOT SHOE), OUTER					
266	1-678-068-11	FP-201 FLEXIBLE BOARD		△	1-790-073-11	CORD,POWER 2P (VX2000:JE/VX2000E:JE)	
267	1-678-049-11	FP-202 FLEXIBLE BOARD		△	1-790-107-22	CORD,POWER (VX2000:US,CND)	
274	1-678-065-21	FP-198 FLEXIBLE BOARD			1-792-826-11	CORD,CONNECTION	
281	1-469-829-11	CORE, FERRITE (VX2000)			3-053-056-01	LID, BATTERY CASE	
307	1-678-058-11	FP-190 FLEXIBLE BOARD			3-060-457-11	MANUAL, INSTRUCTION (PICTURE GEAR 4.1 LITE)(ENGLISH)(VX2000:US,CND,E,JE)	
310	1-694-411-11	TERMINAL BOARD, BATTERY					
312	1-794-637-11	CONNECTOR, DC-IN			3-060-457-21	MANUAL, INSTRUCTION (PICTURE GEAR 4.1 LITE)(FRENCH)(VX2000:CND)	
322	1-469-829-11	CORE, FERRITE (VX2000)			3-060-457-31	MANUAL, INSTRUCTION (PICTURE GEAR 4.1 LITE)(TRADITIONAL CHINESE) (VX2000:E,HK/VX2000E:HK)	
356	1-678-060-11	FP-193 FLEXIBLE BOARD			3-060-457-41	MANUAL, INSTRUCTION (PICTURE GEAR 4.1 LITE)(KOREAN)(VX2000:KR,JE)	
408	1-678-056-21	FP-188 FLEXIBLE BOARD			3-060-458-11	MANUAL, INSTRUCTION (PICTURE GEAR 4.1 LITE)(ENGLISH/RUSSIAN) (VX2000:HK/VX2000E)	
413	1-960-654-11	HARNESS, CJ-064			3-060-458-21	MANUAL, INSTRUCTION (PICTURE GEAR 4.1 LITE)(FRENCH/GERMAN) (VX2000E:AEP,E,JE)	
454	A-7031-100-A	PRISM ASSY (SERVICE) (INCLUDING 3CCD) (VX2000)					
454	A-7031-101-A	PRISM ASSY (SERVICE) (INCLUDING 3CCD) (VX2000E)					
812	1-657-785-11	FP-248 FLEXIBLE BOARD (DEW SENSOR)					
CN901	1-784-723-11	PIN, CONNECTOR 4P					
D901	8-719-067-13	DIODE GL453K					
H901	8-719-061-28	DIODE HW-105C-FT-V (S REEL)					
H902	8-719-061-28	DIODE HW-105C-FT-V (T REEL)					
LCD901	8-753-050-52	ACX300CK-J					
LCD902	A-7096-156-A	PANEL BLOCK ASSY, INDICATION					
LCD903	8-753-026-77	LCX033AK-J					
M901	A-4900-079-A	DRUM ASSY (DEH-11B/J-RP)					
M902	8-835-606-01	MOTOR, DC SCD15A/C-NP (CAPSTAN)					
M903	X-3948-346-1	MOTOR ASSY, LOADING					
MIC901	1-542-263-11	MICROPHONE UNIT					
MIC902	1-542-263-11	MICROPHONE UNIT					
△ ND901	1-517-931-11	TUBE, FLUORESCENT,COLD CATHODE					
Q901	8-729-907-25	PHOTO TRANSISTOR PT4850F (TAPE END)					
Q902	8-729-907-25	PHOTO TRANSISTOR PT4850F (TAPE TOP)					
S901	1-771-039-51	SWITCH, PUSH (CASSETTE IN)					
S902	1-572-719-32	SWITCH, PUSH (1 KEY)(REC PROOF)					
S903	1-771-325-11	ENCODER, ROTARY (SWITCH)(MODE)					
SP901	1-529-590-11	SPEAKER (2.0CM)					

Be sure to read "Precautions upon replacing CCD imager" on page 4-9 when changing the CCD imager.


**Note :**  
The components identified by mark △ or dotted line with mark △ are critical for safety.  
Replace only with part number specified.

**Note :**  
Les composants identifiés par une marque △ sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>
	3-060-791-51	MANUAL, INSTRUCTION (ARABIC)(VX2000:E)	
	3-060-791-61	MANUAL, INSTRUCTION (KOREAN) (VX2000:KR,JE)	
	3-061-238-12	MANUAL, INSTRUCTION (MSAC-US1) (ENGLISH/FRENCH)(VX2000/VX2000E:E,HK,AUS,CN,JE)	
	3-061-238-21	MANUAL, INSTRUCTION (MSAC-US1) (GERMAN/SPANISH/DUTCH/SWEDISH/ITALIAN/PORTUGUESE/ RUSSIAN/ARABIC/TRADITIONAL CHINESE/ KOREAN/DANISH/FINNISH) (VX2000:E,KR,HK,JE/VX2000E:AEP,E,HK,CN,JE)	
	3-061-255-01	SYSTEM DISK (MSAC-US1)	
	3-061-508-11	MANUAL, INSTRUCTION (ENGLISH/RUSSIAN) (VX2000E:AEP,UK)	
	3-061-508-21	MANUAL, INSTRUCTION (GERMAN/ITALIAN) (VX2000E:AEP)	
	3-061-508-31	MANUAL, INSTRUCTION (SPANISH/PORTUGUESE)(VX2000E:AEP)	
	3-061-508-41	MANUAL, INSTRUCTION (FRENCH/DUTCH) (VX2000E:AEP)	
	3-061-518-11	MANUAL, INSTRUCTION (ENGLISH/RUSSIAN) (VX2000:HK/VX2000E:E,HK,AUS,CN,JE)	
	3-061-518-21	MANUAL, INSTRUCTION (FRENCH/GERMAN) (VX2000E:E,JE)	
	3-061-518-31	MANUAL, INSTRUCTION (SIMPLIFIED CHINESE)(VX2000E:E,CN,JE)	
	3-061-518-41	MANUAL, INSTRUCTION (TRADITIONAL CHINESE)(VX2000:HK/VX2000E:HK)	
	3-061-518-51	MANUAL, INSTRUCTION (ARABIC/PERSIAN) (VX2000E:E)	
	3-987-015-01	BELT(S), SHOULDER	
	A-7033-740-A	MEMORY STICK MSA-4A	
	A-7094-140-A	NP-F330 BATTERY PACK (VX2000:US,CND)	
	A-7094-141-A	NP-F330 BATTERY PACK (VX2000:E,KR,HK,JE/VX2000E)	
	A-7096-180-A	MSAC-US1 MEMORY STICK READER/WRITER	

〈FOR CAMERA COLOR REPRODUCTION ADJUSTMENT〉

Take a copy of CAMERA COLOR  
REPRODUCTION FRAME with  
a clear sheet for use.

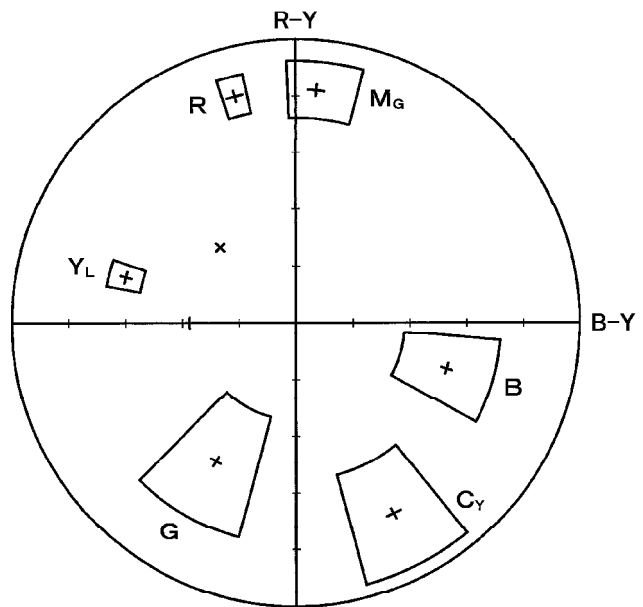

DCR-VX2000/VX2000E



